

# SunFDDI™ SBus Adapter 6.0 User's Guide

---



THE NETWORK IS THE COMPUTER™

**Sun Microsystems, Inc.**  
901 San Antonio Road  
Palo Alto, CA 94303-4900 USA  
650 960-1300 Fax 650 969-9131

Part No. 805-5447-10  
November 1998, Revision A

Send comments about this document to: [docfeedback@sun.com](mailto:docfeedback@sun.com)

Copyright 1998 Sun Microsystems, Inc., 901 San Antonio Road • Palo Alto, CA 94303 USA. All rights reserved.

This product or document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, AnswerBook, SunNet Manager, Java, the Java Coffee Cup, and Solaris are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

**RESTRICTED RIGHTS:** Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.7202-3(a).

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

---

Copyright 1998 Sun Microsystems, Inc., 901 San Antonio Road • Palo Alto, CA 94303 Etats-Unis. Tous droits réservés.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, AnswerBook, SunNet Manager, Java, le logo Java Coffee Cup, et Solaris sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

CETTE PUBLICATION EST FOURNIE "EN L'ETAT" ET AUCUNE GARANTIE, EXPRESSE OU IMPLICITE, N'EST ACCORDEE, Y COMPRIS DES GARANTIES CONCERNANT LA VALEUR MARCHANDE, L'APTITUDE DE LA PUBLICATION A REPENDRE A UNE UTILISATION PARTICULIERE, OU LE FAIT QU'ELLE NE SOIT PAS CONTREFAISANTE DE PRODUIT DE TIERS. CE DENI DE GARANTIE NE S'APPLIQUERAIT PAS, DANS LA MESURE OU IL SERAIT TENU JURIDIQUEMENT NUL ET NON AVENU.



Please  
Recycle



Adobe PostScript

## *Regulatory Compliance Statements*

Your Sun product is marked to indicate its compliance class:

- Federal Communications Commission (FCC) — USA
- Department of Communications (DOC) — Canada
- Voluntary Control Council for Interference (VCCI) — Japan

Please read the appropriate section that corresponds to the marking on your Sun product before attempting to install the product.

### *FCC Class A Notice*

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**Shielded Cables:** Connections between the workstation and peripherals must be made using shielded cables in order to maintain compliance with FCC radio frequency emission limits. Networking connections can be made using unshielded twisted-pair (UTP) cables.

**Modifications:** Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

### *FCC Class B Notice*

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

**Shielded Cables:** Connections between the workstation and peripherals must be made using shielded cables in order to maintain compliance with FCC radio frequency emission limits. Networking connections can be made using unshielded twisted pair (UTP) cables.

**Modifications:** Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

## *DOC Class A Notice - Avis DOC, Classe A*

This Class A digital apparatus meets all of requirements the Canadian Interference-Causing Equipment Regulations.  
Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## *DOC Class B Notice - Avis DOC, Classe B*

This Class B digital apparatus meets all of requirements the Canadian Interference-Causing Equipment Regulations.  
Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## VCCI 基準について


### 第一種VCCI基準について

第一種VCCIの表示があるワークステーションおよびオプション製品は、第一種情報装置です。これらの製品には、下記の項目が該当します。

この装置は、第一種情報装置(商工業地域において使用されるべき情報装置)で商工業地域での電波障害防止を目的とした情報処理装置等電波障害自主規制協議会(VCCI)基準に適合しております。したがって、本製品を、住宅地域または住宅地域に隣接した地域でご使用になりますと、ラジオ、テレビジョン受信機等に受信障害を与えることがあります。

取り扱い説明書に従って正しくお取り扱いください。

### 第二種VCCI基準について

第二種VCCIの表示  があるワークステーションおよびオプション製品は、第二種情報装置です。これらの製品には、下記の項目が該当します。

この装置は、第二種情報装置(住宅地域または住宅地域に隣接した地域において使用されるべき情報装置)で住宅地域での電波障害防止を目的とした情報処理装置等電波障害自主規制協議会(VCCI)基準に適合しております。しかし、本製品を、ラジオ、テレビジョン受信機に近接してご使用になりますと、受信障害の原因となることがあります。

取り扱い説明書に従って正しくお取り扱いください。

## Declaration of Conformity

Compliance ID: FDDI/S

Product Name: SunFDDI/S Adapter

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This equipment may not cause harmful interference and 2) This equipment must accept any interference that may cause undesired operation.

In addition this equipment complies with the following requirements of the EMC Directive 89/336/EEC and Low Voltage Directive 73/23/EEC;

EMC:	EN55022 / CISPR22 (1985)	Class B
	EN50082-1 IEC801-2 (1991)	4 kV (Direct), 8 kV (Air)
	IEC801-3 (1984)	3 V/m
	IEC801-4 (1988)	1.0 kV Power Lines, 0.5 kV Signal Lines
	EN61000-3-2/IEC1000-3-2(1994)	Pass (Class D)

### Supplementary Information:

This product was tested and complies with all the requirements for the CE Mark.

\_\_\_\_\_/ S /\_\_\_\_\_  
Dennis P. Symanski      DATE  
Manager, Product Compliance

Sun Microsystems Computer Company  
2550 Garcia Avenue, M/S UMPK15-102  
Mt. View, CA 94043, USA  
Tel: 415-786-3255  
Fax: 415-786-3723

\_\_\_\_\_/ S /\_\_\_\_\_  
Stephen McGoldrick      DATE  
Quality Assurance Manager

Sun Microsystems Limited  
Springfield, Linlithgow  
West Lothian, EH49 7LR  
Scotland, United Kingdom  
Tel: 0506 670000  
Fax: 0506 760011



# Contents

---

**Preface xv**

**1. SunFDDI Overview 1**

Feature Summary 1

FDDI Conformance 2

**2. Hardware Installation 3**

Installation Items 3

Installing SunFDDI SBus Cards 4

▼ To Install the Adapter 4

MIC-to-SC Converter 6

MIC-to-MIC Coupler 7

Connecting Fiber-optic Cables 8

Cleaning the Fiber-optic Cable 10

Link Status Indicator (Diagnostic LED) 11

**3. Installing SunFDDI 13**

Installation Requirements 14

Installing and Configuring SunFDDI 14

▼ To Load and Mount the CD-ROM 14

▼ To Install SunFDDI Using `pkgadd` 15

- ▼ To Set Up the Network 17
- Configuring the Host File 18
- ▼ To Configure the Host File 18
- Installing SunNet Manager Agents for SunFDDI 20
- ▼ To Use `nf_install_agents` 20
- Removing SunFDDI 21
- ▼ To Remove SunFDDI 21
- 4. Using the SunFDDI Network Utilities 23**
- Changing the Default MAC Address (`nf_macid`) 23
- ▼ To Change the Default MAC Address with `nf_macid` 24
- Displaying SunFDDI Statistics (`nf_stat`) 25
  - Displaying Local Interface Statistics 25
  - Displaying Statistics from Neighboring Stations 31
- Monitoring SMT Frames (`nf_smtmon`) 34
  - SMT Frame Classes and Types 37
  - Filtering Output from `nf_smtmon` 38
- Configuring Synchronous FDDI (`nf_sync`) 39
- 5. Improving Network Performance 41**
- High-Performance FDDI Networks 41
- Ring Latency Improvement 42
- Data Throughput Improvement 42
  - Send and Receive Buffers 43
- Performance Across Bridges 43
- To Tune the Socket Options 44
- MTU Path Discovery 44
  - ▼ To Disable MTU Path Discovery 45



Tuning nf Parameters	45
Tuning the Maximum Transfer Unit (MTU)	45
Target Token Rotation Time (TTRT)	45
Setting parameters using nf.conf	46
<b>6. Troubleshooting and Diagnostics</b>	<b>49</b>
Troubleshooting Checklist	49
▼ To Check the Connection to the Station	49
▼ To Check the Connections Between Stations	50
▼ To Check the Link Status Indicator	50
Checking the MAC Address	51
▼ To Check the SunFDDI Driver	51
▼ To Check the IP Addresses	51
▼ To Check the IP Routing	52
▼ To Check the Protocol Statistics	53
▼ To Check the SMT Traffic	54
Solving Common Problems	54
Running the Hardware Self-Test Program	60
▼ To Run the Hardware Self-Test	60
Loading the Device Driver Manually	61
▼ To Configure and Load the Device Driver	61
SunFDDI/S Adapters Cannot Boot Sun4d Diskless Clients	63
<b>A. Frequently Asked Questions About SunFDDI</b>	<b>65</b>
<b>Glossary</b>	<b>71</b>
<b>Index</b>	<b>75</b>



# Figures

---

- FIGURE 2-1 Removing Plastic Retainer From Rear of Card 5
- FIGURE 2-2 EMI Adapter Plates to FDDI Adapter 6
- FIGURE 2-3 MIC-to-SC Converter Cable 7
- FIGURE 2-4 Aligning SC-Type Fiber-optic Cable Connectors 9
- FIGURE 2-5 Cleaning the End of a Fiber-optic Cable 10
- FIGURE 4-1 Normal Sequence of PCM States 29



# Tables

---

TABLE 4-1	<code>nf_stat</code> States Returned Under ECM	27
TABLE 4-2	<code>nf_stat</code> States Returned Under RMT	27
TABLE 4-3	<code>nf_stat</code> States Returned Under PCM	28
TABLE 4-4	<code>nf_stat</code> States Returned Under PHY	32
TABLE 4-5	Elements of the SMT Frames	35
TABLE 6-1	Problems Installing SunFDDI	54
TABLE 6-2	Problems Running SunFDDI	55
TABLE 6-3	Problems Using the SNMP Agents for SunFDDI	59



# Preface

---

The *SunFDDI™ SBus Adapter 6.0 User's Guide* describes how to turn your system into an FDDI station attached to an FDDI network. It is intended for experienced network administrators who are familiar with the Solaris™ 7 operating environment or compatible versions. The SunFDDI SBus Adapter 6.0 is supported on Sun4d, Sun4m, and Sun4u system architecture types.

The connector type has been changed for SunFDDI 6.0 to an SC-type connector. If you are connecting the SunFDDI 6.0 card to a network that has a MIC connector, an SC-MIC converter cable is required.

---

## How This Book Is Organized

The *SunFDDI™ SBus Adapter 6.0 User's Guide* is organized as follows:

**Chapter 1 “SunFDDI Overview,”** describes the SunFDDI 5.0 implementation of the FDDI protocols and includes a list of the specifications to which it conforms.

**Chapter 2 “Hardware Installation,”** provides detailed instructions on how to install your SunFDDI SBus card in your machine and connect the FDDI cable.

**Chapter 3 “Installing SunFDDI,”** describes how to install the SunFDDI device driver and utilities. It includes a description of the post-installation scripts that configure your machine as an FDDI station.

**Chapter 4 “Using the SunFDDI Network Utilities,”** describes the network utilities delivered with SunFDDI.

**Chapter 5 “Improving Network Performance,”** describes the configurable network parameters and provides general advice on how to obtain the best performance from your network.

**Chapter 6 “Troubleshooting and Diagnostics,”** tells you how to detect and resolve problems with your FDDI network.

**Appendix A “Frequently Asked Questions About SunFDDI,”** contains a list of common questions and their responses.

---

## UNIX Commands

This document may not contain information on basic UNIX<sup>®</sup> commands and procedures such as shutting down the system, booting the system, and configuring devices.

See one or more of the following:

- *Solaris Handbook for Sun Peripherals (If you are incorporating Solaris software commands in your document, delete this sentence.)*
- AnswerBook<sup>™</sup> online documentation for the Solaris<sup>™</sup> software environment
- Other software documentation that you received with your system



---

# Typographic Conventions

TABLE P-1 Typographic Conventions

Typeface	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
<b>AaBbCc123</b>	What you type, when contrasted with on-screen computer output	% <b>su</b> Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this.
	Command-line variable; replace with a real name or value	To delete a file, type <code>rm filename</code> .

---

# Shell Prompts

TABLE P-2 Shell Prompts

Shell	Prompt
C shell	<i>machine_name%</i>
C shell superuser	<i>machine_name#</i>
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

---

## Related Documentation

For a more detailed description of FDDI technology and the relevant FDDI protocols, see these documents:

<b>Title</b>	<b>Author/Publisher</b>	<b>Part Number</b>
<i>Handbook of Computer-Communications Standards, Volume 2,</i> <i>FDDI Technology and Applications</i>	William Stallings, Macmillan Publishing Company: 1987	NA
<i>FDDI A High Speed Network</i>	Edited by Sonu Mirchandani and Raman Khanna, John Wiley & Sons: 1993	NA
<i>STREAMS DLPI Specification</i>	Amit Shah and G. Ramakrisnan, Prentice Hall, Inc.: 1994	800-6915

---

## Sun Documentation on the Web

The docs.sun.com<sup>sm</sup> web site enables you to access Sun technical documentation on the Web. You can browse the docs.sun.com archive or search for a specific book title or subject at:

<http://docs.sun.com>

---

## Sun Welcomes Your Comments

We are interested in improving our documentation and welcome your comments and suggestions. You can email your comments to us at:

[docfeedback@sun.com](mailto:docfeedback@sun.com)

Please include the part number of your document in the subject line of your email.

# SunFDDI Overview

---

- Feature Summary—page 1
- FDDI Conformance—page 2

This chapter describes the Sun FDDI (Fiber Distributed Data Interface) implementation of the FDDI protocols, including a list of the ANSI/FDDI standards to which it conforms..

---

## Feature Summary

The SunFDDI SBus Adapter 6.0 is a combination of hardware and software that turns your system into an FDDI station. There are two hardware options:

- SunFDDI — single attached station (SAS) on fiber
- SunFDDI Dual — dual attached station (DAS) on fiber

SunFDDI is a high-speed networking product that provides significantly greater bandwidth (up to 10 times) compared to 10-megabit Ethernet networks. It is designed for Sun4d, Sun4m, and Sun4u system architecture types running Solaris™ 2.5.1 Hardware: 4/97, 2.6, or Solaris 7.

SunFDDI does the following:

- Implements FDDI single-attached station (SunFDDI) and FDDI dual-attached station (SunFDDI Dual)
- Provides connection to multimode fiber (SunFDDI and SunFDDI Dual) networks
- Supports data transfer rates of up to 100 Mbps
- Provides power-up self test and system diagnostic tests
- Provides high reliability and availability through distributed, automatic recovery
- Supports up to four SunFDDI SBus cards installed in one SBus and up to eight SunFDDI SBus cards installed in one machine

- Supports 12.5 Mbps and 25 Mbps SBus transfer rates
- Supports 62.5/125 micrometer, multimode fiber (MMF)
- Provides SunNet Manager agents for the effective management of FDDI stations and networks from a centralized SunNet Manager Console; (requires SunNet Manager 2.2 or later in addition to SunFDDI)
- Complies with the ANSI X3T9.5 standard for single-attached LAN fiber rings and with revision 7.3 of the ANSI/FDDI SMT specification
- Complies with revision 1496-1993 of the IEEE SBus specification

---

## FDDI Conformance

SunFDDI conforms to the following standards and specifications:

- ANSI/FDDI Media Access Control (MAC) X3.139-1987
- ANSI/FDDI physical sublayer (PHY) X3.148-1988
- ANSI/FDDI physical medium dependent (PMD) X3.166-1990
- ANSI/FDDI Station Management (SMT) X3.299 R7.3 (formally R7.2.99)
- IEEE SBus 1496-1993

## Hardware Installation

---

- Installation Items—page 3
- Installing SunFDDI SBus Cards—page 4
- MIC-to-SC Converter—page 6
- MIC-to-MIC Coupler—page 7
- Connecting Fiber-optic Cables—page 8
- Link Status Indicator (Diagnostic LED)—page 11

This chapter provides step-by-step procedures for installing SBus cards and connecting converters and fiber-optic cables.



---

**Caution** – Before opening your machine, always ensure that the power switch is off (O position). When the power is off, the green light on the front of the machine is unlit and the fan in the power supply is not running. Always take care to protect your equipment from the effects of static electricity.

---

---

## Installation Items

Before proceeding with the installation, make sure you have received the following items:

- A SAS or DAS SunFDDI SBus adapter
- FDDI converter cable
- MIC (Media Interface Connector) coupler
- Disposable grounding wrist strap
- CD-ROM containing SunFDDI 6.0 software

Contact your sales representative if any of these items are missing.

---

# Installing SunFDDI SBus Cards

Refer to the hardware installation manual that came with your system for detailed instructions on how to install an SBus card in your machine.



---

**Caution** – The SunFDDI SBus card is sensitive to static electricity. Always use the wrist strap supplied with SunFDDI when handling the card and ensure that the wrist strap is properly grounded. Handle the SunFDDI SBus card by the edges and avoid touching any of the components.

---

There are no user-configurable jumpers or switches on the SunFDDI SBus card. Altering any of the components on the card may affect its operation adversely and will render any product warranty void.

## ▼ To Install the Adapter

---

**Note** – Refer to your system installation or service manual for detailed instructions for the following tasks.

---

1. **Power off your system and open the system unit.**
2. **Attach the adhesive copper strip of the wrist strap to the metal casing of the power supply. Wrap the other end twice around your wrist, with the adhesive side against your skin.**
3. **Holding the adapter by the edges, unpack and place it on an antistatic surface.**
4. **Remove the plastic retainer from the card.**
  - a. **Bend one leg of the plastic retainer slightly to the outside until it unhooks from the card.**
  - b. **Unhook the other leg of the plastic retainer from the card.**

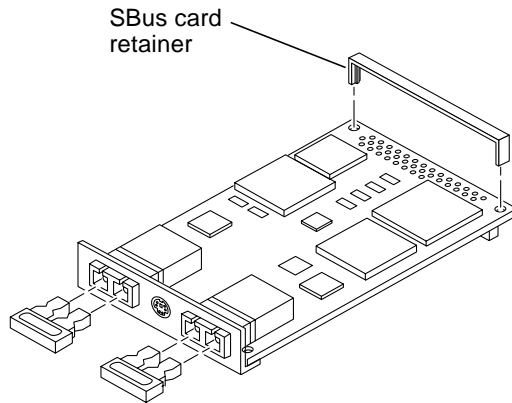


FIGURE 2-1 Removing Plastic Retainer From Rear of Card

5. Remove the filler panel from the slot where you want to insert the adapter.
6. Holding the adapter by the edges, align the adapter edge connector with the SBus slot. Slide the adapter face plate into the small slot at the end of the SBus opening.
7. Applying even pressure at both corners of the adapter, push the adapter until it is firmly seated in the slot.



---

**Caution** – Do not use excessive force when installing the adapter into the SBus slot. You may damage the adapter's SBus connector. If the adapter does not seat properly when you apply even pressure, remove the adapter and carefully reinstall it again.

---

8. When the card is firmly in place, use the two special screws and EMI plates provided to attach the card backplate as shown in FIGURE 2-2.

Make sure the narrow side of the cutout is facing toward the center of the SBus bracket. Carefully tighten screws until the EMI plate is seated against the unit chassis. Overtightening will cause warping of the EMI plates and result in permanent damage.

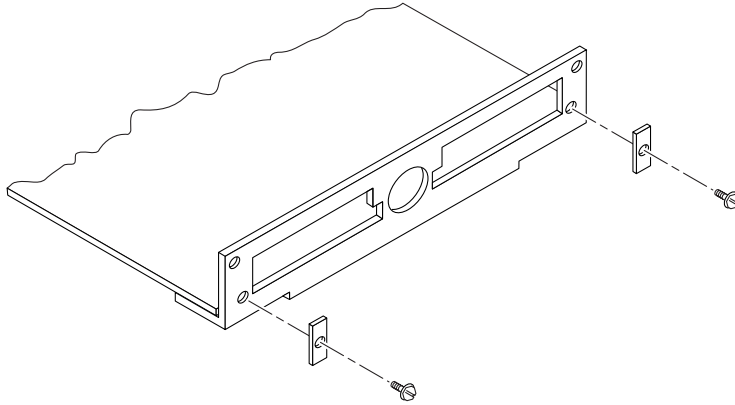


FIGURE 2-2 EMI Adapter Plates to FDDI Adapter



---

**Caution** – Do not use the EMI plates provided with your workstation or damage to the FDDI connectors can result.

---

9. If necessary, reinstall the filler panel in the unused SBus opening.
10. Detach the wrist strap and close the system unit.
11. Connect fiber-optic cables to the adapter and to the FDDI network.



---

**Caution** – Connecting your node to the network could affect other nodes on the network.

---

---

## MIC-to-SC Converter

If you are connecting the SunFDDI 6.0 card to a network that has a MIC (Media Interface Connector) connector, a converter cable is required. Earlier versions of SunFDDI used MIC connectors.

Sun has provided converter cables that allow existing MIC-based networks to connect to the SunFDDI 6.0 adapter without making cabling changes. Networks that have already been designed for SC connections do not need the converter cable. There will be under one decibel of signal integrity loss when using the adapter. Borderline applications may need to reconfigure the network directly for SC connection if the signal loss materially affects the error rate.



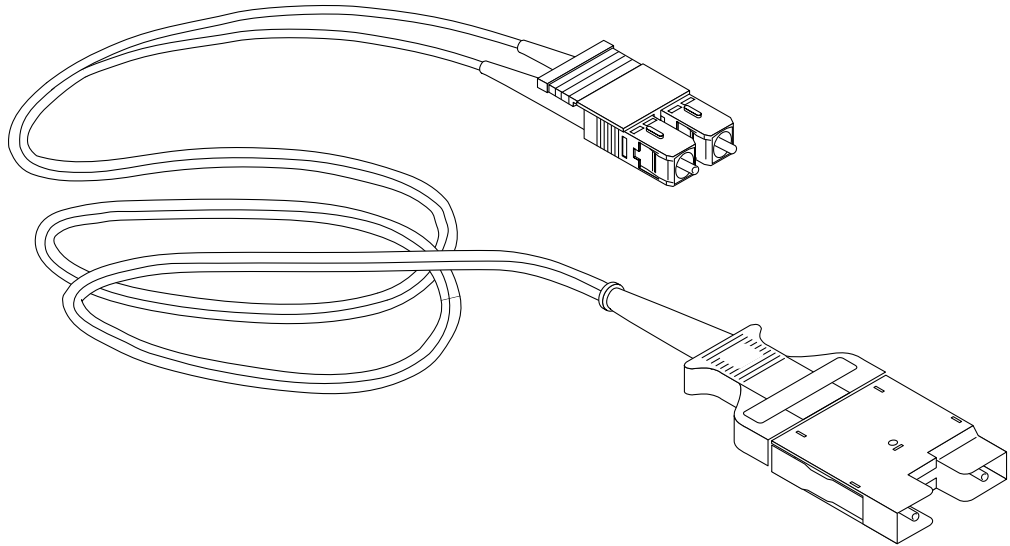


FIGURE 2-3 MIC-to-SC Converter Cable

---

## MIC-to-MIC Coupler

A separate MIC coupler is also provided with the SunFDDI™ SBus Adapter 6.0 product to support MIC-to-MIC network connections.

Two different versions of the coupler are available:

- One with raised keys to help you properly orient the connection.
- One without raised keys, which has specific connecting instructions.

---

**Note** – Make sure you properly connect the coupler. An improper connection will “twist” or “cross” the ring.

---

---

# Connecting Fiber-optic Cables

Fiber-optic cable is fragile and should not be subjected to mechanical stress or impact. Always observe the following precautions when handling fiber-optic cable and connectors:

- Fiber-optic cable connectors consist of a ceramic or steel ferrule through which the optical fiber passes. Do not touch the tip of the ferrule, as marring or depositing oil or dirt on its delicate surface will destroy its ability to transmit light.
- Use the protective caps provided on the fiber-optic cable connectors and optic data links whenever the cable is not connected.
- Fiber-optic cable has a limited turn radius. Do not bend it in a way that could damage the fiber or cause signal loss.

- 1. Unpack the cable, remove the plastic protective caps or plugs from each end, and remove the plug from the transceiver unit on the card.**
- 2. Make sure the fiber-optic cable is properly oriented with its connector on the SunFDDI card.**


Most fiber-optic cables have raised keys on one side of the connectors (see FIGURE 2-4). There are also keyway notches on the inside of the connector on the card. The fiber-optic cable should be oriented so that the keys on the cable connectors line up with the keyway notches on the card. Also make sure to connect the cable to the proper port, either port A or port B (see FIGURE 2-4).



---

**Caution** – Some cables do not possess raised keys to help you properly orient the connection.

---

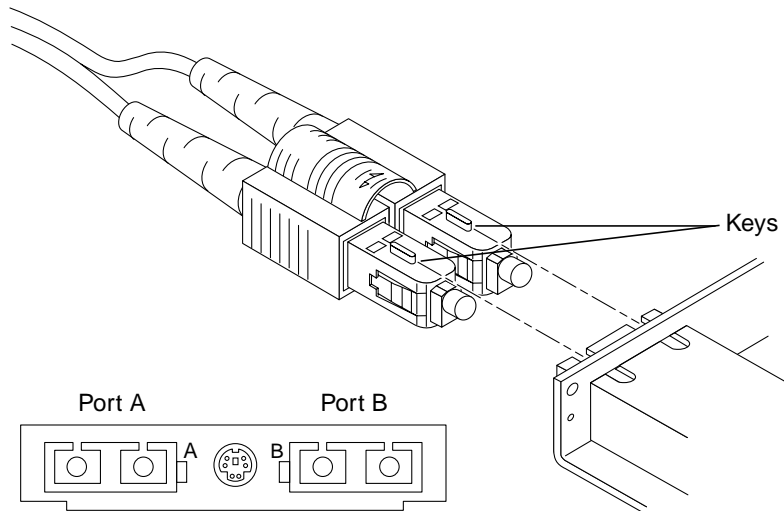

**FIGURE 2-4** Aligning SC-Type Fiber-optic Cable Connectors

- 3. Once you have verified that the fiber-optic cable and the connector on the SunFDDI card are properly oriented, plug the cable into the card connector.**  
You should hear a distinctive click, telling you that the cable is properly mated with the card connector.

---

# Cleaning the Fiber-optic Cable

Fiber-optic cable connectors can be cleaned if they become contaminated with dirt, dust, or oil, which can cause signal noise on the network.

1. Gently wipe the end of the ferrule with an alcohol-moistened cotton swab.

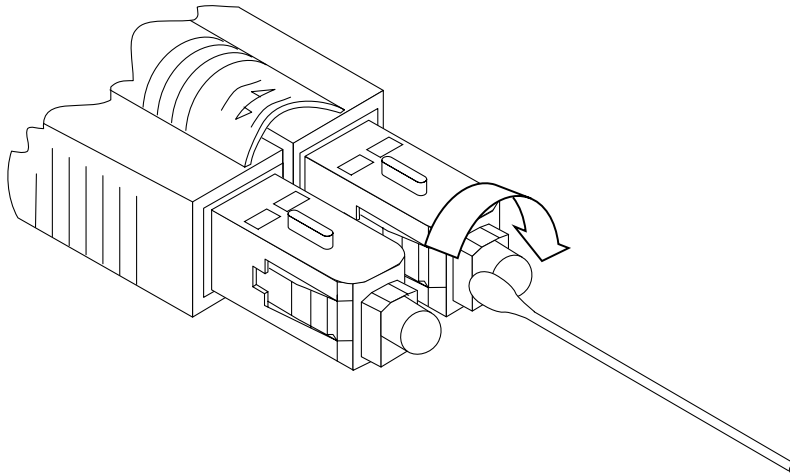


FIGURE 2-5 Cleaning the End of a Fiber-optic Cable

2. Blow clean, dry compressed air around the end of the connector and around the ferrule to dislodge loose dust and grit.
3. Clean the adapter by moistening the end of a pipe cleaner in alcohol and running the pipe cleaner through the adapter.
4. Repeat Step 3 with a dry pipe cleaner.
5. Blow the adapter with clean, dry compressed air to finish drying the clean adapter.

---

## Link Status Indicator (Diagnostic LED)

A link status indicator is mounted on the SunFDDI SBus card. The color of the LED indicates the current status of the connection to the FDDI network as follows:

- **Red**—Either the driver is loaded and the interface is *not* configured or the driver has not been loaded.
- **Amber**—Interface configured. No valid line state to an active FDDI network exists.
- **Green**—Connection established to an active FDDI network.
- **Blinking green**—In a dual-ring environment: Invalid connection.  
In a dual-homing environment: Normal. The connection is in standby mode.

Refer to **Chapter 6 “Troubleshooting and Diagnostics,”** for more information on diagnosing problems with your FDDI network.



## Installing SunFDDI

---

- Installation Requirements—page 14
- Installing and Configuring SunFDDI—page 14
- Configuring the Host File—page 18
- Installing SunNet Manager Agents for SunFDDI—page 20
- Removing SunFDDI—page 21

This chapter assumes that you have already installed the SunFDDI SBus card in your machine and that you are loading the software from a local CD-ROM drive.

This chapter tells you how to install the SunFDDI device drivers, utilities, and SunNet Manager agents. It includes instructions on how to check your installation and how to remove the SunFDDI software, if necessary.

---

**Note** – If you installed the SunFDDI 6.0 SBus card into a Netra™ 150 server, *do not* use the software procedures in this user's guide. After you have installed the SunFDDI 6.0 card in the Netra 150 server, follow the instructions given in the *Netra User's Manual* to complete the software portion of the installation process.

---

---

# Installation Requirements

- Hardware and software platforms

SunFDDI is designed for Sun4d, Sun4m and Sun4u system architectures (32 Mbytes RAM minimum) running Solaris 2.5.1 Hardware: 4/97, 2.6, or Solaris 7.

- Disk space

You need a machine with 1600 KBytes of disk space to install SunFDDI in the Solaris 7 environment or in compatible versions.

- Host names and IP addresses

You must assign a unique host name and IP address to each SunFDDI device installed in your machine. If you are installing more than one interface in a single machine, each interface must be connected to a different subnet of a network.

---

# Installing and Configuring SunFDDI

Use `pkgadd(1M)` to install unbundled software on machines running the Solaris 7 operating environment. See the *Solaris 2.7 Software and AnswerBook Packages Administration Guide* for detailed information on installing software products using `pkgadd`.

## ▼ To Load and Mount the CD-ROM

1. **Become superuser.**
2. **Place the CD-ROM in its caddy and load the caddy into the CD-ROM drive.**

The CD-ROM is mounted automatically under  
`/cdrom/sunfddi_s6_0_and_p2_0/`



## ▼ To Install SunFDDI Using pkgadd

1. **Become superuser.**
2. **Start pkgadd by typing:**

```
# cd /cdrom/sunfddi_s6_0_and_p2_0/Product/sbus
# pkgadd -d .
```

The list of available packages is displayed.

```
The following packages are available:
 1  SUNWnfd      SunFDDI SBus Drivers
      (sparc) 6.0
 2  SUNWnfh      SunFDDI SBus Header files.
      (sparc) 6.0
 3  SUNWnfm      SunFDDI SBus Man pages.
      (sparc) 6.0
 4  SUNWnfu      SunFDDI SBus Utilities.
      (sparc) 6.0
Select package(s) you wish to process (or "all" to process all
packages). (default: all) [?,??,q]:
```

The package `SUNWnfd` contains the SunFDDI device driver and *must be installed first*. By default, the base directory `<basedir>` for this package is `/`. You can change the default base directory when you start `pkgadd(1M)` with the `-R` option. This package must be installed on every machine that runs SunFDDI.

`SUNWnfu` must be installed if you plan to run SunNet Manager. `SUNWnfh` and `SUNWnfm` are optional packages.

3. **Enter the number that corresponds to the package you want to install and press Return. Respond to any prompts that appear on the command line.**
4. **Type `y` to accept the execution of the installation scripts with superuser permission.**

```
This package contains scripts which will be executed with superuser
permission during the process of installing the package.

Do you want to continue with the installation [y,n,?] y
```

## ▼ To Install the man Pages and Utilities (SUNWnfm and SUNWnfu)

The SUNWnfm package contains man pages, and the SUNWnfu package contains the SunFDDI utilities and SNM Agents. By default, the base directory *<basedir>* for this package is /opt. You can change the default base directory when you start `pkgadd(1M)` with the `-R` option. These packages can be installed on a server and shared between multiple machines, if required.

An installation script is executed automatically when you install the man pages and utilities (SUNWnfm and SUNWnfu):

### 1. Type `y` to accept the installation of files with `setuid/setgid` permission.

If you are installing the SUNWnfu package for the first time, this step will not occur.

```
Do you want to install these setuid/setgid files [y,n,?,q] y
```

### 2. Type `y` to accept the execution of the installation scripts.

```
This package contains scripts which will be executed with superuser  
permission during the process of installing the package.
```

```
Do you want to continue with the installation [y,n,?] y
```

### 3. Type `q` to stop `pkgadd` when the list of available packages is displayed again.

```
The following packages are available:
```

- |   |         |   |
|---|---------|---|
| 1 | SUNWnfd | SunFDDI SBus Drivers<br>(sparc) 6.0       |
| 2 | SUNWnfh | SunFDDI SBus Header files.<br>(sparc) 6.0 |
| 3 | SUNWnfm | SunFDDI SBus Man pages.<br>(sparc) 6.0    |
| 4 | SUNWnfu | SunFDDI SBus Utilities.<br>(sparc) 6.0    |

```
Select package(s) you wish to process (or "all" to process all  
packages). (default: all) [?,??,q]:
```

### 4. Eject the CD-ROM from the CD-ROM drive.

### 5. Reboot your machine to ensure correct system operation.

## ▼ To Set Up the Network

1. Use `ifconfig(1M)` to set up the SunFDDI interfaces in the network.

```
# ifconfig nf0 plumb
ifconfig nf0 199.100.1.1 up
```

2. Use `ping(1M)` to verify that you can send and receive data across the FDDI connection.

If your SunFDDI station is attached to an active FDDI network, try to access a remote station.

```
# ping 199.100.1.2
199.100.1.2 is alive
```

Your SunFDDI station should now be active, and you should be able to send and receive data across an FDDI connection.

To obtain optimum performance from your FDDI network, you may need to tune the configurable network parameters. See **Chapter 5 “Improving Network Performance,”** for detailed instructions.

If you have problems configuring or using your SunFDDI station, see **Chapter 6 “Troubleshooting and Diagnostics,”** for help.

---

# Configuring the Host File

After installing the SunFDDI driver software, you must create a `hostname.nfnum` file for the Ethernet interfaces on the adapter. You must also create both an IP address and a host name for the Ethernet interfaces in the `/etc/hosts` file.

## ▼ To Configure the Host File

1. **At the command line, use the `grep` command to search the `/etc/path_to_inst` file for `nf` devices.**

**For a SunFDDI SBus adapter:**

```
# grep nf /etc/path_to_inst
"/sbus@1f,0/SUNW,nf@1,8c10000" 1 "nf"
"/sbus@1f,0/SUNW,nf@1,8c00000" 0 "nf"
"/sbus@1f,0/SUNW,nf@1,8c30000" 3 "nf"
"/sbus@1f,0/SUNW,nf@1,8c20000" 2 "nf"
```

In the example above, the four `SUNW,nf@1` instances are from a SunFDDI SBus adapter installed in slot 1. For clarity, the instance numbers are bold.

2. **Create an `/etc/hostname.nfnum` file, where `num` is the instance number of each interface you plan to use.**

If you want to use all of the network interfaces from the example in Step 1, you will need to create four files:

File Name	Instance Number	Adapter Ethernet Network Interface
<code>/etc/hostname.nf0</code>	0	0
<code>/etc/hostname.nf1</code>	1	1
<code>/etc/hostname.nf2</code>	2	2
<code>/etc/hostname.nf3</code>	3	3

- Do not create `/etc/hostname.nfnum` files for SunFDDI network interfaces you plan to leave unused.
- The `/etc/hostname.nfnum` file must contain the host name for the appropriate network interface.

- The host name should have an IP address that will need to be entered in the `/etc/hosts` file.
- The host name should be different from any other host name of any other interface, for example: `/etc/hostname.hme0` and `/etc/hostname.nf2` cannot share the same host name.

Using the instance examples in Step 1, the following example shows the four `/etc/hostname.nfnum` files required for a system called `zardoz` that has a SunFDDI (`zardoz-11`, `zardoz-12`, `zardoz-13`, and `zardoz-14`).

```
# cat /etc/hostname.hme0
zardoz
# cat /etc/hostname.nf0
zardoz-11
# cat /etc/hostname.nf1
zardoz-12
# cat /etc/hostname.nf2
zardoz-13
# cat /etc/hostname.nf3
zardoz-14
```

### 3. Create an appropriate entry in the `/etc/hosts` file for each active `nf` network interface.

Using the previous example, you will have:

```
# cat /etc/hosts
#
# Internet host table
#
127.0.0.1    localhost
129.144.10.57 zardoz    loghost
129.144.11.83 zardoz-11
129.144.12.41 zardoz-12
129.144.13.67 zardoz-13
129.144.14.30 zardoz-14
```

### 4. Reboot your system.

---

# Installing SunNet Manager Agents for SunFDDI

---

**Note** – You can only install SunNet Manager agents if your network is set up and working and you installed the utilities package (SUNWnfu). By default, the base directory for SUNWnfu is `/etc/opt/SUNWnfu`.

---

Use `nf_install_agents` to install the SunNet Manager agents for SunFDDI. This script copies the FDDI schema files to the directory where the standard agents are installed and updates the configuration files for SunNet Manager. Run `nf_install_agents` on each SunNet Manager console, and on each SunFDDI station you want to manage using SunNet Manager.

## ▼ To Use `nf_install_agents`

1. **Become superuser.**
2. **Start `nf_install_agents` by typing:**

```
# /etc/opt/SUNWnfu/bin/nf_install_agents
```

3. **Type the host names of the console machines that will receive SMT Request Frame (SRF) trap reports from the local station.**

You can send SRF trap reports to more than one console. Each console must have the schemas for SunFDDI installed, for example:

```
Enter hostnames (if any) to send SRF Trap reports to:
(enter blank to terminate)
    enter hostname:opus
    enter hostname:rigel
    enter hostname:
```

---

# Removing SunFDDI

If you remove the SunFDDI hardware from your machine, also remove the software to prevent the device driver from starting each time you reboot the machine.

Use `pkgrm(1M)` to remove unbundled software from machines running the Solaris 7 environment or compatible versions. Refer to *Installing Solaris Software* for detailed information on removing software packages using `pkgrm`.

## ▼ To Remove SunFDDI

1. **Become superuser.**
2. **Use `pkginfo` to find all SunFDDI software packages that have been installed on the system.**

```
# /usr/bin/pkginfo | grep nf
system SUNWnfd SunFDDI SBus Drivers
system SUNWnfu SunFDDI SBus Utilities
```

3. **Use `pkgrm` to remove SunFDDI.**

The post-remove script removes the modifications made to the system files and updates the package information on your machine. In the following example, all four of the SunFDDI packages are removed. However, the header files and man pages are optional. Therefore, remove the `SUNWnfh` and `SUNWnfm` files only if you installed them. Always remove `SUNWnfd` last.

```
# /usr/sbin/pkgrm SUNWnfu
# /usr/sbin/pkgrm SUNWnfh
# /usr/sbin/pkgrm SUNWnfm
# /usr/sbin/pkgrm SUNWnfd
```

4. **Modify the `/etc/hosts` file to remove the IP addresses, host names, and hostname files (`hostname.nfnum`) for the SunFDDI interfaces.**
5. **Reboot the machine to ensure correct system operation.**





## Using the SunFDDI Network Utilities

- Changing the Default MAC Address (`nf_macid`)—page 23
- Displaying SunFDDI Statistics (`nf_stat`)—page 25
- Monitoring SMT Frames (`nf_smtmon`)—page 34
- Configuring Synchronous FDDI (`nf_sync`)—page 39

This chapter describes the network utilities delivered with SunFDDI.

Throughout this chapter, it is assumed that you have installed the SunFDDI software under the default base directory `<basedir>` for your operating system:

The default base directory `<basedir>` is:

```
/opt/SUNWconn/bin
```

---

## Changing the Default MAC Address (`nf_macid`)

Each attachment to an FDDI network is identified by a unique 48-bit MAC address. By default, the first SunFDDI SBus card takes the host-resident MAC address, which is stored in nonvolatile memory (NVRAM) on the motherboard of the machine. Each subsequent SunFDDI SBus card adopts the card-resident MAC address stored in its own IDPROM.

In general, this convention is sufficient to ensure that each SunFDDI SBus card installed in the machine has a unique MAC address. However, there may be a conflict with other LAN interfaces that also take the host-resident MAC address—for example, an Ethernet (1e) interface, or a SunFDDI 2.0 (bf) interface. In this event, change the default MAC address assigned to the first SunFDDI SBus card installed in the system.

## ▼ To Change the Default MAC Address with `nf_macid`

Use the `nf_macid(1M)` utility to recover the card-resident MAC address, and then modify the system files to override the default MAC address:

1. **Become superuser.**
2. **Use the `nf_macid(1M)` utility to recover the MAC address from the IDPROM on the SunFDDI interface identified by the instance number `<inst>`.**

```
# <basedir>/nf_macid nf<inst>  
<mac_address>
```

3. **Modify the start-up file on your machine so that the MAC address is assigned correctly when the system is rebooted.**
  - Edit the `/etc/rcS.d/S30rootusr.sh` file to add the following `if` statement immediately *after* the `ifconfig` command that initializes the interface `nf<inst>`. If you are changing the MAC address of more than one interface, add one `if` statement for each interface.

```
ifconfig $1 plumb  
  if [ $1 = "nf<inst>" ]; then  
    ifconfig nf<inst> ether <mac_address>  
  fi
```

On most systems, the `/etc/rcS.d/S30rootusr.sh` file is a hard link to the `/etc/rootusr` file.

4. **Reboot your machine to assign the new MAC address to the SunFDDI interface.**

When a SunFDDI SBus card takes the host-resident MAC address, it can be swapped to another system without affecting the existing network. However, once a station starts sending packets on the network, the Address Resolution Protocol (ARP) updates the ARP tables on other stations to include the MAC address of its interface. The ES-IS protocol performs the same function for SunFDDI OSI running over FDDI. If you swap SunFDDI SBus cards that use the card-resident MAC address, you must wait until the ARP entries time-out, or remove the ARP entries from every active station manually before packets can be routed correctly.

---

# Displaying SunFDDI Statistics (nf\_stat)

The `nf_stat(1M)` utility interrogates a specified SunFDDI interface and displays the accumulated statistics. This command must be executed as `root` and has the general form:

```
# <basedir>/nf_stat [-m] nf<inst> [<interval>] [<count>]
```

`nf<inst>` specifies the SunFDDI interface

`<interval>` is the elapsed time (in seconds) between interrogations

`<count>` the total number of interrogations

The `nf_stat` utility displays information using column headings that conform to SMT revision 7.3, which differ from SMT revision 5.1 and 4.2 headings in the following cases:

- The ECM heading corresponds to the 5.1 MIM heading.
- The RMT heading does not have an analog in SMT revision 4.2. If you run SunFDDI at revision level 4.2, ignore any data displayed under the RMT heading of `nf_stat`.

## Displaying Local Interface Statistics

When you enter the `nf_stat` command *without* the `-m` option, it displays statistics recovered from the local interface `nf<inst>`.

For example, to display the accumulated statistics for the interface `nf0`, type:

```
# <basedir>/nf_stat nf0
Ring   ECM      RMT      PCMS   Ring_OP   XmitP     RecvP
UP     IN    RING_OP  ACTIVE      c      16fde     1862d
```

You can also monitor the interface dynamically (active monitor), by specifying the *interval* (the elapsed time between interrogations) and *count* (the total number of interrogations). This displays the incremental difference between the current state and the previous state. The minimum interval is one second and the accumulated statistics are displayed after every tenth interrogation.

For example, to monitor the interface `nf0` once every 60 seconds for 3 minutes (a total of 3 interrogations), type:

```
# <basedir>/nf_stat nf0 60 3
Ring   ECM      RMT      PCMS    Ring_OP   XmitP     RecvP
UP     IN    RING_OP  ACTIVE   c         131a0     131aa
UP     IN    RING_OP  ACTIVE   0         0         0
UP     IN    RING_OP  ACTIVE   0         1         1
```

## Interpreting Local Statistics

Running the `nf_stat` utility *without* the `-m` option displays information about the various SMT state machines and the network to which the local station is attached:

### Ring (*Ring Status*)

The `Ring` status shows the current state of the physical connection to the FDDI network. The following states may be returned by `nf_stat` under the `Ring` heading:

---

UP	SunFDDI interface physically connected to the active network
DOWN	SunFDDI interface disconnected, or connected to the inactive network

---

### ECM (*Entity Coordination Management*)

ECM shows the current state of the Entity Coordination Management state machine, which controls the following features and facilities:

- Media availability
- Trace
- Path Test
- Optical Bypass (optional)
- Hold Policy (optional)

The following states may be returned by `nf_stat` under the ECM heading:

**Table 4-1** `nf_stat` States Returned Under ECM

State	Meaning
OUT	ECM is inactive and is waiting for a connect request (initial state).
IN	ECM is active; normal state after successful connection request.
TRACE	ECM is propagating a trace request to the appropriate entity.
LEAVE	ECM is closing all connections prior to the station leaving the ring.
PATH_TEST	ECM is entering a path test state following trace completion.
INSERT	ECM is sending a request to the optical bypass switch to indicate that the station is entering the ring. This disengages the switch.
CHECK	ECM is verifying that symbols are being received from the network.
DEINSERT	ECM is sending a request to the optical bypass switch, to indicate that the station is leaving the ring. This engages the switch.

## RMT (*Ring Management*)

RMT shows the current state of the Ring Management state machine, which controls the following features and facilities:

- MAC availability
- Detection and resolution of duplicate addresses
- Identification of stuck beacon and initiation of trace

The following states may be returned by `nf_stat` under the RMT heading:

**Table 4-2** `nf_stat` States Returned Under RMT

State	Meaning
ISOLATED	RMT is inactive (initial state).
NON_OP	RMT is waiting for an operational ring.
RING_OP	RMT is operating normally.
DETECT	RMT is checking for duplicate addresses (transient state during initialization).
NON_OP_DUP	RMT has detected that its address is duplicated and is initiating recovery. The ring is not operational in this state.

**Table 4-2** nf\_stat States Returned Under RMT

---

RING_OP_DUP	RMT has detected that the MAC address is duplicated and flagged the error. The ring is operational in this state.
DIRECTED	RMT has been beaconing for an extended period of time and is transmitting a stream of directed beacons prior to initiating recovery.
TRACE	RMT has initiated a trace to recover a stuck beacon.

---

### PCM (*Physical Connection Management*)

PCM shows the current state of the Physical Connection Management state machine that controls the following features and facilities:

- Connection initialization
- Maintenance support

This heading is modified to indicate the type of port that is being managed:

- PCMS: single-attached station, S-port
- PCMA: dual-attached station, A-port
- PCMB: dual-attached station, B-port

The following states may be returned by nf\_stat under the PCM heading:

**Table 4-3** nf\_stat States Returned Under PCM

---

State	Meaning
OFF	PCM is inactive (initial state).
BREAK	PCM is starting the connection synchronization phase.
CONNECT	PCM is synchronizing the connection end-points prior to the signaling sequence.
NEXT	PCM is transmitting PDUs prior to entering SIGNAL state.
SIGNAL	PCM is transmitting and receiving signal bits (information) following a NEXT state.
JOIN	First state in the sequence leading to a synchronized connection.
VERIFY	Second state in the sequence leading to a synchronized connection.
ACTIVE	Final state indicating that the port is successfully incorporated in the token path.
TRACE	PCM is localizing a stuck beacon condition.

---

The normal sequence of PCM states leading to a fully synchronized connection and incorporation of the port into the token path is shown in FIGURE 4-1. Note that the minimum interval between interrogations is one second and that this is not always fast enough to recover and display the complete sequence of PCM states.

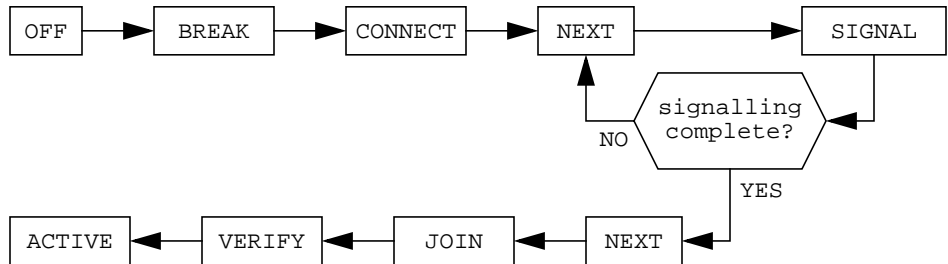


FIGURE 4-1 Normal Sequence of PCM States

### Ring\_OP (*Ring Operational*)

Ring\_OP shows the number of Ring\_OP (Ring Operational) signals received. This signal is generated when the station is incorporated into an operational network.

### XmitP (*Transmit Packets*)

Running `nf_stat` *without* an interval and count, displays the total number of packets transmitted since the interface was activated. Running `nf_stat` *with* an interval and count, displays the number of packets transmitted since the last interrogation.

### RecvP (*Receive Packets*)

Running `nf_stat` *without* an interval and count displays the total number of packets received since the interface was activated. Running `nf_stat` *with* an interval and count displays the number of packets received since the last interrogation.

## Example Local Statistics

The following output was recovered from a single-attached station using the command shown. A temporary fault condition was simulated by disconnecting the FDDI cable from the SunFDDI SBus card and then reconnecting it.

```
# <basedir>/nf_stat nf0 1 20
```

Ring	ECM	RMT	PCMS	Ring_OP	XmitP	RecvP
UP	IN	RING_OP	ACTIVE	2	26	1d
UP	IN	RING_OP	ACTIVE	0	0	0
UP	IN	RING_OP	ACTIVE	0	0	0
UP	IN	RING_OP	ACTIVE	0	0	0
DOWN	IN	ISOLATED	CONNECT	0	1	1
DOWN	IN	ISOLATED	CONNECT	0	0	0
DOWN	IN	ISOLATED	NEXT	0	0	0
UP	IN	RING_OP	ACTIVE	1	0	0
UP	IN	RING_OP	ACTIVE	0	1	1

Ring	ECM	RMT	PCMS	Ring_OP	XmitP	RecvP
UP	IN	RING_OP	ACTIVE	3	29	20
UP	IN	RING_OP	ACTIVE	0	0	0
UP	IN	RING_OP	ACTIVE	0	1	1
UP	IN	RING_OP	ACTIVE	0	0	0
UP	IN	RING_OP	ACTIVE	0	0	0
UP	IN	RING_OP	ACTIVE	0	0	0
UP	IN	RING_OP	ACTIVE	0	0	0
UP	IN	RING_OP	ACTIVE	0	0	0
UP	IN	RING_OP	ACTIVE	0	0	0
UP	IN	RING_OP	ACTIVE	0	0	0
UP	IN	RING_OP	ACTIVE	0	1	1

Note the following observations regarding this example:

- Accumulated statistics are displayed automatically after every tenth interrogation.
- The combination of Ring=DOWN and RMT=ISOLATED indicate that the station is disconnected from the network.
- The minimum interval of one second is not fast enough to recover and display the complete sequence of PCM states during the path re-establishment phase.
- A Ring\_OP signal is received when the path is re-established indicating that the ring is operational.

The link status indicator mounted on the SunFDDI SBus card displays the following sequence of events:

**GREEN** (connected) ---> **AMBER** (disconnected) ---> **GREEN** (connected)



# Displaying Statistics from Neighboring Stations

When you use the `nf_stat` command *with* the `-m` option, it displays information about the neighboring stations attached to the local interface `nf<inst>` and the frames received from the network.

For example, to display information about the neighboring stations attached to the interface `nf0`, type:

```
# <basedir>/nf_stat -m nf0
PhyS Frame      Error      Lost          SA          UNA          DNA
M   b43eb2      0          3          <mac_addr1> <mac_addr2> <mac_addr3>
```

You can also monitor the neighboring stations dynamically (active monitor), by specifying the *interval* (the elapsed time in seconds between interrogations) and *count* (the total number of interrogations). The minimum interval is one second and the accumulated statistics are displayed after every tenth interrogation.

For example, to monitor the stations attached to `nf0` once every 10 seconds for 1 minute (a total of 6 interrogations), type:

```
# <basedir>/nf_stat -m nf0 10 6
PhyS Frame      Error      Lost          SA          UNA          DNA
M   c460a6d      0          3          <mac_addr1> <mac_addr2> <mac_addr3>
M    27224      0          0          <mac_addr1> <mac_addr2> <mac_addr3>
M    27227      0          0          <mac_addr1> <mac_addr2> <mac_addr3>
M    27220      0          0          <mac_addr1> <mac_addr2> mac_addr3>
M    2722e      0          0          <mac_addr1> <mac_addr2> <mac_addr3>
M    27223      0          0          <mac_addr1> <mac_addr2> <mac_addr3>
```

## Interpreting Statistics from Neighboring Stations

Running the `nf_stat` utility *with* the `-m` option displays information about the neighboring stations attached to the local interface `nf<inst>`.

### Phy (*Physical Connection*)

PHY shows the type of physical connection to the FDDI network. This heading is modified to indicate the type of port being managed:

- PhyS: single-attached station, port S
- PhyA: dual-attached station, port A
- PhyB: dual-attached station, port B

The following states may be returned by `nf_stat` under the `PHY` heading:

**Table 4-4** `nf_stat` States Returned Under `PHY`

State	Meaning
NONE	Port disconnected
M	Port connected to Port M on a concentrator
S	Port connected to Port S on a single-attached station
A	Port connected to Port A on a dual-attached station
B	Port connected to Port B on a dual-attached station

### Frame (*Frames Received*)

Running `nf_stat` *without* an interval and count displays the total number of SMT frames received since the interface was activated. Running `nf_stat` *with* an interval and count displays the number of SMT frames received since the last interrogation.

More detailed information about the SMT frames can be recovered using the `nf_smtmon(1M)` utility described in “Monitoring SMT Frames (`nf_smtmon`)” on page 34.

### Error (*Error Frames*)

Running `nf_stat` *without* an interval and count displays the total number of error frames received since the interface was activated. Running `nf_stat` *with* an interval and count displays the number of error frames received since the last interrogation. An error frame is defined as an SMT frame whose `E` (error) bit is set, and whose `E` bit is first detected by the local station. It does not indicate the location of the cause of the error. Frequent error frames can indicate a noise problem on the network, either dirt (optical fiber) or electrical interference (UTP).

### Lost (*Lost Frames*)

Running `nf_stat` *without* an interval and count displays the total number of lost frames since the interface was activated. Running `nf_stat` *with* an interval and count displays the number of lost frames since the last interrogation. A lost frame is defined as an SMT frame whose reception is aborted by the local station. It does not indicate the location of the cause of the error. A large number of lost frames can indicate a noise problem on the network, either dirt (optical fiber) or electrical interference (UTP).

*SA (Station Address)*

Displays the MAC address for the local station.

*UNA (Upstream Neighbor Address)*

Displays the MAC address for the neighboring station, connected upstream on the ring from the local station.

*DNA (Downstream Neighbor Address)*

Displays the MAC address for the neighboring station, connected downstream on the ring from the local station.

## Example Neighbor Statistics

The following output was recovered from a single-attached station using the command shown. A temporary fault condition was simulated by disconnecting the FDDI cable from the SunFDDI SBus card and then reconnecting it.

```
# <basedir>/nf_stat -m nf0 1 20
```

PhyS	Frame	Error	Lost	SA	UNA	DNA
Mc45d5463		1	1b	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	27437	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	27427	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	27435	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
NONE	182f1	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
NONE	0	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
NONE	0	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	d432	0	7	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	2707e	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>

PhyS	Frame	Error	Lost	SA	UNA	DNA
Mc46e5ce7		1	22	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	27228	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	27230	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	27227	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	2722e	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	2722c	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	27228	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	27231	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	2722b	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>
M	27227	0	0	<mac_addr1>	<mac_addr2>	<mac_addr3>

Note the following observations regarding this example:

- Accumulated statistics are displayed automatically after every tenth interrogation.
- The combination of `PhyS=NONE` and the loss of frame activity indicates that the station is disconnected from the network.

---

## Monitoring SMT Frames (nf\_smtmon)

The `nf_smtmon(1M)` utility is an active monitor that displays the SMT frames received by the local station. It is particularly useful for diagnosing communication problems with the SunNet Manager proxy agent.

This command must be executed as `root` (or `superuser`) and has the general form:

```
# <basedir>/nf_smtmon [-i nf<inst>] [-x] [-h] [<frameclass>]
```

`-i nf<inst>` specifies the SunFDDI interface

`-x` displays the received SMT frames in hexadecimal

`-h` displays help information, including a list of valid frame classes

`<frameclass>` specifies one or more SMT frame classes (used to filter output)

If you do not specify an interface, `nf_smtmon` returns the SMT frames received by `nf0`. If you do not specify a frame type, `nf_smtmon` displays all the SMT frames that it receives. Use `Ctrl-C` to stop `nf_smtmon`.

To display the encoded SMT frames received by interface `nf1`, type:

```
# <basedir>/nf_smtmon -i nf1
nf1: nif_request v=0x1 t=0xfc03e781 s=10-0-4-48-6f-a5 i=0x28
nf1: nif_response v=0x1 t=0xfc03e781 s=10-0-4-8-24-5c i=0x28
nf1: nif_request v=0x1 t=0xfc00dec6 s=10-0-4-b8-6e-ab i=0x28
nf1: nif_request v=0x1 t=0xfc03e787 s=10-0-4-48-6f-a5 i=0x28
nf1: nif_response v=0x1 t=0xfc03e787 s=10-0-4-8-24-5c i=0x28
```

The elements of the SMT frames are defined as follows:

**Table 4-5** Elements of the SMT Frames

Element	Description
<code>class_type</code>	Identifies the SMT frame class and type (see page 37)
<code>v</code>	Version ID; identifies the structure of the SMT information field
<code>t</code>	Transaction ID; used to pair SMT response and request frames
<code>s</code>	Station ID; uniquely identifies the station transmitting the frame
<code>i</code>	InfoField Length; defines the length of the SMT information field

● To display the SMT frames received by interface nf1 in hexadecimal format, type:

```
# <basedir>/nf_smtmon -i nf1 -x
nf1: nif_request v=0x1 t=0x170 s=10-0-4-8-24-5c i=0x28
004DC000 0000004F FFFFFFFF FFFF1000 0408245C 01020001 00000170 00001000
0408245C 00000028 00010008 00001000 04B86EAB 00020004 00010100 00030004
00002100 200B0008 00000001 00000001 76C467A0

nf1: nif_request v=0x1 t=0x5e0f s=10-0-d4-78-42-4d i=0x28
004D0000 0000004F FFFFFFFF FFFF1000 D478424D 01020001 00005E0F 00001000
D478424D 00000028 00010008 00001000 0408245C 00020004 01010208 00030004
00001200 200B0008 0000000B 00000002 A522BBA1

nf1: nif_response v=0x1 t=0xfc00d94a s=10-0-4-8-24-5c i=0x28
004D0000 00000041 100004B8 6EAB1000 0408245C 01030001 FC00D94A 00001000
0408245C 00000028 00010008 00001000 04B86EAB 00020004 00010100 00030004
00002100 200B0008 00000001 00000001 865549E2 0049C020 F0154E4F FFFFFFFF
FFFF1000 04B86EAB 01020001 FC00D94A 00001000 04B86EAB 00000028 00010008
00001000 D478424D 00020004 00010100 00030004 00002000 200B0008 00000001
00000001

nf1: nif_request v=0x1 t=0x5e13 s=10-0-d4-78-42-4d i=0x28
004D0000 0000004F FFFFFFFF FFFF1000 D478424D 01020001 00005E13 00001000
D478424D 00000028 00010008 00001000 0408245C 00020004 01010208 00030004
00001200 200B0008 0000000B 00000002 4AD75A79

nf1: nif_request v=0x1 t=0x5e17 s=10-0-d4-78-42-4d i=0x28
004D0000 0000004F FFFFFFFF FFFF1000 D478424D 01020001 00005E17 00001000
D478424D 00000028 00010008 00001000 0408245C 00020004 01010208 00030004
00001200 200B0008 0000000B 00000002 DCEBADA2

nf1: nif_request v=0x1 t=0x171 s=10-0-4-8-24-5c i=0x28
004DC000 0000004F FFFFFFFF FFFF1000 0408245C 01020001 00000171 00001000
0408245C 00000028 00010008 00001000 04B86EAB 00020004 00010100 00030004
00002100 200B0008 00000001 00000001 127B1D3B

nf1: nif_request v=0x1 t=0x5e1b s=10-0-d4-78-42-4d i=0x28
004D0000 0000004F FFFFFFFF FFFF1000 D478424D 01020001 00005E1B 00001000
D478424D 00000028 00010008 00001000 0408245C 00020004 01010208 00030004
00001200 200B0008 0000000B 00000002 626FA878
```

# SMT Frame Classes and Types

SMT frames are used for peer-to-peer (station-to-station) management. They are divided into *classes*, which define the function of the frame. Each class is then divided into up to three *types*, which define whether the frame is an announcement (information only), a request for service, or a response to a request. Refer to the *ANSI/FDDI Station Management (SMT) X3.299 R7.3 Specification* for a detailed description of SMT frames and their functions.

The `nf_smtmon` utility is used to monitor the following SMT frame classes:

## *NIF (Neighbor Information Frames)*

These are the most common frames displayed when you run `nf_smtmon`. As the name suggests, they carry information about a neighboring station (for example, address, description, state, MAC capabilities) and are used as keep-alive notifications that a station is still attached to the ring and functioning. An NIF frame can be an announcement, a request, or a response.

## *SIF (Status Information Frames)*

These frames carry more detailed information about a station. SIF configuration frames describe the station configuration (for example, number of ports, number of MAC entities, connection policy); SIF operation frames describe the current status of the station. A SIF frame can be either a request or a response.

## *ECF (Echo Frames)*

These frames are equivalent to ICMP ping packets and are used to test connectivity between stations. An ECF frame can be either a request or a response.

## *RDF (Request Denied Frame)*

These frames are used to indicate that the request is rejected. If an SMT agent (such as the SunNet Manager proxy agent delivered with SunFDDI) receives an unsupported or unrecognized request, it issues an RDF frame to indicate that the request is rejected. An RDF frame is always a response.

## ESF (*Extended Service Frame*)

These frames are implementation dependent. An ESF frame can be an announcement, a request, or a response.

## PMF (*Parameter Management Frame*)

These frames are used to access remote station attributes. The Parameter Management Protocol supports both `get` (display) and `set` (modify) functions. However, the `nf_smtmon` utility can display only `PMF_get` frames. A `PMF_get` frame can be either a request or a response.

## Filtering Output from `nf_smtmon`

By default, `nf_smtmon` displays all of the SMT frames received by the local station. You can filter the output generated by `nf_smtmon` by specifying one or more frame classes on the command-line: `nif`, `sif_config`, `sif_operat`, `ecf`, `rdf`, `esf`, `pmf_get`.

For example:

- **To display only the RDF frames received by interface `nf0`, type:**

```
# <basedir>/nf_smtmon rdf
```

- **To display the SIF configuration and SIF operation frames received by interface `nf1`, type:**

```
# <basedir>/nf_smtmon -i nf1 sif_config sif_operat
```

- **To display the NIF frames, SIF configuration frames, and SIF operation frames received by interface `nf1`, type:**

```
# <basedir>/nf_smtmon -i nf1 nif sif_config sif_operat
```



---

# Configuring Synchronous FDDI (`nf_sync`)

---

**Note** – Synchronous FDDI, configured using the `nf_sync(1M)` utility, is only supported when operating in a Solaris 2.5.1 Hardware: 4/97, 2.6, or Solaris 7 environment.

---

Two types of traffic are allocated bandwidth on an FDDI ring:

- Asynchronous traffic (unrestricted and restricted)
- Synchronous traffic

The unrestricted asynchronous service allocates bandwidth dynamically based on the *timed token rotation protocol* and according to the *priority* assigned to the traffic. It does not guarantee bandwidth.

The restricted asynchronous service allocates bandwidth for extended transmission based on *restricted token exchange* between communicating stations.

For synchronous operation, a specific portion of the bandwidth is reserved for synchronous traffic and a boundary is placed on the access delay (the time that a station must wait before it can transmit). The synchronous service is normally used to transfer voice, video, and real-time control data, where the access delay can have significant impact. Note that it is the network user (the application) that requests the synchronous service and manages synchronous operation. The FDDI protocols do not provide any mechanism for controlling synchronous allocation directly.

By default, the SunFDDI interface is configured to carry asynchronous traffic only. The `nf_sync(1M)` utility is used to configure SunFDDI interfaces operating in a Solaris 2.5.1 Hardware: 4/97, 2.6, or Solaris 7 environment to operate in synchronous mode. This command must be executed as `root` and has the general form:

```
# nf<inst>[ <tsync> <sap>]
```

`nf<inst>` specifies the SunFDDI interface

`<tsync>` synchronous timer (in nanoseconds, 400000 nanoseconds minimum)

`<sap>` service access point (SAP) for synchronous operation

Running `nf_sync` without specifying values for `<tsync>` and `<sap>` returns the current configuration of the interface.

- To display the current configuration of the interface `nf0`, type:

```
# <basedir>/nf_sync nf0
Current Bound Saps
  Async: sap=0x800 : sap=0x806
  Sync:
```

This example shows that the interface `nf0` has two SAPs (800 and 806) configured for asynchronous operation and no SAPs configured for synchronous operation. This is the default condition.

- To display the current configuration of the interface `nf1`, type:

```
# <basedir>/nf_sync nf1
Current Bound Saps
  Async: sap=0x806
  Sync: sap=800 (tsync=10001040ns)
```

This example shows that the interface `nf1` has one SAP (800) configured for synchronous operation with a clock rate of 1000000 nanoseconds (1 ms), and one SAP (806) configured for asynchronous operation.

- To configure the interface `nf1` in this way, type:

```
# <basedir>/nf_sync nf1 1000000 800
```

The required value of `<tsync>` is application dependent. However, you must enter a value that is large enough to transmit at least one full FDDI packet (~0.333 ms). Note that `<tsync>` defaults to the maximum `TTRT (T_MAX)` for SunFDDI (167.874 ms) if you enter a value less than 400000 nanoseconds (0.4ms)

- To reconfigure a SAP for asynchronous operation, specify `<tsync>=0`:

```
# <basedir>/nf_sync nf1 0 800
# <basedir>/nf_sync nf1 0 806
```

## Improving Network Performance

---

- High-Performance FDDI Networks—page 41
- Ring Latency Improvement—page 42
- Data Throughput Improvement—page 42
- Performance Across Bridges—page 43
- To Tune the Socket Options—page 44
- MTU Path Discovery—page 44
- Tuning nf Parameters—page 45

This chapter tells you how to obtain the best performance from your FDDI network. It assumes that you are familiar with FDDI network architecture and related terminology.



---

**Caution** – There are a number of ways to improve network performance, some of which are discussed in this chapter. However, these improvements should be undertaken only by experienced system administrators. Tuning your network incorrectly can affect network performance adversely.

---

---

## High-Performance FDDI Networks

FDDI networks increase the potential to carry *more* information, rather than create a faster connection. If the applications running over the network do not use the available bandwidth efficiently, you will not see much improvement in the performance of your network by using FDDI.

You can obtain optimum performance by balancing the complementary objectives of maximum throughput and minimum access delay:

- Throughput is a measure of the ring utilization. Network efficiency is defined as the ratio of actual throughput to theoretical maximum bandwidth (100 Mbps).
- Access delay is the time a station has to wait before it can transmit on the network. This is largely dependent on how fast the permission token rotates around the ring.

For some applications (for example, bulk data transfers), throughput is critical. Other applications (for example, voice or video applications) are more sensitive to access delay.

---

## Ring Latency Improvement

The ring latency is the physical delay inherent in the FDDI network. It is dependent on the number of stations in the ring and the overall length of the ring. The speed of the microprocessor in the FDDI station also has a significant effect on ring latency.

The FDDI specifications define a network that supports up to 1000 physical connections with a total ring length of 200 km (100 km per ring in a dual-ring topology). There are two physical connections for each dual-attached station. Therefore, in theory, up to 500 dual-attached stations could be connected in a single ring. In reality, optimum performance is obtained by limiting the number of connections to fewer than 100 stations in an unsegmented ring.

It is possible to realize performance improvements by changing the topology of the network, trading off the total number of stations in comparison to the overall length of the ring, and selecting faster machines to act as FDDI stations. However, these modifications are rarely practical in an established network.

---

## Data Throughput Improvement

The most significant improvements in throughput are achieved by maximizing the rate at which data is transferred to and from the FDDI network. If you are running TCP/IP or UDP/IP applications, you can improve throughput by modifying the parameters that control the rate at which these protocols transfer data to and from the SunFDDI device driver—that is, between user space and kernel space.

## Send and Receive Buffers

The send and receive buffers control the maximum rate at which data is transferred between user space and kernel space by applications that use sockets. The size of these buffers defines the amount of data that can be transferred at one time.

To optimize performance, consistent values must be assigned for the send and receive buffers. The default value (4 Kbytes) assigned to these parameters is optimized for transmission across Ethernet connections. For applications running over FDDI, the send and receive buffers should be set to 32 Kbytes.

---

## Performance Across Bridges

The *maximum transfer unit* (MTU) for each physical layer in the network defines the maximum size (in octets) of the transmitted packets. A larger MTU means that more data can be transmitted in a single packet; a larger MTU usually means higher throughput.

For SunFDDI, the MTU is set to 4352 by default<sup>1</sup>, and for an Ethernet interface, the MTU is 1500. This difference can cause performance problems in mixed FDDI/Ethernet networks.

Packets are transmitted between the two networks across a bridge, which handles the translation between the two protocols. When data is transmitted across the bridge from the FDDI network, the larger FDDI packets need to be fragmented so that they do not exceed the MTU of the Ethernet network. Some low-cost bridges that do not support fragmentation will reject the 4352-byte packets.

Fragmenting and reassembling the packets introduces a considerable overhead that affects performance. It also increases the risk of out-of-sequence or dropped packets. Therefore, if there is heavy network traffic across the bridge, it may be more efficient to force the MTU in the FDDI network to be 1500 to match the MTU on the Ethernet side of the bridge. The above argument can also be applied to a mixed FDDI/NetWare network. In this case, the MTU in the NetWare LAN is 4178 octets.

1. This value makes allowance for the frame header and has been demonstrated to be the optimum value of MTU for pure FDDI networks (see RFC 1390).

---

## To Tune the Socket Options

For applications that use sockets, the application developer can make more efficient use of the increased bandwidth provided by an FDDI connection by increasing the size of the send and receive buffers used by a specific application. This manipulation is restricted to applications and do not affect the other socket connections.

The Solaris 7 environment and compatible versions support program calls to `nftsockopt(3N)` and `setsockopt(3N)`. The options `SO_SNDBUF` and `SO_RCVBUF` are used to set the size of the TCP send and receive buffers for a specified socket. See the man page for more detailed information.

To optimize performance, assign consistent values for the transmit and receive buffers. The default value (4 Kbytes) assigned to these parameters is optimized for transmitting across Ethernet connections. For applications running over FDDI, the send and receive buffers should be set to 32 Kbytes.

---

## MTU Path Discovery

Machines running the Solaris 7 environment and compatible versions support MTU path discovery, which allows the optimum MTU to be negotiated. Under most circumstances, this ensures efficient use of the network resources. However, to enable MTU path discovery to work, the “don’t fragment” bit in the packet is set, which causes a problem with some bridges and routers that do not support this feature. In this case, packets are not transmitted across the bridge, and the error messages generated as a result can be misleading.

Refer to “To Disable MTU Path Discovery” on page 45 for detailed instructions on how to accommodate bridges and routers that do not support this feature.

## ▼ To Disable MTU Path Discovery

Many bridges do not support MTU path discovery.

- To disable this feature in order to transmit packets across a bridge, type:

```
# ndd -set /dev/ip ip_path_mtu_discovery 0
```

MTU path discovery is enabled each time the machine is rebooted.

---

## Tuning nf Parameters

You can set the nf parameters using the `nf.conf` file in the `/kernel/drv` directory.

The man pages for `prtconf(1M)` and `driver.conf(4)` include additional details.

## Tuning the Maximum Transfer Unit (MTU)

For SunFDDI, the maximum transfer unit (MTU) has been optimized for pure FDDI networks. Follow these steps to change the value of the MTU on a station running SunFDDI in the Solaris 7 environment or compatible versions:

---

**Note** – Additionally, the `ifconfig(1M)` command can be used to change the MTU.

---

## Target Token Rotation Time (TTRT)



---

**Caution** – Modifying the target token rotation time (TTRT) can affect network performance adversely. In the worst case, it can reduce network throughput to zero. In general, the TTRT should not be set to less than 8000 microseconds (ms).

---

The target token rotation time (TTRT) is the key FDDI parameter used for network performance tuning. In general, increasing the TTRT increases throughput and increases access delay.

For SunFDDI, the TTRT must be between 4000 and 165,000 ms, and is set to 8000 ms by default. The optimum value for the TTRT is dependent on the application and the type of traffic on the network:

- If the network load is very irregular (*bursty* traffic), the TTRT should be set as high as possible to avoid lengthy queueing at any one station.
- If the network is used for the bulk transfer of large data files, the TTRT should be set relatively high to obtain maximum throughput, without allowing any one station to monopolize the network resources.
- If the network is used for voice, video, or real-time control applications, the TTRT should be set low to decrease access delay.

The TTRT is established during the *claim process*. Each station on the ring bids a value ( $T_{req}$ ) for the operating value of the TTRT ( $T_{opr}$ ) and the station with the lowest bid wins the claim. Setting the value of  $T_{req}$  on a single station does not guarantee that this bid will win the claim process.

## Setting parameters using `nf.conf`

- **Obtain the hardware path names for the `nf` devices in the device tree.**

Typically the path names and the associated instance numbers will be present in the `/etc/path_to_inst` file.

```
# grep -w nf /etc/path_to_inst
# "/iommu@f,e0000000/sbus@f,e0001000/nf@3,7ff0" 0 "nf"
```

- In the above lines:
  - The first part within the double quotes specifies the hardware node name in the device tree.
  - The second number is the instance number.
  - The last part in double quotes is the driver name.
- In the device path name, the last component after the last `/` character and before the `@` character is the device name.
- The path name before the last component is the parent name.

5. **To identify an SBus device unambiguously in the `nf.conf` file, use the name and parent name of the device. Refer to the `sbus(4)` man page for more information about the SBus device specification.**

In the previous example:

- Name = `nf`
- Parent = `/iommu@f,e0000000/sbus@f,e0001000`



6. Set the `nf_mtu` and the `nf_treq` parameters for the above device in the `/kernel/drv/nf.conf` file.

```
name = "nf" parent = "/iommu@f,e0000000/sbus@f,e0001000"  
reg="0x3 0x7ff0 0x110"  
nf_mtu=4500  
nf_treq=5000
```

7. Save the `nf.conf` file.
8. Close all applications which communicate via the `nf` device driver. For example, run `nf_snmd_kill`.
9. Use the `ifconfig` command to bring down the interface and unplumb it.
10. Use the `modunload` command to remove the `nf` device driver from the memory.
11. Use the `ifconfig` command to reconfigure the interface.
12. Restart your applications.



## Troubleshooting and Diagnostics

---

- Troubleshooting Checklist—page 49
- Solving Common Problems—page 54
- Running the Hardware Self-Test Program—page 60
- Loading the Device Driver Manually—page 61
- SunFDDI/S Adapters Cannot Boot Sun4d Diskless Clients—page 63

This chapter describes how to detect and resolve common problems with your FDDI network. It includes instructions on how to load and configure the SunFDDI device driver manually, if required. Note that SunFDDI supports almost all of the standard SunOS network diagnostic utilities, including `snoop(1M)`, `netstat(1M)`, `ping(1M)`, and `etherfind(8C)`.

The default base directory `<basedir>` is:

```
/opt/SUNWconn/bin
```

---

## Troubleshooting Checklist

Use the following checklist to verify the major components of your SunFDDI station and to check that it is installed, configured, and attached to the network correctly.

### ▼ To Check the Connection to the Station

- **Check that the cable connector is seated firmly into the plug on the SunFDDI SBus card. You should feel the connector click into place.**

## ▼ To Check the Connections Between Stations

- **Check that the cables are connected correctly between ports of different types.**

The keys provided with most FDDI cables will help you to avoid crossing or twisting the ring. See “Connecting Fiber-optic Cables” on page 8 for a detailed description.

- For single attached stations (SAS), cables should be connected by either SM (to a concentrator) or SS (back-to-back).
- For dual attached stations (DAS), cables should be connected by either ABBA (dual-ring) or AMMB (dual-homing).

## ▼ To Check the Link Status Indicator

1. **Check the status of the SunFDDI interface by looking at the Link Status Indicator (diagnostic LED) mounted on the backplate of the SunFDDI SBus card.**

- If the LED is green, the SunFDDI driver is loaded, the `nf` interface is configured, and the station is attached to an active FDDI network. This is the operating state.
- If the LED is amber, the SunFDDI driver is loaded, the `nf` interface is configured, but no valid line state to an active FDDI network exists.

2. **Check the physical connections between the station and the ring, or the station and the concentrator.**

3. **Check the status of the neighboring station.**

If this station is down, it will bring down the link between the stations.

- If the LED is red, either the SunFDDI driver is loaded and the interface is *not* configured, or the driver has not been loaded.

4. **Configure the `nf` interface with the `ifconfig(1M)` command of the form:**

```
# ifconfig plumb nf<inst> <hostname> netmask <mask> up
```

- If the LED is red, the SunFDDI driver is not loaded, or is loaded incorrectly.

5. **Check that the software is installed.**

6. **Remove the existing version, if necessary, and reload the software.**

See Chapter 3 “Installing SunFDDI.”

# Checking the MAC Address

By default, the first SunFDDI interface installed in the machine adopts the host-resident MAC address stored on the motherboard. Each subsequent SunFDDI interface takes the card-resident MAC address stored in its IDPROM.

A potential conflict exists between the first SunFDDI 6.0 interface and a SunFDDI 2.0 interface because both revisions of the product take the host-resident MAC address. You must change the MAC address assigned to one of these interfaces. See “Changing the Default MAC Address (nf\_macid)” on page 23 for detailed instructions.

## ▼ To Check the SunFDDI Driver

- Use `netstat(1M)` to check that the SunFDDI (nf) driver is installed correctly, and to check for an excessive number of errors and collisions:

```
% netstat -i
```

Name	Mtu	Net/Dest	Address	Ipkts	Ierrs	Opkts	Oerrs	Collis
lo0	8232	loopback	localhost	21	0	21	0	0
le0	1500	our-lan	hysop	2146	0	950	1	13
nf0	4352	our-fddi	hysop-nf	1086	0	907	0	0

A sudden increase in the number of errors could indicate a noisy connection caused by a dirty cable.

## ▼ To Check the IP Addresses

You must assign a unique IP address to each SunFDDI interface. If you have more than one IP interface installed in your machine—either multiple SunFDDI interfaces, or some other LAN interface (for example, an Ethernet interface)—each interface must be attached to a different subnetwork.

- Use `ifconfig(1M)` to check the IP addresses assigned to the two SunFDDI interfaces:

```
# ifconfig -a
nf0: flags=842(UP,BROADCAST,RUNNING,MULTICAST) mtu 4352
    inet 123:123:201:71 netmask ffffffff broadcast
123:123:201:255
nf1: flags=843(UP,BROADCAST,RUNNING,MULTICAST) mtu 4352
    inet 123:123:201:75 netmask ffffffff broadcast
123:123:201:255
```

If the interfaces have the same subnetwork number, as shown in this example, you must change the IP address assigned to one of the interfaces.

Ensure that the IP address and host name for each SunFDDI interface are entered in the NIS map, or in `/etc/hosts` on the local machine if you are not using NIS/NIS+.

## ▼ To Check the IP Routing

1. Check the IP routing table using the `netstat(1M)` command:

```
% netstat -nr
```

2. Check that the FDDI subnetwork is featured in the routing table.

If the routing table is empty, check that the routing daemon (`in.routed`) is running on your machine.

## ▼ To Check the Protocol Statistics

- Use `netstat(1M)` to check the per-protocol (IP, TCP, UDP, and so forth) statistics for errors:

```
# netstat -s
UDP
  udpInDatagrams      = 1423udpInErrors      = 0
  udpOutDatagrams     = 540

TCP tcpRtoAlgorithm     = 4tcpRtoMin          = 200
  tcpRtoMax           = 60000tcpMaxConn     = -1
  tcpActiveOpens      = 38tcpPassiveOpens   = 1
  tcpAttemptFails     = 0tcpEstabResets     = 33
  tcpCurrEstab        = 2tcpOutSegs        = 427
  tcpOutDataSegs      = 264tcpOutDataBytes  = 15917
  tcpRetransSegs      = 38tcpRetransBytes   = 0
  tcpOutAck           = 143tcpOutAckDelayed = 56
  tcpOutUrg           = 1tcpOutWinUpdate    = 0
  tcpOutWinProbe      = 0tcpOutControl      = 111
  tcpOutRsts          = 36tcpOutFastRetrans = 0
  tcpInSegs           = 606
  tcpInAckSegs        = 292tcpInAckBytes    = 15949
  tcpInDupAck         = 62tcpInAckUnsent    = 0
  tcpInInorderSegs    = 311tcpInInorderBytes = 99169
  tcpInUnorderSegs    = 0tcpInUnorderBytes    = 0
  .
  .
  .
```

- Use `netstat(1M)` to check the driver statistics:

```
# netstat -k
nfo
  ipacket = x, ierror = y, opackets = z
  .
  .
  .
```

## ▼ To Check the SMT Traffic

If the target station is not running SunFDDI, it does not necessarily support the same set of SMT frames. If the target station receives an SMT request for an unsupported service, it issues a Request Denied Frame (RDF).

- Use `nf_smtmon(1M)` to examine the SMT frames:

```
# <basedir>/nf_smtmon [-i nf<inst>] [-x] [-h] [<frameclass>]
```

---

## Solving Common Problems

Use the following information to diagnose and resolve some of the common problems that can occur when installing, configuring, or running SunFDDI.

TABLE 6-1 Problems Installing SunFDDI

Problem	Action
The SunFDDI software package (SUNWnfr) cannot be found.  The SunFDDI man pages/utilities package (SUNWnft) cannot be found.	Check that you have inserted the CD-ROM in the CD-ROM drive and that the CD-ROM is mounted on a local directory. If the Volume Manager (vold) is running on your machine, the SunFDDI software is located in the following directory: <code>/cdrom/sunfddi_s6_and_p2/Product/sbus</code> . If the Volume Manager (vold) is not running on your machine, you must create a directory and mount the CD-ROM as described on page 14.
The configuration script cannot configure the IP address. "What ip address do you want to use for xyz [] [?] 0.0.0.0 Illegal ip address. . . Try again"	Check that you have entered the valid IP address. The script will keep prompting you until you enter a valid address.
The configuration script cannot find the hardware devices installed in the machine.	Check that the SunFDDI SBus card is installed correctly and is seated firmly in the SBus slot. Use the <code>prtconf</code> command to see if the <code>nf</code> card exists.
The configuration script cannot load the SunFDDI driver. The procedure fails with the message, "no available major numbers."	The number of major numbers—that is, the maximum number of device drivers that can be installed—is limited to 127. This number is quickly exhausted by the large number of drivers installed in a typical system. Remove an existing driver before loading SunFDDI.



**TABLE 6-1** Problems Installing SunFDDI (*Continued*)

<b>Problem</b>	<b>Action</b>
The configuration script cannot load the device driver.	Check whether the driver is already installed on the system. If you removed a previous version of the package using <code>pkgrm(1M)</code> , you must reboot the system before attempting another <code>add_drv</code> .
The configuration script cannot configure the device driver. The procedure fails with the message, "Duplicate MAC address."	Two or more interfaces have been assigned the same MAC address. The most likely conflict lies between the first SunFDDI 6.0 interface ( <code>nf0</code> ) and one or more SunFDDI 2.0 ( <code>bef</code> ) interfaces installed in the same machine.
The <code>netstat -k</code> command shows non-zero "norxsmtbufs"	Add the following line to the <code>/etc/system</code> file and reboot the system: <b>set nf:num_smt_rx = 15</b>

**TABLE 6-2** Problems Running SunFDDI

<b>Problem</b>	<b>Action</b>
The link status indicator (diagnostic LED) remains red.	Check that the SunFDDI software is installed correctly and that the driver is loaded and configured.
The link status indicator (diagnostic LED) remains amber.	Check that the SunFDDI SBus card is connected to the network.
The link status indicator (diagnostic LED) remains amber, even after the local station is connected to the network and the driver is configured and loaded.	Check that the other end of the cable is connected and that the neighboring station or concentrator is configured correctly. Some concentrators have diagnostic LEDs that indicate if the ring is operating correctly. Check that the ring is not crossed.
The SunFDDI interface ( <code>nf</code> ) is not displayed by <code>netstat</code> .	Check that the SunFDDI device driver is loaded, using <code>modinfo(1M)</code> to display information about loaded kernel modules. If the device driver is not loaded, see "Loading the Device Driver Manually" on page 61 for detailed instructions.
The SunFDDI interface ( <code>nf</code> ) is not displayed by <code>ifconfig</code> .	Check that the SunFDDI device driver is loaded, using <code>modinfo(1M)</code> to display information about loaded kernel modules. If the device driver is not loaded, see "Loading the Device Driver Manually" on page 61 for detailed instructions.
The local station can reach FDDI stations located on the same subnetwork, but these stations cannot reach the local station.	Check that the IP address and host name of the local station are entered in the NIS map or NIS+ tables (or in <code>/etc/hosts</code> on each remote station if you are not running NIS or NIS+).

**TABLE 6-2** Problems Running SunFDDI (*Continued*)

Problem	Action
<p>The local station cannot reach other FDDI stations located on the same subnetwork.</p>	<p>Check that the link status indicator is green, indicating that the SunFDDI interface is attached to an active network. Use <code>ifconfig(1M)</code> to check that the SunFDDI interface (<code>nf</code>) is up.</p> <p>Check that the IP address and host name of the remote station are entered in the NIS map or NIS+ tables (or in <code>/etc/hosts</code> on the local station if you are not running NIS or NIS+).</p>
<p>Running <code>nf_stat</code> without the <code>-m</code> option (to display information about the local station) shows the ring alternating frequently between <code>UP</code> and <code>DOWN</code>.</p>	<p>Check that the link status indicator is green, indicating that the SunFDDI interface is attached to an active network.</p> <p>Check the connections to the concentrator. Some concentrators have diagnostic LEDs that indicate if the ring is operating correctly.</p>
<p>Running <code>nf_stat</code> without the <code>-m</code> option (to display information about the local station) shows that the ring is <code>ISOLATED</code>.</p>	<p>Check that the link status indicator is green, indicating that the SunFDDI interface is attached to an active network. Check the connections to neighboring stations or the concentrator. Some concentrators have diagnostic LEDs that indicate if the ring is operating correctly.</p> <p>Check that the neighboring stations are configured correctly.</p> <p>If everything else seems to be working, check the cable itself. Fiber-optic cable is fragile and should not be subjected to stress or impact. If the turning curve around objects is too tight, the light path is interrupted. Clean the connectors.</p>

**TABLE 6-2** Problems Running SunFDDI (Continued)

Problem	Action
<p>The local station cannot reach FDDI stations located on a remote FDDI network.</p>	<p>Check that the IP address and host name of the remote station are entered in the NIS map or NIS+ tables (or in <code>/etc/hosts</code> on each remote station if you are not running NIS or NIS+).</p> <p>Check that the routing tables are using <code>netstat -r</code>. Check for an <code>nf</code> interface that shows a route to a gateway with the <code>UG</code> flags set. If you can reach the local gateway, then the problem probably lies with the IP routing.</p> <p>Try to confirm that the remote station is configured and running, and if possible try to reach the local station from the remote station. If you can, it indicates that the problem lies with the local IP routing.</p> <p>Try to reach the router nearest the remote station. If you can, it indicates that the fault lies between the remote station and the router. If you cannot, try to reach a router that is closer to the local station. Continue in this way until you have isolated the router that is dropping or misrouting packets.</p> <p>If the dynamic routing protocol is not adding routes, try adding a static route to the remote station. This method is not recommended for large networks with a large number of nodes.</p>

TABLE 6-2 Problems Running SunFDDI (Continued)

Problem	Action
<p>The local station cannot reach FDDI stations located on a remote Ethernet network.</p>	<p>Check that the IP address and host name of the remote station are entered in the NIS map or NIS+ tables (or in <code>/etc/hosts</code> on each remote station if you are not running NIS or NIS+).</p> <p>If you are operating in a Solaris 7 or compatible environment that uses MTU path discovery, check that packets are being transmitted across the bridge between the networks. Many bridges do not yet support MTU path discovery and do not fragment the large packets sent by the FDDI stations. In this case you may need to disable this feature on your station by typing:</p> <pre># ndd -set /dev/ip ip_path_mtu_discovery 0</pre> <p>Check that the routing tables are using <code>netstat -r</code>. Check for an <code>nf</code> interface that shows a route to a gateway with the <code>UG</code> flags set. If you can reach the local gateway, then the problem probably lies with the IP routing.</p> <p>Try to confirm that the remote station is configured and running, and if possible try to reach the local station from the remote station. If you can, it indicates that the problem lies with the local IP routing.</p> <p>Try to reach the router nearest the remote station. If you can, it indicates that the fault lies between the remote station and the router. If you cannot, try to reach a router that is closer to the local station. Continue in this way until you have isolated the router that is dropping or misrouting packets.</p> <p>If the dynamic routing protocol is not adding routes, try adding a static route to the remote station. This method is not recommended for large networks with a large number of nodes.</p>

TABLE 6-2 Problems Running SunFDDI (Continued)

Problem	Action
Running <code>nf_stat</code> with the <code>-m</code> option (to display information about the neighboring stations) shows frequent <code>error</code> frames and <code>lost</code> frames.	This could indicate a noisy network. For fiber connections, noise is probably caused by dirt or grease on the optical surface or by a damaged cable. Unshielded twisted-pair is sensitive to electrical and electromagnetic interference. Note that the receipt of <code>error</code> frames and <code>lost</code> frames does not give any indication of where the problem is occurring on the ring.
Running <code>nf_smtmon</code> shows the frequent occurrence of request denied frames (RDF).	The SMT entity on one of the remote stations does not support the same set of SMT services. This should not occur on a station running SunFDDI. You can use this facility to detect problems communicating with a remote station using the SunNet Manager proxy agent.

TABLE 6-3 Problems Using the SNM Agents for SunFDDI

Problem	Action
Cannot select <code>nf_fddi</code> or <code>nf_fddismt7_2</code> agent for quick dump.	Check that the SNM agents for SunFDDI are enabled in the properties window for the proxy station.
Cannot recover SMT statistics from the proxy agent. The procedure fails with the error message, "Cannot create RPC client: program is not registered."	<p>Check that you specified the host name or MAC address for the target machine in the properties window for the target station.</p> <p>Check that the SNM daemons are started on the proxy and the target machines:</p> <pre># ps -ef   grep snm root &lt;pid&gt; &lt;date&amp;time&gt; &lt;path&gt;/nf_snmd root &lt;pid&gt; &lt;date&amp;time&gt; &lt;path&gt;/nf_snmd root &lt;pid&gt; &lt;date&amp;time&gt; &lt;path&gt;/nf_snmd</pre> <p>On a Solaris 7 or compatible client, you can start the SunNet Manager daemons for SunFDDI by typing:</p> <pre># /usr/sbin/nf_snmd</pre>

---

# Running the Hardware Self-Test Program

If you suspect a problem with the SunFDDI SBus card, you can use the built-in hardware self-test to check the state of its primary components and the connection to the network.

## ▼ To Run the Hardware Self-Test

1. Become superuser.
2. Halt the machine.

```
# sync;sync;halt
```

3. At the boot prompt, type:

```
ok test /sbus/nf

Local MAC Address 0:80:d8:10:3:ed (Canonical)
Interrupt register read/write test .... PASS
CMT Processor read/write test ..... PASS
S Port register test ..... PASS
MAC register test ..... PASS
DMA register test ..... PASS
DMA bus master test ..... PASS
Performing FDDI path test ..... PASS
Connection Management (CMT) test ..... PASS
Local loopback packet test ..... PASS
Network loopback packet test ..... connection not active

/sbus/sbf selftest failed. Return code = -1
```

This example shows that the primary components on the board are working, but that the board is not currently connected to the network.

For Sun4m systems, at the boot prompt, type:

```
ok test /iommu/sbus/nf
```

---

# Loading the Device Driver Manually

Normally, the SunFDDI device driver is loaded and configured by the post-installation script, which is launched automatically when the software is installed. If you encounter problems when running this script, or if you want to customize the installation, you may need to load the device driver manually.

## ▼ To Configure and Load the Device Driver

1. Become superuser.
2. Check that there are no partially installed drivers for SunFDDI.
  - a. Check for existing SunFDDI devices in the `/dev` directory.

```
# ls /dev | grep nf
nf
# ls /dev | grep smt
smt
```

- b. Use `rem_drv(1M)` to remove any installed SunFDDI devices and remove the device directories.

```
# /usr/sbin/rem_drv smt
# /usr/sbin/rem_drv nf
# /bin/rm -f /dev/smt
# /bin/rm -f /dev/nf
```

- c. Check the `/etc/name_to_major` file for entries of the form `nf<num>` and `smt<num>` and remove these if they exist.
3. Use `add_drv(1M)` to inform the system about the new drivers.

```
# /usr/sbin/add_drv nf
# /usr/sbin/add_drv smt
```

4. Check that the device drivers have been added to the system correctly.

a. Look in the `/devices/pseudo` directory for entries of the form:

```
ls -l /devices/pseudo | grep nf
crw----- 1 root sys 11,119 <date> clone@0:nf
ls -l /devices/pseudo | grep smt
crw----- 1 root sys 11,119 <date> clone@0:smt
```

b. Look in the `/dev` directory for links to these entries:

```
ls -l /dev | grep nf
lrwxrwxrwx 1 root other <date> nf -> ../devices/pseudo/clone@0:nf
ls -l /dev | grep smt
lrwxrwxrwx 1 root other <date> smt -> ../devices/pseudo/
clone@0:smt
```

5. Create a file called `/etc/hostname.nf<inst>` for each SunFDDI IP interface that you configure.

Each file must contain the host name assigned to the IP interface. These files are used to configure the interfaces when the system is rebooted. If you assign the primary host name to one of the FDDI interfaces, this host name must be entered in the file `/etc/nodename`.

6. Use `ifconfig(1M)` to configure the SunFDDI IP interfaces (`nf<inst>`).

The host name assigned to the IP interface must be entered in the NIS map, NIS+ tables, or in `/etc/hosts` on the local machine. Configure the interface using an `ifconfig` command of the form:

```
# /usr/sbin/ifconfig nf<inst> plumb <hostname> netmask + up
```

Note that the modifier `netmask +` takes the netmask defined in the `/etc/netmasks` file. If this entry is missing, you must specify the netmask explicitly using dot notation.

Provided the installation and configuration was successful, your SunFDDI station is now active and you can send and receive data transparently across an FDDI connection.



---

# SunFDDI/S Adapters Cannot Boot Sun4d Diskless Clients

Sun4d diskless clients cannot be booted using SunFDDI/S adapters installed in servers running the Solaris 7 operating environment. If you are running Solaris 7 and you want to use a Sun4d as a diskless client, deploy it in an ethernet section of your network.



# Frequently Asked Questions About SunFDDI

---

This appendix contains the responses to some of the most frequently asked questions about SunFDDI. It also contains references to more detailed information.

**1. The network performance is much lower than I expected. Why can't I transfer data at 100 Mbps over my FDDI connection?**

If the applications running over FDDI don't use the available bandwidth efficiently you will see much lower performance than expected. See **Chapter 5 "Improving Network Performance"** for advice on how to get the best performance from your SunFDDI station.

**2. Can I connect a dual-attached FDDI station to two different subnetworks?**

No. A dual-attached station must be either connected to the primary and secondary rings in a dual-ring configuration, or connected in a dual-homing configuration..

**3. Can I use a dual-attached station in single-attached mode?**

Yes. Simply connect one port to the network. No overhead is incurred when you operate a dual-attached station in this way.

**4. Can I use SunFDDI 6.0 in a redundant single-attached station (RSAS) configuration?**

No. This configuration, which was supported in previous releases provides a redundant connection that is used in the event of a link failure. The equivalent configuration for SunFDDI 6.0 is provided by a dual-attached station connected in dual-homing mode.

**5. Can I use the SunFDDI 6.0 software with the hardware for earlier versions of the SunFDDI products?**

Yes. The SunFDDI 6.0 software supports SunFDDI 5.0 and 4.0 hardware.

**6. Can I use the SunFDDI 6.0 SBus card with the software for earlier SunFDDI products?**

No. The SunFDDI 6.0 hardware requires 6.0 software.

**7. Can I use the SunFDDI 6.0 software with a hardware interface from a third-party vendor?**

No. The device driver does not support any third-party hardware products.

**8. Can I mix SunFDDI 6.0 with earlier SunFDDI products (1.0 and 2.0) in the same machine?**

No.

**9. Can I connect two single-attached stations “back-to-back,” without connecting them to a concentrator?**

Yes. This configuration is supported by the FDDI specifications. You can also connect two single-attached stations and one dual-attached station directly in a ring, but this configuration is not supported by the FDDI specifications and is not recommended.

**10. Can SunFDDI 6.0 coexist with a SunFDDI 5.0 or 4.0 card in a system?**

Yes. But the 6.0 software must be installed.

**11. Can I install SunFDDI 6.0 in an SBus expansion box?**

No. SunFDDI 6.0 is not supported in the SBus expansion box. An SBus expansion box has serious restrictions in both throughput and latency, combined with a significant delay for control between the CPU and SBus boards in general. These restrictions become critical in conjunction with FDDI, which stresses the SBus bandwidth.

**12. What is dual-homing?**

Dual-homing is a special configuration that connects a single dual-attached station to two concentrators so that there is a redundant path, which is used in the event of a link failure.

**13. What is the MTBF for the various SunFDDI options?**

The mean time before fail (MTBF) for each of the SunFDDI interface cards is:

- SunFDDI (SAS) 750,525 hours
- SunFDDI Dual (DAS) 446,748 hours

These characteristics were obtained using the standard method for calculating MTBF.

**14. What is the difference between fiber and UTP?**

The FDDI specifications support communication over optical fiber and unshielded twisted-copper pair (UTP). Both physical media support data transfer rates of up to 100 Mbps, but UTP provides a much cheaper solution, particularly where high-quality UTP has been deployed already. However, UTP does not support such large distances between stations and is not suitable in areas that are sensitive to electromagnetic interference.

**15. Why can't I connect port A to port A, or port B to port B?**

This type of configuration is forbidden by the FDDI specifications. It is called “twisting” or “crossing” the ring. If you connect your FDDI station in this configuration, the link status indicator will remain blinking green to indicate an invalid connection. See **Chapter 2 “Hardware Installation,”** for a description of the different diagnostic LEDs.

**16. Why do I get the error message “duplicate address” or “duplicate macid”?**

By default, the first SunFDDI interface installed in the machine adopts the host-resident MAC address stored on the motherboard. Each subsequent SunFDDI interface takes the card-resident MAC address stored in its IDPROM.

A potential conflict exists between the first SunFDDI 5.0 interface and a SunFDDI 2.0 interface because both of these products take the host-resident MAC address. You must change the MAC address assigned to one of these interfaces.

**17. Why is performance poor when I use NFS over FDDI?**

For a single file transfer, the maximum data transfer rate is limited to 0.5 Mbytes/second when writing to an NFS mounted file system and 1.5 Mbytes/second when reading from an NFS mounted file system. This performance limitation, which affects Ethernet, FDDI, and any other fast network, is due to the NFS version 2 protocol. It will be removed by NFS version 3.

Note that when several NFS operations are performed in parallel (several reads and writes in parallel), the aggregate throughput is much higher with FDDI than it is with Ethernet.

**18. How do I disable the SunFDDI interface?**

Use `ifconfig(1M)` to disable the SunFDDI interface temporarily. It will be reconfigured when you reboot your machine.

```
# ifconfig nf<inst> down
```

To disable the SunFDDI interface so that it is not reconfigured when you reboot the machine, change the name of the `/etc/hostname.nf<inst>` file.

```
# mv /etc/hostname.nf<inst> /etc/oldhostname.nf<inst>
```

**19. How do I disable the Ethernet interface?**

Use `ifconfig(1M)` to disable the Ethernet interface temporarily. It will be reconfigured when you reboot your machine.

```
# ifconfig le<inst> down
```

To disable the Ethernet interface so that it is not reconfigured when you reboot the machine, change the name of the `/etc/hostname.le<inst>` file.

```
# mv /etc/hostname.le<inst> /etc/oldhostname.le<inst>
```

**20. How do I use the host name assigned to the SunFDDI interface as the primary host name for my machine?**

In the Solaris 7 or compatible environment, the primary host name is defined in the `/etc/nodename` file. Normally, this file contains the host name assigned to the Ethernet interface built in to your machine. Edit `/etc/nodename` to enter the host name assigned to the SunFDDI interface.

**21. Can I associate several IP addresses with a single SunFDDI interface?**

Yes. To associate multiple IP addresses with a single interface, type:

```
# ifconfig nf0 <ip_address_1> netmask <mask> up
# ifconfig nf0:1 <ip_address_2> netmask <mask> up
# ifconfig nf0:2 <ip_address_3> netmask <mask> up
.
.
.
```

**22. How many SunFDDI 6.0 SBus cards can I install in one machine?**

You can install up to eight SunFDDI 6.0 SBus cards in one machine; however, you cannot use an SBus extender.

**23. What kind of connector can be used to connect SunFDDI 6.0 to optical fiber networks?**

The connector type has been changed for SunFDDI 6.0 to an SC-type connector. See **Chapter 2 “Hardware Installation”** for a description of FDDI cables and connectors.

**24. What kind of optical fiber can be used to link SunFDDI 6.0?**

SunFDDI uses a 62.5/125  $\mu\text{m}$  standard twin optical fiber. A compliant link design will have no more than 11 db of end-to-end loss. This includes loss incurred in the fiber (typically 1.2 db/km), the connectors (typically 0.5 db/connector), and any bypass switches (typically 2.5 db/switch). It also allows loss margins for source aging (typically 1 to 3 db), safety (typically 1 to 2 db), and temperature variation (typically 1 db).

**25. Does SunFDDI Dual incorporate an optical bypass?**

No. You must order an optical bypass switch from a third-party vendor.

**26. Why does my optical bypass switch not work when I plug it in?**

Optical bypass switches require a power cycle to be initialized. Plug in the optical bypass switch, switch off the FDDI station, and then reboot to initialize the station.

**27. How can I increase the distance between two SunFDDI stations?**

SunFDDI supports multimode fiber connections only. This limits the maximum distance between stations to two kilometers (1.24 miles). To increase the distance between stations, either:

- Use converters from multi- to single-mode fiber, and a single-mode connection between converters.
- Add more nodes between the stations to act as repeaters.

**28. Does SunFDDI take advantage of the 25 MHz SBus?**

The SunFDDI SBus board operates at the speed of the host SBus; therefore, if it is installed in a machine with a 25 MHz SBus, it will take advantage of the speed. If there is a performance problem, it is more likely to be related to insufficient CPU cycles to handle the data processing, or congestion on the network, than to the speed of the SBus.





# Glossary

---

This glossary defines FDDI-related acronyms, abbreviations, and terms..

- ARP** (*Address Resolution Protocol*). A protocol used within local networks that support broadcast (such as Ethernet or FDDI) that binds IP addresses to MAC addresses. View the current contents of a Sun machine's ARP table with the SunOS command, `arp -a`; specified in RFC 826.
- baud** A measure of the rate of data transfer, based on the number of times per second the signal can change states on the transmission line. The transmission line ordinarily uses just two signal states to indicate data transfer, making the baud rate equal the number of bits per second that can be transferred. See also **bps**, **Bps**, **kpbs**, and **Mbps**.
- bps** (*bits per second*). A measure of the rate of data transmission. See also, **baud**, **Bps**, **kpbs**, and **mbps**.
- Bps** (*bytes per second*). A measure of the rate of data transmission. See also, **baud**, **bps**, **kpbs**, and **mbps**.
- CFM** (*Configuration Management*). The portion of CMT that manages the internal configuration of the station's MAC and PHY entities.
- CMT** (*connection management*). The portion of the FDDI SMT that manages the operation of physical layer insertion and removal, and the logical connection of PHY entities to the MAC entities.
- DAS** (*dual-attached station*). An FDDI station that connects to both primary and secondary rings; a Class A station, capable of dynamic reconfiguration to accommodate certain levels of failure. Two rings are used to interconnect the stations so that the failure of any station or link causes the remaining stations to reconfigure the network to maintain connectivity: wrapping.

- dotted decimal notation** A way of representing the 32-bit Internet address: four decimal integers separated by decimal points, where each integer is the decimal value of one octet of the Internet address. For example, the 32-bit Internet address (binary) 11000000 00001001 11001001 00000111 is represented as 192.9.201.7 (decimal).
- ECM** (*Entity Coordination Management*). The portion of CMT that manages the media interface to the FDDI network, which includes coordinating the activity of all the PHYs associated with that physical attachment and controlling the optional optical bypass function within the station.
- FDDI** (*Fiber Distributed Data Interface*). A standard specified by the American National Standards Institute for fiber-optic links of up to 100 Mbits/s.
- gateway** A dedicated computer that connects to two or more networks and routes packets from one network “community” to the other. Gateways route packets to other gateways until the packets can be delivered directly to their specified destination across one physical network. In general usage, the term identifies any computer that transfers information between networks.
- kbps** (*kilobits per second*). A measure of the rate of data transmission. See also, **baud**, **bps**, **Bps**, and **Mbps**.
- LLC** (*Logical Link Control*). Local area network protocol functions corresponding to the OSI data link layer (layer 2), but providing only service access points (SAP).
- MAC** (*Media Access Control*). Local area network protocol functions corresponding to the OSI data link layer (layer 2), but providing the following: 1) on transmission, assembles data into a frame with address and error-detection fields; 2) on reception, disassembles frame, performs address recognition and error detection; 3) links communications management.
- Mbps** (*millions of bits per second*). A measure of the rate of data transmission. See also, **baud**, **bps**, **Bps**, and **kbps**.
- NRZI-4B/5B** (*nonreturn to zero inverted*). A differential encoding technique that encodes four-bit data groups as five bits (data plus a signal element); satisfies the minimum signal transition requirements to transmit synchronization (clock) within the data stream.
- OSI** (*Open System Interconnection*). The OSI model is a standard for computer-communications protocols and the implementation of these protocols. The model is a product of the *International Standards Organization* (ISO), and specifies a seven-layer architecture with one or more protocol standards at each layer.
- PCM** (*Physical Connection Management*). The portion of CMT that manages a physical connection between the PHY being managed and another PHY, likely in an adjacent station on the FDDI network.

- PHY** (*Physical Layer Protocol*). Performs the clock recovery and serial-to-parallel (on receive) or parallel-to-serial (on transmit) of data between the transmission medium and the MAC entity.
- PMD** (*physical medium dependent*). Specifies the optical-to-electrical conversion mechanism to conform to FDDI.
- RARP** (*Reverse Address Resolution Protocol*). A protocol used by diskless machines and their servers within local networks such as Ethernet or FDDI. In a RARP exchange, a diskless machine broadcasts its MAC address. A boot server responds to that client with the client's IP address, enabling the client to begin the boot process.
- RMT** (*Ring Management*). The portion of CMT that monitors the MAC. It provides a trace mechanism to handle the stuck beaconing condition, and also detects duplicate addresses on the ring.
- RSAS** (*redundant single-attach station*). An FDDI station where single-attach interfaces are paired, with one active and the other a hot standby. In an RSAS with connections to two different dual-attach concentrators, you enjoy the network availability afforded by concentrators with single-attach connections, plus, for the RSAS itself, the station availability of a dual-attach station.
- SAP** (*service access point*). A logical interface between two adjacent protocol layers (such as LLC and IP).
- SAS** (*single attached station*). An FDDI station that attaches to a single FDDI ring, as distinguished from a dual-attached station, which attaches to both rings in a dual ring.
- SMT** (*Station Management*). The complete standard of PHY layer and frame-based protocols to be supported by conforming FDDI stations.
- THT** (*Token-Holding Timer*). A timer in the FDDI MAC protocol that controls the length of time a station can hold a token for asynchronous transmission.
- timing jitter** The deviation of clock recovery that can occur when the receiver attempts to recover both clocking and data from the received signal. The PHY specification describes a phase lock loop (PLL) and elasticity buffer to eliminate jitter.
- TRT** (*Token Rotation Timer*). A timer in the FDDI MAC protocol that measures the time between receipt of tokens. It expires when it reaches a value that exceeds the Target Token Rotation Time (TTRT).
- TTRT** (*Target Token Rotation Time*). A parameter in the FDDI MAC protocol that is negotiated by all of the stations on a ring at the time a ring is brought up. FDDI uses the TTRT in conjunction with the TRT and THT to allocate bandwidth to individual stations on the ring. The FDDI MAC protocol guarantees that the worst-case delay a token will experience while circulating the ring will never exceed twice the negotiated TTRT.



# Index

---

## SYMBOLS

/cdrom/sun\_fddi\_5\_0\_sparc directory, 14  
/etc/hosts file, 21

## A

access delay, 39, 41, 45  
add\_drv command, 55

## B

bandwidth, 1, 39, 41  
base directory  
    installing SUNWnfr, 15  
    installing SUNWnft, 16  
boot test, 60  
bridges, 43, 58  
buffers, 43  
bulk data transfers, 42

## C

cable  
    keys, 50  
    specification, 2  
card-resident MAC address, 51  
checking the installation, 17  
checklist, troubleshooting, 49  
claim process, 46

classes, 37  
cleaning  
    fibre optic cable, 10  
commands  
    add\_drv, 55  
    getsockopt, 44  
    ifconfig, 17, 52  
    ping, 17  
    pkgadd, 14, 15, 16  
    pkgrm, 21  
    setsockopt, 44  
common problems, 49, 54  
connectors  
    fiber optic, 10, 50  
CPU speed, 42  
crossing the ring, 50

## D

daemons  
    in.routed, 52  
data transfer  
    rate, 1, 42  
default  
    buffer size, 43  
    MAC address, 51  
    target token rotation time, 46  
device  
    drivers, 50  
diagnostic LED, 11, 50  
directories

- `/cdrom/sun_fddip_1_0`, 14, 15
- disabling MTU path discovery, 45
- disk space, 14
- DLPI
  - specification, xviii
- DNA, 33
- don't fragment bit, 44
- dotted decimal notation, 72
- downstream
  - neighbor address, 33
- dual-attached
  - station (DAS), 1, 50
- dynamic routing protocol, 58

## E

- ECF, 37
- echo frames, 37
- ECM, 26
- editing
  - `/etc/hosts` file, 18
  - `hostname.qfe#` files, 18
- efficiency, 42
- ejecting the CD-ROM, 16
- entity coordination management, 26
- error frames, 32
- ESF, 38
  - `/etc/hosts` file
    - editing, 18
    - example, 19
- Ethernet channels, 18
- extended service frame, 38

## F

- FDDI conformance, 2
- fiber optic
  - components, 8
- fibre optic cable
  - cleaning, 10
- files
  - `/etc/hosts`, 21
- frame classes, 35

## G

- gateway, 72
- `getsockopt` command, 44

## H

- handling
  - fiber optic cable, 8
  - Sbus cards, 4
- hardware
  - installing, 4
  - options, 1
  - self-test, 60
- host name, 14
  - `/etc/hosts` file
    - editing, 18
    - example, 19
- `hostname.qfe#` files
  - creating, 18
  - editing, 18
  - examples, 19
- host-resident MAC address, 51

## I

- IDPROM, 51
- `ifconfig` command, 17, 52
- improving
  - ring latency, 42
- `in.routed` daemon, 52
- installation
  - checking the, 17
  - requirements, 14
  - scripts, 15, 16
- installing
  - adapter into system, 4
  - hardware, 4
  - SNM agents, 20 to ??
  - the hardware, 4
  - the software, 14 to 16
- instance numbers, finding, 46
- inter-packet gap driver parameters, 46
- IP
  - addresses, 51
- IPG parameters, 46

## J

jumpers, 4

## K

kbps, 72

kernel space, 43

keys, 50

## L

latency, 42

LED, diagnostic, 11, 50

link status indicator, 11, 50, 56

LLC, logical link control, 72

lost frames, 32

## M

MAC

address, 51

major numbers, 54

maximizing data throughput, 42

maximum

bandwidth, 42

length of ring, 42

number of cards, 1

number of stations, 42

throughput, 41

transfer unit (MTU), 43

Mbps, 72

medium access control (MAC), 2

memory, 14

microprocessor speed, 42

minimum requirements, 14

MTU

negotiation, 44

path discovery, 44, 45

## N

negotiated MTU, 44

neighbor information frames, 37

netstat command, 51

network

efficiency, 42

nf\_install\_agents script, 20

nf\_macid utility, 24

nf\_smtmon command, 54

nf\_sync utility, 39

NIF, 37

NRZI-4B/5B, 72

number of cards supported, 1

## O

optimum

performance, 42

OSI, 72

## P

packages

SUNWnf, 54

packet

fragmentation, 43

size, 43

parameter management frame, 38

parameters

SO\_RCVBUF, 44

SO\_SNDBUF, 44

T\_opr, 46

T\_req, 46

path discovery, MTU, 44, 45, 58

path\_to\_inst output, 18, 46

PCM, 28

peer-to-peer management, 37

permission token, 42

PHY, physical layer, 73

physical

connection, 31

connection management, 28

delay, 42

physical layer (PHY), 2

physical media dependent (PMD), 2

ping command, 17

pkgadd command, 14, 15, 16  
pkgrm command, 21  
PMD, physical media dependent, 73  
PMF, 38  
PMF\_get, 38  
port A, 67  
port B, 67  
potential performance, 41  
power-up self test, 60  
primary  
    components, 60  
product list, 1  
proxy agent, 59

**Q**

quick dump, 59

**R**

R7.2.99, 2  
RARP, reverse address resolution protocol, 73  
RDF, 37  
RDF, request denied frame, 54, 59  
rebooting the machine, 16  
receive buffers, 43  
receive packets, 29  
RecvP, 29  
removing the software, 21  
request denied frame, 37  
request denied frame (RDF), 54, 59  
restricted  
    token exchange, 39  
RFC 1390, 43  
ring  
    length, 42  
ring management, 27  
ring utilization, 42  
Ring\_OP, 29, 30  
RMT, 27  
routing tables, 52  
RSAS, redundant single-attached station, 73

**S**

Sbus transfer rate, 2  
schemas, 20  
scripts  
    installation, 15, 16  
send buffers, 43  
setsockopt command, 44  
SIF, 37  
single-attached  
    station (SAS), 1, 50  
SMT request frame (SRF), 20, 54  
SO\_RCVBUF parameter, 44  
SO\_SNDBUF parameter, 44  
sockets, 43, 44  
software  
    configuring  
        driver parameters, ?? to 47  
        host files, 18  
solving common problems, 54  
SRF, SMT request frame, 20, 54  
static electricity, 4  
static routes, 58  
station management (SMT), 2  
status information frames, 37  
STREAMS  
    DLPI specification, xviii  
subnetwork number, 52  
SunFDDI features, 1  
SunNet Manager  
    daemons, 59  
    schemas, 20  
SUNWnf package, 54  
switches, 4  
synchronous  
    FDDI, 39

**T**

T\_opr parameter, 46  
T\_req parameter, 46  
target  
    token rotation time, 45  
test, boot, 60  
theoretical



- maximum bandwidth, 42
- maximum number of stations, 42
- throughput, 41
- THT, 73
- timed token
  - rotation protocol, 39
- timing jitter, 73
- total ring length, 42
- transceiver unit, 8
- transmit packets, 29
- trap reports, 20
- troubleshooting checklist, 49
- TRT, 73
- TTRT, 45, 73
- tuning
  - high performance networks, 41
  - the maximum transfer unit, 45
  - the socket options, 44
- twisting the ring, 50
- types, 37
- types of traffic, 46

XmitP, 29

## U

- UNA, 33
- user space, 43
- user-configurable hardware, 4
- utilities
  - nf\_macid, 24
  - nf\_smtmon, 54
  - nf\_sync, 39

## V

- video applications, 42
- voice applications, 42

## X

- X.3.139-1987, 2
- X3.148-1988, 2
- X3.166-1990, 2
- X3.299 R7.3, 2

