

## Accessing Sun Documentation Online

A broad selection of Sun system documentation is located at the following web site:

<http://www.sun.com/products-n-solutions/hardware/docs>

To locate the most current documentation at this site, select a product category. The documents at that location may include updated information that did not ship with your product, such as product notes, release notes, late-breaking news, or later revisions of manuals.

A complete set of Solaris documentation and many other titles are located at:

<http://docs.sun.com>

## Ordering Sun Documentation

Fatbrain.com, an Internet professional bookstore, stocks select product documentation from Sun Microsystems, Inc. For a list of documents and how to order them, visit the Sun Documentation Center on Fatbrain.com at:

<http://www.fatbrain.com/documentation/sun>

## Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

[docfeedback@sun.com](mailto:docfeedback@sun.com)

Please include the part number (806-4718-11) of the document in the subject line of your email.

Copyright 2002 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, Sun Fire, and Solaris are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries. Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions.

Copyright 2002 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Sun, Sun Microsystems, le logo Sun, AnswerBook2, docs.sun.com, Sun Fire, et Solaris sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.

# Sun Fire™ 4800 System Power Supply Installation Guide




## Sun Fire 4800 System Power Supplies

The Sun Fire™ 4800 system has three power supplies located in the front—PS0, PS1 and PS2. Install the power supplies in the following order: PS0, PS1, and PS2.

### Installing a Power Supply in a Powered-On System

1. Remove the power supply filler panel and save it.
2. Remove the protective cover from the power supply connector on the back side of the power supply.
3. With one hand holding the handle and the other hand gripping the bottom of the unit for support, insert the power supply into the slot.
4. Lock the ejectors by pushing both ejectors inward.
5. Tighten the two captive screws.
6. Make sure that the appropriate switch on the AC-input box for the new power supply is turned on.
7. Turn on the power supply using the system controller software.  
Refer to the *Sun Fire 6800/4810/4800/3800 Systems Platform Administration Manual* for complete procedures for powering on the power supply.
8. Make sure the green Activated LED is lit.

If the green Activated LED is not on, check to see if the power supply is seated properly and the power supply is turned on.

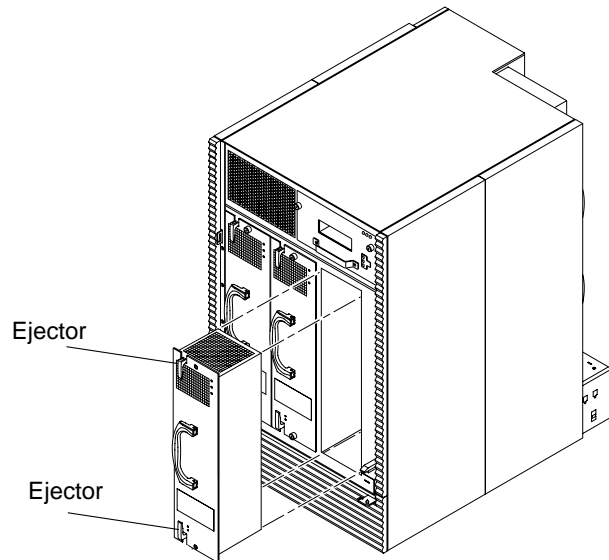

### Removing a Power Supply From a Powered-On System

1. Power off the appropriate power supply.

Refer to the *Sun Fire 6800/4810/4800/3800 Systems Platform Administration Manual* for complete powering off the power supply procedures.

---

**Note** – When the green Activated LED on the power supply is off (not lit) and the amber OK to remove LED is on (lit), it is safe to continue. You DO NOT have to power off the power grids, AC input box, or RTS module(s).

---

2. Have the power supply filler panel available.
3. Loosen the two captive screws, located at the top and bottom of the power supply.
4. Unlock the ejectors by pulling the ejectors outward.
5. Remove the power supply.
6. Install a power supply filler panel to cover the empty slot.
7. Tighten the captive screws.