



Sun Fire™ 15K/12K Systems Getting Started

Accessing the Documentation Files

The full documentation set for the Sun Fire 15K/12K systems is available on the documentation CD.

1. Insert the documentation CD into a CD-ROM or DVD-ROM drive.

- If you are accessing the documentation CD from a Power Macintosh, PC, or if your system is running Volume Manager, the CD-ROM will mount automatically.
- If your system is not running Volume Manager, become superuser and mount the CD-ROM manually by typing:

```
# mkdir -p /cdrom/sunfire_15K_docs  
  
# mount -o ro -F hfs /dev/dsk/c0t6d0s2 /cdrom/sunfire_15K_docs
```

The above command applies to workstations with SCSI drives. If your workstation has an IDE drive, the device is `/dev/dsk/c0t2d0s2`.

2. Open the `sunfire_15K_docs` directory to access the PDF files with Adobe® Acrobat Reader. If you do not have Adobe Acrobat Reader installed, you can download it at no cost, at:

<http://www.adobe.com/products/acrobat/readstep.html>

List of Sun Fire 15K/12K Systems Documentation



System Overview

Sun Fire 15K/12K Systems Binder Set

- *Sun Fire 15K/12K Systems Overview Manual*
-



Installation

Sun Fire 15K/12K Systems Binder Set

- *Sun Fire 15K/12K Systems Site Planning Guide*
- *Sun Fire 15K/12K Systems Installation and De-Installation Guide*

Other Installation Documents

- *System Management Services (SMS) 1.2 Administrator Guide*
 - *Sun Fire 15K/12K Systems Read Me First*
 - *Sun Fire 15K/12K Systems Unpacking Guide*
 - *Sun Fire 15K/12K Systems Task Map* (see Task Map on the following page)
-



Administration

Sun Fire 15K/12K Systems

Other Administration Documents

- *System Management Services (SMS) 1.2 Administrator Guide*
-



Hardware Repair

Sun Fire 15K/12K Systems Binder Set

- *Sun Fire 15K/12K Systems Service Manual*

Other Documents

- *Sun Fire 15K/12K Systems Service Reference I-Nomenclature*
 - *Sun Fire 15K/12K Systems Service Reference II-Component Numbering*
 - *Sun Fire 15K/12K Systems Carrier Plate Configurations*
-



Globalization

Sun Fire 15K/12K Systems Binder Set

- French, Korean, Simplified Chinese, and Traditional Chinese
-

Installation Task Map for the Sun Fire 15K/12K Systems



-
- Step 1**
- Verify power, air conditioning, and floor area requirements—Refer to the *Sun Fire 15K/12K Systems Site Planning Guide*



-
- Step 2**
- Set up cabinet, connect power cables—Refer to the *Sun Fire 15K/12K Systems Installation and De-Installation Guide*

-
- Step 3**
- Power on the Sun Fire 15K/12K Systems—Refer to the *Sun Fire 15K/12K Systems Installation and De-Installation Guide*
 - Allow the system to run through POST and ensure there are no errors, then power off the system

-
- Step 4**
- Install options and storage devices—Refer to the documentation that came with the option or storage for details

-
- Step 5**
- Configure the system—Refer to the *System Management Services (SMS) 1.2 Administrator Guide* and the *Sun Fire 15K/12K Software Overview Guide*

-
- Step 6**
- Install Solaris™ Operating Environment on each domain—Refer to the *Solaris (SPARC Platform Edition) Installation Guide*
 - Boot Solaris Operating Environment on each domain—Refer to the *System Management Services (SMS) 1.1 Administrator Guide* and the *Sun Fire 15K/12K Software Overview Guide*
-

Accessing Sun Documentation

You can view, print, or purchase a broad selection of Sun documentation, including localized versions, at:

<http://www.sun.com/documentation>

Contacting Sun Technical Support

If you have technical questions about this product that are not answered in this document, go to:

<http://www.sun.com/service/contacting>

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can submit your comments by going to:

<http://www.sun.com/hwdocs/feedback>

Please include the title and part number of your document with your feedback:

Sun Fire 15K/12K Systems Getting Started, part number 816-1122-12

Copyright 2003 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Portions may be derived from Berkeley BSD systems, licensed from U. of CA. Sun, Sun Microsystems, the Sun logo, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

Copyright 2003 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. Sun, Sun Microsystems, le logo Sun, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays.



Sun Microsystems, Inc.
4150 Network Circle
Santa Clara, CA 95054 USA
www.sun.com

Part No. 816-1122-12, Rev.A
June 2003