

---

# Cluster Platform 15K/9960 System Getting Started



## System Overview

### Cluster Platform 15K/9960 System

- *Cluster Platform 15K/9960 System Installation Guide*

### Sun Fire™ 15K Server

- *Sun Fire 15K Overview Manual*
- *Sun Fire 15K Software Overview Guide*

### Sun StorEdge™ System

- *Sun StorEdge 9960 User Guide*



## Installation

### Cluster Platform 15K/9960 System

- *Cluster Platform 15K/9960 Task Map (see reverse side)*
- *Cluster Platform 15K/9960 System Read Me First*

### Sun Fire 15K Server

- *System Management Services (SMS) 1.1 Administrator Guide*
- *Sun Fire 15K Read Me First*
- *Sun Fire 15K Unpacking Guide*
- *Sun Fire 15K Site Planning Guide*
- *Sun Fire 15K Installation and De-Installation Guide*

### Sun StorEdge 9960 System

- *Sun StorEdge 9960 Installation Guide*



## Administration

### Sun Fire 15K Server

- *System Management Services (SMS) 1.1 Administrator Guide*



## Hardware Repair

### Sun Fire 15K Server

- *Sun Fire 15K Service Manual*
- *Sun Fire 15K Service Reference I–Nomenclature*
- *Sun Fire 15K Service Reference II–Component Numbering*
- *Sun Fire 15K Service Reference III–FRU Service for Carrier Plate Configurations*

---

# Cluster Platform 15K/9960 Installation Task Map



- 
- Step 1**
- Verify power, air conditioning, and floor area requirements. Refer to the *Cluster Platform 15K/9960 System Site Planning Guide*.



- 
- Step 2**
- Set up the system, and connect the power cables. Refer to the *Cluster Platform 15K/9960 System Installation Guide*.

- 
- Step 3**
- Cable the system. Refer to the *Cluster Platform 15K/9960 System Installation Guide*.

- 
- Step 4**
- Power on the system. Refer to the documentation that came with the individual components for details.

- 
- Step 5**
- Configure the terminal concentrator, management server, and the shared storage. Refer to the *Cluster Platform 15K/9960 System Installation Guide*.

- 
- Step 6**
- Configure the system controllers and the domains. Refer to the *Cluster Platform 15K/9960 System Installation Guide*.

- 
- Step 7**
- Set up the Sun™ Management Center software. Refer to the *Cluster Platform 15K/9960 System Installation Guide*.

- 
- Step 8**
- Configure the NTP software. Refer to the *Cluster Platform 15K/9960 System Installation Guide*.

- 
- Step 9**
- Install the Cluster Platform 15K/9960 software on the nodes. Refer to the *Cluster Platform 15K/9960 System Installation Guide*.
- 

Copyright 2002 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Sun, Sun Microsystems, the Sun Logo, AnswerBook2, Sun Fire, Sun StorEdge, Sun Management Center, docs.sun.com, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U. S. and other countries. Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions.

Copyright 2002 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Sun, Sun Microsystems, le logo Sun, AnswerBook2, Sun Fire, StorEdge, Sun Management Center, docs.sun.com, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.



Sun Microsystems, Inc. • Network Circle • Santa Clara, CA 95054 USA • 650-960-1300 • Fax 650 969-9131

