



# Sun Fire™ 15K/12K Systems TopCap Assembly and TopCap Extension Installation Guide

---

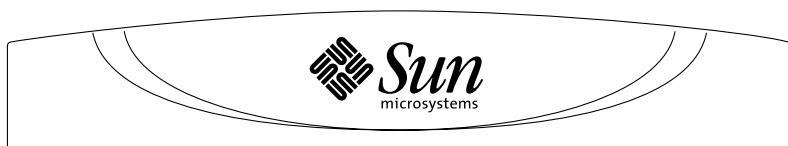

TopCap Assembly

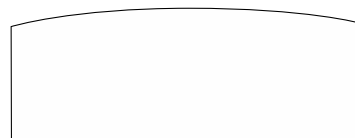

TopCap Extension

## Installing the TopCap Assembly

If you are removing a FrameManager assembly prior to installing a replacement TopCap assembly, see Section 2.1.1, “Removing the FrameManager” of the *Sun Fire 15K/12K Systems Service Manual*.

1. Install the new TopCap assembly as described in the above manual.
2. Install the 12V cable connector to the rear of the TopCap assembly.
3. If you are replacing a FrameManager assembly, place the three terminating connector caps provided in this FRU package on the three unused RS-232 connectors.
4. Bundle the unused RS-232 connector cables and place them in the upper plenum open space behind the TopCap assembly and the TopCap extension.
5. Secure the TopCap assembly with four (4) M4x12 panhead screws.

## Installing the TopCap Extension

1. Install the new TopCap extension.
2. Secure the TopCap extension with two (2) M4x12 panhead screws.

## Accessing Sun Documentation

You can view, print, or purchase a broad selection of Sun documentation, including localized versions, at:

<http://www.sun.com/documentation>

## Contacting Sun Technical Support

If you have technical questions about this product that are not answered in this document, go to:

<http://www.sun.com/service/contacting>

## Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can submit your comments by going to:

<http://www.sun.com/hwdocs/feedback>

Please include the title and part number of your document with your feedback:

*Sun Fire 15K/12K Systems TopCap Assembly and TopCap Extension Installation Guide*, part number 817-1839-10

Copyright 2003 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Portions may be derived from Berkeley BSD systems, licensed from U. of CA. Sun, Sun Microsystems, the Sun logo, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

Copyright 2003 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. Sun, Sun Microsystems, le logo Sun, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de



Sun Microsystems, Inc.  
4150 Network Circle  
Santa Clara, CA 95054 USA  
[www.sun.com](http://www.sun.com)

Part No. 817-1839-10, Rev. A  
June 2003