




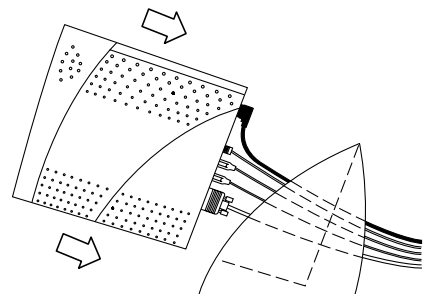

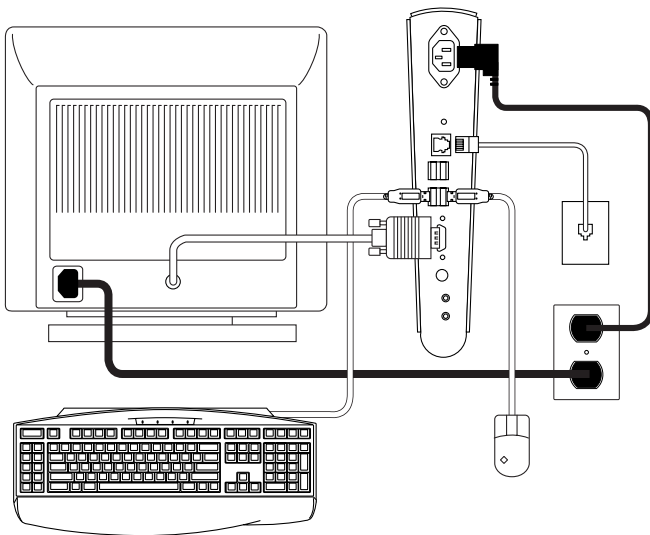

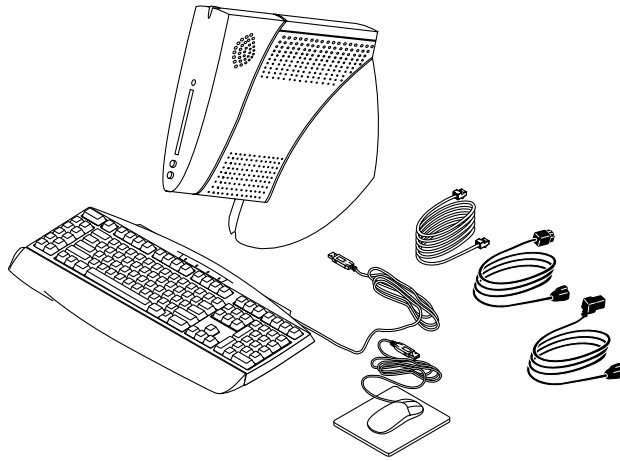







Sun Ray™ 1 Quick Reference




Icon	What it means	Action to take
	<p>The unit is starting up.</p>	<p>Wait. If the unit does not start within a short time, contact your system administrator.</p>
	<p>A unit failure has occurred. The unit tried to download from the server to the PROM, but failed.</p>	<p>Contact your system administrator.</p>
	<p>The unit does not detect an Ethernet signal. The unit's Ethernet address is displayed.</p>	<p>Check that the Ethernet cable is correctly plugged into the back of the unit and into the correct network outlet. If the problem persists, contact your system administrator.</p>
	<p>The unit cannot communicate with the server software.</p>	<p>Contact your system administrator.</p>
	<p>The sound has been muted.</p>	<p>Press the mute key again or use the Settings screen (Shift+Props) to unmute the sound.</p>
	<p>The volume has been changed.</p>	<p>Press either of the volume keys or use the Settings screen (Shift+Props) to adjust the volume.</p>
	<p>The server is currently downloading to the unit's PROM.</p>	<p>Wait—do not power cycle the unit. The unit will restart when downloading is complete.</p>


 
Icon	What it means	Action to take
	<p>The unit's Ethernet address is displayed when the three audio volume control keys are pressed simultaneously or the Ethernet cable is initially plugged in.</p>	<p>The address disappears after 15 seconds.</p>
	<p>Prompt for smart card insertion.</p>	<p>Insert smart card.</p>
	<p>Unit cannot read smart card.</p>	<p>Insert smart card properly. Clean contacts on smart card and reinsert. Contact your system administrator.</p>
	<p>You are denied access.</p>	<p>Contact your system administrator.</p>

<p>Settings Screen</p> 	<p>The Settings screen controls:</p> <ul style="list-style-type: none"> ■ Audio input and output ■ Mouse speed ■ Display resolution and frequency ■ Video input 	<p>To display the Settings screen press Shift+Props. Select the category, then the setting you want. Contact your system administrator if you have questions.</p>
--	---	---

To power cycle the unit: Press the Control+Power keys

To insert a smart card:

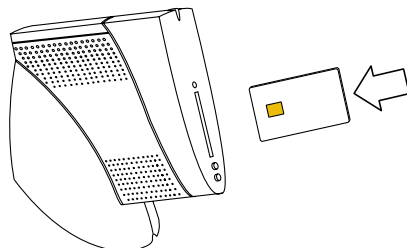

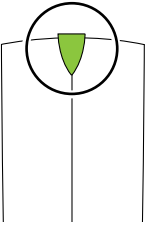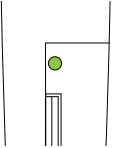LED	State	What it means
	Off	The unit is not plugged in.
	Yellow	The LED briefly lights for 2-3 seconds at power on while the unit checks the hardware. If this LED stays on, or lights at any other time, a hardware fault has occurred. Contact your system administrator for a replacement unit.
	Green	The unit is powered on and the hardware is functioning normally.
	Blinking	The unit is inoperable. Contact your system administrator to correct the problem.
	Off	No smart card is inserted.
	On	The smart card has been inserted correctly.
	Blinking	It is safe to enter your secure PIN now (secure smart card installations only).

Sun Documentation on the Web

The `docs.sun.comsm` web site enables you to access Sun technical documentation on the Web. You can browse the `docs.sun.com` archive or search for a specific book title or subject at:

<http://docs.sun.com>

Sun Welcomes Your Comments

We are interested in improving our documentation and welcome your comments and suggestions. You can email your comments to us at:

docfeedback@sun.com

Please include the part number of the document in the subject line of your email.

Copyright 1999 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Portions may be derived from Berkeley BSD systems, licensed from U. of CA. Sun, Sun Microsystems, the Sun logo, Sun Ray, `docs.sun.com`, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. **RESTRICTED RIGHTS:** Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.7202-3(a).

Copyright 1999 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. Sun, Sun Microsystems, le logo Sun, Sun Ray, `docs.sun.com`, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux États-Unis et dans d'autres pays.



Sun Microsystems, Inc. • 901 San Antonio Road • Palo Alto, CA 94303-4900 USA • 650 960-1300 • Fax 650 969-9131

