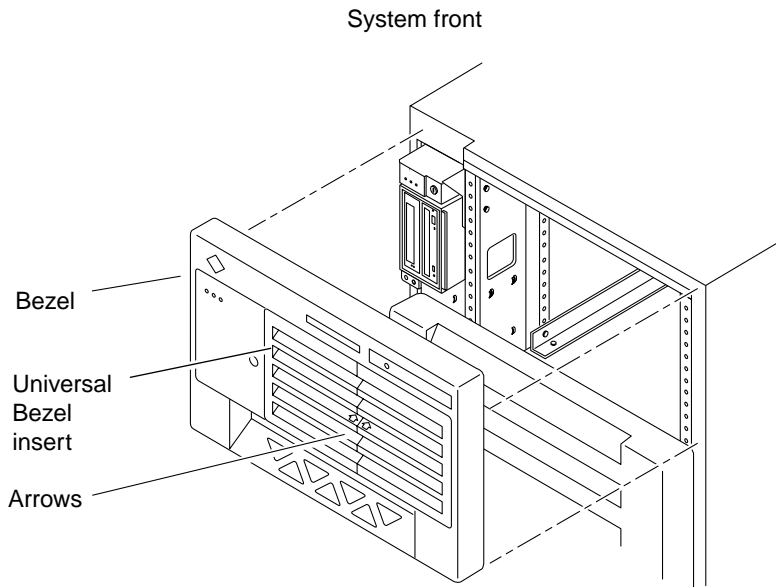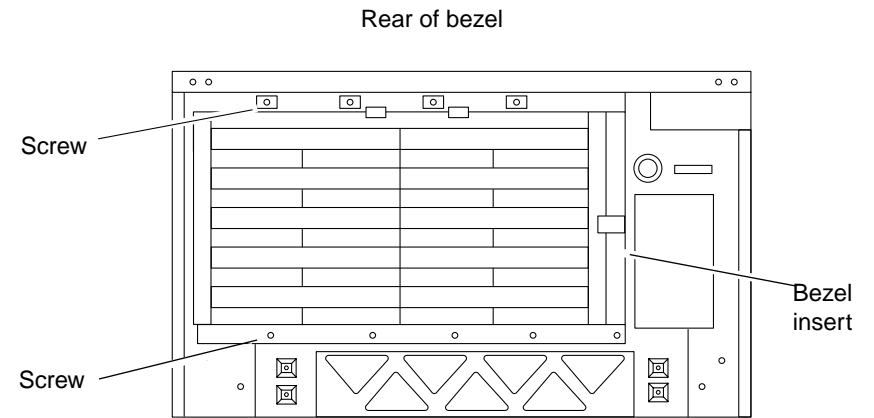The universal bezel allows for installing an additional mass storage or tape storage device on top of the system. The two doors of the bezel may be opened by pulling around the arrows at the center of the insert.

.

System front

Bezel

Universal
Bezel
insert

Arrows

Removing the Bezel and Bezel Insert

1. **Remove the top front bezel from the chassis.**

   a. **Remove the key from the keyswitch.**

   b. **Grasp the bezel on both sides and pull the bezel away from the ball studs.**

   c. **Place the bezel face down.**

2. **Remove the ten screws that secure the old bezel insert to the bezel, five along the top and five along the bottom.**

Rear of bezel

Screw

Screw

Bezel
insert

Installing the Universal Bezel Insert and Replacing the Bezel

1. **Set the universal bezel insert into the bezel and tighten the bottom center screw. At the top tighten the screw that is second from the right, then tighten the rest of the nine screws.**
   There are four screws at the top and five at the bottom.

2. **Place the bezel against the chassis aligning the ball studs on the chassis with the catches on the bezel.**

3. **Tap or press both sides of the bezel into place.**

4. **Insert the key into the keyswitch.**

Sun Documentation on the Web

The `docs.sun.com`[sm] web site enables you to access Sun technical documentation on the Web. You can browse the `docs.sun.com` archive or search for a specific book title or subject at:

> `http://docs.sun.com`

Sun Welcomes Your Comments

We are interested in improving our documentation and welcome your comments and suggestions. You can email your comments to us at:

> `docfeedback@sun.com`

Please include the part number of the document in the subject line of your email.

Sun Enterprise™ Cabinet Universal Bezel Insert Installation

For Sun Enterprise 6x00 and 5x00 System Cabinets

Sun microsystems