

DIGITAL H9A15 M-Series Cabinet Illustrated Parts Breakdown

Order Number: EK-H9A15-IP. A01

Digital Equipment Corporation
Maynard, Massachusetts

Digital Equipment Corporation reserves the right, without notice, to make substitutions and modifications in the specifications of products documented in this manual and further reserves the right to withdraw any of these products from the market without notice.

Digital Equipment Corporation is not responsible for errors which may appear in the technical description (including illustrations and photographs) of the products covered by this manual.

None of the descriptions contained in this manual imply the granting of any license whatsoever to make, use or sell equipment constructed in accordance therewith.

Restricted Rights: Use, duplication or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-2713.

Copyright ©1998 by Digital Equipment Corporation. All rights reserved.
Printed in U.S.A.

The following are trademarks of Digital Equipment Corporation :
AlphaServer, DiGiTAL, Open VMS, ThinWire and the DiGiTAL logo.

The following are third party trademarks:

IBM is a registered trademark of International Business Machines, Inc.

Microsoft and Windows NT are registered trademarks of Microsoft Corporation.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Ltd.

Reader's Comments

DiGiTAL welcomes your comments on this manual.
You can send your comments to DiGiTAL at the address below:

Digital Equipment Corporation
Servers Engineering and Technical Services
129 Parker Street
PKO3- 1/20C
Maynard, MA 01754-2199

Please reference EK-H9A15-IP. A01 in your correspondence.

ILLUSTRATED PARTS BREAKDOWN

DIGITAL H9A15 M-Series Cabinet

ILLUSTRATED PARTS BREAKDOWN (IPB)

The IPB is used to identify a part and its location in a hardware product. The document references specific item numbers in the associated parts list.

HOW TO USE THE IPB

1. Locate the figure containing the item of interest.
2. Locate the number (callout) of the item of interest.
3. Locate that item number in the associated parts list.

FORMAT

Each IPB is generally organized based on its first figure. All other assemblies and subassemblies are referenced from this figure. Each figure contains numeric callouts of all major parts (items).

PARTS LIST

Each parts list contains the following:

Figure and Item No. - Lists the figure number and its referenced numeric callout

Description - Presents the name and a brief description of the item. A single asterisk (*) preceding the description denotes item is a

subassembly to its referenced figure. A double asterisk (**) preceding the description indicates that this item is subordinate to the preceding single asterisk item.

DIGITAL Part No. - Lists the DIGITAL/Vendor part number. The letter in the column heading indicates the current revision level of the Engineering Drawing for the referenced figure.

ECO Cut-In - Lists the top assembly drawing number and revision level at first printing. All additional revisions to an item are listed in this column.

Used On Code - Lists letters referring to the product variation assigned in Figure 1. When this column is blank, the item is used in all variations.

Ref Fig No. - Lists a cross reference between figures within the IPB.

PART NUMBER/PART DESCRIPTION INDEX SECTION

Lists items by part number numerically, and description alphabetically. Items are also referenced to a location within the IPB by figure and item number.


ECO/REVISION HISTORY

OTHER IPB MANUALS REFERENCED

FIGURE NO.	ASSEMBLY	INITIAL LEVEL	CURRENT LEVEL	PRINTING DATE	OTHER IPB MANUALS REFERENCED
1	HA915-3	00000	00000	July 1998	N/A
2	HA915-2	00000	00000		
3	Mounting Kits				
4	AlphaServer 4000 AlphaServer 4100 Mounting & Cabling				
5	AlphaServer 1200 Mounting & Cabling				
6	AlphaServer 800 Mounting & Cabling				

  INDICATES FRU LEVEL PARTS.

PARTS LIST 

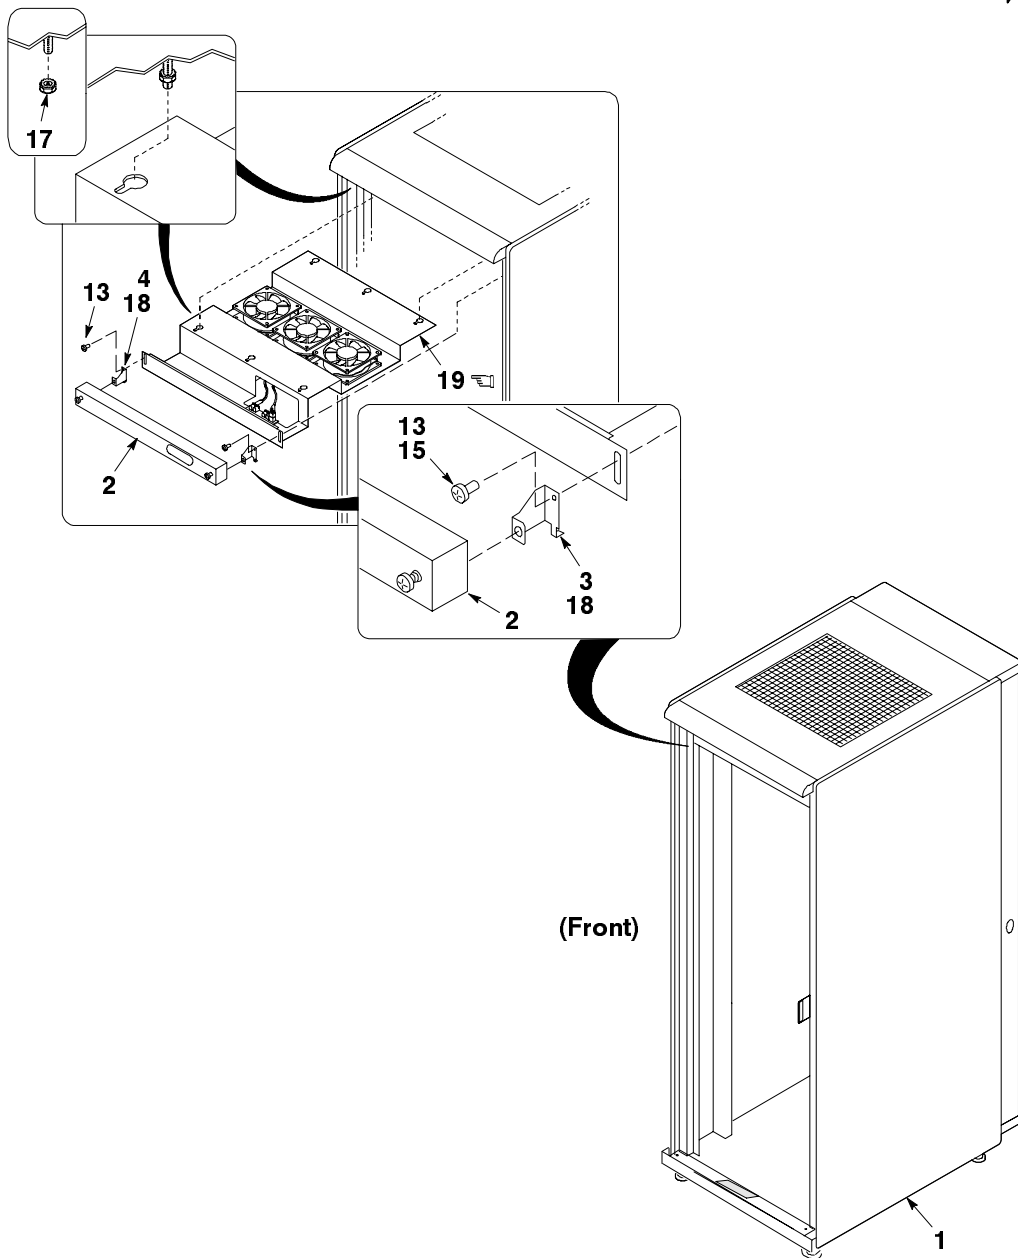


IP-00385-01

Figure 1. H9A15 M-Series Cabinet Assembly (Sheet 1 of 2)

INDICATES FRU LEVEL PARTS.

PARTS LIST

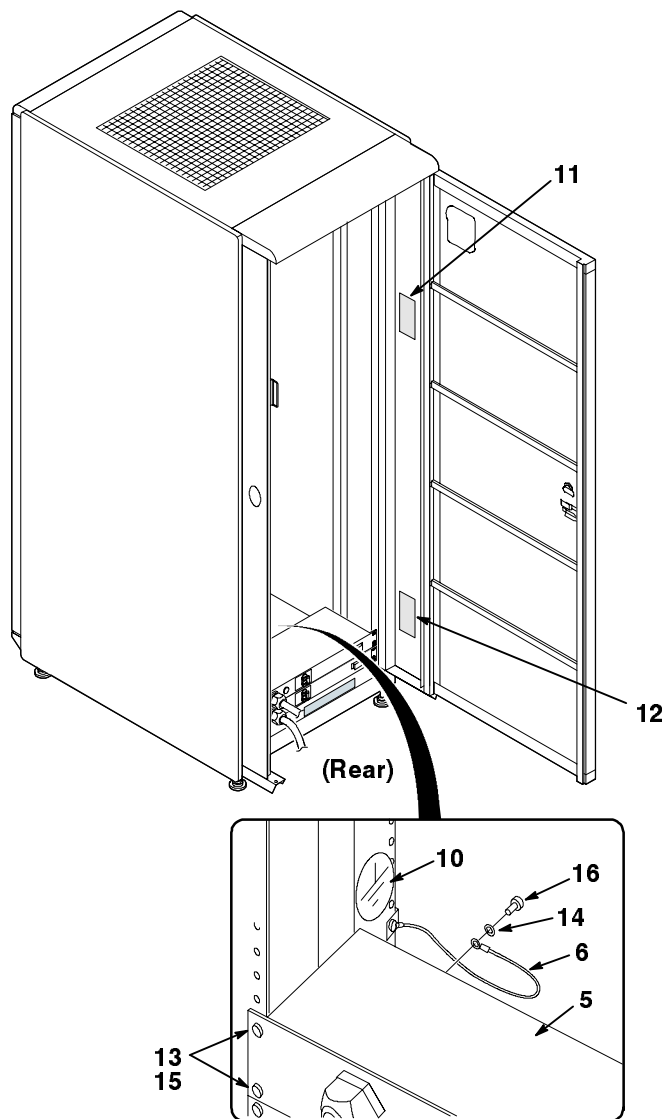

IP-00387-01

Figure 1. H9A15 M-Series Cabinet Assembly (Sheet 2 of 2)

FIG.& ITEM NO.	DESCRIPTION	DIGITAL PART NO. ^A	ECO CUT-IN H9A15-3 00000	USED ON CODE	REF FIG NO.
1-	A CABINET ASSEMBLY, 2.0M, GRAY (120V)	H9A15-MA		A	
	B CABINET ASSEMBLY, 2.0M, GRAY (240V)	H9A15-MB		B	
	C CABINET ASSEMBLY, 2.0M, BLUE (120V)	H9A15-MC		C	
	D CABINET ASSEMBLY, 2.0M, BLUE (240V)	H9A15-MD		D	
1	*CABINET, REAR DOOR, GRAY	H9A15-NA		AB	2
	*CABINET, REAR DOOR, BLUE	H9A15-TA		CD	2
2	*Bezel Assembly, Front , Gray	70-33710-01		AB	
	*Bezel Assembly, Front, Blue	70-33710-02		CD	
3	*Bracket, Front Bezel, Right Hand	74-53317-01			
4	*Bracket, Front Bezel, Left Hand	74-53317-02			
5	*Power Controller Strip (100-120V)	H7600-AA		AC	
	*Power Distribution Unit (200-240V)	H7600-DB		BD	
6	*Ground Strap	12-13756-12			
7	*Documentation, H9A10/H9A15 Cabinet Service Access Advisory (Not Shown)	EK-MARQE-CN			
8	*Power Cord 125V (Not Shown)	17-00606-04		AC	
9	*Cable Assembly, Jumper, 10 Ft. (Not Shown)	17-00365-01		BD	
10	*Label, Mylar Cap, Adhesive Backed	36-13272-00			
11	*Label, "Regulatory" (U.S.)	36-41348-88			
	*Label, "Regulatory" (U.K.)	36-41348-91			
	*Label, "Regulatory" (Singapore)	36-41348-92			
12	*Label, "Warning High Leakage Current"	36-22516-01			
13	*Screw, Truss Hd 10-32 x 1/2	90-00063-39			
14	*Washer, Flat, Stainless Steel	90-06664-00			
15	*Nut, U-Nut 10-32	90-07786-01			
16	*Screw, Sems Hex Hd 10-32 x 1/2	90-10156-00			
17	*Nut, Kep M5	90-40148-02			
18	*Fastener, Clip On	90-11195-01			
19	*Fan Tray, Cabinet	70-32032-01			
	H9A15 M-SERIES KITS				
	AlphaServer 4000/4100 Rack Mount Kit (U.S. and Asia Pacific)	CK-BA30A-BA			
	AlphaServer 4000/4100 Rack Mount Kit (Europe)	CK-BA30A-BB			
	AlphaServer 1200 Rack Mount Kit (Gray)	2T-R1200-AA			
	AlphaServer 1200 Rack Mount Kit (Blue)	2T-R1200-AB			
	AlphaServer 800 Rack Mount Kit	PB8HA-BA			


FIG.& ITEM NO.	DESCRIPTION	DIGITAL PART NO. ^A	ECO CUT-IN H9A15-3 00000	USED ON CODE	REF FIG NO.
1-	H9A15 M-SERIES KITS (continued) Ballast Kit Blank Bezel Installation Kit Filler Panels (Rear) Flushing Fan Kits (Rear) (120V) Flushing Fan Kits (Rear) (240V) Front Door Kit (Gray) Front Door Kit (Blue) Front Trim Kit (Gray) Front Trim Kit (Blue) Joiner Kit Memory Channel HUB Rack Mount Kit	H9C10-MC 2T-BEZEL 74-49753-01 thru 74-49753-14 2T-SW8XF-SR 2T-SW8XF-ER H9C15-NF H9C15-TF H9C15-NT H9C15-TT H9C15-JD CCMRA-AA			

 INDICATES FRU LEVEL PARTS.

PARTS LIST



(Front)

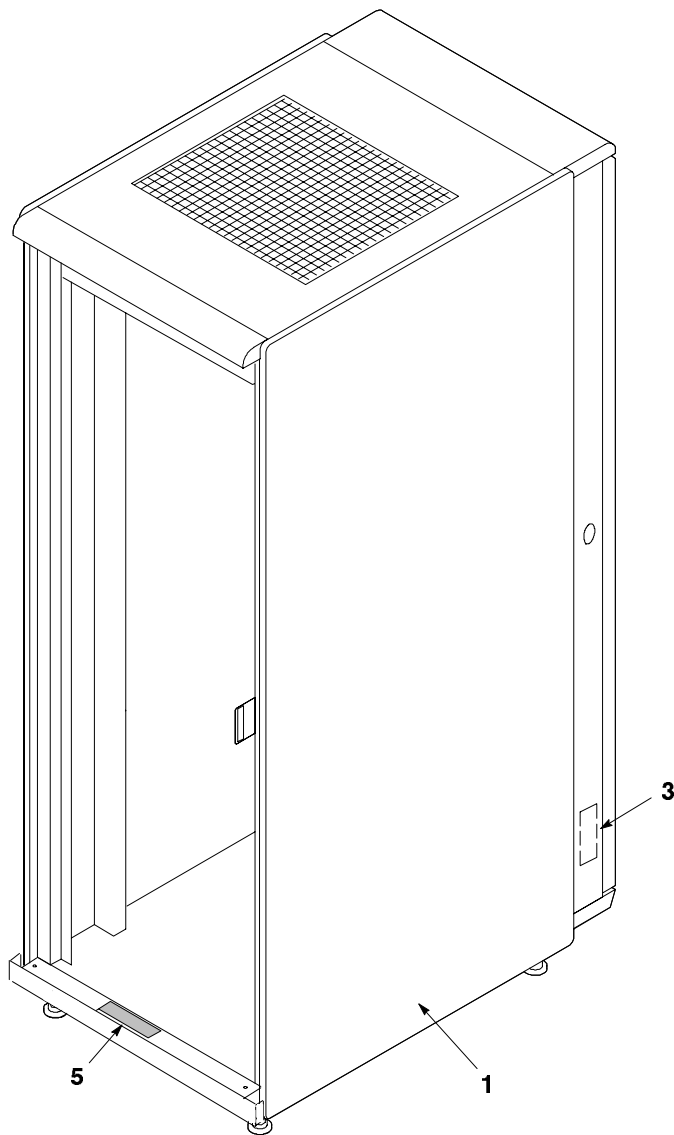


IP-00386-01

Figure 2. H9A15-NA/TA Cabinet (Sheet 1 of 2)

  INDICATES FRU LEVEL PARTS.

PARTS LIST 

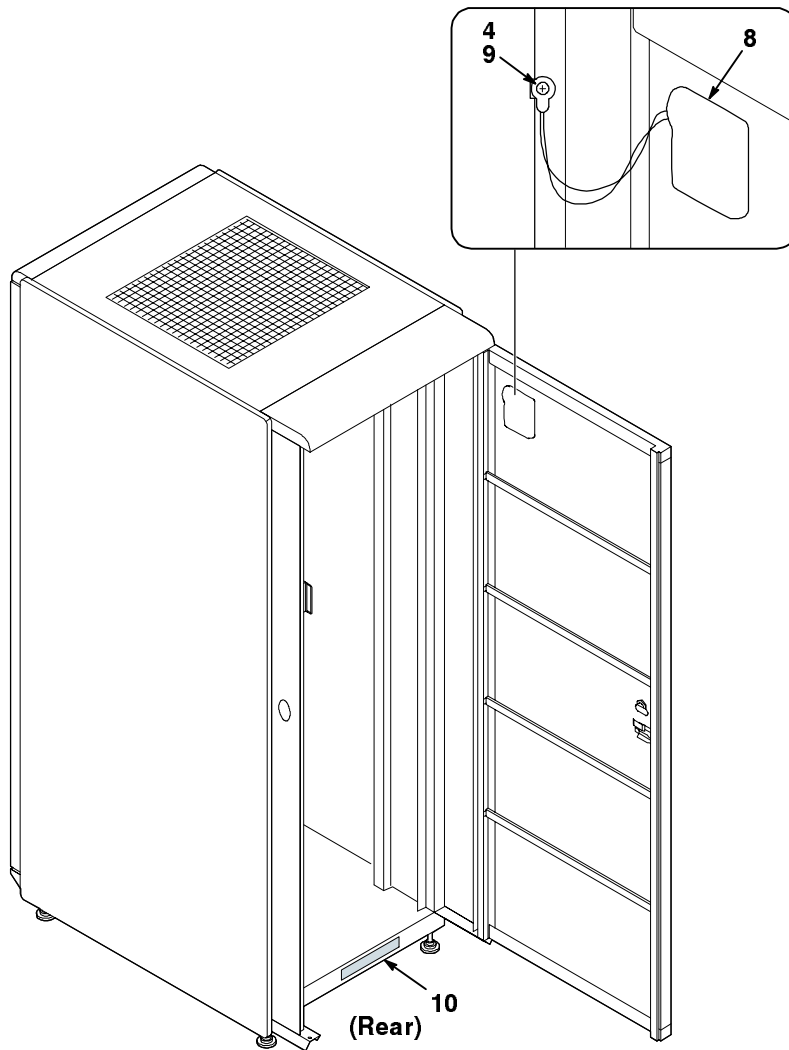

IP-00387A-01

Figure 2. H9A15-NA/TA Cabinet (Sheet 2 of 2)

FIG.& ITEM NO.		DESCRIPTION	DIGITAL PART NO. ^A	ECO CUT-IN H9A15-2 00000	USED ON CODE	REF FIG NO.
2-	A	CABINET, REAR DOOR, GRAY	H9A15-NA		A	1
	B	CABINET, REAR DOOR, BLUE	H9A15-TA		B	1
	1	*Cabinet Assembly, H9A15, EIA, Gray	70-33671-01		A	
		*Cabinet Assembly, H9A15, EIA, Blue	70-33671-02		B	
	2	*H7600 Interlock Kit (H9A15) (Not Shown)	2T-INTLK-27			
	3	*Label, "Electrical Data", Adhesive Backed	36-13209-02			
	4	*Nut, U-Nut 10-32	90-07786-01			
	5	*Label, "Caution Stabilizer Foot"	36-18384-01			
	6	*Package Assembly (Not Shown)	37-01596-01			
	7	*Documentation, H9A15 Cabinet Installation (Not Shown)	EK-H9A15-IN			
	8	*Cable Assembly w/Wrist Strap	12-24023-01			
	9	*Screw, Sems Pan Hd 10-32 x 3/8	90-09228-10			
	10	*Label, "Caution 2 Power Cord Multi-Language Service Information"	36-46657-01			


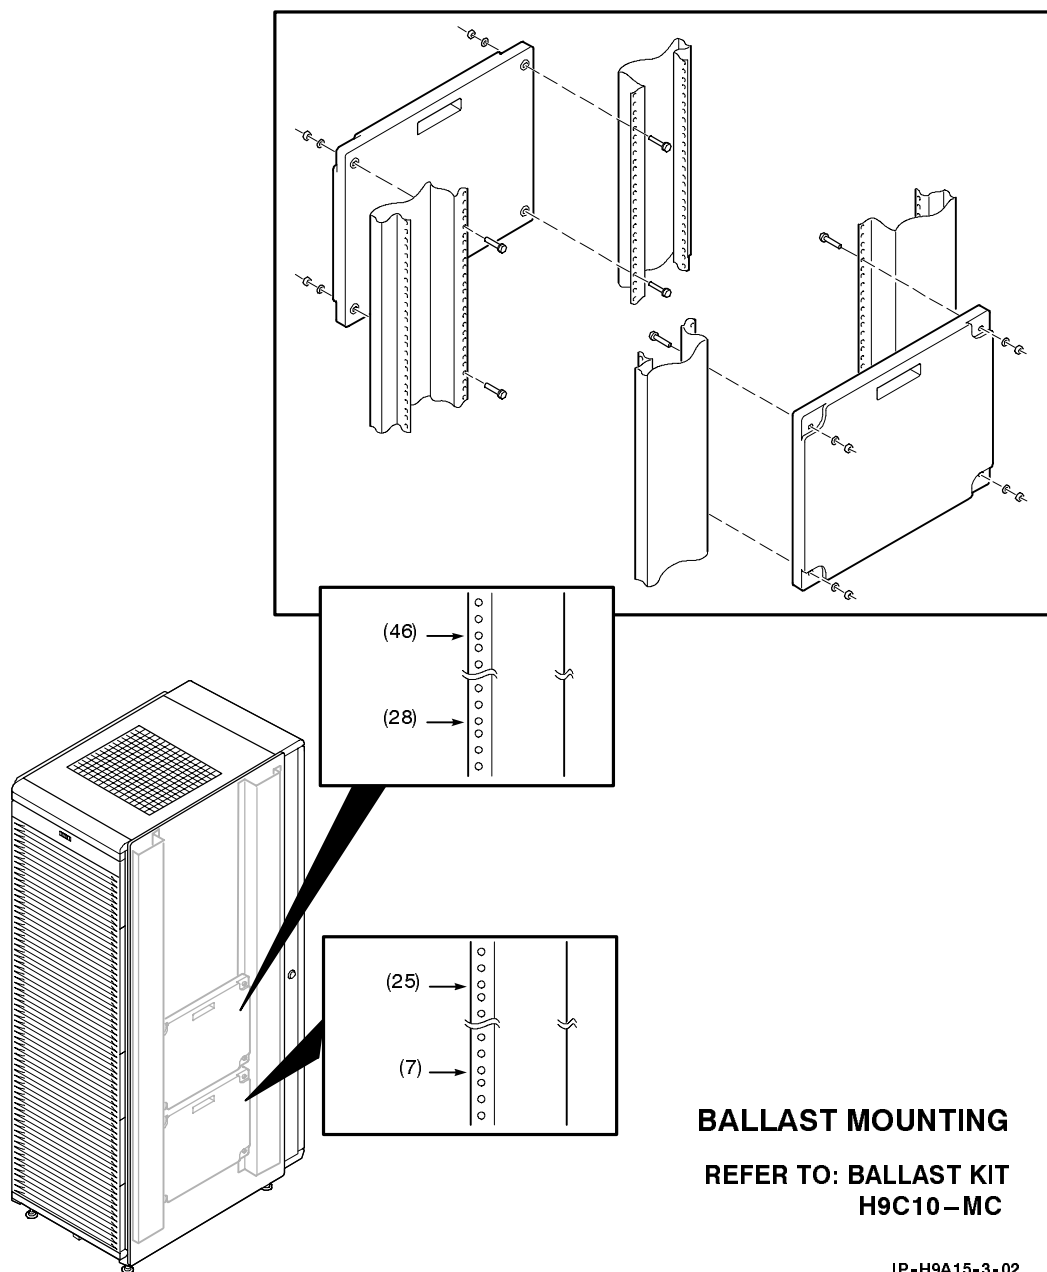


Figure 3. H9A15 M-Series Mounting Kits (Sheet 1 of 3)

Screw Hole Locations Are Determined By Rail Mounting Configuration.

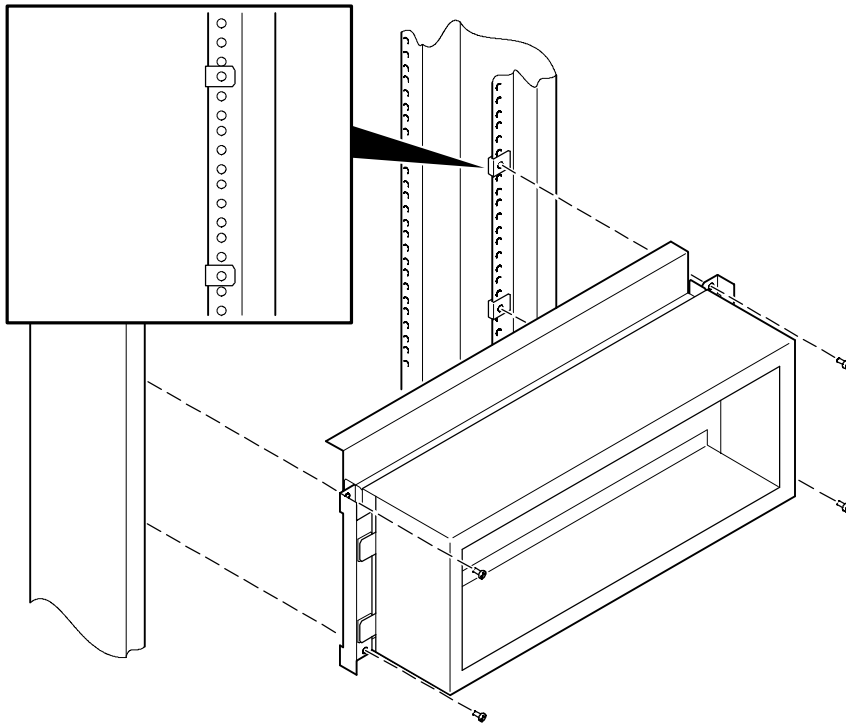


FLUSHING FAN MOUNTING

REFER TO: FLUSHING FAN KITS (REAR)
2T-SW8XF-ER (240V)
2T-SW8XF-SR (120V)

IP-H9A15-3-03

Figure 3. H9A15 M-Series Mounting Kits (Sheet 2 of 3)

Screw Hole Locations Are Determined By Rail Mounting Configuration.

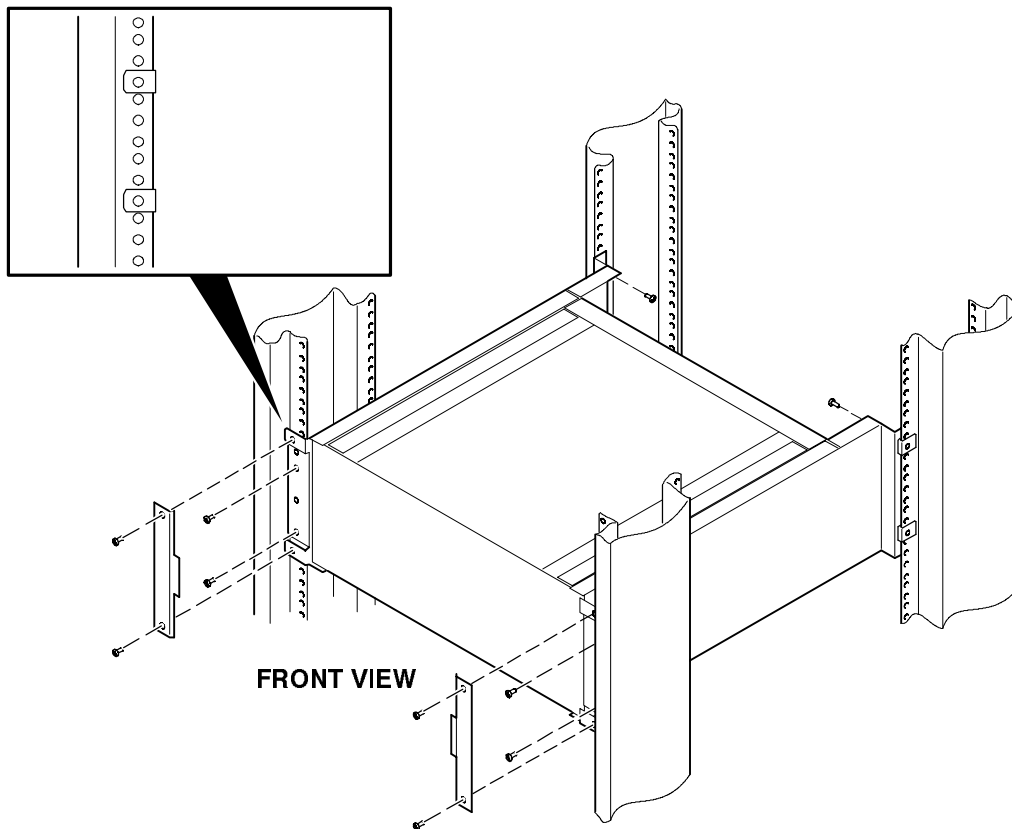


MEMORY CHANNEL MOUNTING

**REFER TO: MEMORY CHANNEL RACKMOUNT KIT
CCMRA-AA**


IP-H9A15-3-04

Figure 3. H9A15 M-Series Mounting Kits (Sheet 3 of 3)

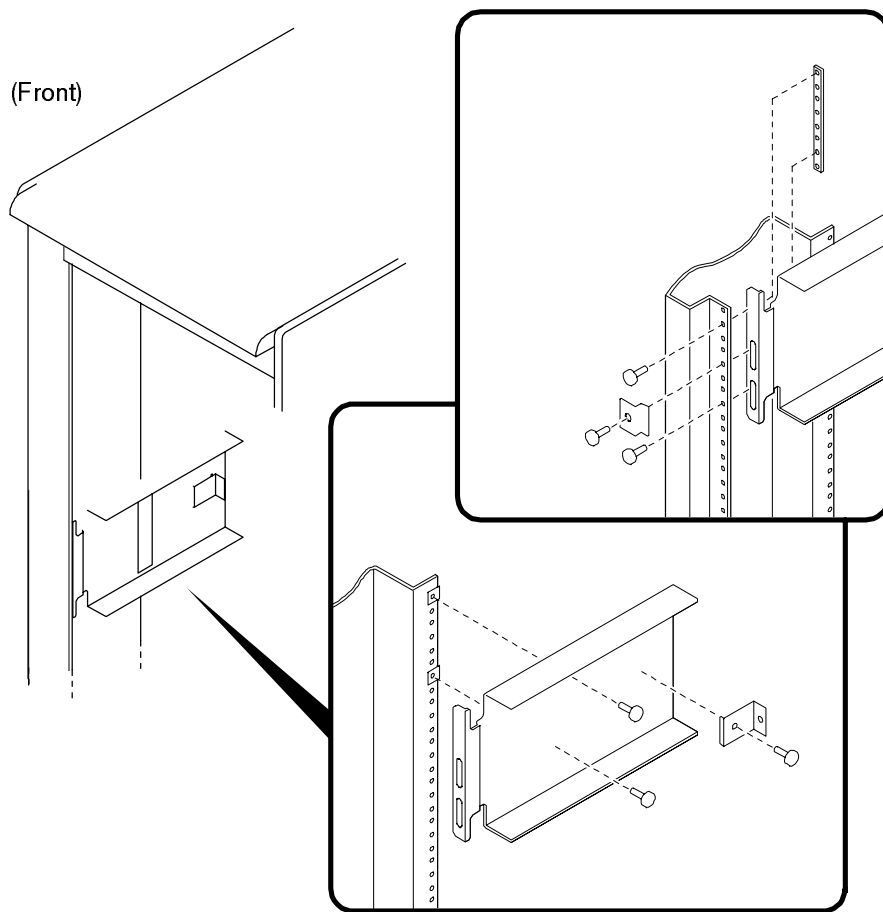

IP-H9A15-3-05

Figure 4. AS4000/4100 Mounting and Cabling (Sheet 1 of 13)

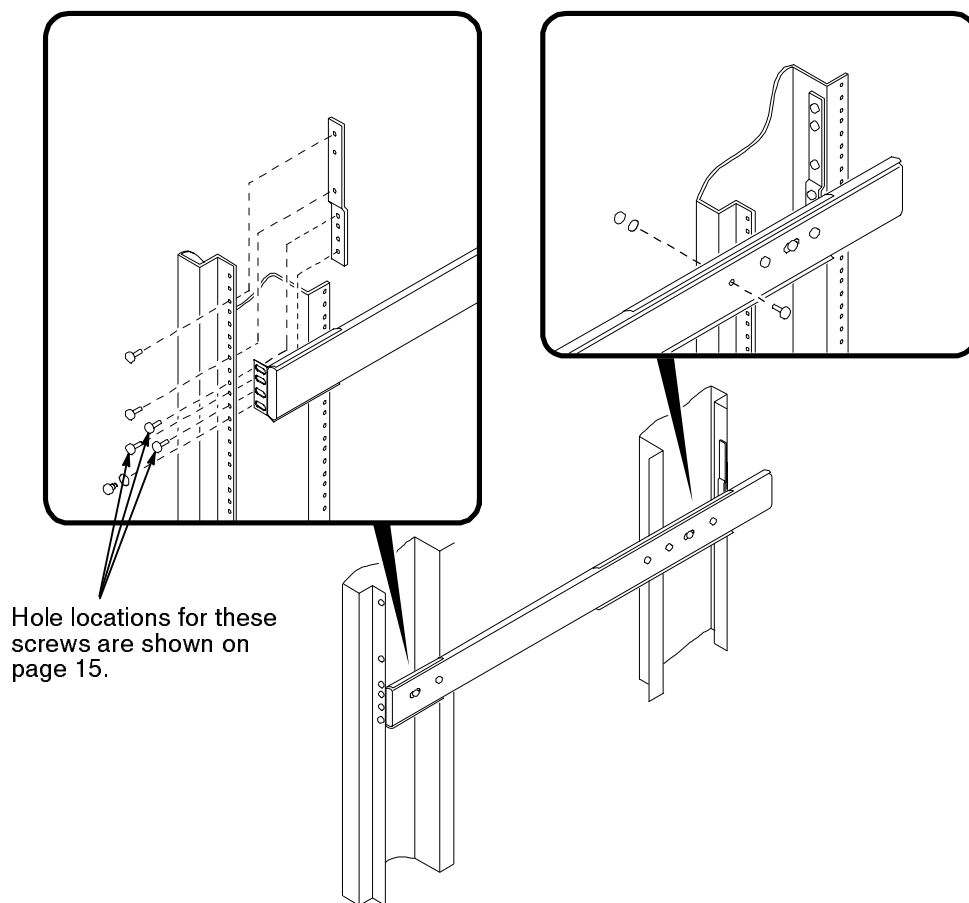


SYSTEM BOX MOUNTING

REFER TO:
AlphaServer 4000/4100 RACK MOUNT KIT
CK-BA30A

IP-H9A15-3-06


Figure 4. AS4000/4100 Mounting and Cabling (Sheet 2 of 13)

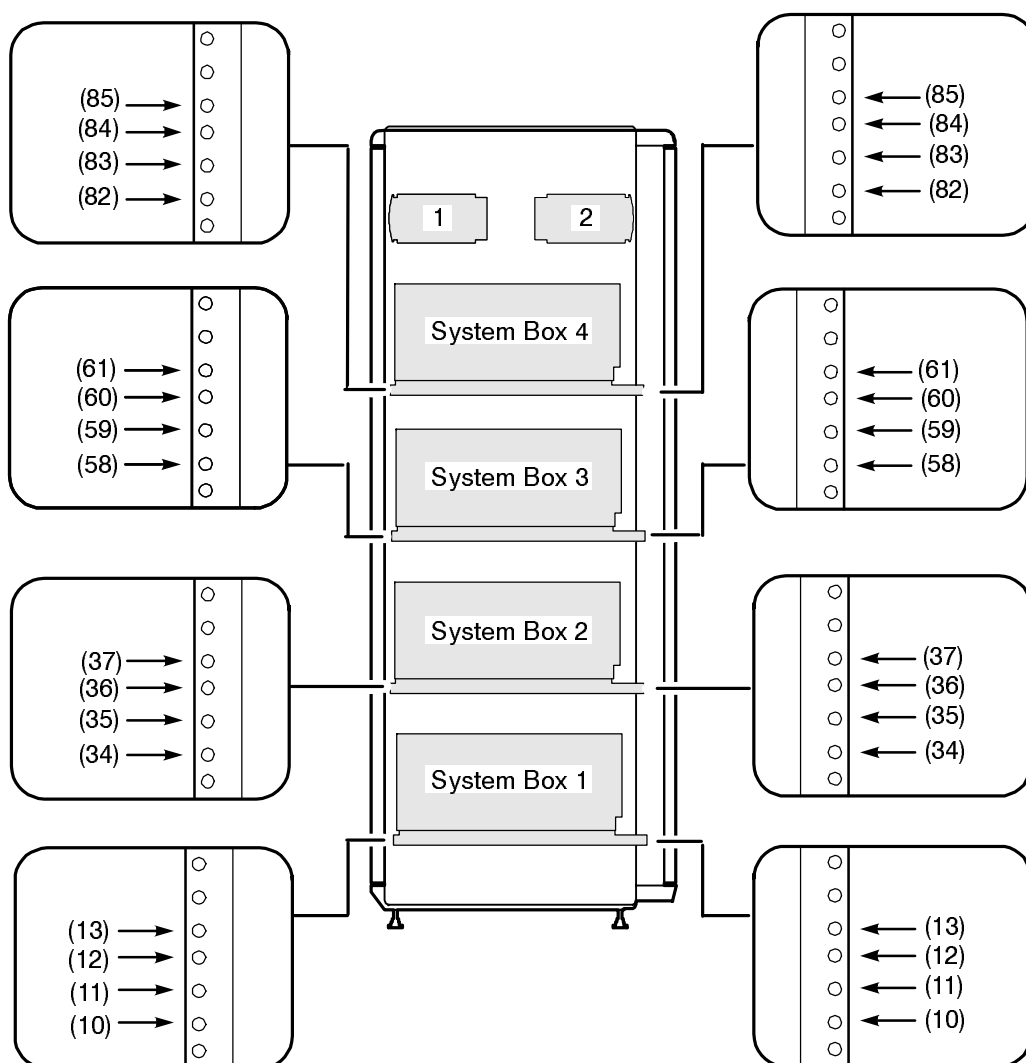

AlphaServer 4000/4100 SYSTEM BOX MOUNTING LOCATIONS

IP-H9A15-3-07


Figure 4. AS4000/4100 Mounting and Cabling (Sheet 3 of 13)

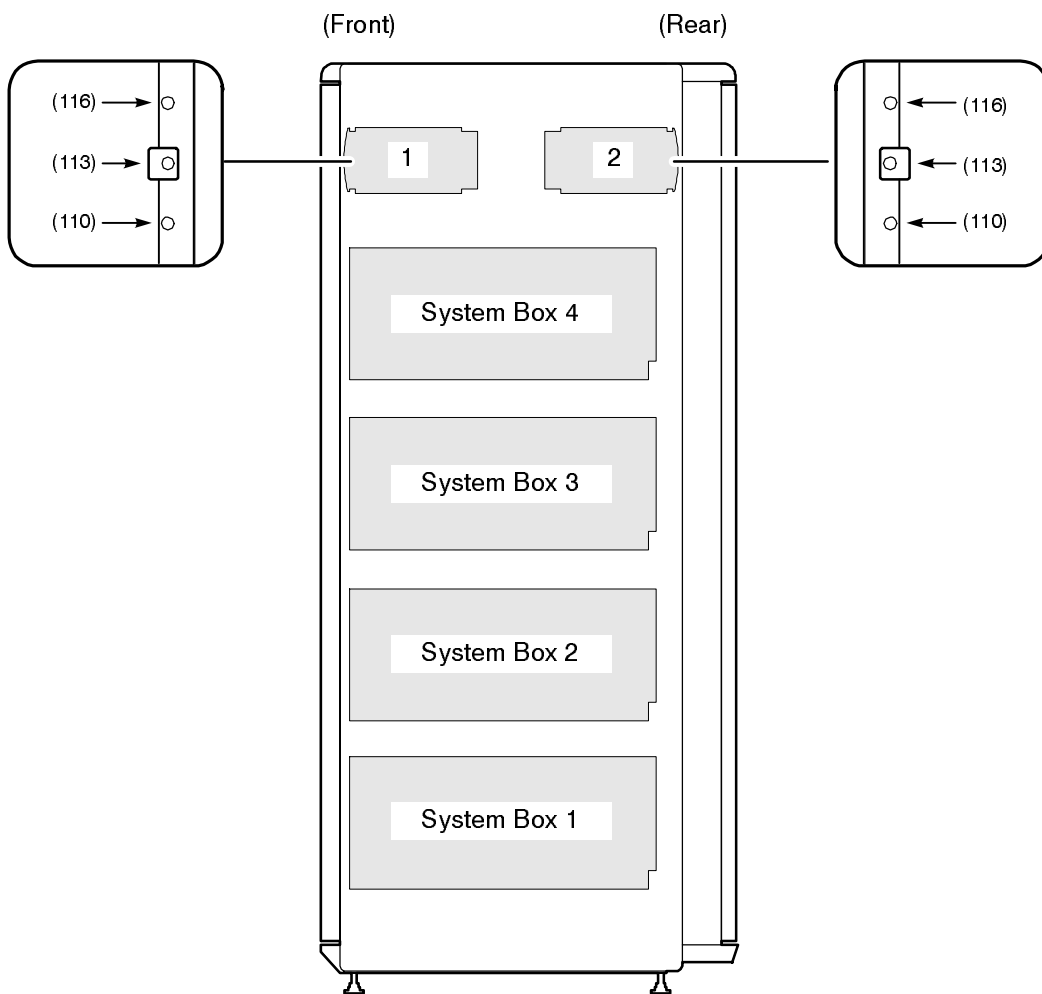

AlphaServer 4000/4100 STORAGE SHELF MOUNTING LOCATIONS

IP-H9A115-3-08


Figure 4. AS4000/4100 Mounting and Cabling (Sheet 4 of 13)

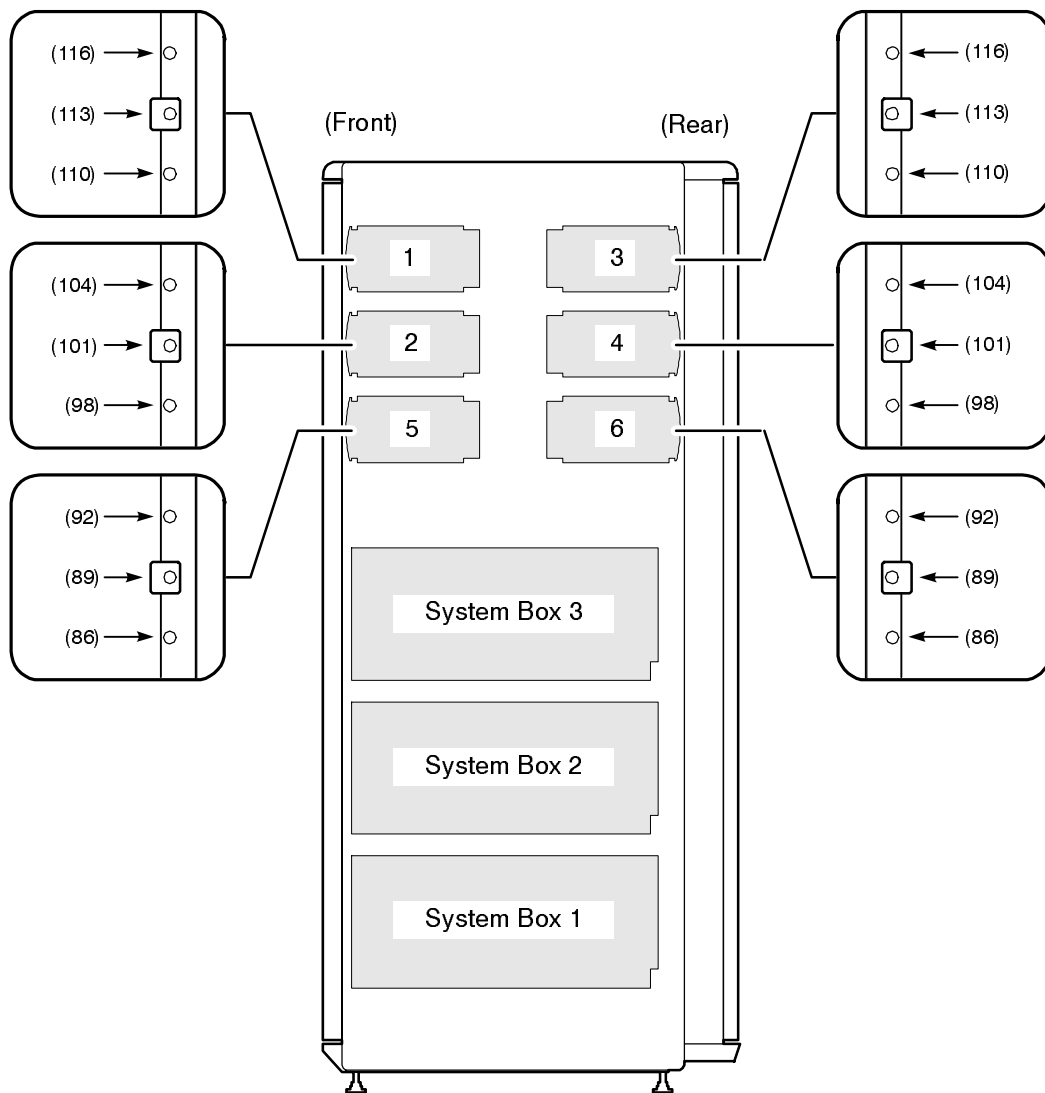

AlphaServer 4000/4100 STORAGE SHELF MOUNTING LOCATIONS

IP-H9A15-3-09


Figure 4. AS4000/4100 Mounting and Cabling (Sheet 5 of 13)

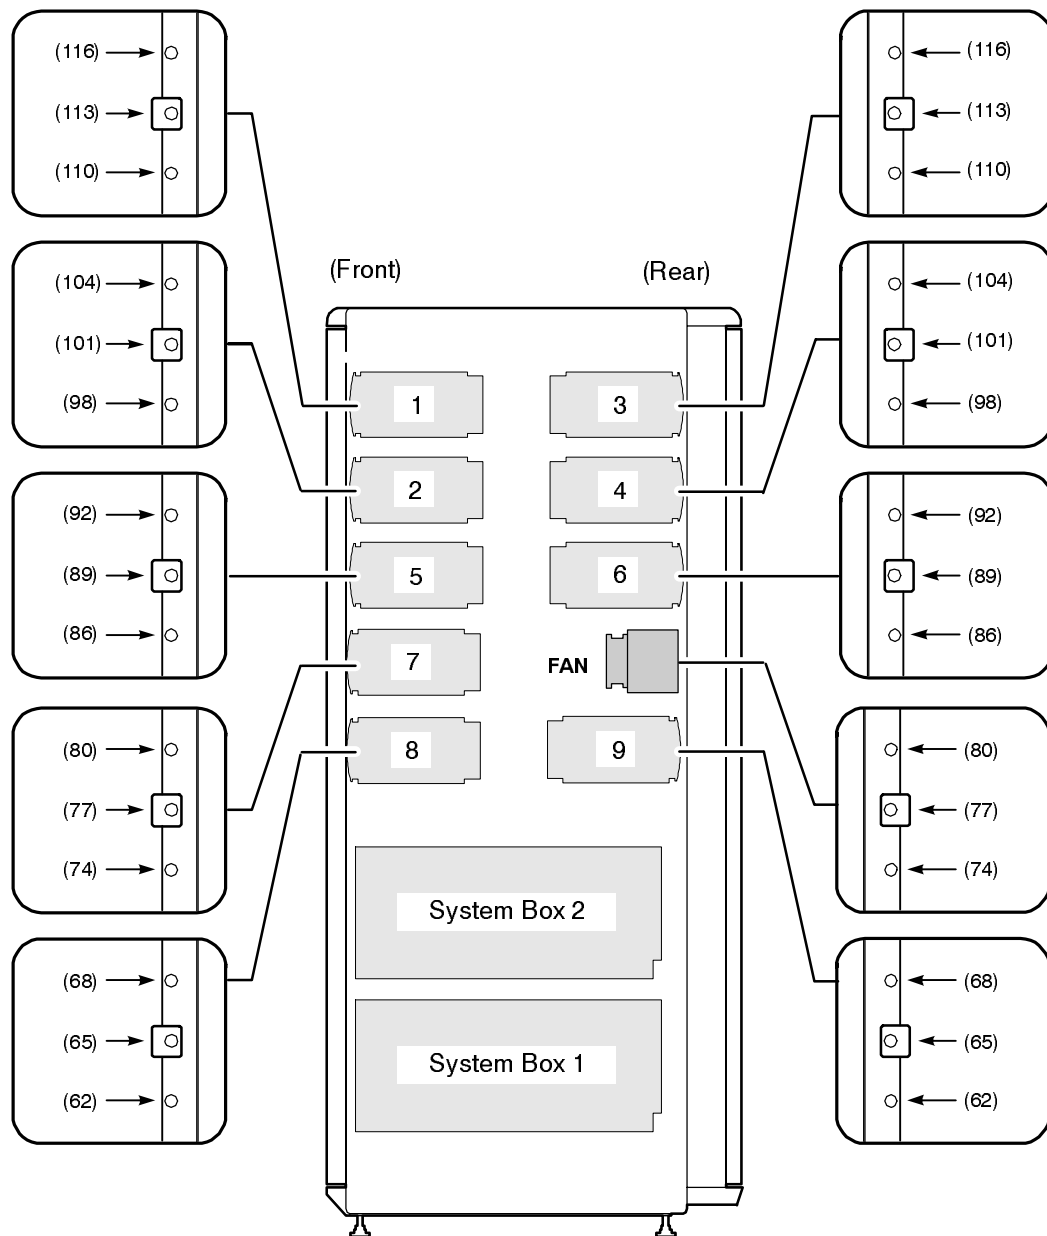

IP-H9A15-3-10

AlphaServer 4000/4100 STORAGE SHELF MOUNTING LOCATIONS


Figure 4. AS4000/4100 Mounting and Cabling (Sheet 6 of 13)

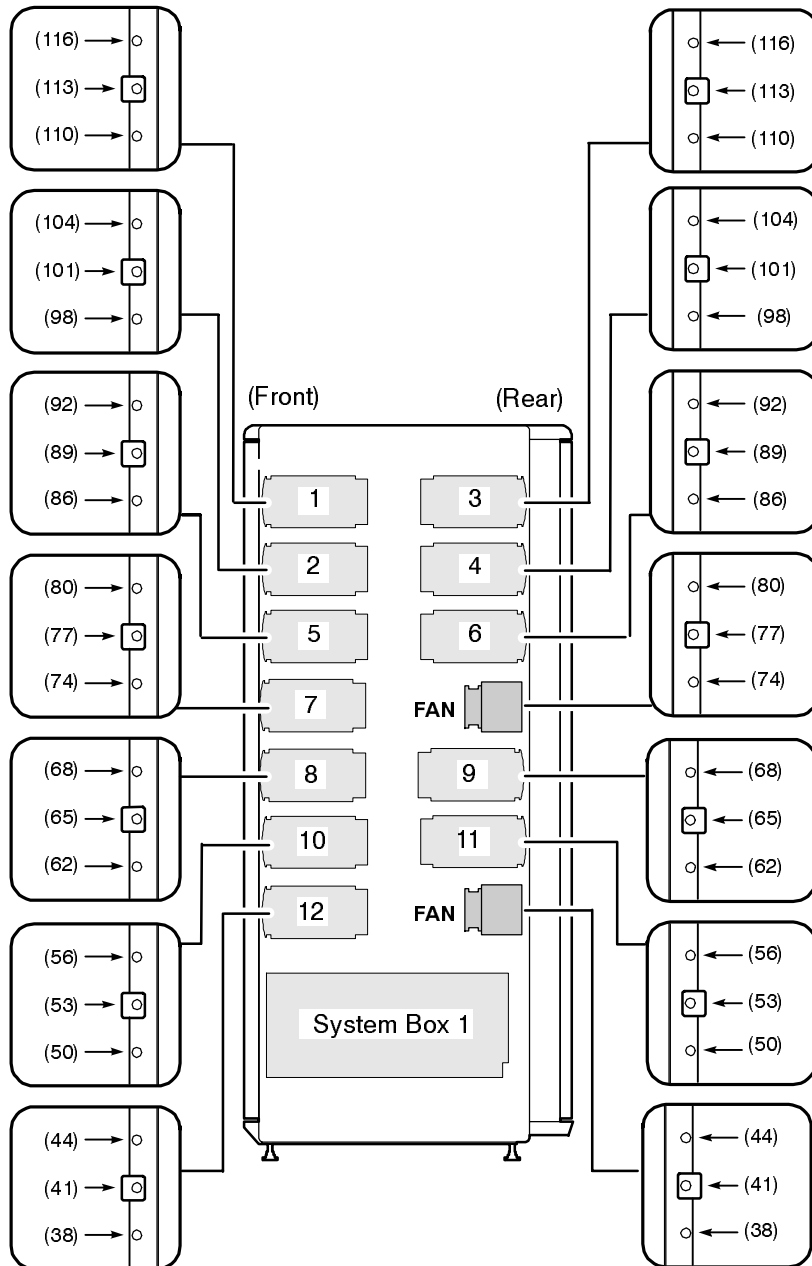


IP-H9A15-3-11

AlphaServer 4000/4100 STORAGE SHELF MOUNTING LOCATIONS

Figure 4. AS4000/4100 Mounting and Cabling (Sheet 7 of 13)

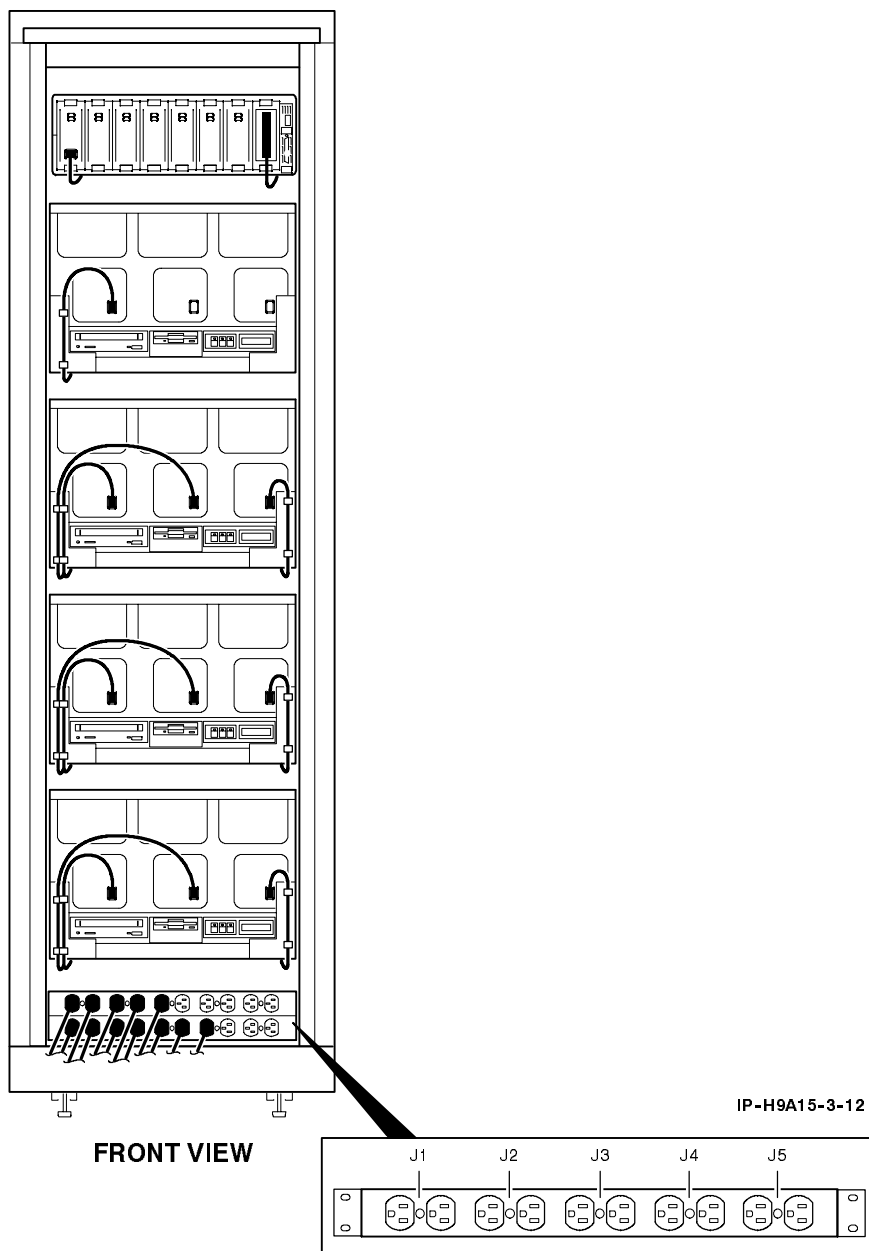

AlphaServer 4000/4100 CABLING CONFIGURATION
Figure 4. AS4000/4100 Mounting and Cabling (Sheet 8 of 13)

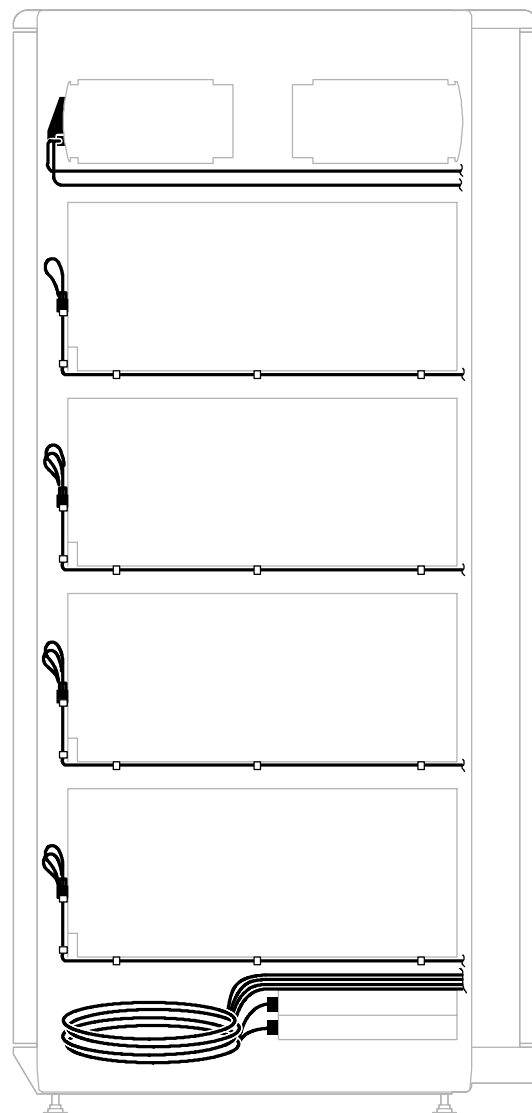


SIDE VIEW

**AlphaServer 4000/4100
CABLING CONFIGURATION**

IP-H9A15-3-13

Figure 4. AS4000/4100 Mounting and Cabling (Sheet 9 of 13)

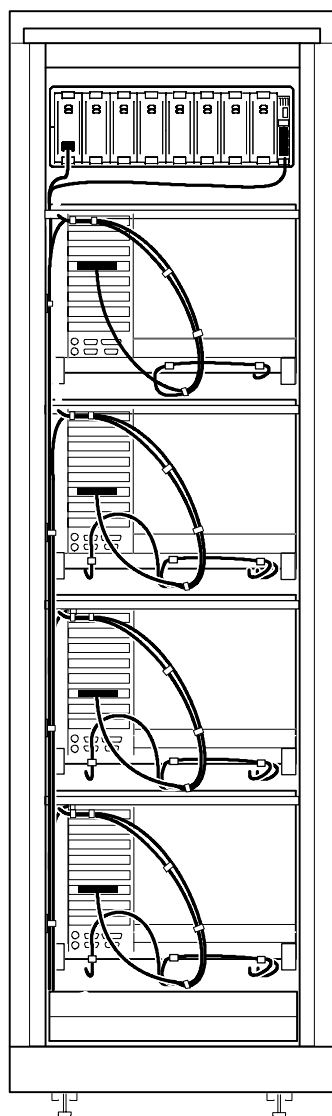


REAR VIEW

IP-H9A15-3-14


AlphaServer 4000/4100 CABLING CONFIGURATION

Figure 4. AS4000/4100 Mounting and Cabling (Sheet 10 of 13)

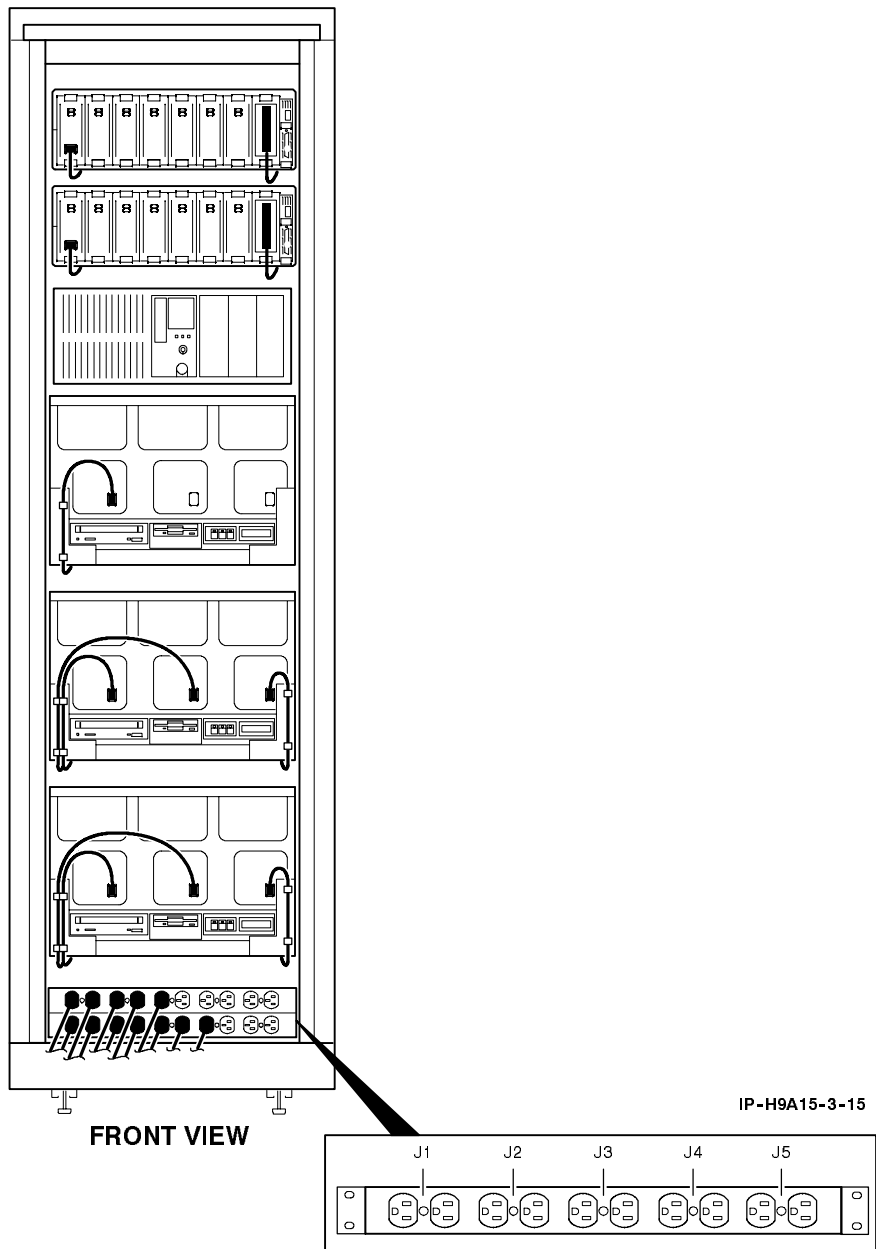

AlphaServer 4000/4100 w/MEMORY CHANNEL CABLING CONFIGURATION


Figure 4. AS4000/4100 Mounting and Cabling (Sheet 11 of 13)

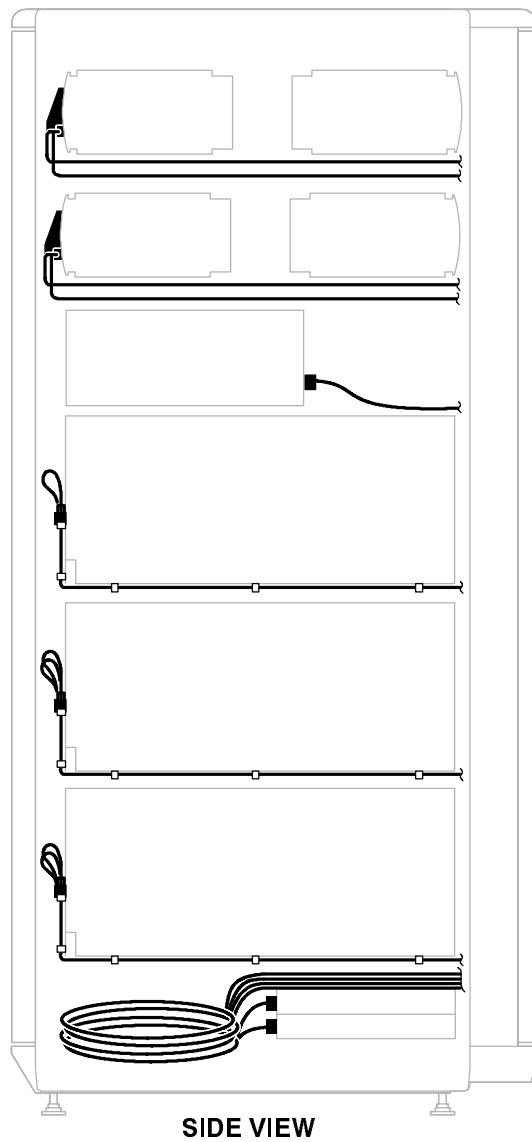

**AlphaServer 4000/4100 w/MEMORY CHANNEL
CABLING CONFIGURATION**

IP-H9A15-3-17


Figure 4. AS4000/4100 Mounting and Cabling (Sheet 12 of 13)

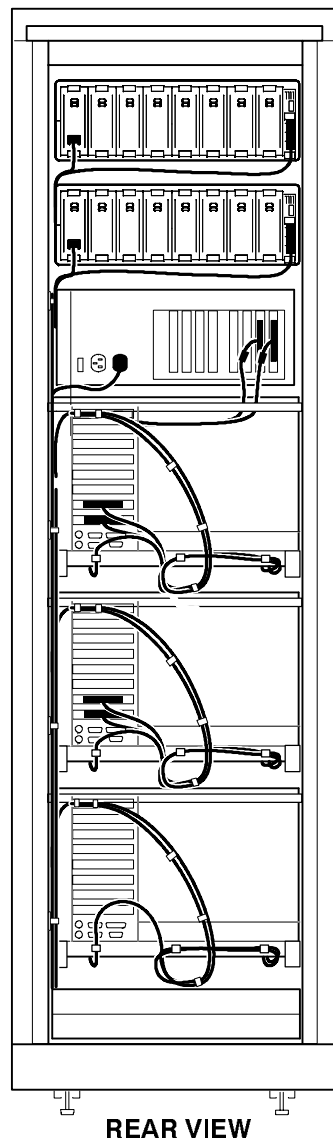

**AlphaServer 4000/4100 w/MEMORY CHANNEL
CABLING CONFIGURATION**

IP-H9A15-3-17


Figure 4. AS4000/4100 Mounting and Cabling (Sheet 13 of 13)

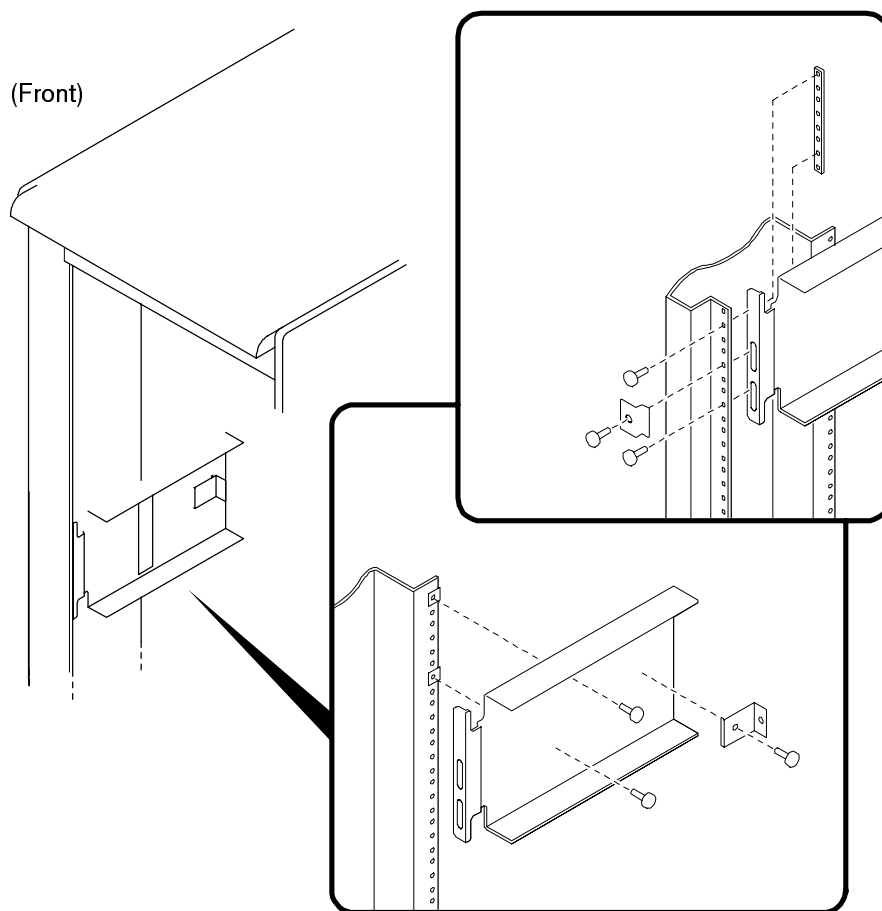

STORAGE SHELF MOUNTING


IP-H9A15-3-5A

Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 1 of 12)

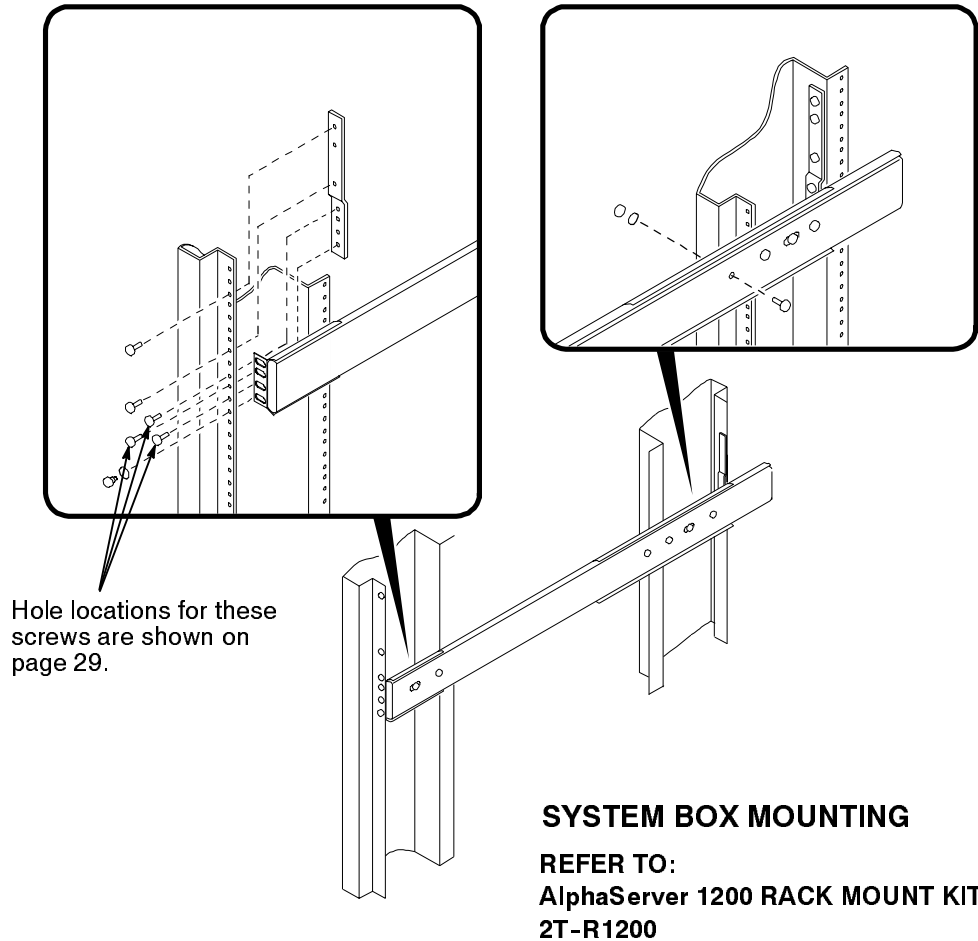


IP-H9A15-3-6A

Figure 5. Alpha Server 1200 Mounting and Cabling (Sheet 2 of 12)

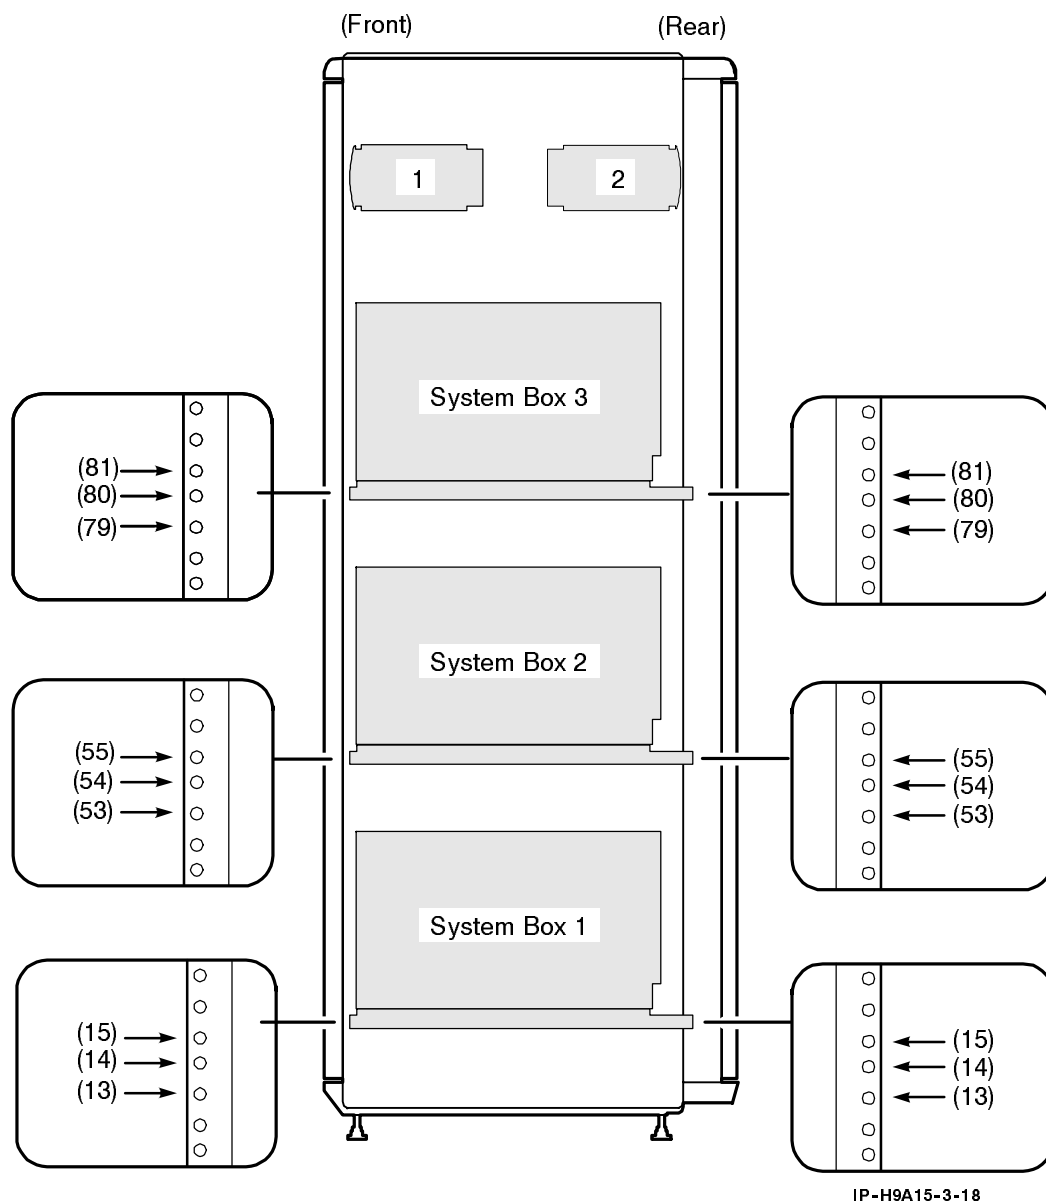

AlphaServer 1200 SYSTEM BOX MOUNTING LOCATIONS


Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 3 of 12)

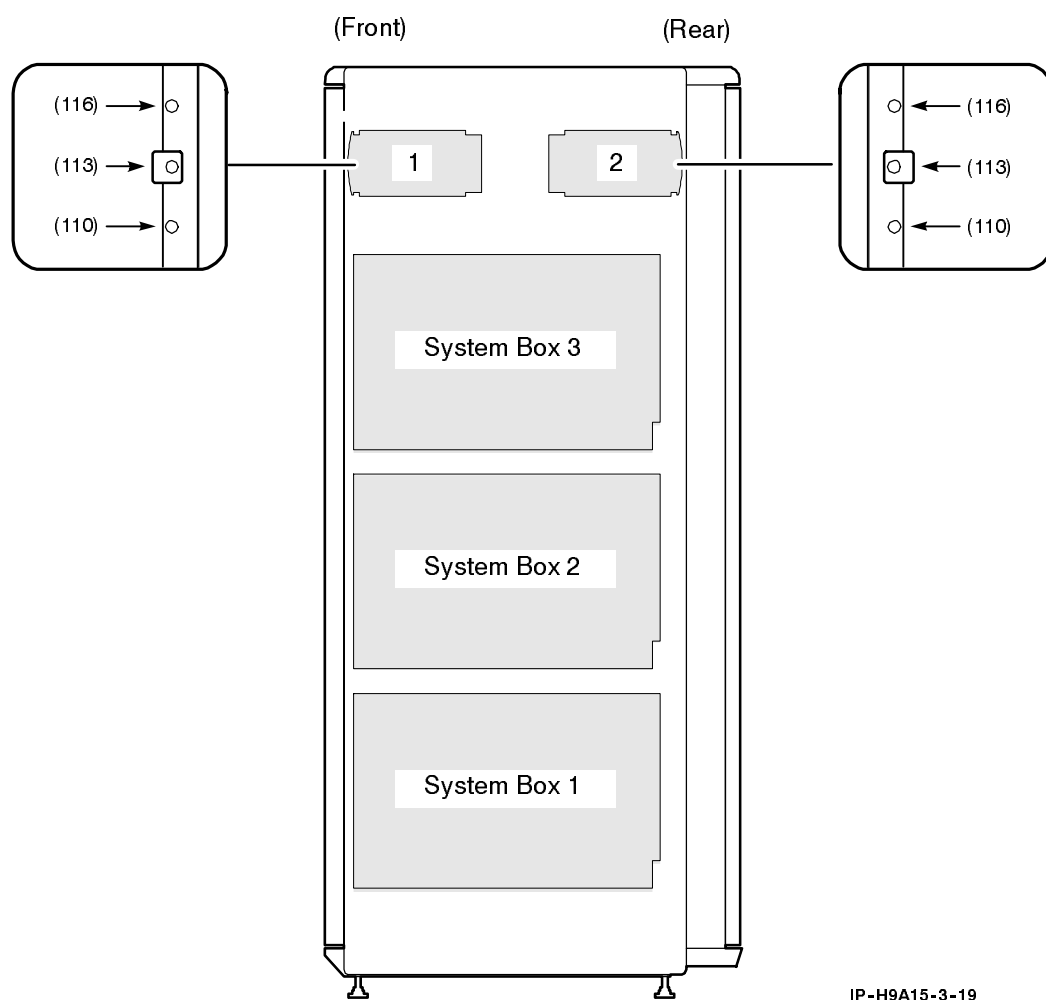

IP-H9A15-3-19


AlphaServer 1200 STORAGE SHELF MOUNTING LOCATIONS

Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 4 of 12)

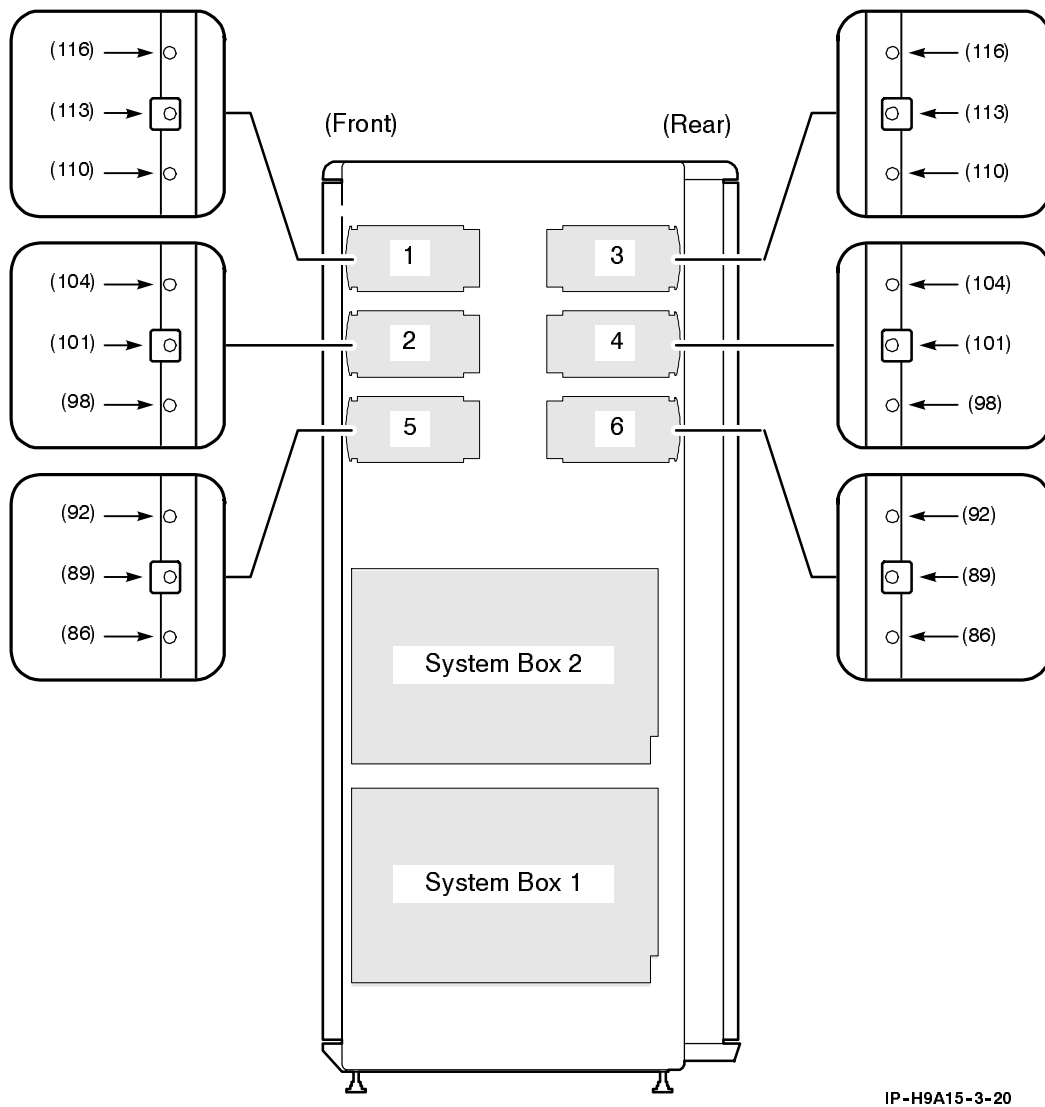

AlphaServer 1200 STORAGE SHELF MOUNTING LOCATIONS


Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 5 of 12)

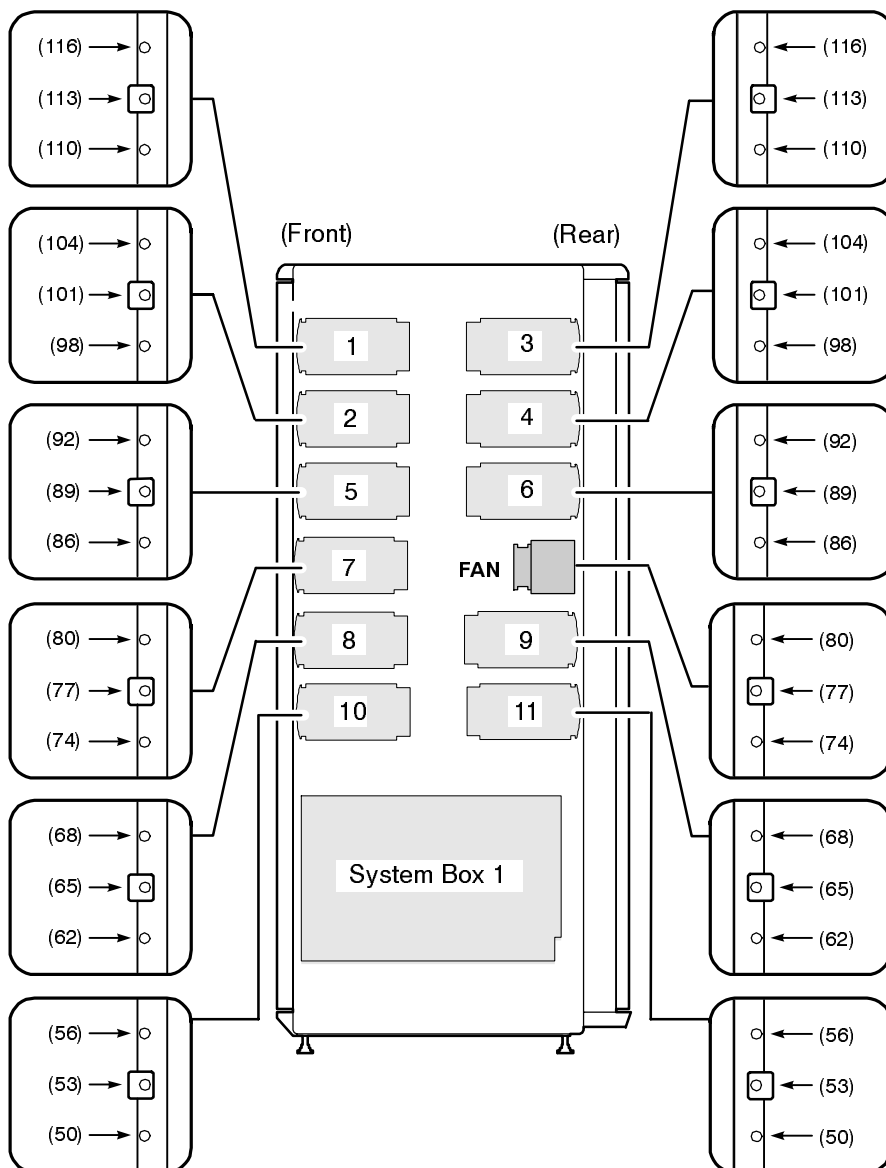

AlphaServer 1200 STORAGE SHELF MOUNTING LOCATIONS


IP-H9A15-3-21

Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 6 of 12)

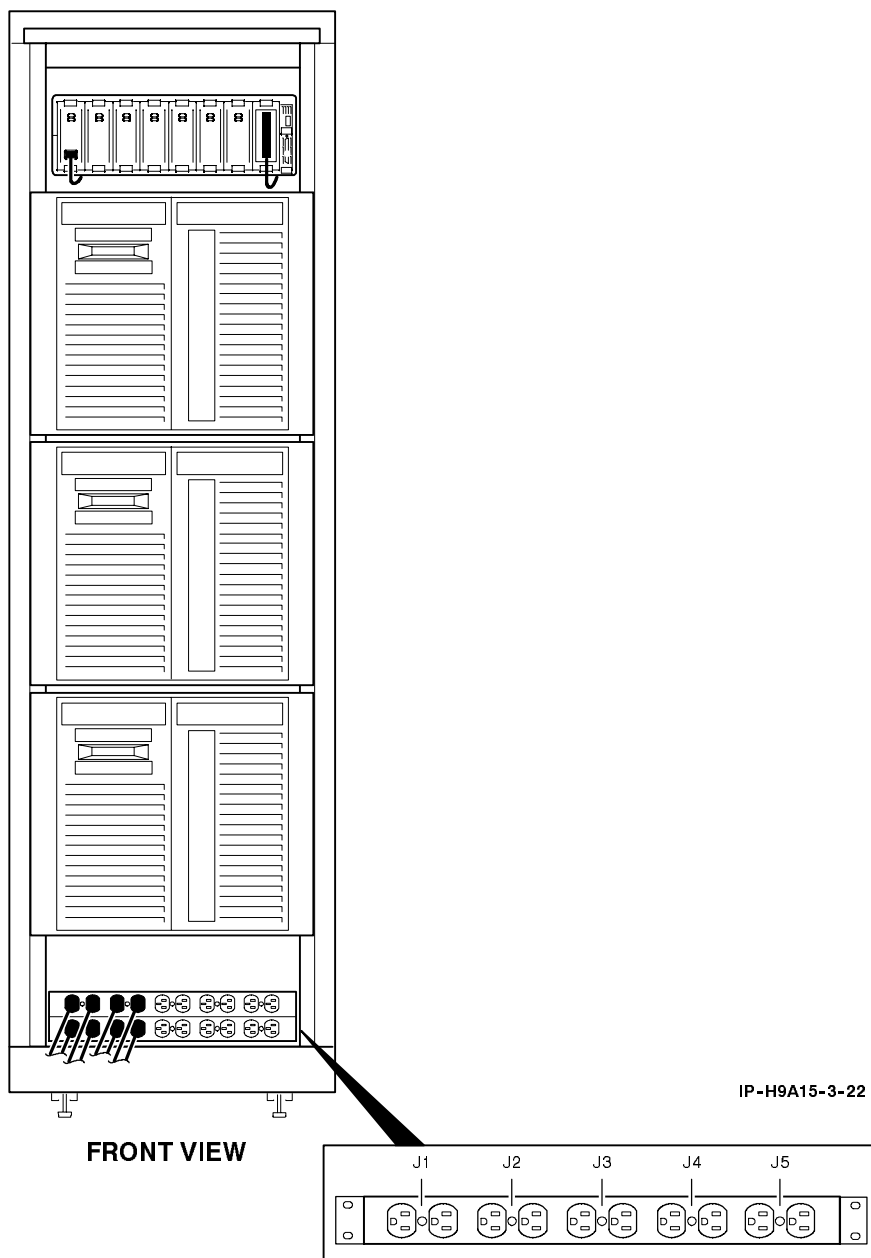

AlphaServer 1200 CABLING CONFIGURATION

Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 7 of 12)

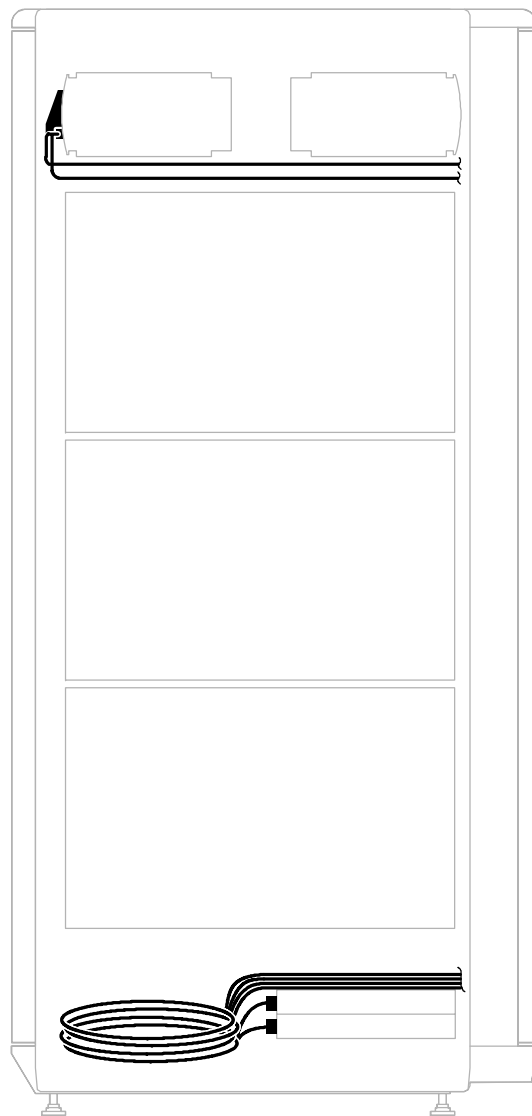


SIDE VIEW

IP-H9A15-3-23

AlphaServer 1200 CABLING CONFIGURATION

Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 8 of 12)

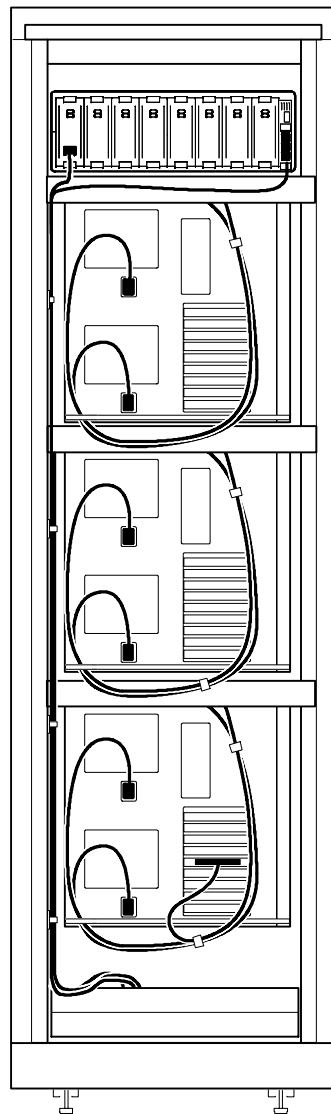


REAR VIEW

AlphaServer 1200 CABLING CONFIGURATION


IP-H9A15-3-24

Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 9 of 12)

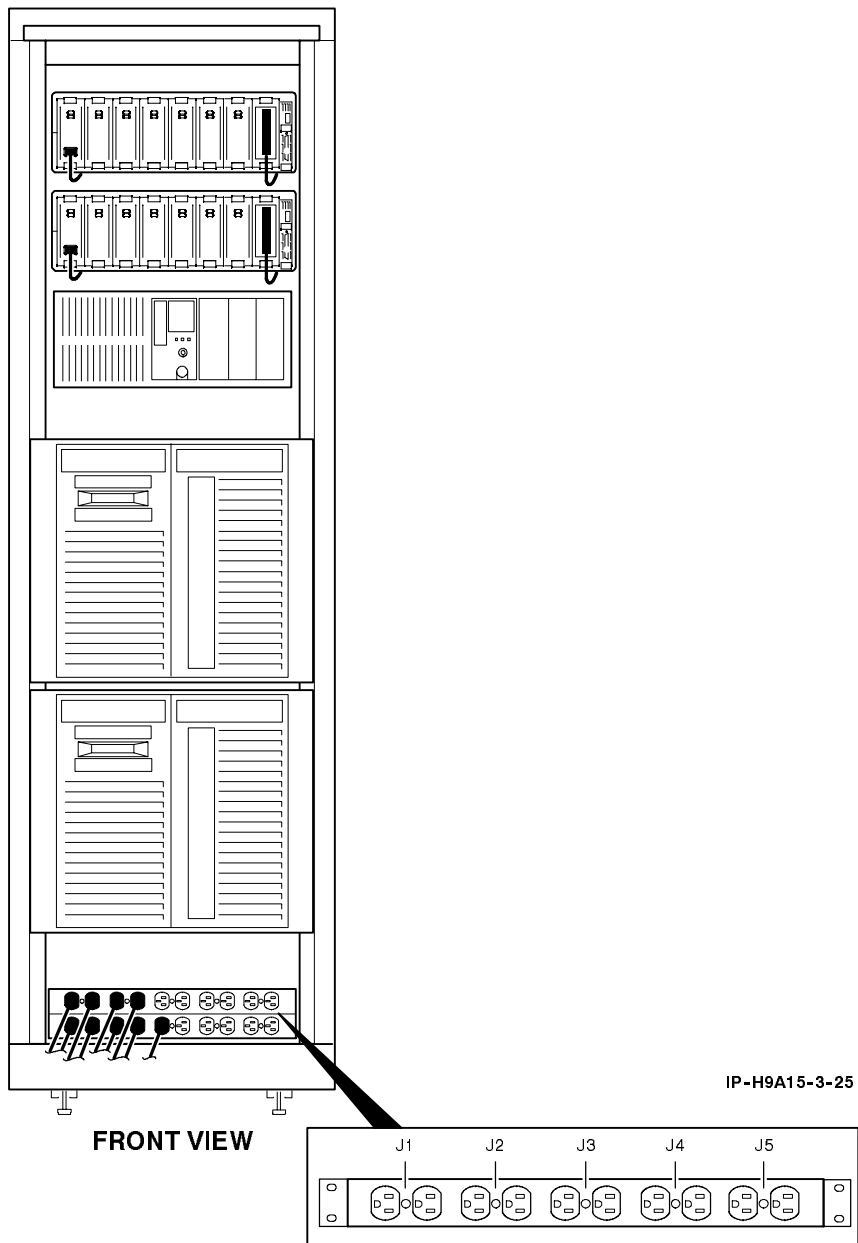

AlphaServer 1200 w/MEMORY CHANNEL CABLING CONFIGURATION

Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 10 of 12)

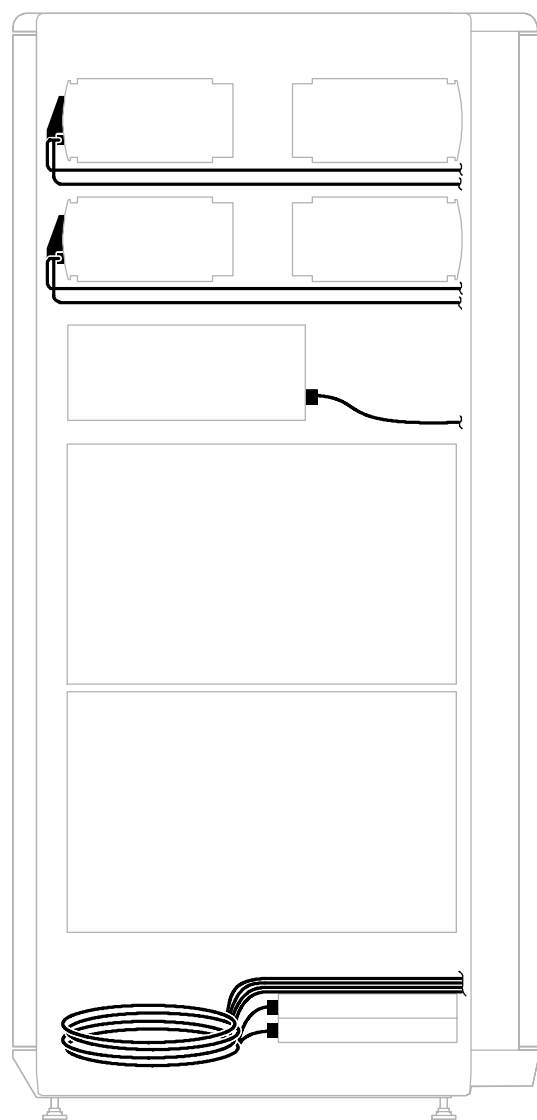


SIDE VIEW

IP-H9A15-3-26

AlphaServer 1200 w/MEMORY CHANNEL CABLING CONFIGURATION

Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 11 of 12)

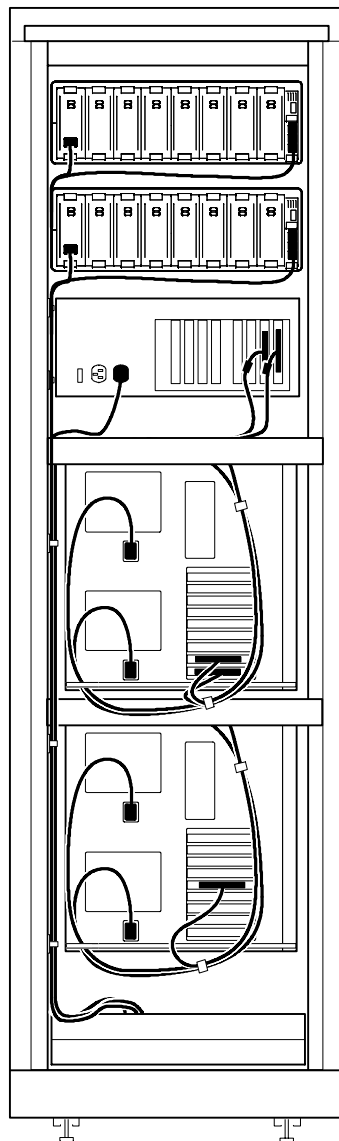


REAR VIEW

IP-H9A15-3-27

AlphaServer 1200 w/MEMORY CHANNEL CABLING CONFIGURATION


Figure 5. AlphaServer 1200 Mounting and Cabling (Sheet 12 of 12)

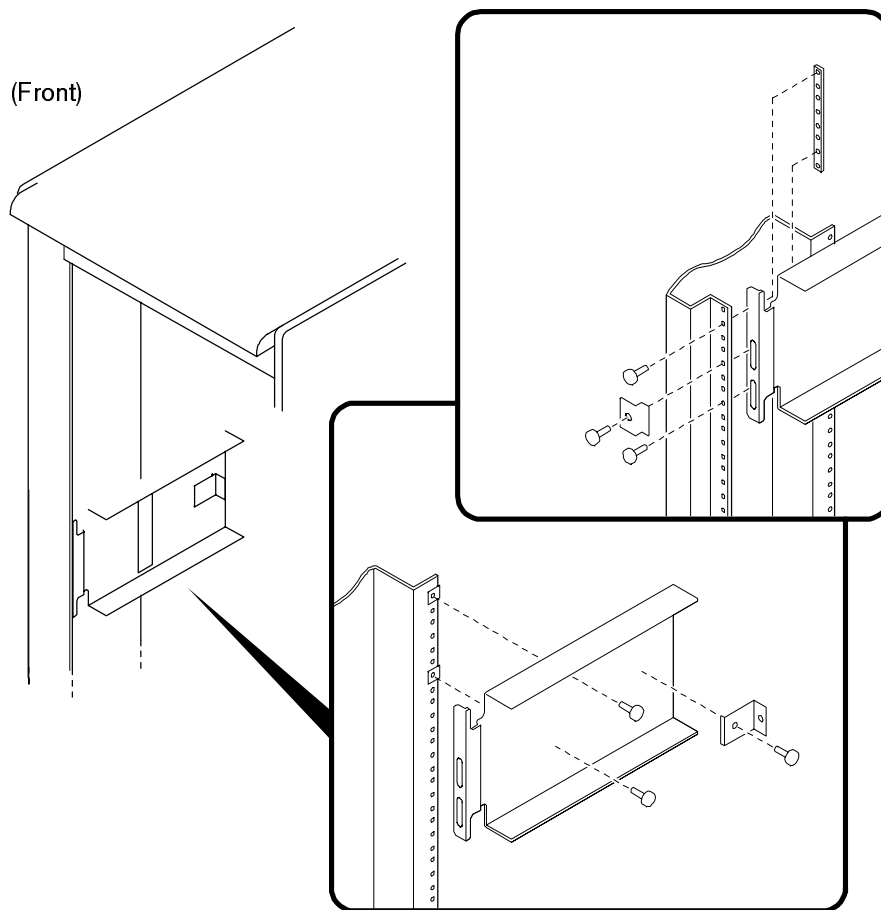

IP-H9A15-3-5B

STORAGE SHELF MOUNTING

Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 1 of 13)

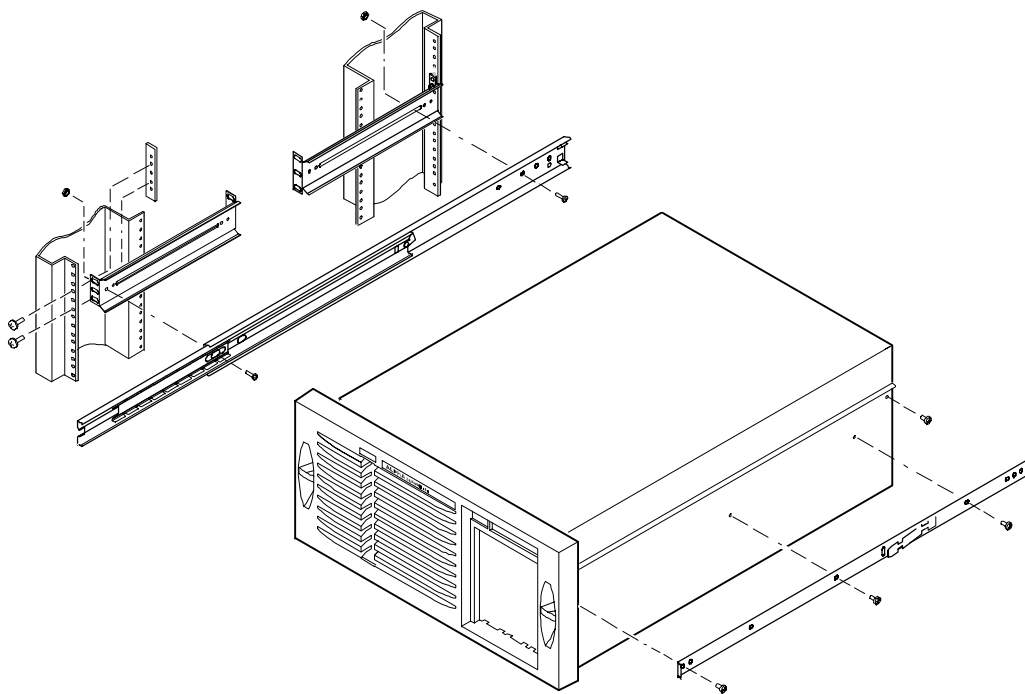


SYSTEM BOX MOUNTING

**REFER TO:
AlphaServer 800 RACK MOUNT KIT
PB8HA-BA**

IP-H9A15-3-28


Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 2 of 13)

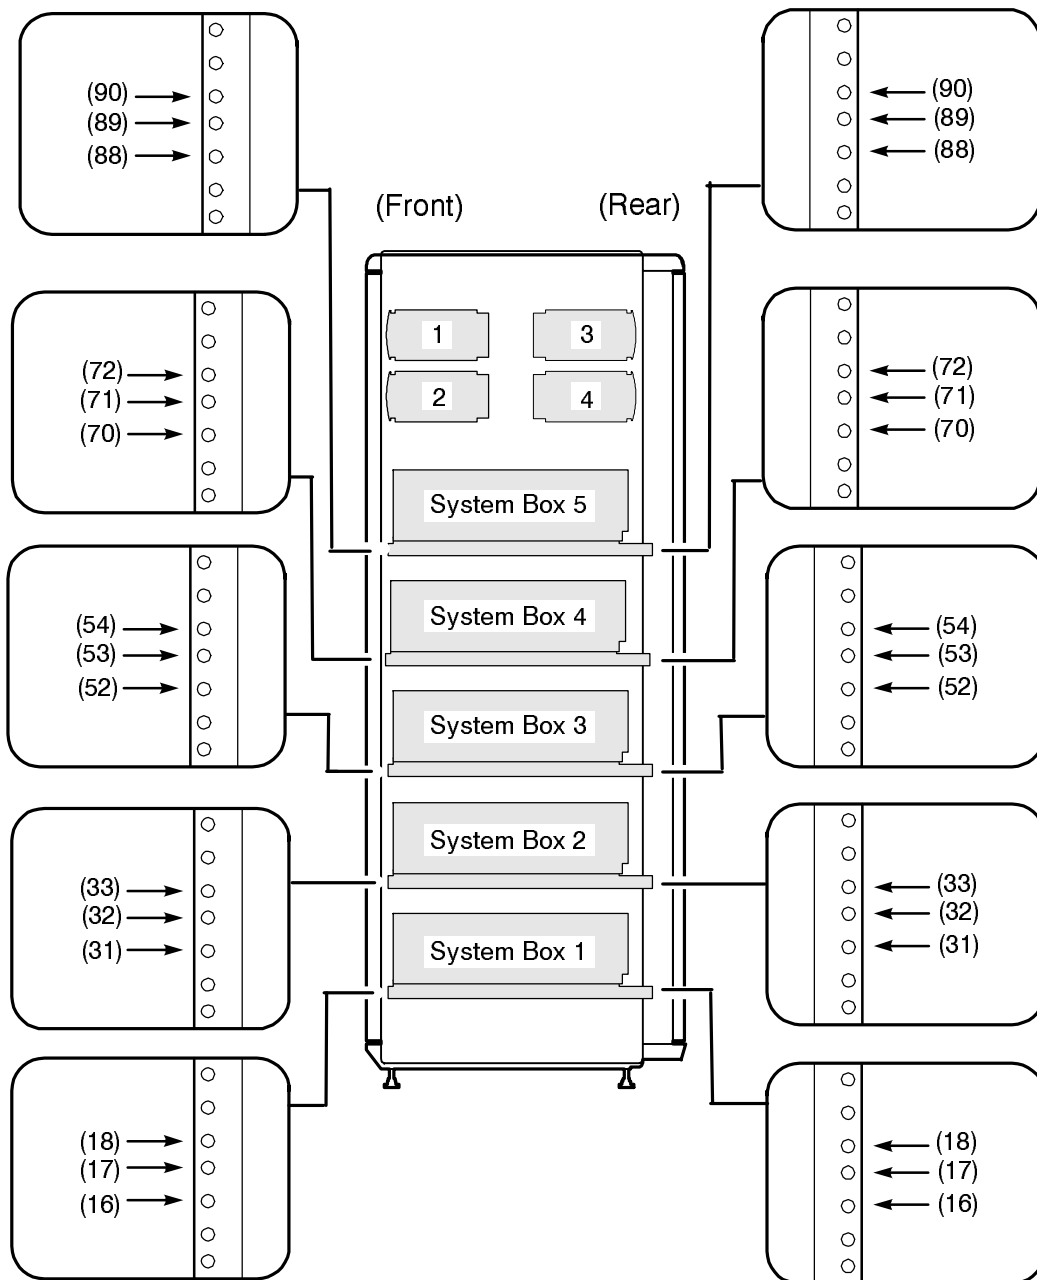

AlphaServer 800 SYSTEM BOX MOUNTING LOCATIONS

IP-H9A15-3-29


Figure 6. - AlphaServer 800 Mounting and Cabling - (Sheet 3 of 13)

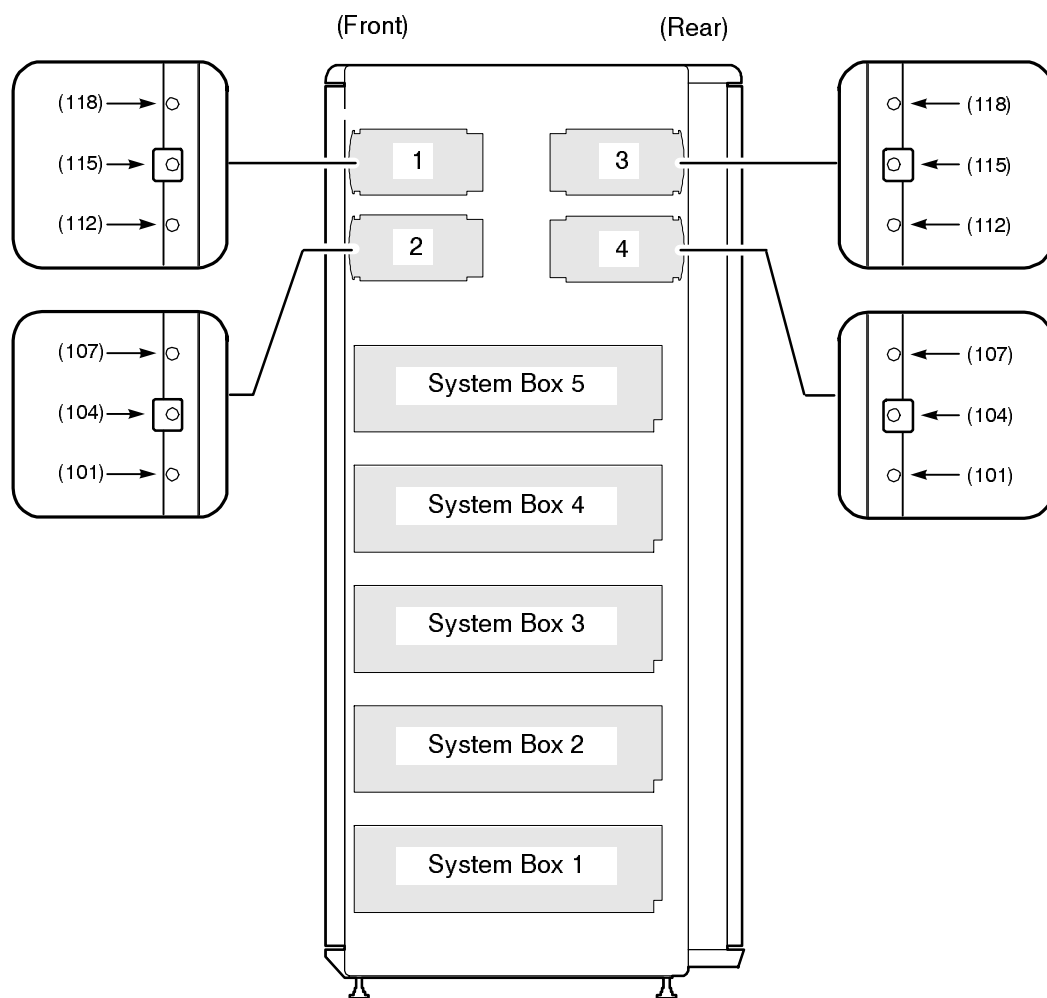

AlphaServer 800 STORAGE SHELF MOUNTING LOCATIONS

IP-H9A15-3-30


Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 4 of 13)

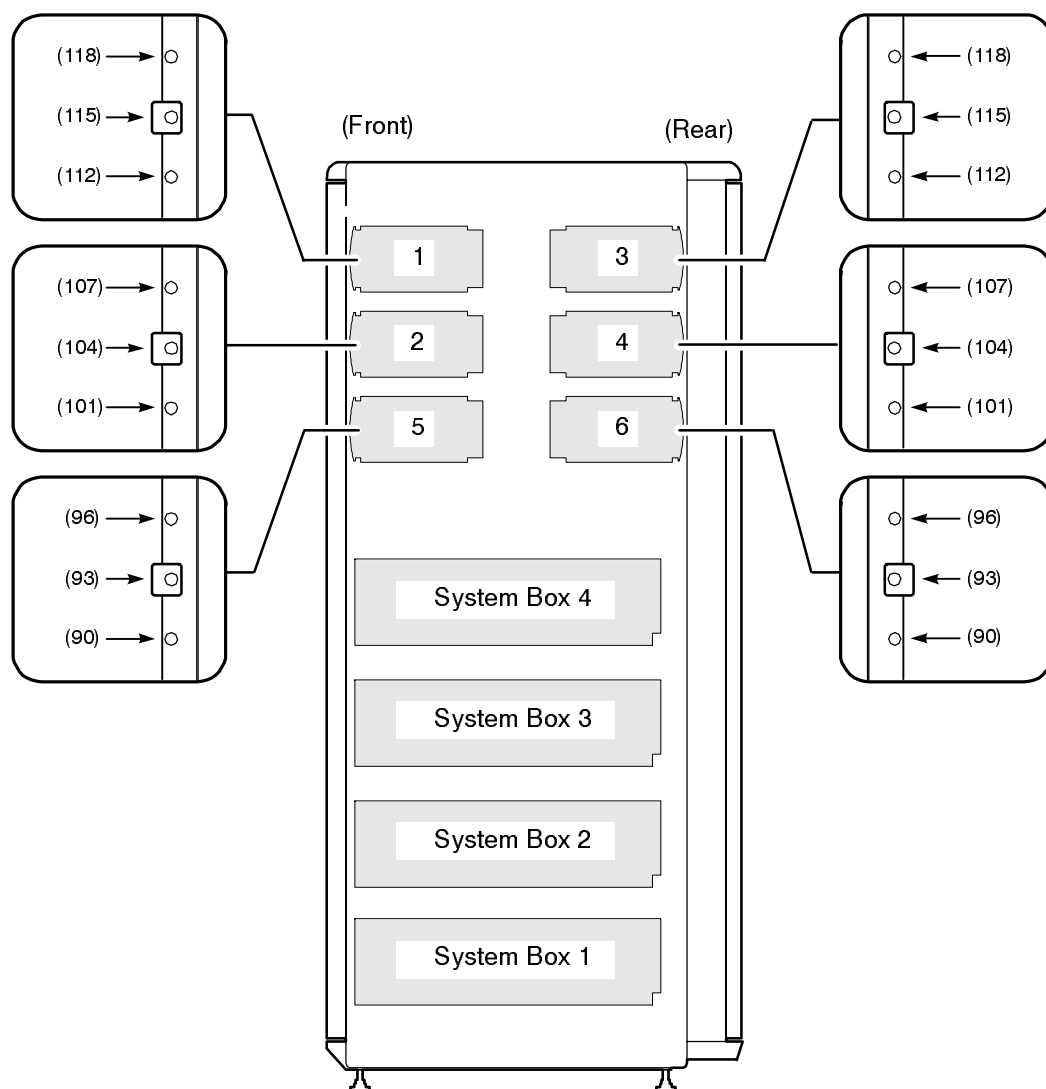

AlphaServer 800 STORAGE SHELF MOUNTING LOCATIONS

IP-H9A15-3-31


Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 5 of 13)

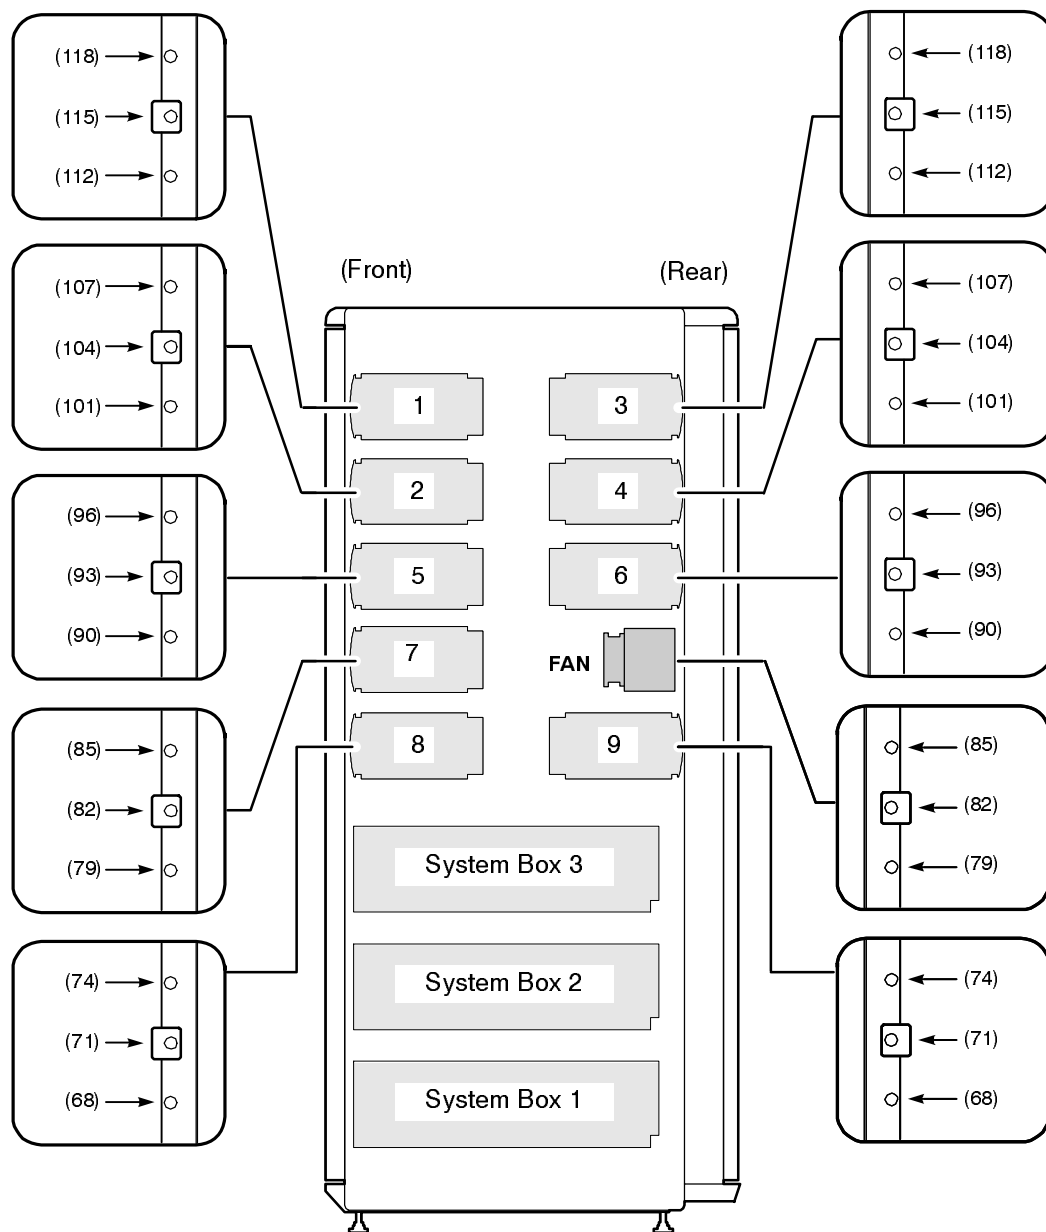

AlphaServer 800 STORAGE SHELF MOUNTING LOCATIONS

IP-H9A15-3-32


Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 6 of 13)

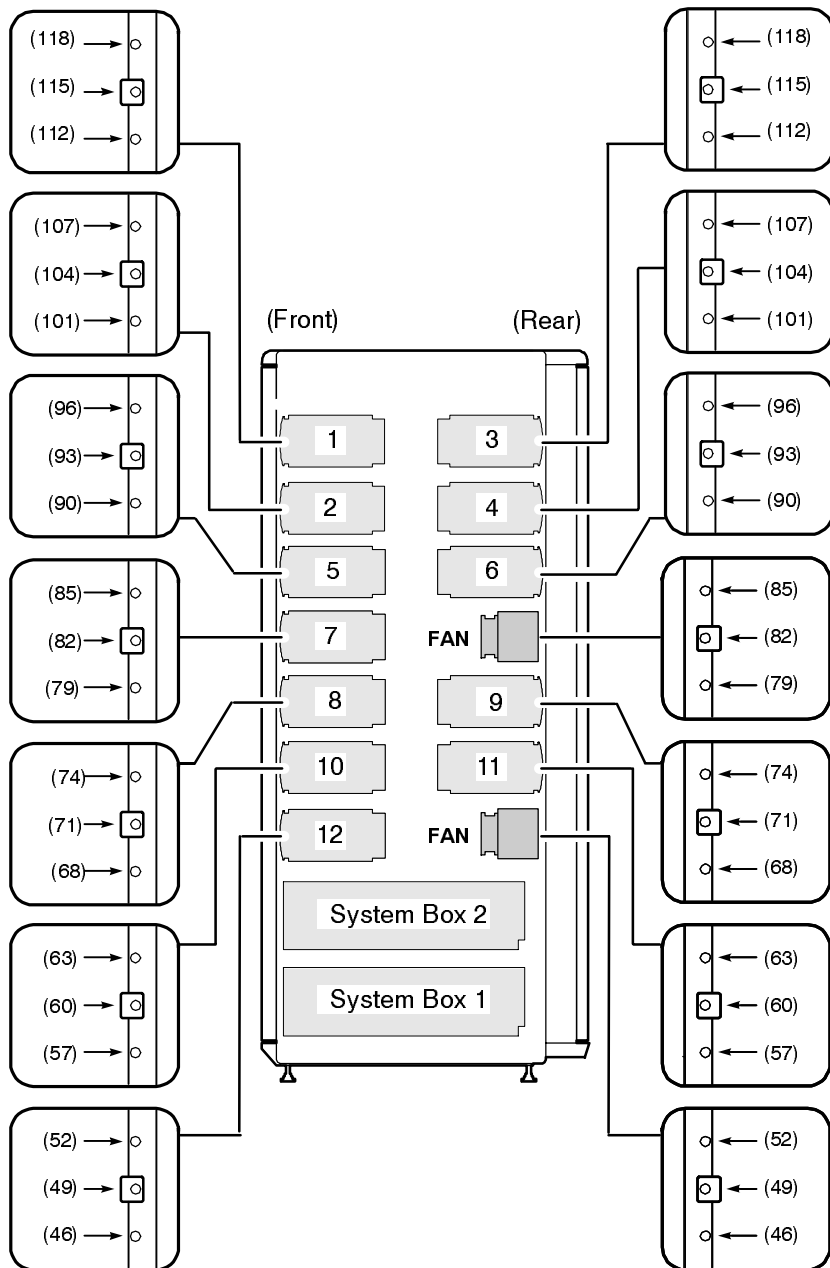

AlphaServer 800 STORAGE SHELF MOUNTING LOCATIONS


IP-H9A15-3-33

Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 7 of 13)

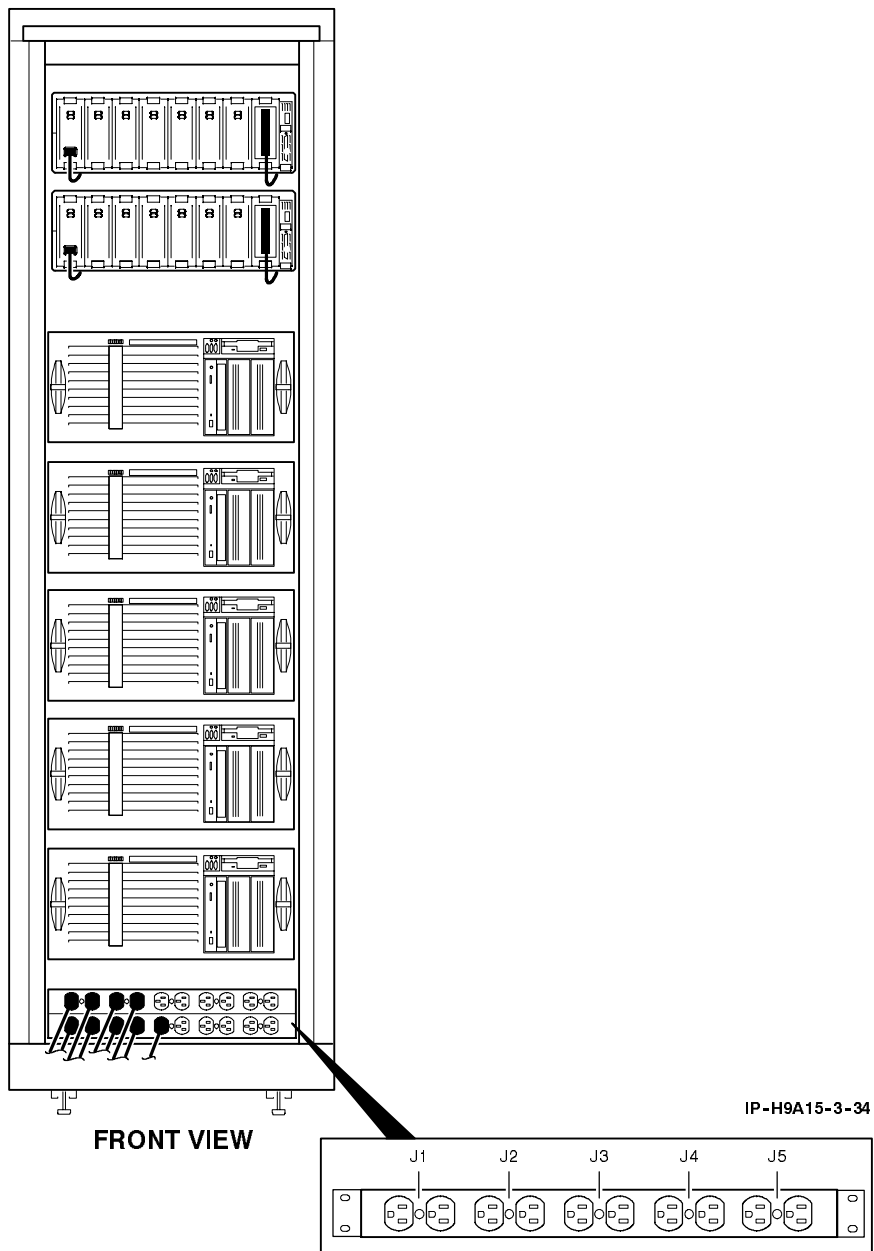

AlphaServer 800 CABLING CONFIGURATION

Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 8 of 13)

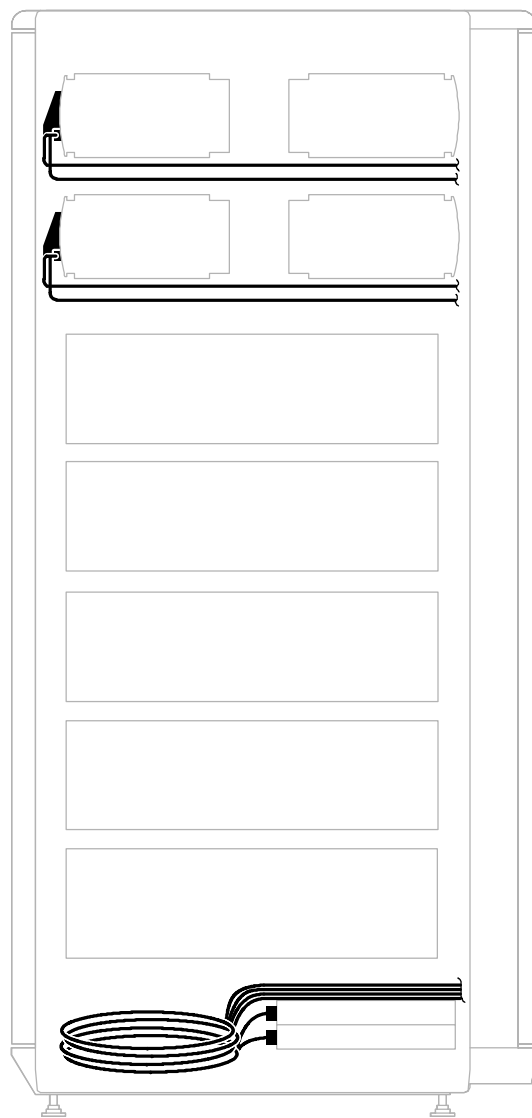


SIDE VIEW

IP-H9A15-3-35

AlphaServer 800 CABLING CONFIGURATION

Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 9 of 13)

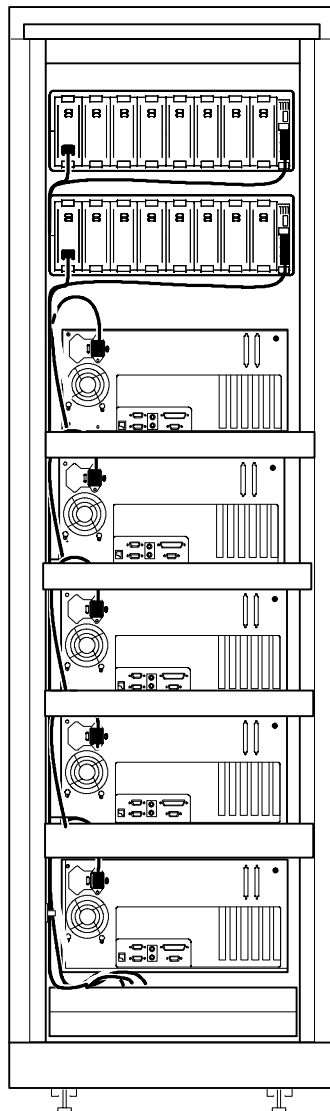


REAR VIEW

IP-H9A15-3-36


AlphaServer 800 CABLING CONFIGURATION

Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 10 of 13)

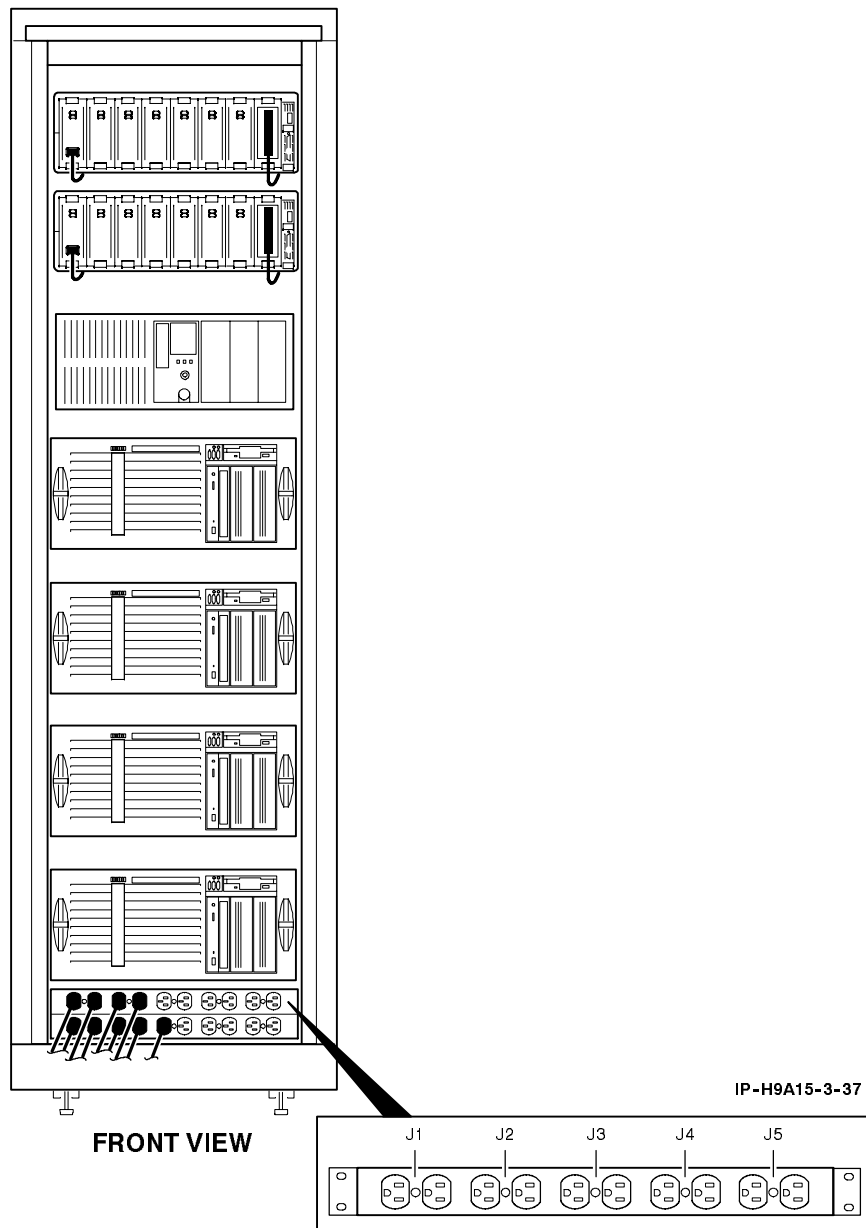

AlphaServer 800 w/MEMORY CHANNEL CABLING CONFIGURATION

Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 11 of 13)

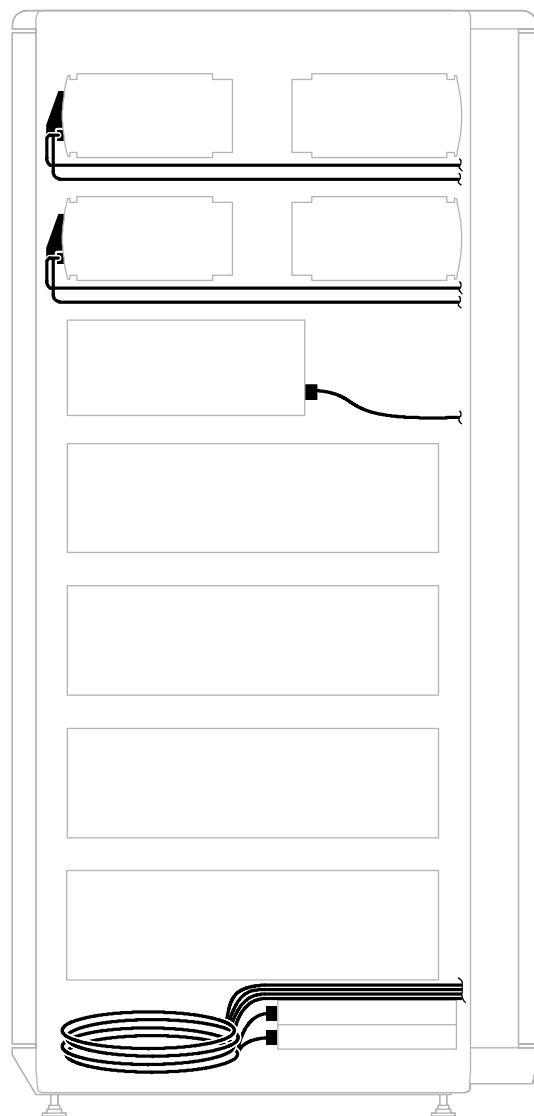


SIDE VIEW

IP-H9A15-3-38

AlphaServer 800 w/MEMORY CHANNEL CABLING CONFIGURATION

Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 12 of 13)

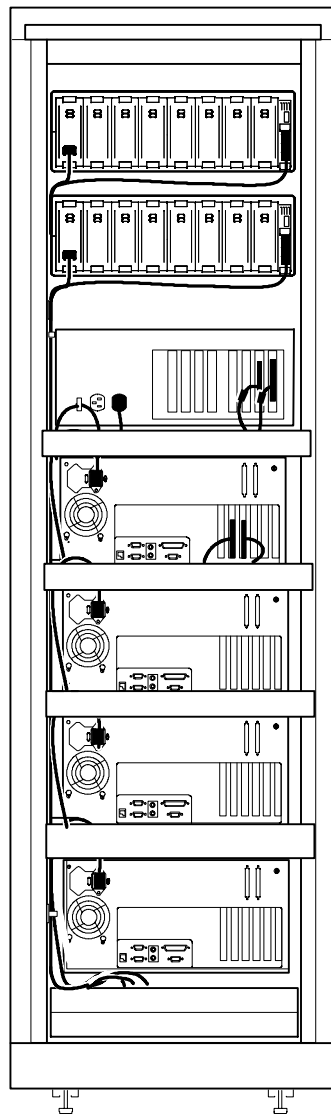

REAR VIEW

AlphaServer 800 w/MEMORY CHANNEL CABLING CONFIGURATION

IP-H9A15-3-39

Figure 6. AlphaServer 800 Mounting and Cabling (Sheet 13 of 13)

PART NUMBER/DESCRIPTION INDEX 

INDEX BY DIGITAL PART NUMBER

H9A15 M-Series Cabinet

PART NUMBER	DESCRIPTION	FIG.-ITEM NUMBER
12-13756-12	Ground Strap	1-6
12-24023-01	Cable Assembly w/Wrist Strap	2-8
17-00606-04	Power Cord 125V (Not Shown)	1-8
17-00365-01	Cable Assembly, Jumper, 10 Ft. (Not Shown)	1-9
2T-BEZEL	Blank Bezel Installation Kit	
2T-INTLK-27	H7600 Interlock Kit (H9A15) (Not Shown)	2-2
2T-R1200-AA	AlphaServer 1200 Rack Mount Kit (Gray)	5-N/A
2T-R1200-AB	AlphaServer 1200 Rack Mount Kit (Blue)	5-N/A
2T-SW8XF-ER	Flushing Fan Kits (Rear) (240V)	3-N/A
2T-SW8XF-SR	Flushing Fan Kits (Rear) (120V)	3-N/A
36-13209-02	Label, "Electrical Data", Adhesive Backed	2-3
36-13272-00	Label, Mylar Cap, Adhesive Backed	1-10
36-18384-01	Label, "Caution Stabilizer Foot"	2-5
36-22516-01	Label, "Warning High Leakage Current"	1-12
36-41348-88	Label, "Regulatory" (U.S.)	1-11
36-41348-91	Label, "Regulatory" (U.K.)	1-11
36-41348-92	Label, "Regulatory" (Singapore)	1-11
36-46657-01	Label, "Caution 2 Power Cord Multi-Language Service Information"	2-10
37-01596-01	Package Assembly (Not Shown)	2-6
70-32032-01	Fan Tray, Cabinet	1-19
70-33671-01	Cabinet Assembly, H9A15, EIA, Gray	2-1
70-33671-02	Cabinet Assembly, H9A15, EIA, Blue	2-1
70-33710-01	Bezel Assembly, Front , Gray	1-2
70-33710-02	Bezel Assembly, Front, Blue	1-2
74-49753-01	Filler Panels (Rear) thru 74-49753-14	1-Not Shown
74-53317-01	Bracket, Front Bezel, Right Hand	1-3
74-53317-02	Bracket, Front Bezel, Left Hand	1-4
90-00063-39	Screw, Truss Hd 10-32 x 1/2	1-13
90-06664-00	Washer, Flat, Stainless Steel	1-14
90-07786-01	Nut, U-Nut 10-32	1-15, 2-4
90-09228-10	Screw, Sems Pan Hd 10-32 x 3/8	2-9
90-10156-00	Screw, Sems Hex Hd 10-32 x 1/2	1-16
90-11195-01	Fastener, Clip On	1-18
90-40148-02	Nut, Kep M5	1-17
CCMRA-AA	Memory Channel HUB Rack Mount Kit	3-N/A
CK-BA30A-BA	AlphaServer 4000/4100 Rack Mount Kit (U.S. and Asia Pacific)	4-N/A
CK-BA30A-BB	AlphaServer 4000/4100 Rack Mount Kit (Europe)	4-N/A
EK-H9A15-IN	Documentation, H9A15 Cabinet Installation (Not Shown)	2-7
EK-MARQE-CN	Documentation, H9A10/H9A15 Cabinet Service Access Advisory (Not Shown)	1-7
H7600-AA	Power Controller Strip (100-120V)	1-5
H7600-DB	Power Distribution Unit (200-240V)	1-5

INDEX BY DIGITAL PART NUMBER

H9A15 M-Series Cabinet

PART NUMBER	DESCRIPTION	FIG.-ITEM NUMBER
H9A15-MA	CABINET ASSEMBLY, 2.0M, GRAY (120V)	1-A
H9A15-MB	CABINET ASSEMBLY, 2.0M, GRAY (240V)	1-B
H9A15-MC	CABINET ASSEMBLY, 2.0M, BLUE (120V)	1-C
H9A15-MD	CABINET ASSEMBLY, 2.0M, BLUE (240V)	1-D
H9A15-NA	CABINET, REAR DOOR, GRAY	1-1, 2-A
H9A15-TA	CABINET, REAR DOOR, BLUE	1-1, 2-B
H9C10-MC	Ballast Kit	3-N/A
H9C15-JD	Joiner Kit	1-Not Shown
H9C15-NF	Front Door Kit (Gray)	1-Not Shown
H9C15-NT	Front Trim Kit (Gray)	1-Not Shown
H9C15-TF	Front Door Kit (Blue)	1-Not Shown
H9C15-TT	Front Trim Kit (Blue)	1-Not Shown
PB8HA-BA	AlphaServer 800 Rack Mount Kit	6-N/A

INDEX BY DIGITAL PART DESCRIPTION

H9A15 M-Series Cabinet

DESCRIPTION	PART NUMBER	FIG.-ITEM NUMBER
AlphaServer 800 Rack Mount Kit	PB8HA-BA	6-N/A
AlphaServer 1200 Rack Mount Kit (Blue)	2T-R1200-AB	5-N/A
AlphaServer 1200 Rack Mount Kit (Gray)	2T-R1200-AA	5-N/A
AlphaServer 4000/4100 Rack Mount Kit (Europe)	CK-BA30A-BB	4-N/A
AlphaServer 4000/4100 Rack Mount Kit (U.S. and Asia Pacific)	CK-BA30A-BA	4-N/A
Ballast Kit	H9C10-MC	3-N/A
Bezel Assembly, Front, Blue	70-33710-02	1-2
Bezel Assembly, Front, Gray	70-33710-01	1-2
Blank Bezel Installation Kit	2T-BEZEL	1-Not Shown
Bracket, Front Bezel, Left Hand	74-53317-02	1-4
Bracket, Front Bezel, Right Hand	74-53317-01	1-3
CABINET ASSEMBLY, 2.0M, BLUE (120V)	H9A15-MC	1-C
CABINET ASSEMBLY, 2.0M, BLUE (240V)	H9A15-MD	1-D
CABINET ASSEMBLY, 2.0M, GRAY (120V)	H9A15-MA	1-A
CABINET ASSEMBLY, 2.0M, GRAY (240V)	H9A15-MB	1-B
Cabinet Assembly, H9A15, EIA, Blue	70-33671-02	2-1
Cabinet Assembly, H9A15, EIA, Gray	70-33671-01	2-1
CABINET, REAR DOOR, BLUE	H9A15-TA	1-1, 2-B
CABINET, REAR DOOR, GRAY	H9A15-NA	1-1, 2-A
Cable Assembly, Jumper, 10 Ft. (Not Shown)	17-00365-01	1-9
Cable Assembly w/Wrist Strap	12-24023-01	2-8
Documentation, H9A10/H9A15 Cabinet Service Access Advisory (Not Shown)	EK-MARQE-CN	1-7
Documentation, H9A15 Cabinet Installation (Not Shown)	EK-H9A15-IN	2-7
Fan Tray, Cabinet	70-32032-01	1-19
Fastener, Clip On	90-11195-01	1-18
Filler Panels (Rear) 74-49753-01 thru	74-49753-14	1-Not Shown
Flushing Fan Kits (Rear) (120V)	2T-SW8XF-SR	3-N/A
Flushing Fan Kits (Rear) (240V)	2T-SW8XF-ER	3-N/A
Front Door Kit (Blue)	H9C15-TF	1-Not Shown
Front Door Kit (Gray)	H9C15-NF	1-Not Shown
Front Trim Kit (Blue)	H9C15-TT	1-Not Shown
Front Trim Kit (Gray)	H9C15-NT	1-Not Shown
Ground Strap	12-13756-12	1-6
H7600 Interlock Kit (H9A15) (Not Shown)	2T-INTLK-27	2-2
Joiner Kit	H9C15-JD	1-Not Shown
Label, "Caution Stabilizer Foot"	36-18384-01	2-5
Label, "Caution 2 Power Cord Multi-Language Service Information"	36-46657-01	2-10
Label, "Electrical Data", Adhesive Backed	36-13209-02	2-3
Label, Mylar Cap, Adhesive Backed	36-13272-00	1-10

INDEX BY DIGITAL PART DESCRIPTION

H9A15 M-Series Cabinet

DESCRIPTION	PART NUMBER	FIG.-ITEM NUMBER
Label, "Regulatory" (Singapore)	36-41348-92	1-11
Label, "Regulatory" (U.K.)	36-41348-91	1-11
Label, "Regulatory" (U.S.)	36-41348-88	1-11
Label, "Warning High Leakage Current"	36-22516-01	1-12
Memory Channel HUB Rack Mount Kit	CCMRA-AA	3-N/A
Nut, Kep M5	90-40148-02	1-17
Nut, U-Nut 10-32	90-07786-01	1-15, 2-4
Package Assembly (Not Shown)	37-01596-01	2-6
Power Controller Strip (100-120V)	H7600-AA	1-5
Power Cord 125V (Not Shown)	17-00606-04	1-8
Power Distribution Unit (200-240V)	H7600-DB	1-5
Screw, Sems Hex Hd 10-32 x 1/2	90-10156-00	1-16
Screw, Sems Pan Hd 10-32 x 3/8	90-09228-10	2-9
Screw, Truss Hd 10-32 x 1/2	90-00063-39	1-13
Washer, Flat, Stainless Steel	90-06664-00	1-14