

DIGITAL H9A10 (600 mm) Cabinet

Installation/Owner's Guide

Part Number: EK-H9A10-IN. C01

June 1998

June 1998

Digital Equipment Corporation makes no representations that the use of its products in the manner described in this publication will not infringe on existing or future patent rights, nor do the descriptions contained in this publication imply the granting of licenses to make, use, or sell equipment or software in accordance with the description.

Possession, use, or copying of the software described in this publication is authorized only pursuant to a valid written license from DIGITAL or an authorized sublicensor.

© Digital Equipment Corporation 1998. All rights reserved.

The following are trademarks of Digital Equipment Corporation: AlphaServer, DIGITAL, and the DIGITAL logo.

All other trademarks and registered trademarks are the property of their respective holders.

S3671

Table of Contents

Part I H9A10-Cx/Gx/Rx/Sx Cabinets

1 Introduction

1.1 Description	1-1
1.2 Specifications.....	1-4

2 Installation

2.1 Introduction	2-1
2.2 Tools Required.....	2-1
2.3 Site Planning.....	2-1
2.4 Unpacking.....	2-3
2.5 Installation Procedures	2-9
2.5.1 Removing and Replacing the Lift-Off Rear Door	2-10
2.5.2 Removing and Replacing the Front Door Strike Plate.....	2-12
2.5.3 Removing and Replacing the Front Filler Panels	2-14
2.5.4 Removing and Replacing the Side Panels.....	2-16
2.5.5 Adjusting the Stabilizer Bar	2-18
2.5.6 Using the Interlock System.....	2-20
2.5.7 Removing and Replacing the Power Distribution Unit.....	2-23

Part II H9A10-NA/TA/WA Cabinets

3 Introduction

3.1 Description	3-1
-----------------------	-----

3.2 Specifications	3-4
--------------------------	-----

4 Installation

4.1 Introduction	4-1
4.2 Tools Required	4-1
4.3 Site Planning	4-2
4.4 Unpacking	4-3
4.5 Installation Procedures	4-9
4.5.1 Removing and Replacing the Rear Door	4-10
4.5.2 Reversing the Rear Door Swing	4-12
4.5.3 Removing and Replacing the Front Door	4-14
4.5.4 Reversing the Front Door Swing	4-16
4.5.5 Removing and Replacing the Front Filler Panels	4-20
4.5.6 Removing and Replacing the Side Panels	4-22
4.5.7 Adjusting the Stabilizer Bar	4-24
4.5.8 Using the Interlock System	4-26

Figures

Figure 1-1 H9A10-Cx/GX/Rx/Sx Cabinet	1-3
Figure 2-1 Unpacking the Cabinet	2-4
Figure 2-2 Installing the Ramps	2-6
Figure 2-3 Deskidding the Cabinet	2-8
Figure 2-4 Removing and Replacing the Lift-Off Rear Door	2-11
Figure 2-5 Removing and Replacing the Front Door Strike Plate	2-13
Figure 2-6 Removing and Replacing the Metal Front Filler Panels	2-15
Figure 2-7 Removing and Replacing the Side Panels	2-17
Figure 2-8 Pulling Out and Adjusting the Stabilizer Bar	2-19
Figure 2-9 The Interlock System	2-22
Figure 2-10 Removing a Power Distribution Unit	2-24
Figure 3-1 H9A10-NA/TA/WA Cabinet	3-3
Figure 4-1 Unpacking the Cabinet	4-4
Figure 4-2 Installing the Ramps	4-6
Figure 4-3 Deskidding the Cabinet	4-8
Figure 4-4 Removing and Replacing the Rear Door	4-11
Figure 4-5 Reversing the Rear Door Swing	4-13
Figure 4-6 Removing and Replacing the Front Door	4-15
Figure 4-7 Reversing the Front Door Swing	4-18
Figure 4-8 Completing the Front Door Reversal	4-19
Figure 4-9 Removing and Replacing the Metal Front Filler Panels	4-21

Figure 4-10 Removing and Replacing the Side Panels	4-23
Figure 4-11 Pulling Out and Adjusting the Stabilizer Bar.....	4-25
Figure 4-12 The Interlock System	4-28

Preface

Overview

This guide provides the information necessary to install the H9A10 cabinet. This guide *does not* provide information concerning systems that can be installed in the cabinet. For information concerning systems installed in the cabinet, refer to the respective documentation shipped with the system.

Intended Audience

The instructions in this guide are for DIGITAL Customer Service representatives and customer maintenance personnel who are familiar with computer hardware and operating systems. Personnel should be experienced and trained in installing computer and related equipment.

How to Use This Guide

Read the part of this guide that refers to your cabinet before installing the H9A10 cabinet. As mentioned earlier, for information concerning systems installed in the cabinet, refer to the respective documentation shipped with the system.

Before installation, review the warranty. The terms of the warranty agreement with DIGITAL may require that a qualified DIGITAL Customer Service representative install the system. Contact your local DIGITAL representative if you have any questions.

Organization

This guide is organized as follows:

Part I

Chapter 1, Introduction -- Provides an overview of the H9A10-Cx/Gx/Rx/Sx cabinet features and specifications.

Chapter 2, Installation -- Provides site preparation, unpacking, and installation information for the H9A10-Cx/Gx/Rx/Sx cabinet.

Part II

Chapter 3, Introduction -- Provides an overview of the H9A10-NA/TA/WA cabinet features and specifications.

Chapter 4, Installation -- Provides site preparation, unpacking, and installation information for the H9A10-NA/TA/WA cabinet.

Conventions

The following conventions are used in this guide:

Convention	Meaning
Note	A note calls the reader's attention to important information.
Caution	Cautions provide information to prevent damage to equipment or software. Read these carefully.
WARNING	A warning contains information essential to the safety of personnel.

Safety Symbol

The following symbol appears on the power distribution unit. Please review its definition below:



This Dangerous Voltage warning symbol indicates a risk of electric shock and indicates hazards from dangerous voltage.

Reader's Comments

DIGITAL welcomes your comments on this or any other manual. You can send your comments to DIGITAL in the following ways:

- Internet electronic mail: *reader-comments@digital.com*
- Mail:

Digital Equipment Corporation

Shared Engineering Services

PKO3-2/21J

129 Parker Street

Maynard, MA 01754-2199

For additional information, call 1-800-DIGITAL.

Part I

H9A10-Cx/Gx/Rx/Sx Cabinets

Part I of this manual provides an introduction and installation procedures for the H9A10 cabinets that are listed below. Chapter 1 provides an introduction to these H9A10 cabinets and Chapter 2 provides the installation procedures.

Cabinet	Description
H9A10-CE/CF/CJ	Standard depth, gray, front trim kit, lift-off rear door
H9A10-CG/CH/CK	Standard depth, gray, hinged front door, lift-off rear door
H9A10-CL/CM/CT	Standard depth, gray, front trim kit, hinged rear door
H9A10-CN/CP/CU	Standard depth, gray, hinged front door, hinged rear door
H9A10-GA/GB/GG	Extended depth, gray, front trim kit, hinged rear door
H9A10-GC/GD/GH	Extended depth, gray, hinged front door, hinged rear door
H9A10-RL/RM/RT	Standard depth, blue, front trim kit, hinged rear door
H9A10-RN/RP/RU	Standard depth, blue, hinged front door, hinged rear door
H9A10-SA/SB/SG	Extended depth, blue, front trim kit, hinged rear door
H9A10-SC/SD/SH	Extended depth, blue, hinged front door, hinged rear door

Introduction

1.1 Description

The H9A10-Cx/Gx/Rx/Sx cabinet (see Figure 1-1) is a low-cost, computer-equipment enclosure system that meets the Electronic Industries Association (EIA) standard 310C and the International Electrotechnical Commission (IEC) 297 standards and can accommodate a slide-mounted chassis that fits into a standard 48.26-cm (19-in.) rack.

Depending on the model ordered, the cabinet may have the following factory installed features:

- Equipment mounting rails with the EIA universal rail-hole pattern
- Front trim kit that provides a finished look to the front opening of the cabinet, or a front door kit that extends the front of the cabinet out 6.35 cm (2.5 in.) for equipment clearance and front door support. Both versions of the cabinet are shown in Figure 1-1.
- Front door lock

Other cabinet features include the following:

- Vented top --- This aids in the ventilation of the system.
- Lift-off or hinged vented rear door --- This provides additional ventilation and controlled access to the rear of the cabinet.
- Four nonlocking casters --- These facilitate the placement of the cabinet. The front two casters swivel. The rear two casters are fixed.
- Adjustable leveling feet --- These are used to stabilize and secure the cabinet at the installation site.
- Stabilizer bar --- This is used to provide cabinet stability when installing or sliding equipment out of the cabinet.

Introduction


- Equipment interlock kit --- This is a vertical rod at the rear of the cabinet that allows only one slide-mounted device to be pulled out of the cabinet at any one time.

Note

The equipment installed must have an interlock bracket to work with the interlock kit.

- Two single-phase H7600-AA (120 Vac), H7600-AB (240 Vac), or H7600-DB (240 Vac) power distribution units (PDU) --- Each H7600-AA/AB power distribution unit provides ten (10) ac power outlets and each H7600-DB power distribution unit provides twelve (12) ac power outlets.
- Two power cords --- Depending on the power distribution units shipped in the cabinet, the two power cords from the power distribution units have either NEMA 5-30P plugs for 120-Vac operation, 6-20P plugs for 240-Vac operation in the U.S.A., Canada, and Japan, or IEC309 plugs for 240-Vac operation in Europe. If the plugs are not compatible to your power-source receptacle, contact your DIGITAL Customer Service office for assistance.

Figure 1-1 H9A10-Cx/GX/Rx/Sx Cabinet

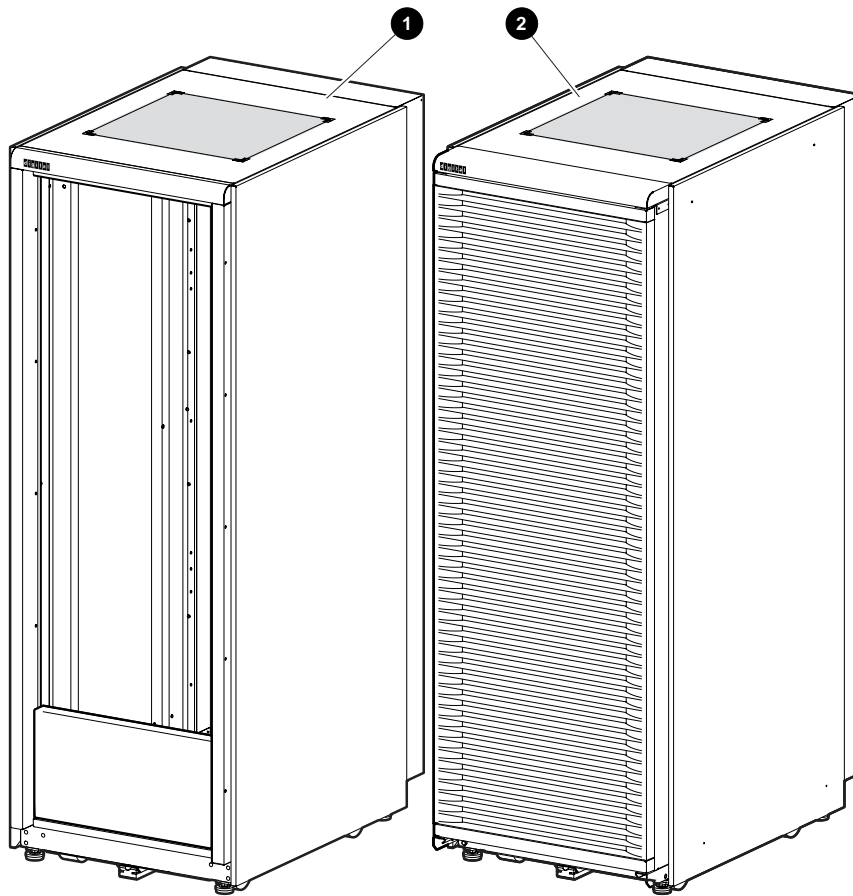

LJ-03829-T10

❶ Cabinet with front trim kit

❷ Cabinet with front door kit

Introduction

1.2 Specifications

Specifications for the H9A10-Cx/Gx/Rx/Sx cabinet are as follows:

Physical

Height, overall	170.0 cm (66.9 in.)
Width, overall	60.0 cm (23.6 in.)
Depth, overall	86.11 cm (33.9 in.) (Standard depth with front trim kit and lift-off rear door) 92.28 cm (36.33 in.) (Standard depth with hinged front door and lift-off rear door) 84.89 cm (33.42 in.) (Standard depth with front trim kit and hinged rear door) 91.24 cm (35.9 in.) (Standard depth with hinged front door and hinged rear door) 103.6 cm (40.8 in.) (Extended depth with front trim kit and hinged rear door) 109.95 cm (43.3 in.) (Extended depth with hinged front door and hinged rear door)
Maximum vertical rackmounting space	59.5 in. (34U)
Maximum vertical rackmounting space (with power distribution units installed)	56.0 in. (32U)
Horizontal rack width	Standard 48.26-cm (19-in.) EIA rail spacing
Weight	
- Cabinet with two power distribution units	126 kg (280 lb)
- Cabinet with two power distribution units plus packing material	159.3 kg (354 lb)
- Fully configured (filled) cabinet	Up to 576 kg (1,280 lb)
- Fully configured (filled) cabinet plus packing material	Up to 609.3 kg (1,354 lb)
Casters, swivel, nonlocking:	
Diameter:	7.62 cm (3 in.)
Maximum capacity:	225 kg (500 lb)
Casters, fixed, nonlocking:	
Diameter:	7.62 cm (3 in.)
Maximum capacity:	225 kg (500 lb)
Enclosure finish	Painted

Introduction

Electrical

AC input voltage for H7600-AA PDU	100 to 120 Vac, single-phase, 3-wire
AC input voltage for H7600-AB PDU	200 to 240 Vac, single-phase, 3-wire
AC input voltage for H7600-DB PDU	200 to 240 Vac, single-phase, 3-wire
AC load	24 A, maximum per H7600-AA PDU 16 A, maximum per H7600-AB/DB PDU
Input line frequency range	47 to 63 Hz
Input power at full load	2.88 kVA per H7600-AA PDU 3.84 kVA per H7600-AB/DB PDU
Input power at no load	10 W, maximum
Power cord	Two (2), 120 Vac with L5-30P (H7600-AA) plugs Two (2), 240 Vac with L6-20P (H7600-AB) plugs Two (2), 240 Vac with IEC309 (H7600-DB) plugs

Installation

2.1 Introduction

This chapter provides the following information:

- Tools Required (Section 2.2)
- Site Planning (Section 2.3)
- Unpacking (Section 2.4)
- Installation Procedures (Section 2.5)

2.2 Tools Required

The tools needed to install the H9A10-Cx/Gx/Rx/Sx cabinet are:

- Utility knife
- Phillips screwdriver
- 9/16-inch open end wrench or adjustable wrench
- 8 mm nutdriver

2.3 Site Planning

The cabinet requires a space of 60.0 cm (23.6 in.) by 87.4 cm (34.0 in.) minimum or 109.95 cm (43.3 in.) maximum. In addition, the cabinet requires a clearance of 91.44 cm (36.0 in.) at both the front and rear of the cabinet for service. This may be greater depending on the distance that a system may be slid out of the cabinet.

Installation

WARNING

High Leakage Current --- An insulated earthing conductor that is identical in size, insulation material, and thickness to the earthed and unearthed branch-circuit supply conductors (except that it is green with or without one or more yellow stripes) is to be installed as part of the branch circuit that supplies the unit or system. The earthing conductor described is to be connected to earth at the service equipment or, if supplied by a separately derived system, at the supply transformer or motor-generator set. The attachment-plug receptacles in the vicinity of the unit or system are all to be of an earthing type, and the earthing conductors serving these receptacles are to be connected to earth at the service equipment.

WARNING

Use sufficient personnel when unloading the cabinet from the pallet or moving the cabinet to a new location. The cabinet weighs 126 kg (280 lb) empty, and can weigh up to 576 kg (1,280 lb) fully configured.

For site preparation details concerning the system devices installed or the systems to be installed in the cabinet, refer to the documentation for those systems.

2.4 Unpacking

The cabinet is shipped on a wooden pallet. Proceed as follows to unpack the cabinet:

1. Position the pallet with the cabinet in an area that provides sufficient workspace for unpacking. Ensure that there is sufficient clearance in front of the pallet (marked with arrows) to roll the cabinet down the ramps.
2. Refer to Figure 2-1. Cut and remove the plastic wrapping ❶ that secures the corner posts ❷ and the carton ❸ to the cabinet. The carton contains the two ramps.
3. Remove the corner posts ❷ and the carton ❸ from the pallet ❹.

Caution

In the next step, take care not to damage the cabinet finish when removing the plastic bag.


4. Remove the plastic bag ❺ covering the cabinet.
5. Check the cabinet and the associated equipment for any external damage. Report any damage to DIGITAL Customer Service or a DIGITAL sales office and to the responsible freight carrier.

Note

Keep all packing material and receipts in case a damage claim is filed.

Installation

Figure 2-1 Unpacking the Cabinet

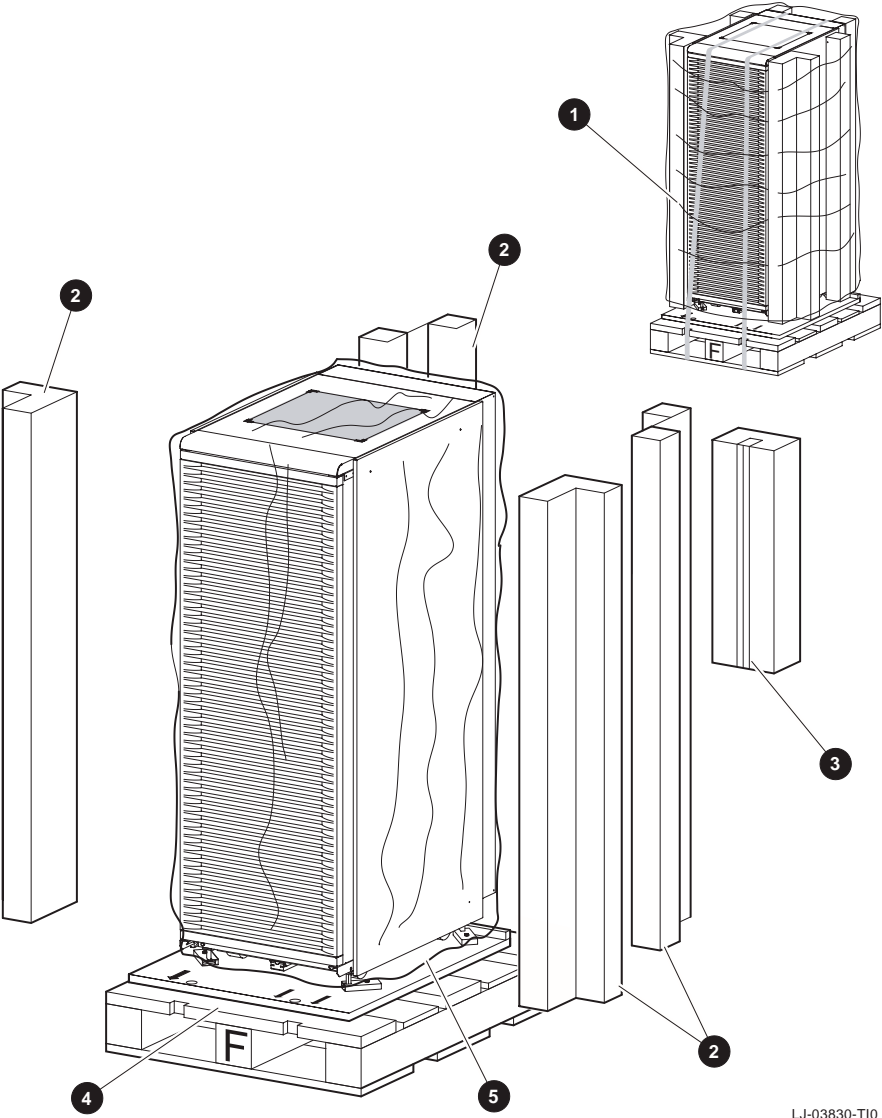

LJ-03830-T10

Installation

6. Refer to Figure 2-2. Remove the four shipping bolts ⑥ and brackets ⑦ that secure the four cabinet leveler feet ⑧ to the pallet ④.

Note

The ramps attach to the front of the pallet. Therefore, the cabinet will have to be rolled frontwards down the ramps.

7. Remove the ramps ⑨ from the shipping carton and set the ramps in the holes ⑩ provided at the front of the pallet ④. Ensure that the arrows ① on the ramps match the pallet arrows ② as shown in Figure 2-2.


Caution

In the next step, the leveler feet must be fully retracted to prevent contact with the ramp or the floor when the cabinet is unloaded from the pallet.

8. Adjust the four cabinet leveler feet ⑧ and the leveler foot on the stabilizer bar ③ to the maximum upward position.

Installation

Figure 2-2 Installing the Ramps

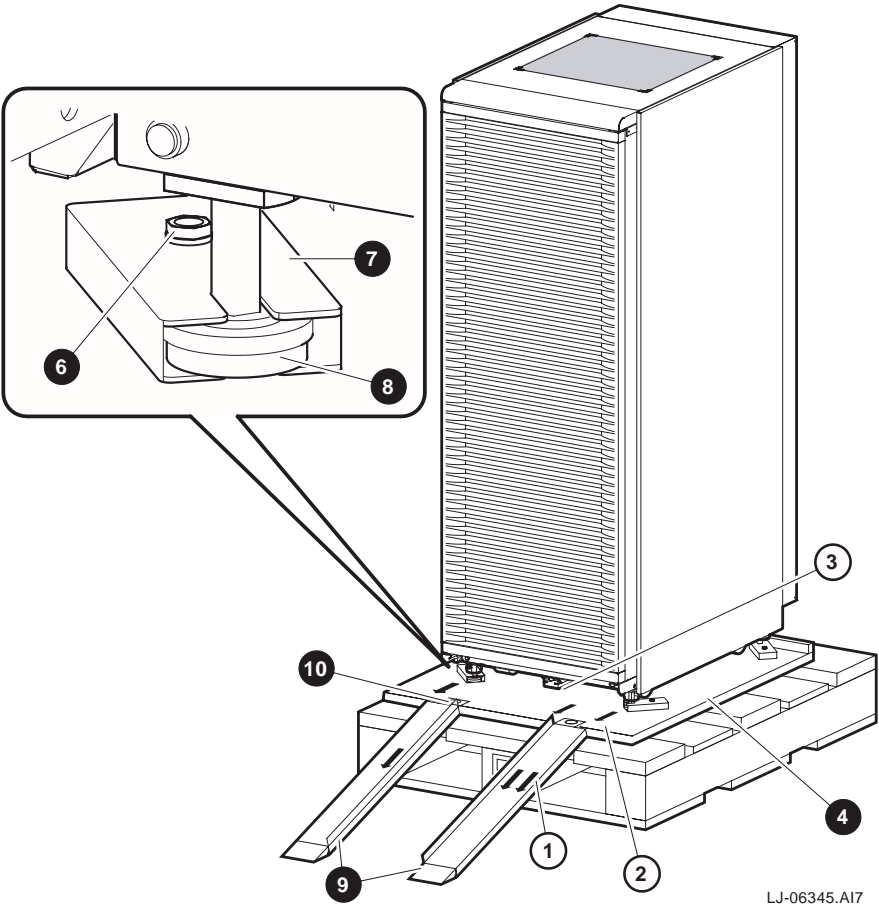

LJ-06345.AI7

WARNING

In the following step, use sufficient personnel to move the cabinet off the pallet. The cabinet weighs 126 kg (280 lb) empty, and can weigh up to 576 kg (1,280 lb) fully configured.

Equipment installed in the cabinet can make the cabinet top heavy or cause it to accelerate rapidly down the ramps if not restrained. Be prepared to guide and control the motion of the cabinet.


9. Refer to Figure 2-3 and roll the cabinet down the ramps using sufficient personnel for safety.
10. Wheel the cabinet to the desired location.
11. Adjust the leveler feet downward so that the cabinet is level and the load is removed from the casters.

Caution

Ensure that the leveler feet extend enough to carry the load of the cabinet so that the casters spin freely. If not, the stability of the cabinet may be compromised.

Installation

Figure 2-3 Deskidding the Cabinet

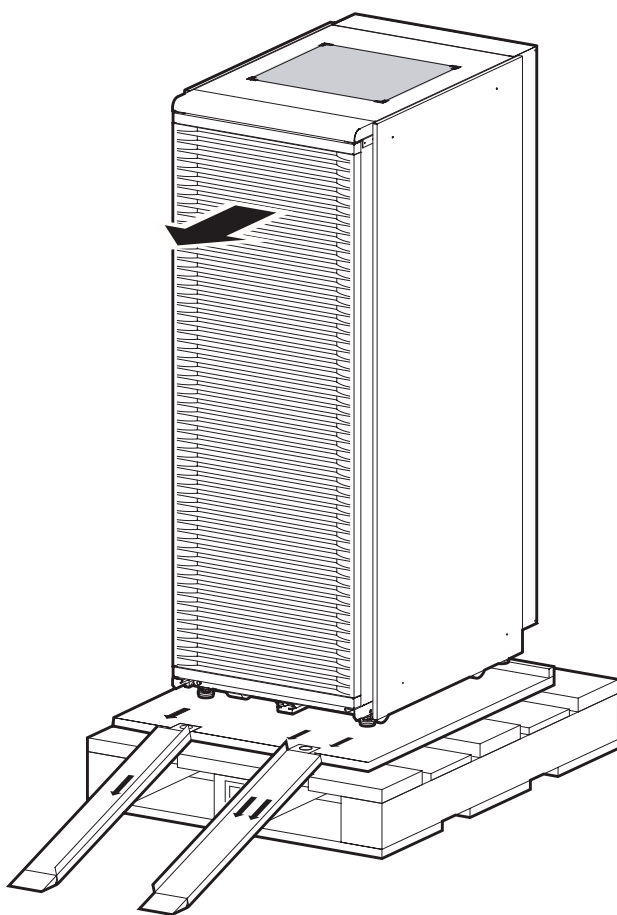

LJ-03832-T10

2.5 Installation Procedures

During the installation of the cabinet, one or more of the following procedures may be needed:

Removing and Replacing the Lift-Off Rear Door (Section 2.5.1)

Removing and Replacing the Front Door Strike Plate (Section 2.5.2)

Removing and Replacing the Front Filler Panels (Section 2.5.3)

Removing and Replacing the Side Panels (Section 2.5.4)

Adjusting the Stabilizer Bar (Section 2.5.5)

Using the Interlock System (Section 2.5.6)

Removing and Replacing the Power Distribution Unit (Section 2.5.7)

Installation

2.5.1 Removing and Replacing the Lift-Off Rear Door

The lift-off rear door provides access into the rear of the cabinet. To remove the lift-off rear door, refer to Figure 2-4 and proceed as follows:

Removal


1. Loosen the two M6 screws ❶ securing the tabs ❷ on the rear door ❸ to the cabinet ❹.
2. Grasp both sides of the rear door ❸ about midway up the door. Then lift the door off and away from the two brackets ❺ and the M6 screws ❶.
3. Place the rear door ❸ aside and out of the way.

Replacement

To replace the rear door, reverse the removal procedure, steps 1 through 3.

Installation

Figure 2-4 Removing and Replacing the Lift-Off Rear Door

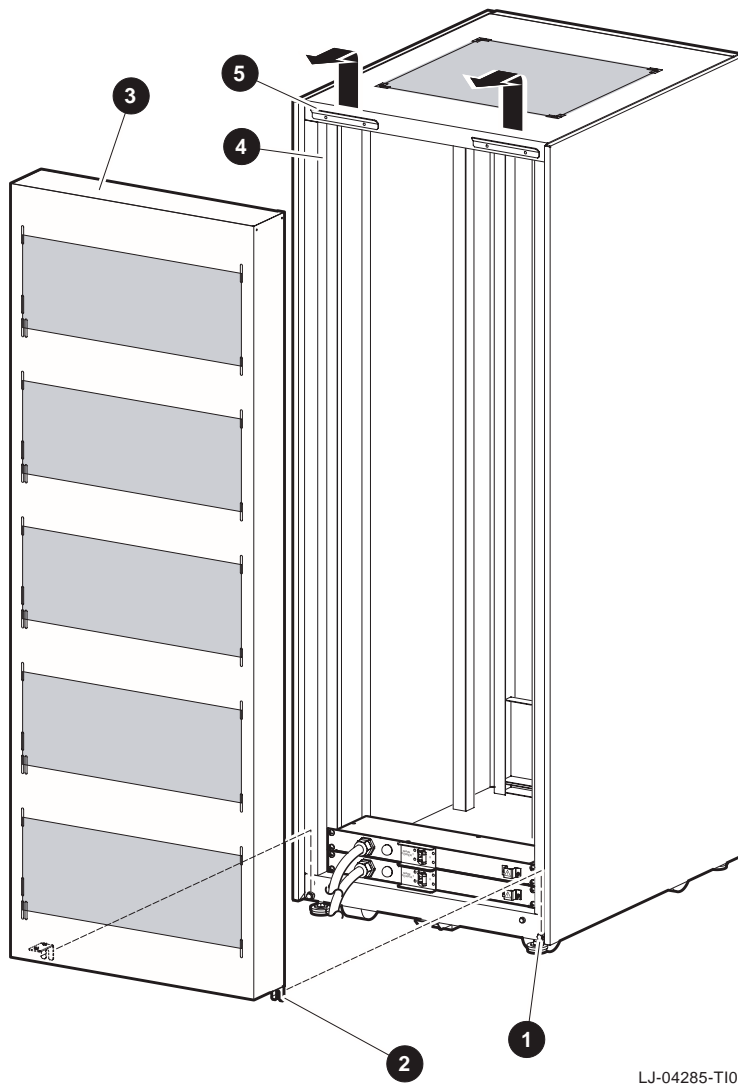

Installation

2.5.2 Removing and Replacing the Front Door Strike Plate

To remove the front door strike plate, refer to Figure 2-5 and proceed as follows:

Removal

Remove either the two 8-32 screws ❶ and two 8-32 kepnuts ❷ or the two M5 machine screws that secure the front door strike plate to the front collar.

Replacement


To replace the front door strike plate, align the two holes on the front door strike plate with the two holes on the front collar, and secure it in place with either the two 8-32 screws ❶ and two 8-32 kepnuts ❷ or two M5 machine screws.

Note

The front door strike plate prevents the left-side access door on an AlphaServer 2100 RM series system installed in the top of the H9A10 cabinet from being fully opened, and must be removed to allow access.

Installation

Figure 2-5 Removing and Replacing the Front Door Strike Plate

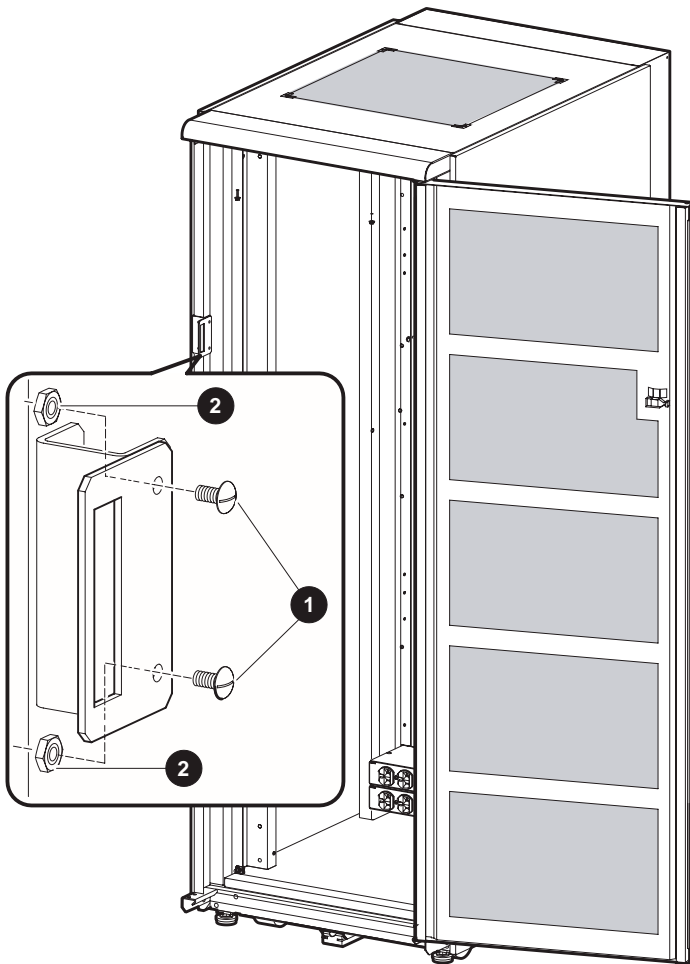

LJ-04290-T10

Installation

2.5.3 Removing and Replacing the Front Filler Panels

The H9A10 cabinet can have metal or plastic front filler panels.

To remove a metal front filler panel, refer to Figure 2-6 and proceed as follows:

Removal

Grasp the metal front filler panel ❶ on both sides and then pull straight back away from the cabinet.

Replacement

To replace a metal front filler panel ❶, align the sockets ❷ on the front filler panel (refer to the exploded view) with the appropriate ball studs ❸ on the rails ❹ and push the panel into place.

To remove a plastic front filler panel, proceed as follows:


Removal

Remove the four 10-32 screws that secure each corner of the front filler panel to the U-nuts on the front rails and pull the front filler panel away from the cabinet.

Replacement

To replace a plastic front filler panel, align the holes at each corner of the front filler panel with the U-nuts on the cabinet rails and secure the front filler panel with four 10-32 screws.

Figure 2-6 Removing and Replacing the Metal Front Filler Panels

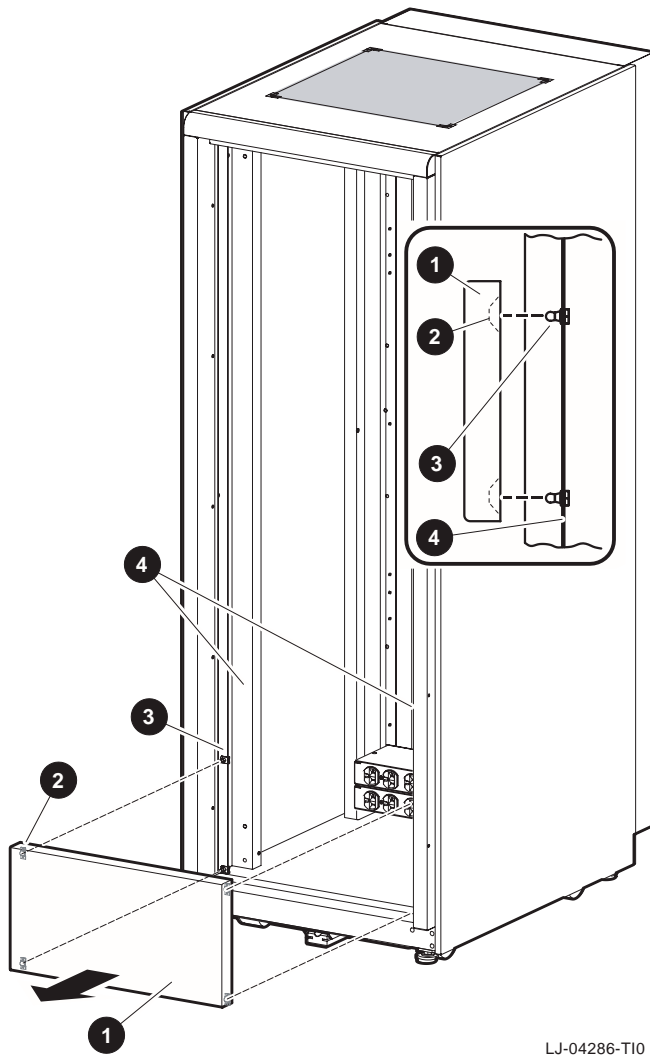

LJ-04286-T10

Installation

2.5.4 Removing and Replacing the Side Panels

Some of the H9A10 cabinets have removable side panels. To remove a side panel, refer to Figure 2-7 and proceed as follows:


Removal

1. Gain access to the inside of the cabinet by opening the hinged rear door or removing the lift-off rear door and opening the front door (if the cabinet has one).
2. Remove the two M5 hex-head screws ❶ that secure the side panel metal tabs ❷ to the mounting rail ❸ inside the cabinet (one toward the front and one toward the rear of the cabinet).
3. Grasp both sides of the side panel and lift it up until the side panel metal tabs clear the cutouts in the cabinet wall and the top lip of the side panel clears the angle bracket ❹ along the top edge of the cabinet.
4. Pull the side panel out and away from the cabinet and set it aside.

Replacement

To replace the side panel, reverse the removal procedure, steps 1 through 4. Ensure that the side panel metal tabs catch on the mounting rail at the bottom of the cutouts in the cabinet wall and the top lip of the side panel catches the angle bracket along the top edge of the cabinet.

Figure 2-7 Removing and Replacing the Side Panels

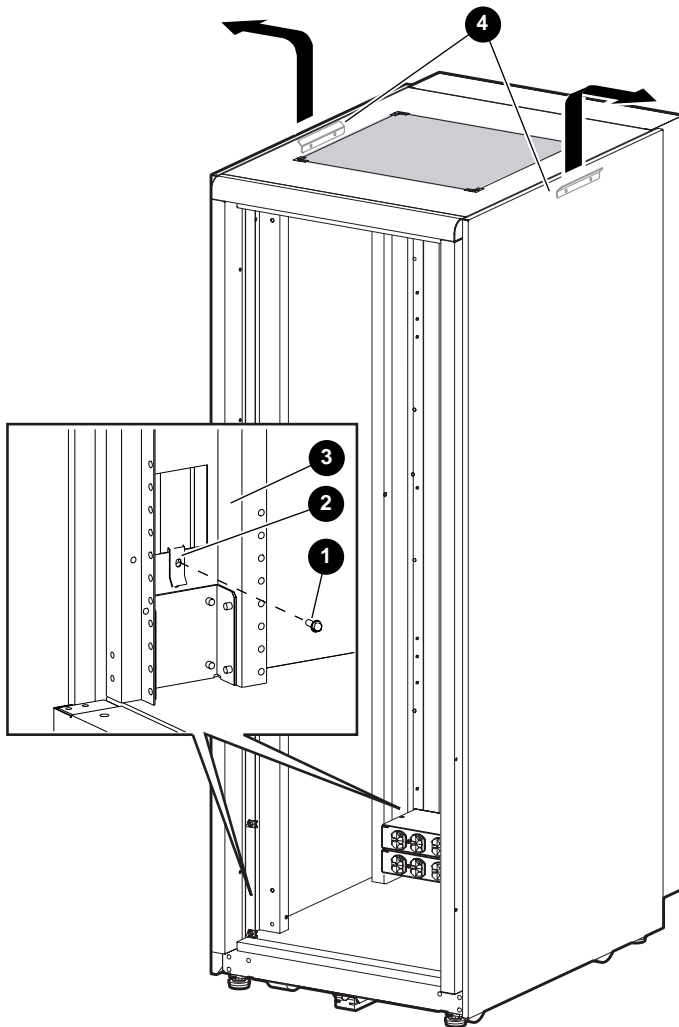

LJ-06392.AI7

Installation

2.5.5 Adjusting the Stabilizer Bar

The stabilizer bar ❶ pulls straight out from the bottom front of the cabinet ❷ as shown in Figure 2-8. When the stabilizer bar is fully extended, adjust the foot ❸ at the end of the stabilizer bar until it touches the floor.


WARNING

The stabilizer bar must be fully extended before any system is extended out of the cabinet on its slides.

The H9A10 cabinet can hold several system configurations. The amount of force required to tip or make the cabinet unstable differs with each configuration.

Installation

Figure 2-8 Pulling Out and Adjusting the Stabilizer Bar

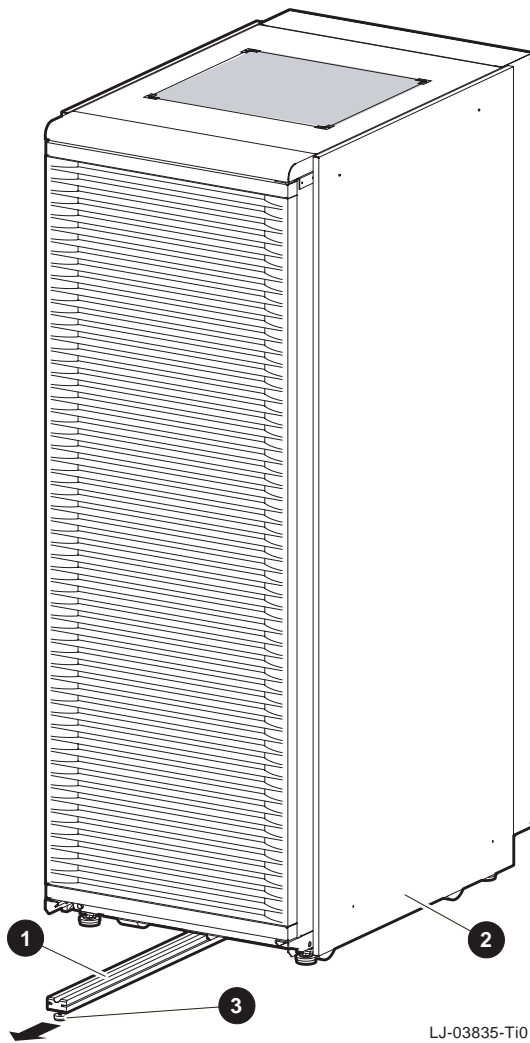

Installation

2.5.6 Using the Interlock System

The interlock system (refer to Figure 2-9) helps prevent cabinet instability by allowing only one system at any one time to be pulled out of the cabinet.

The interlock system consists of a vertical rod ❶ on which are mounted actuator latches ❷ for each product installed in the cabinet. These actuator latches engage the interlock actuator bracket ❸ on the rear of rackmount systems. When a rackmount system is pulled out of the cabinet, the actuator latches ❷ rotate to prevent any other rackmounted system that has an interlock actuator bracket from being pulled out of the cabinet. The expanded view (A) shows the position of the actuator latches when all systems are pushed into the cabinet. The expanded view (B) shows the position of all actuator latches after one system has been pulled out.

If additional products are installed into the cabinet, actuator latches for those products should be installed. To install actuator latches, proceed as follows:

1. Remove the screws securing the bottom mounting bracket to the cabinet ❹.
2. Slide the mounting bracket off the bottom of the vertical rod ❶.
3. Slide the stabilizer bracket ❺ for the new product onto the bottom of the vertical rod.
4. Slide the actuator latch ❷ for the new product onto the bottom of the vertical rod.
5. Replace the bottom mounting bracket ❹ and install the screws removed in step 1 but *do not* tighten them.
6. Position the stabilizer bracket so that the bottom hole in the stabilizer bracket ❺ aligns with the EIA rail hole adjacent to the bottom of the installed product. This may require the loosening and sliding of other latches and stabilizer brackets to accommodate the new configuration.
7. Place the nut plate behind the EIA rail and install and tighten the screws provided to secure the stabilizer bracket.
8. Position the new actuator latch ❷ to properly engage the product, and tighten the set screws to secure the latch.
9. Now tighten the screws to secure the bottom mounting bracket ❹.

Installation


Note

Some systems may not be compatible because the interlock actuator bracket may not engage properly. In these cases, do not install the interlock actuator bracket on those systems.

WARNING

If a system is installed without an interlock actuator bracket or the vertical rod in the cabinet does not engage properly with the system interlock actuator bracket, it is the customer's responsibility to provide a stable cabinet.

Figure 2-9 The Interlock System

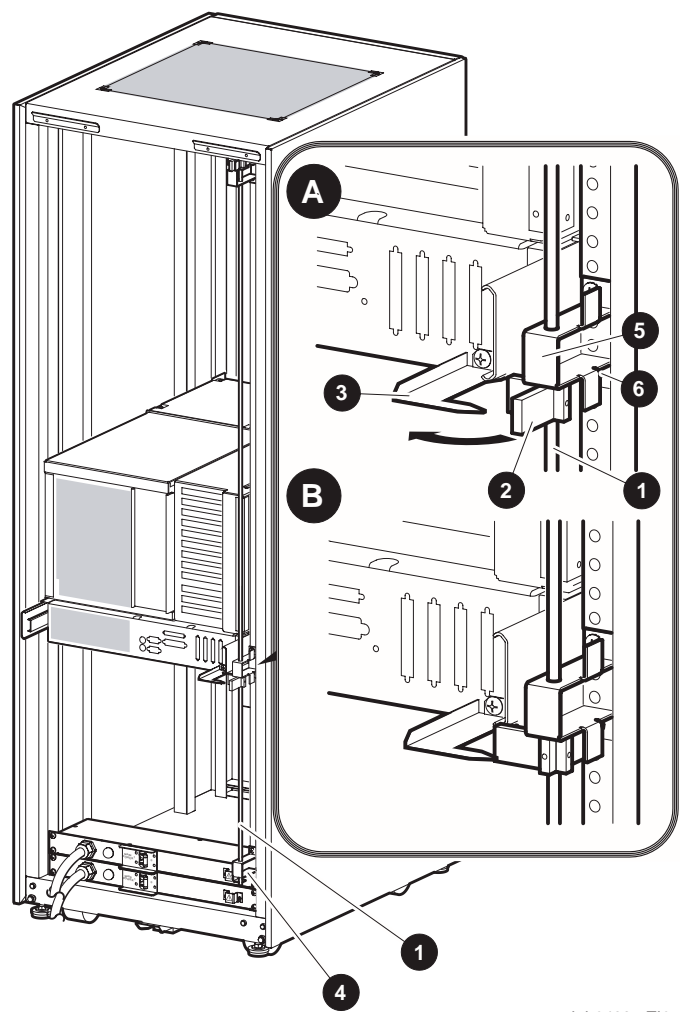

LJ-04287-T10

2.5.7 Removing and Replacing the Power Distribution Unit

To remove a power distribution unit, refer to Figure 2-10 and proceed as follows:

Removal


1. If the cabinet contains an operating system, turn off the system as described in the system documentation.
2. Disconnect the power distribution units from the ac power source.
3. Remove or open the rear door (refer to Figure 2-4).
4. Set the Main Power switch ❶ on each power distribution unit to the off position (right).
5. If required, remove the bottom front filler panel (refer to Figure 2-6). This provides access to the ac outlets on the power distribution units.
6. Note and record the power cord connections to the outlets ❷ at the rear of the power distribution unit that is being removed. Then unplug the power cords from that power distribution unit.
7. At the rear of the cabinet, remove the four (4) 10-32 truss-head screws ❸ that secure the power distribution unit ❹ to the rear rails (via the four (4) 10-32 clip nuts ❺).
8. Pull out the power distribution unit ❹ and remove it from the cabinet.

Replacement

To replace a power distribution unit, reverse the removal procedure, steps 2 through 8, then follow the power-on procedure in the system documentation.

Installation

Figure 2-10 Removing a Power Distribution Unit

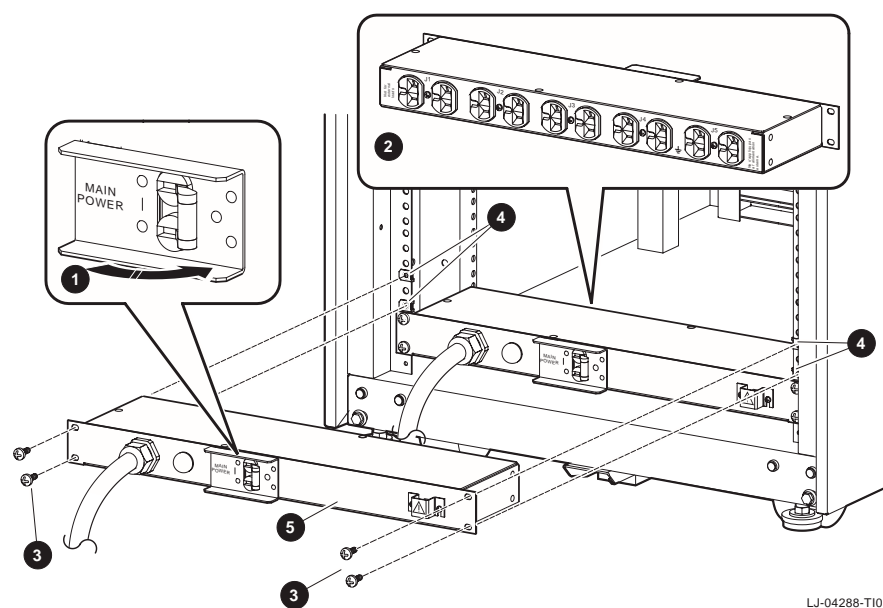

Part II

H9A10-NA/TA/WA Cabinets

Part II of this manual provides an introduction and installation procedures for the H9A10 cabinet models that are listed below. Chapter 3 provides an introduction to these H9A10 cabinets and Chapter 4 provides the installation procedures.

Cabinet	Description
H9A10-NA	Gray standard depth base cabinet
H9A10-TA	Blue standard depth base cabinet
H9A10-WA	White standard depth base cabinet

One of the front dress treatment kits listed below is required for the base cabinet.

Front Dress Kit	Description
H9C10-NF	Gray front door kit
H9C10-NT	Gray front trim kit
H9C10-TF	Blue front door kit
H9C10-TT	Blue front trim kit
H9C10-WF	White front door kit
H9C10-WT	White front trim kit

Introduction

3.1 Description

The H9A10-NA/TA/WA cabinet (see Figure 3-1) is a low-cost, computer-equipment enclosure system that meets the Electronic Industries Association (EIA) standard 310C and the International Electrotechnical Commission (IEC) 297 standards and can accommodate fixed or slide-mounted chassis that fit into a standard 48.26-cm (19-in.) rack.

Depending on the options ordered, the cabinet may have the following factory installed features:

- Equipment mounting rails with the EIA universal rail-hole pattern
- Front trim kit that provides a finished look to the front opening of the cabinet, or a front door kit or front door with extender kit that extends the front of the cabinet out 6.3 cm (2.5 in.) for equipment clearance and front door support. Both versions of the cabinet are shown in Figure 3-1.
- Front and rear doors with key locks

Other cabinet features include the following:

- Vented top --- This aids in the ventilation of the system.
- Hinged vented rear door --- This provides additional ventilation and controlled access to the rear of the cabinet.
- Four nonlocking casters --- These facilitate the placement of the cabinet. The front two casters swivel. The rear two casters are fixed.
- Adjustable leveling feet --- These are used to stabilize and secure the cabinet at the installation site.
- Stabilizer bar --- This is used to provide cabinet stability when installing or sliding equipment out of the cabinet.


Introduction

- Equipment interlock kit --- This is a vertical rod at the rear of the cabinet that allows only one slide-mounted device to be pulled out of the cabinet at any one time.

Note

The equipment installed must have an interlock bracket to work with the interlock kit.

Figure 3-1 H9A10-NA/TA/WA Cabinet

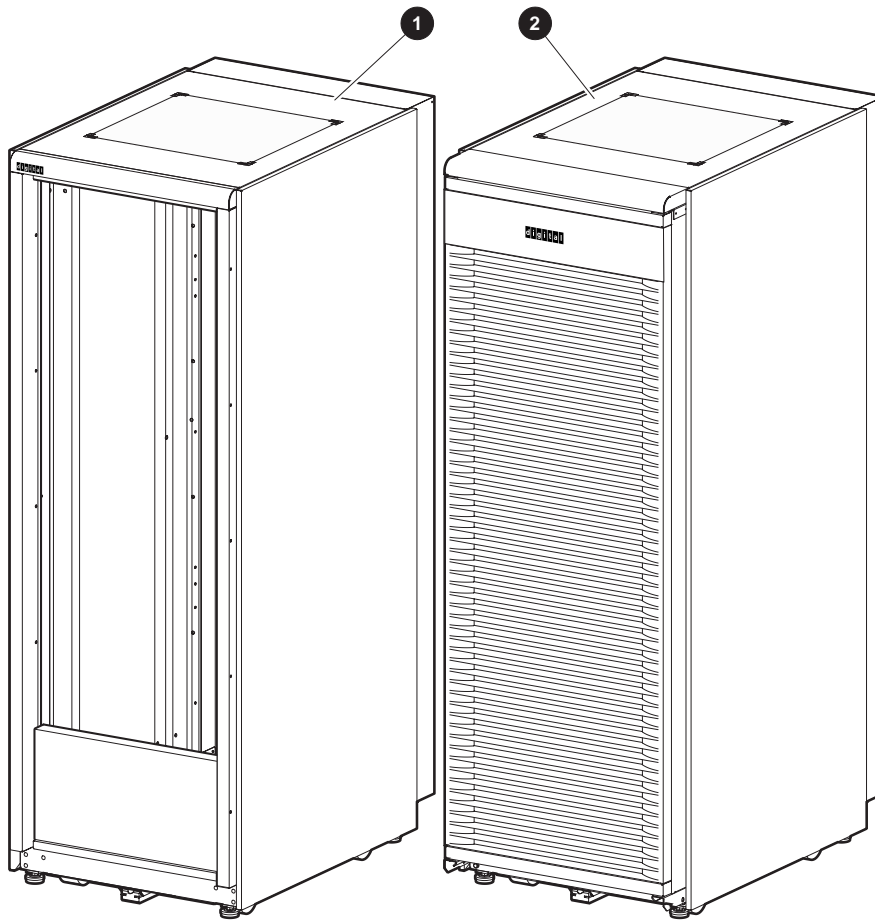

LJ-06340.A17

- ❶ Cabinet with optional front trim kit ❷ Cabinet with optional front door kit and optional front and rear extender kits

Introduction

3.2 Specifications

Specifications for the H9A10-NA/TA/WA cabinet are as follows:

Physical

Height, overall	170.0 cm (66.9 in.)
Width, overall	60.0 cm (23.6 in.)
Depth, overall	91.6 cm (36.1 in.)
Maximum vertical rackmounting space	59.5 in. (34U)
Maximum vertical rackmounting space (with power distribution units installed)	56.0 in. (32U)
Horizontal rack width	Standard 48.26-cm (19-in.)
Weight	
- Fully configured (filled) cabinet	Up to 576 kg (1,280 lb)
- Fully configured (filled) cabinet plus packing material	Up to 609.3 kg (1,354 lb)
Casters, swivel, nonlocking:	
Diameter:	7.62 cm (3 in.)
Maximum capacity:	318 kg (700 lb)
Casters, fixed, nonlocking:	
Diameter:	7.62 cm (3 in.)
Maximum capacity:	318 kg (700 lb)
Enclosure finish	Painted

4.1 Introduction

This chapter provides the following information:

- Tools Required (Section 4.2)
- Site Planning (Section 4.3)
- Unpacking (Section 4.4)
- Installation Procedures (Section 4.5)

4.2 Tools Required

The tools needed to install the H9A10-NA/TA/WA cabinet are:

- Utility knife
- Phillips screwdriver
- 9/16-inch open end wrench or adjustable wrench
- 8 mm nutdriver

Installation

4.3 Site Planning

The cabinet requires a space of 60.0 cm (23.6 in.) by 91.6 cm (36.1 in.). In addition, the cabinet requires a clearance of 91.44 cm (36.0 in.) at both the front and rear of the cabinet for service. This may be greater depending on the distance that a system may be slid out of the cabinet.

WARNING

Use sufficient personnel when unloading the cabinet from the pallet or moving the cabinet to a new location. The cabinet weighs 126 kg (280 lb) empty, and can weigh up to 576 kg (1,280 lb) fully configured.

For site preparation details concerning the system devices installed or the systems to be installed in the cabinet, refer to the documentation for those systems.

4.4 Unpacking

The cabinet is shipped on a wooden pallet. Proceed as follows to unpack the cabinet:

1. Position the pallet with the cabinet in an area that provides sufficient workspace for unpacking. Ensure that there is sufficient clearance in front of the pallet (marked with arrows) to roll the cabinet down the ramps.
2. Refer to Figure 4-1. Cut and remove the plastic wrapping ❶ that secures the corner posts ❷ and the carton ❸ to the cabinet. The carton contains the two ramps.
3. Remove the corner posts ❷ and the carton ❸ from the pallet ❹.

Caution

In the next step, take care not to damage the cabinet finish when removing the plastic bag.


4. Remove the plastic bag ❺ covering the cabinet.
5. Check the cabinet and the associated equipment for any external damage. Report any damage to DIGITAL Customer Service or a DIGITAL sales office and to the responsible freight carrier.

Note

Keep all packing material and receipts in case a damage claim is filed.

Installation

Figure 4-1 Unpacking the Cabinet

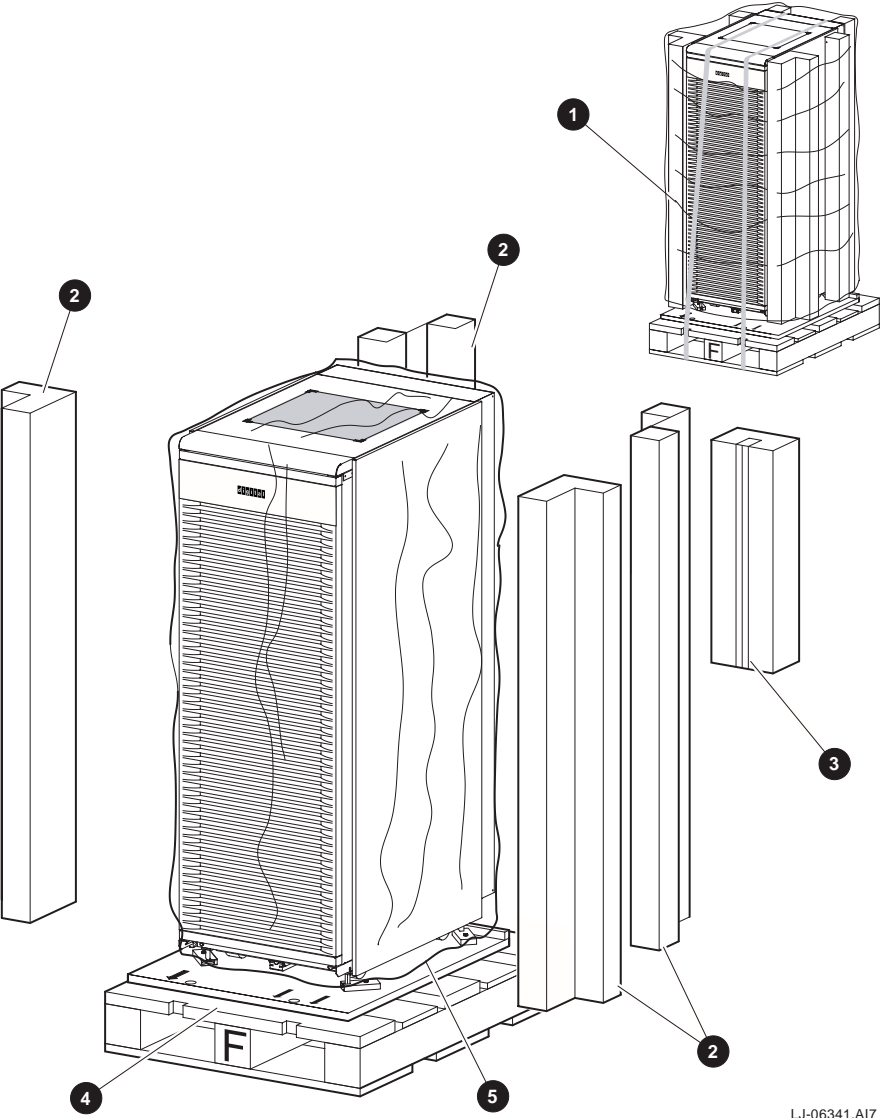

LJ-06341.A17

Installation

6. Refer to Figure 4-2. Remove the four shipping bolts ⑥ and brackets ⑦ that secure the four cabinet leveler feet ⑧ to the pallet ④.

Note

The ramps attach to the front of the pallet. Therefore, the cabinet will have to be rolled frontwards down the ramps.

7. Remove the ramps ⑨ from the shipping carton and set the ramps in the holes ⑩ provided at the front of the pallet ④. Ensure that the arrows ① on the ramps match the pallet arrows ② as shown in Figure 4-2.


Caution

In the next step, the leveler feet must be fully retracted to prevent contact with the ramp or the floor when the cabinet is unloaded from the pallet.

8. Adjust the four cabinet leveler feet ⑧ and the leveler foot on the stabilizer bar ③ to the maximum upward position.

Installation

Figure 4-2 Installing the Ramps

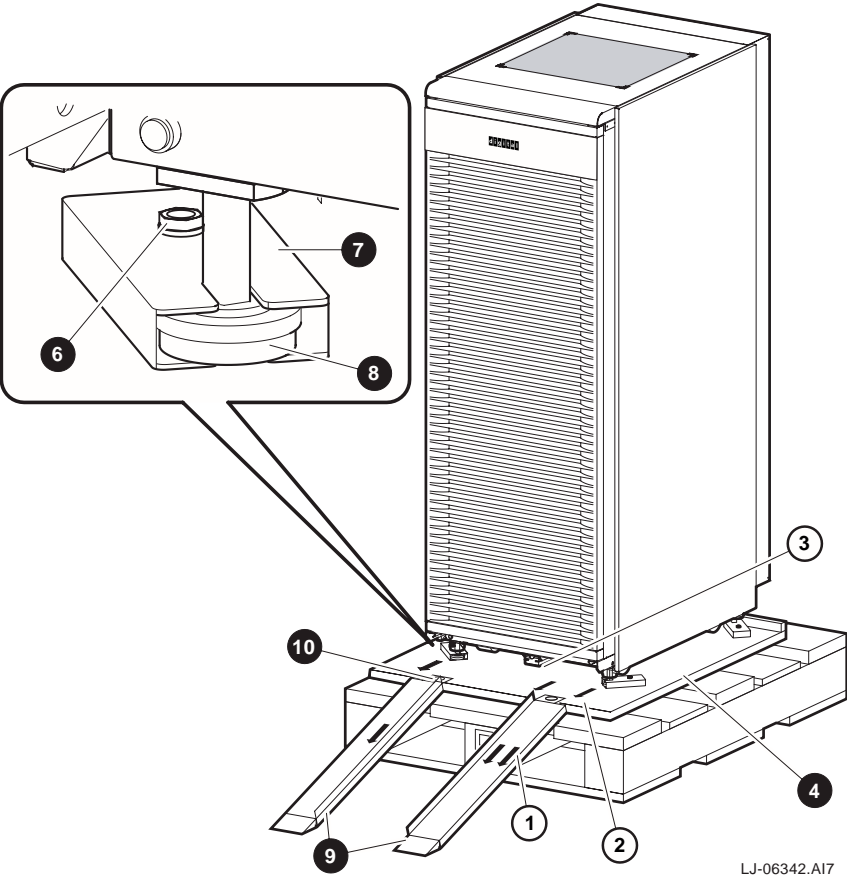

WARNING

In the following step, use sufficient personnel to move the cabinet off the pallet. The cabinet weighs 126 kg (280 lb) empty, and can weigh up to 576 kg (1,280 lb) fully configured.

Equipment installed in the cabinet can make the cabinet top heavy or cause it to accelerate rapidly down the ramps if not restrained. Be prepared to guide and control the motion of the cabinet.


9. Refer to Figure 4-3 and roll the cabinet down the ramps using sufficient personnel for safety.
10. Wheel the cabinet to the desired location.
11. Adjust the leveler feet downward so that the cabinet is level and the load is removed from the casters.

Caution

Ensure that the leveler feet extend enough to carry the load of the cabinet so that the casters spin freely. If not, the stability of the cabinet may be compromised.

Installation

Figure 4-3 Deskidding the Cabinet

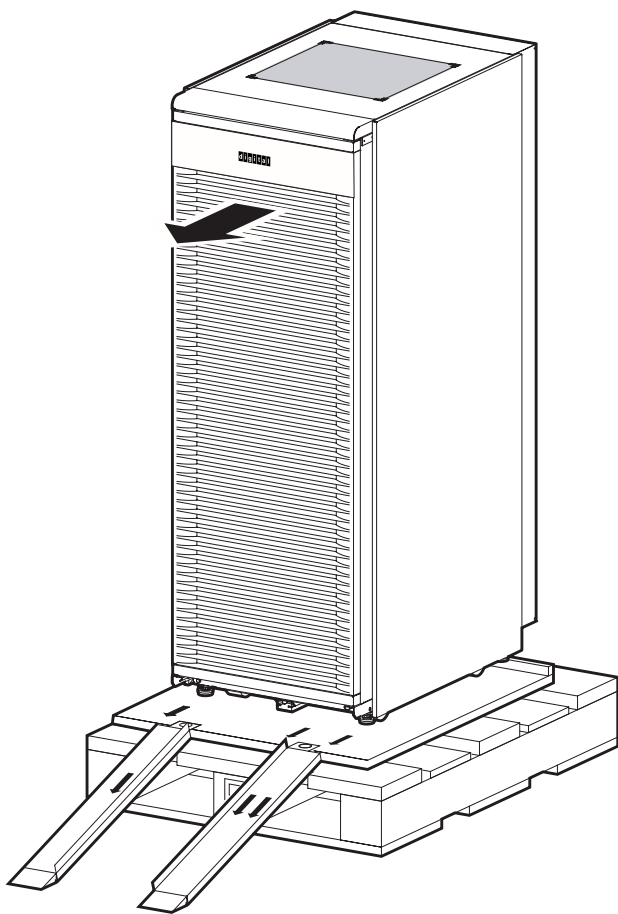

LJ-06343.AI7

4.5 Installation Procedures

During the installation of the cabinet, one or more of the following procedures may be needed:

- Removing and Replacing the Rear Door (Section 4.5.1)
- Reversing the Rear Door Swing (Section 4.5.2)
- Removing and Replacing the Front Door (Section 4.5.3)
- Reversing the Front Door Swing (Section 4.5.4)
- Removing and Replacing the Front Filler Panels (Section 4.5.5)
- Removing and Replacing the Side Panels (Section 4.5.6)
- Adjusting the Stabilizer Bar (Section 4.5.7)
- Using the Interlock System (Section 4.5.8)

The tools needed to perform the above procedures are:

- Phillips screwdriver
- 8 mm hex-head nutdriver

Installation

4.5.1 Removing and Replacing the Rear Door

The rear door provides access into the rear of the cabinet. To remove the rear door, refer to Figure 4-4 and proceed as follows:

Removal


1. Open the door and loosen the two M5 hex-head screws ❶ that secure the top rear trim piece ❷ to the top of the cabinet.
2. Slide the top rear trim piece toward the rear of the cabinet until the screw heads are aligned with the keyhole ❸ and lift the top rear trim piece off of the cabinet.
3. While holding the rear door in place, remove the three M5 screws ❹ that secure the top pivot bracket ❺ to the top right of the cabinet collar and remove the bracket.
4. Lift the rear door ❻ off of the bottom pivot pin ❼ located at the bottom right of the cabinet and place the rear door aside and out of the way.

Replacement

To replace the rear door, reverse the removal procedure, steps 1 through 4.

When replacing the rear door, adjust the position of the top pivot bracket to ensure that the door is square with the cabinet opening. Once the door is square, tighten the top pivot bracket mounting screws.

Figure 4-4 Removing and Replacing the Rear Door

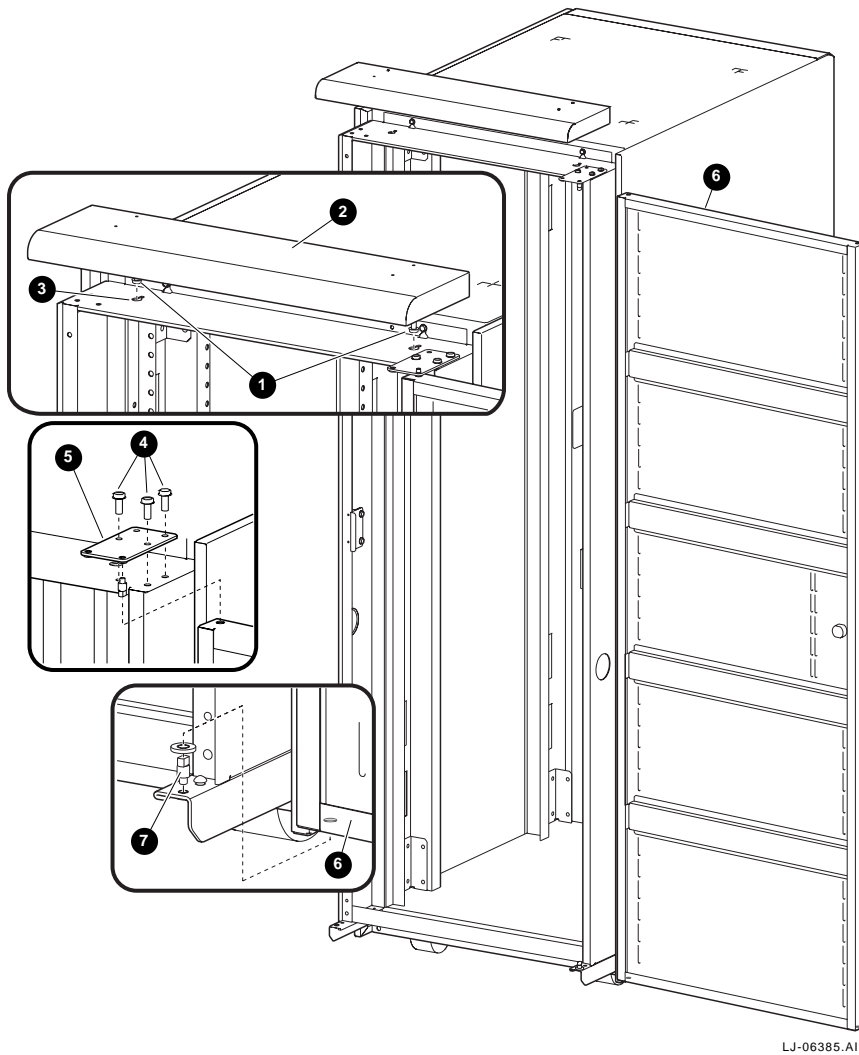

Installation


4.5.2 Reversing the Rear Door Swing

The rear door on the H9A10 cabinet comes from the factory hinged on the right side of the cabinet as viewed from the rear of the cabinet. The door swing can be reversed so that the rear door is hinged on the left side of the cabinet as viewed from the rear of the cabinet. To reverse the rear door swing, refer to Figure 4-5 and proceed as follows:

1. Remove the rear door (see Section 4.5.1).
2. Remove the bottom pivot pin and plastic washer from the bottom pivot bracket located at the bottom right of the cabinet (see Figure 4-4 ⑦).
3. Install the bottom pivot pin ① and washer ② in the bottom pivot bracket located at the bottom left of the cabinet (see Figure 4-5).
4. Remove the wear pad ⑦ (see Figure 4-5) from the rear hole of the bottom pivot bracket located at the bottom left of the cabinet and move it to the rear hole of the bottom pivot bracket located at the bottom right of the cabinet.
5. Remove the two M5 screws ③ that secure the strike plate ④ to the left side of the cabinet.
6. Install the strike plate on the right side of the cabinet using the two M5 screws. Ensure that the lip on the strike plate is pointing to the left.
7. Remove the top pivot pin from the right front hole on the top pivot bracket (see Figure 4-4) and install the pivot pin ⑧ into the left front hole on the top pivot bracket (see Figure 4-5).
8. Turn the rear door upside down so that the locking mechanism ⑩ is on the right.
9. Set the rear door ⑤ on the bottom pivot pin ⑥ located at the bottom left of the cabinet.
10. Insert the top pivot pin ⑧ on the top pivot bracket ⑨ into the hole at the top left corner of the door and, while holding the door in place, adjust the position of the top pivot bracket to ensure that the door is square with the cabinet opening. Once the door is square, secure the top pivot bracket to the top left of the cabinet by tightening the three M5 screws ①.
11. Adjust the strike plate so that the door does not rattle and the lock properly engages the strike plate.
12. Reinstall the top rear trim piece ② on the top rear of the cabinet.
13. Reverse the handle on the door latch by unscrewing the lock and turning the handle upside down so that the handle is toward the bottom of the door.

Installation

Figure 4-5 Reversing the Rear Door Swing

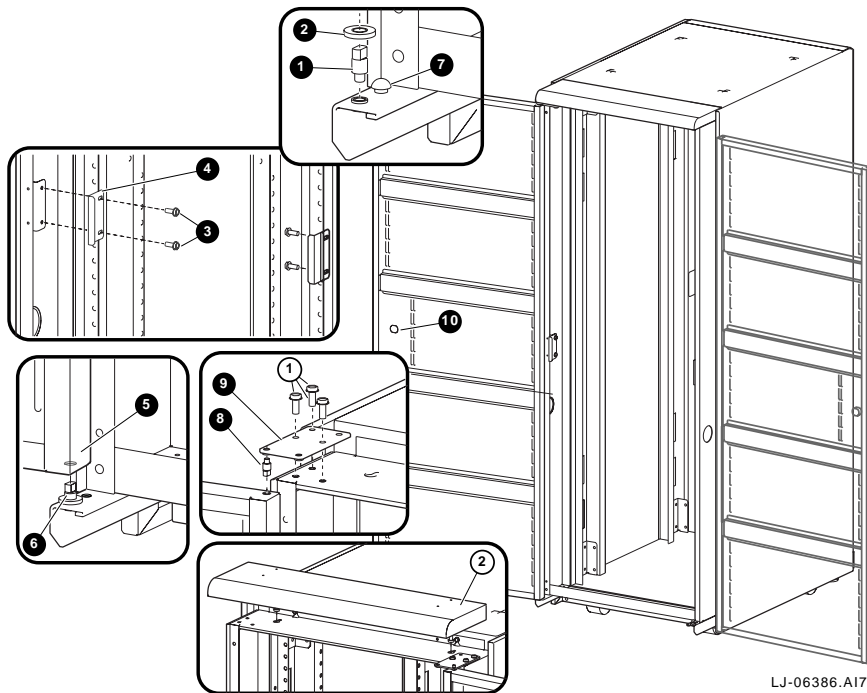

Installation

4.5.3 Removing and Replacing the Front Door

The front door provides access into the front of the cabinet. To remove the front door, refer to Figure 4-6 and proceed as follows:

Removal

1. Open the door and loosen the two M5 hex-head screws ❶ that secure the top front trim piece ❷ to the top of the cabinet.
2. Slide the top front trim piece up and off of the cabinet.
3. While holding the front door in place, remove the two M5 screws ❸ that secure the top pivot bracket ❹ to the top left of the cabinet and remove the bracket.
4. Lift the front door ❺ off of the bottom pivot pin ❻ located at the bottom left of the cabinet and place the front door aside and out of the way.


Replacement

To replace the front door, reverse steps 1 through 4 of the removal procedure.

When replacing the front door, adjust the position of the top pivot bracket to ensure that the door is square with the cabinet opening. Once the door is square, tighten the top pivot bracket mounting screws.

Installation

Figure 4-6 Removing and Replacing the Front Door

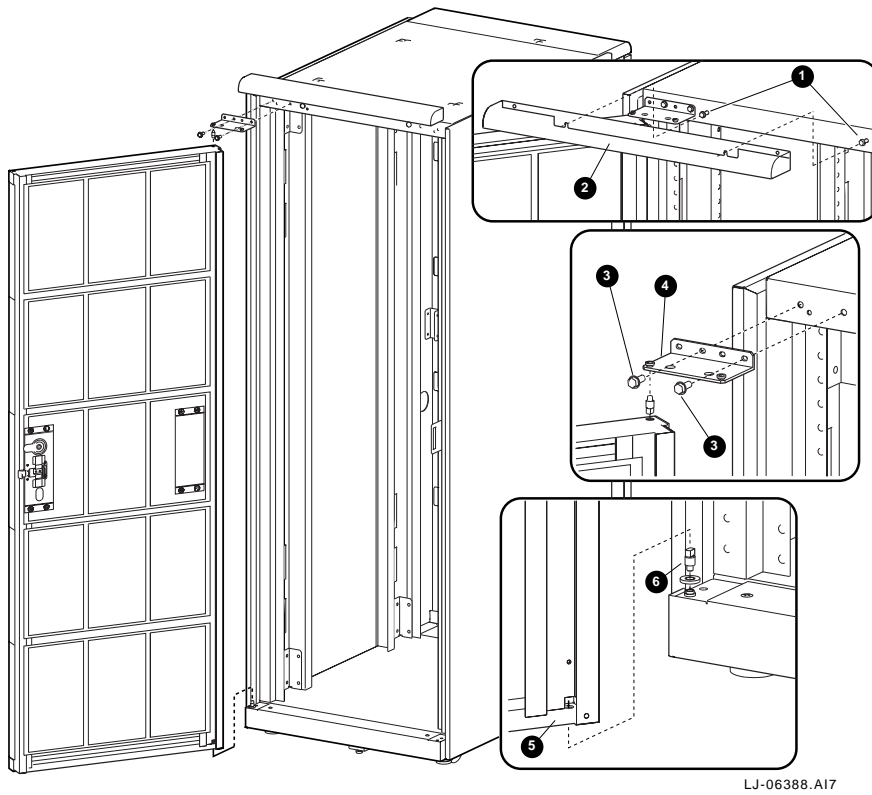

Installation

4.5.4 Reversing the Front Door Swing

The front door on the H9A10 cabinet comes from the factory hinged on the left side of the cabinet as viewed from the front of the cabinet. The door swing can be reversed so that the front door is hinged on the right side of the cabinet as viewed from the front of the cabinet. To reverse the rear door swing, refer to Figure 4-7 and Figure 4-8 and proceed as follows:


1. Remove the front door (see Section 4.5.3) and set it aside with the inside of the door facing outward.
2. Remove the rubber bumpers from top and bottom left corners of the door and move them to the top and bottom right corners of the door.
3. Remove the bottom pivot pin and plastic washer from the bottom pivot bracket located at the bottom left of the cabinet (see Figure 4-6 ⑥).
4. Install the bottom pivot pin ① and washer ② in the bottom pivot bracket ③ located at the bottom right of the cabinet (see Figure 4-7).
5. Remove the door alignment ramp from the bottom right of the cabinet and install it at the bottom left of the cabinet.
6. Remove the two M5 screws ④ that secure the strike plate ⑤ to the right side of the cabinet.
7. Install the strike plate on the left side of the cabinet using the two M5 screws.
8. Remove the top pivot pin from the left front hole on the top pivot bracket (see Figure 4-6) and install the pivot pin into the right front hole on the top pivot bracket (see Figure 4-8 ⑧).
9. While facing the inside of the front door, remove the four M5 nuts ⑥ that secure the blank panel ⑦ to the right front of the door and remove the blank panel (see Figure 4-7).
10. While facing the inside of the front door, remove the four M5 nuts ⑥ that secure the latch and lock assembly panel ⑨ to the left front of the door and remove the latch and lock assembly panel (see Figure 4-7). **Note:** Some cabinets may have a lock guard over the latch and lock assembly panel that is also secured by the four M5 nuts.
11. Remove the nut ⑩ that secures the lock mechanism to the top part of the latch and lock assembly panel.
12. Move the lock mechanism to the bottom part ⑪ of the latch and lock assembly panel and secure it with the nut ⑩ removed in step 11.

Installation

13. Turn the latch and lock assembly panel upside down so that the latch is toward the right side of the door (as viewed from facing the inside of the front door) and the lock mechanism is at the top.
14. While facing the inside of the front door, secure the latch and lock assembly panel ② to the right front of the door using four M5 nuts ③ (see Figure 4-8). **Note:** If a lock guard was installed over the latch and lock assembly panel, it must also be secured by these four M5 nuts.
15. While facing the inside of the front door, secure the blank panel ④ to the left front of the door using four M5 nuts ⑤.
16. Set the front door ⑥ on the bottom pivot pin ⑦ located at the bottom right of the cabinet.
17. Insert the top pivot pin ⑧ on the top pivot bracket ⑨ into the hole at the top right corner of the door and, while holding the door in place, adjust the position of the top pivot bracket to ensure that the door is square with the cabinet opening. Once the door is square, secure the top pivot bracket to the top right of the cabinet by tightening the two M5 screws ⑩.
18. Adjust the strike plate so that the door does not rattle and the lock properly engages the strike plate.
19. Reinstall the top front trim piece ❶ on the top front of the cabinet and tighten the two M5 hex-head screws ❷ (see Figure 4-8).


Installation

Figure 4-7 Reversing the Front Door Swing

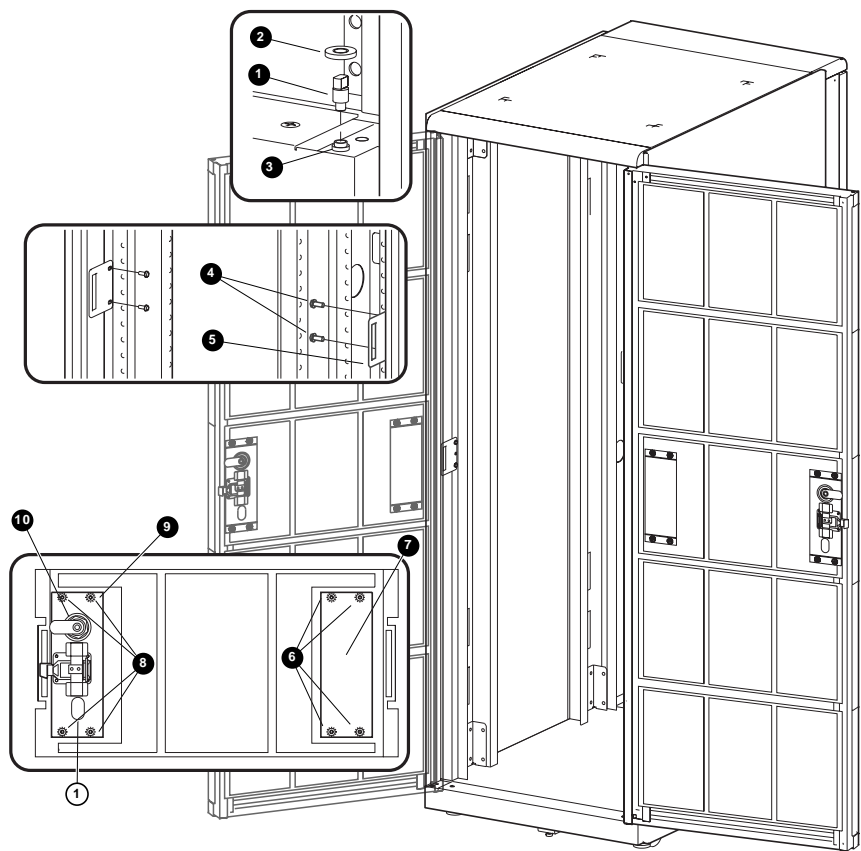

LJ-06389A.A17

Figure 4-8 Completing the Front Door Reversal

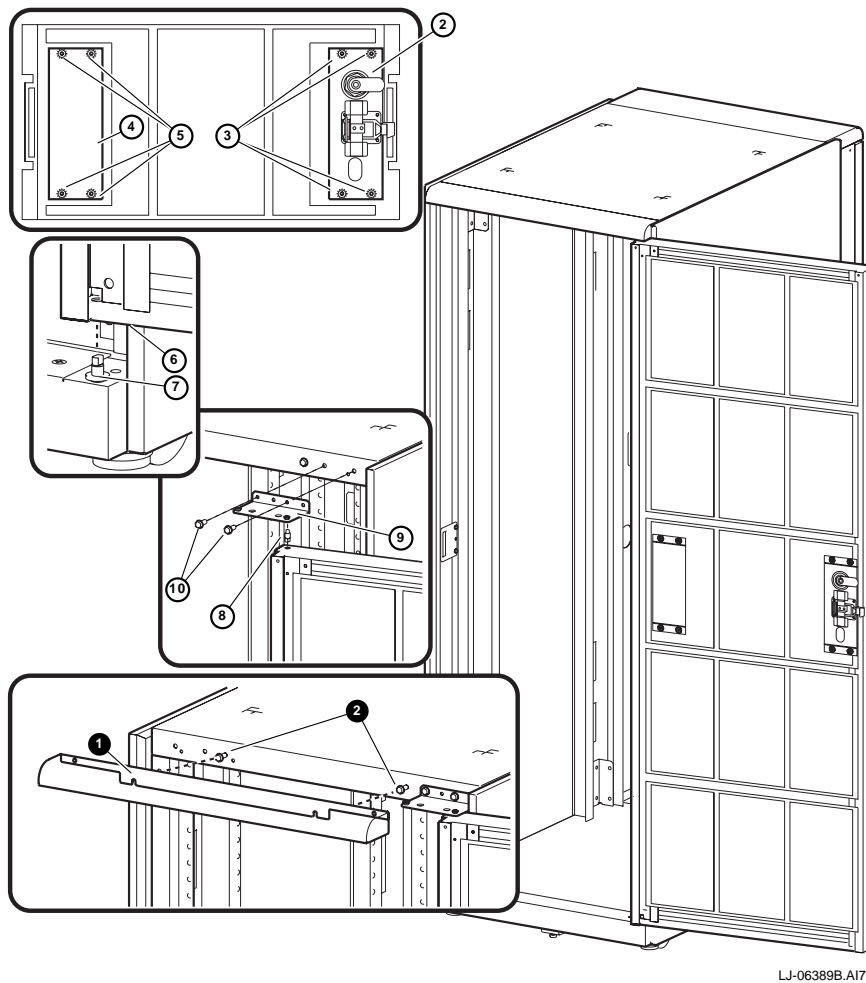

LJ-06389B.A17

Installation

4.5.5 Removing and Replacing the Front Filler Panels

The H9A10 cabinet can have metal or plastic front filler panels.

To remove a metal front filler panel, refer to Figure 4-9 and proceed as follows:

Removal

Grasp the metal front filler panel ❶ on both sides and then pull straight back away from the cabinet.

Replacement

To replace a metal front filler panel ❶, align the sockets ❷ on the front filler panel (refer to the exploded view) with the appropriate ball studs ❸ on the rails ❹ and push the panel into place.

To remove a plastic front filler panel, proceed as follows:


Removal

Remove the four 10-32 screws that secure each corner of the front filler panel to the U-nuts on the front rails and pull the front filler panel away from the cabinet.

Replacement

To replace a plastic front filler panel, align the holes at each corner of the front filler panel with the U-nuts on the cabinet rails and secure the front filler panel with four 10-32 screws.

Figure 4-9 Removing and Replacing the Metal Front Filler Panels

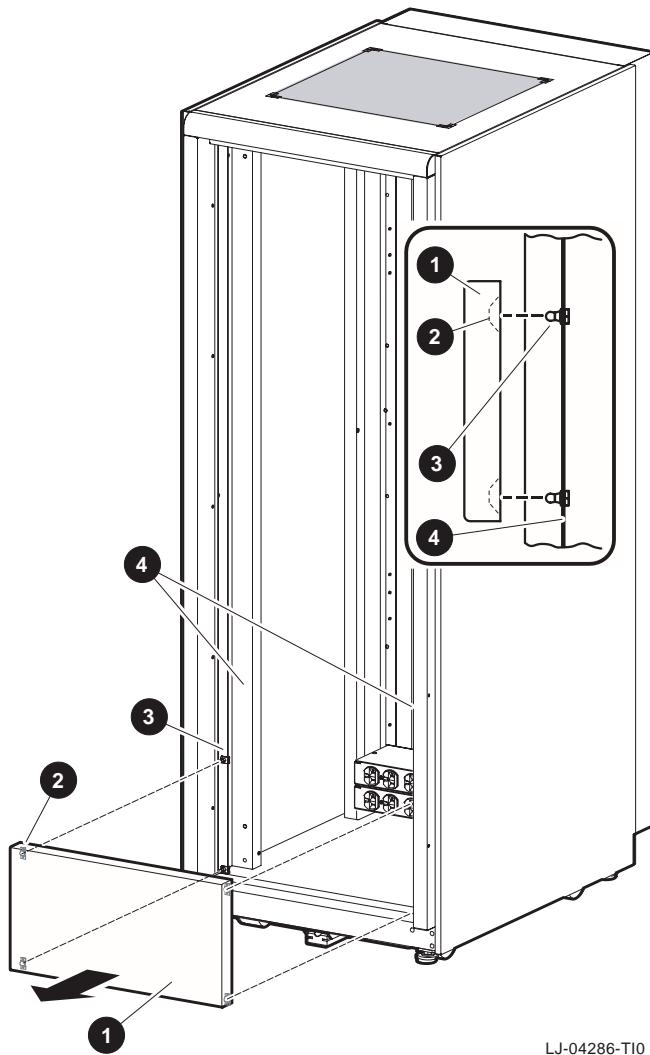

LJ-04286-T10

Installation

4.5.6 Removing and Replacing the Side Panels

The H9A10 cabinet has removable side panels that can be swapped from one side of the cabinet to the other. To remove a side panel, refer to Figure 4-10 and proceed as follows:


Removal

1. Gain access to the inside of the cabinet by opening the rear door and the front door (if the cabinet has one).
2. If the cabinet has a front trim kit or a non-extended front door kit, remove the two Phillips-head screws ❷ that secure bottom front trim cover ❶.
3. Remove the two M5 screws ❸ that secure the bottom front and rear corners of the side panel to the cabinet. These screws are located underneath the metal lip that is parallel to the floor at the bottom front and bottom rear of the cabinet.
4. Grasp both sides of the side panel and lift it up until the side panel metal tabs clear the cutouts in the cabinet wall and the top lip of the side panel ❹ clears the angle bracket ❺ along the top edge of the cabinet.
5. Pull the side panel out and away from the cabinet and set it aside.

Replacement

To replace the side panel, reverse the removal procedure, steps 1 through 5. Ensure that the side panel metal tabs catch on the mounting rail at the bottom of the cutouts in the cabinet wall and the top lip of the side panel catches the angle bracket along the top edge of the cabinet.

Figure 4-10 Removing and Replacing the Side Panels

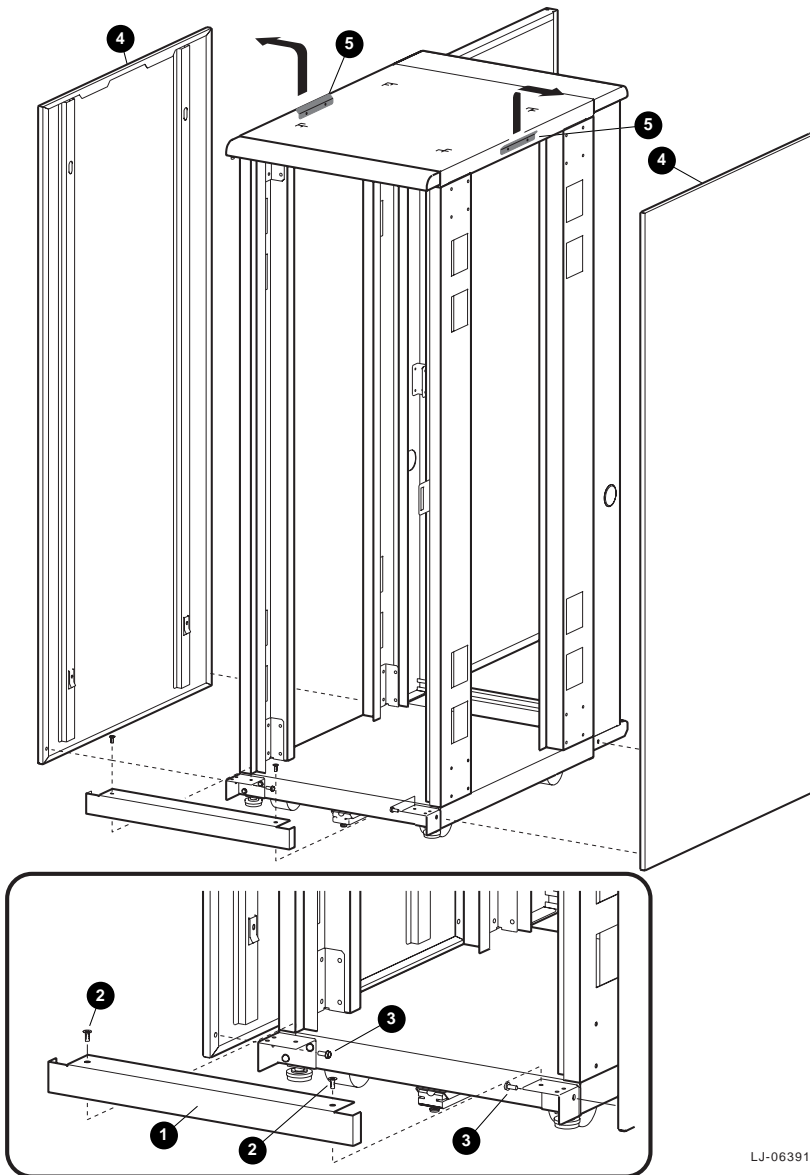

LJ-06391.A17

Installation

4.5.7 Adjusting the Stabilizer Bar

The stabilizer bar ❶ pulls straight out from the bottom front of the cabinet ❷ as shown in Figure 4-11. When the stabilizer bar is fully extended, adjust the foot ❸ at the end of the stabilizer bar until it touches the floor.


WARNING

The stabilizer bar must be fully extended before any system is extended out of the cabinet on its slides.

The H9A10 cabinet can hold several system configurations. The amount of force required to tip or make the cabinet unstable differs with each configuration.

Installation

Figure 4-11 Pulling Out and Adjusting the Stabilizer Bar

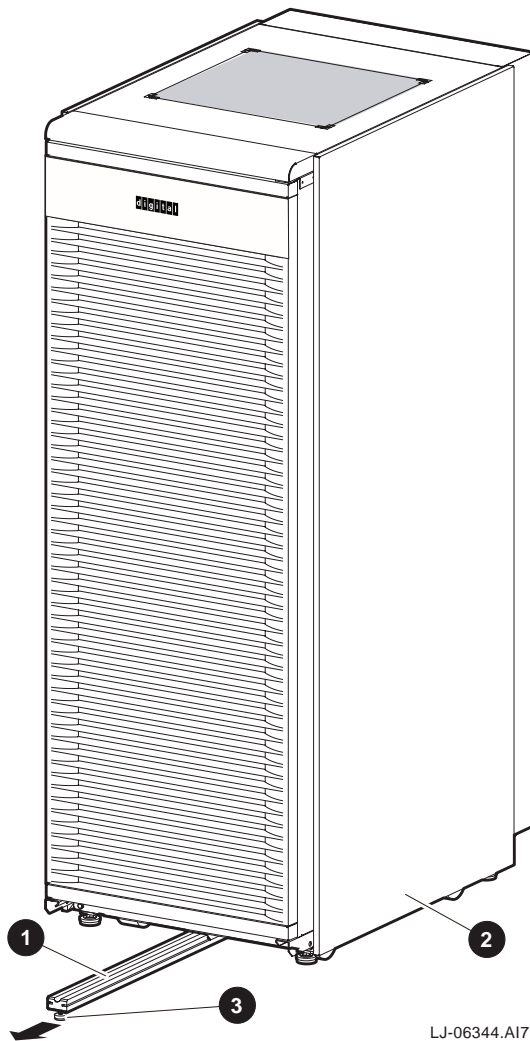

Installation

4.5.8 Using the Interlock System

The interlock system (refer to Figure 4-12) helps prevent cabinet instability by allowing only one system at any one time to be pulled out of the cabinet.

The interlock system consists of a vertical rod ❶ on which are mounted actuator latches ❷ for each product installed in the cabinet. These actuator latches engage the interlock actuator bracket ❸ on the rear of rackmount systems. When a rackmount system is pulled out of the cabinet, the actuator latches ❷ rotate to prevent any other rackmounted system that has an interlock actuator bracket from being pulled out of the cabinet. The expanded view (A) shows the position of the actuator latches when all systems are pushed into the cabinet. The expanded view (B) shows the position of all actuator latches after one system has been pulled out.

If additional products are installed into the cabinet, actuator latches for those products should be installed. To install actuator latches, proceed as follows:

1. Remove the screws securing the bottom mounting bracket to the cabinet ❹.
2. Slide the mounting bracket off the bottom of the vertical rod ❶.
3. Slide the stabilizer bracket ❺ for the new product onto the bottom of the vertical rod.
4. Slide the actuator latch ❷ for the new product onto the bottom of the vertical rod.
5. Replace the bottom mounting bracket ❹ and install the screws removed in step 1 but *do not* tighten them.
6. Position the stabilizer bracket so that the bottom hole in the stabilizer bracket ❺ aligns with the EIA rail hole adjacent to the bottom of the installed product. This may require the loosening and sliding of other latches and stabilizer brackets to accommodate the new configuration.
7. Place the nut plate behind the EIA rail and install and tighten the screws provided to secure the stabilizer bracket.
8. Position the new actuator latch ❷ to properly engage the product, and tighten the set screws to secure the latch.
9. Now tighten the screws to secure the bottom mounting bracket ❹.

Installation

Note


Some systems may not be compatible because the interlock actuator bracket may not engage properly. In these cases, do not install the interlock actuator bracket on those systems.

WARNING

If a system is installed without an interlock actuator bracket or the vertical rod in the cabinet does not engage properly with the system interlock actuator bracket, it is the customer's responsibility to provide a stable cabinet.

Installation

Figure 4-12 The Interlock System

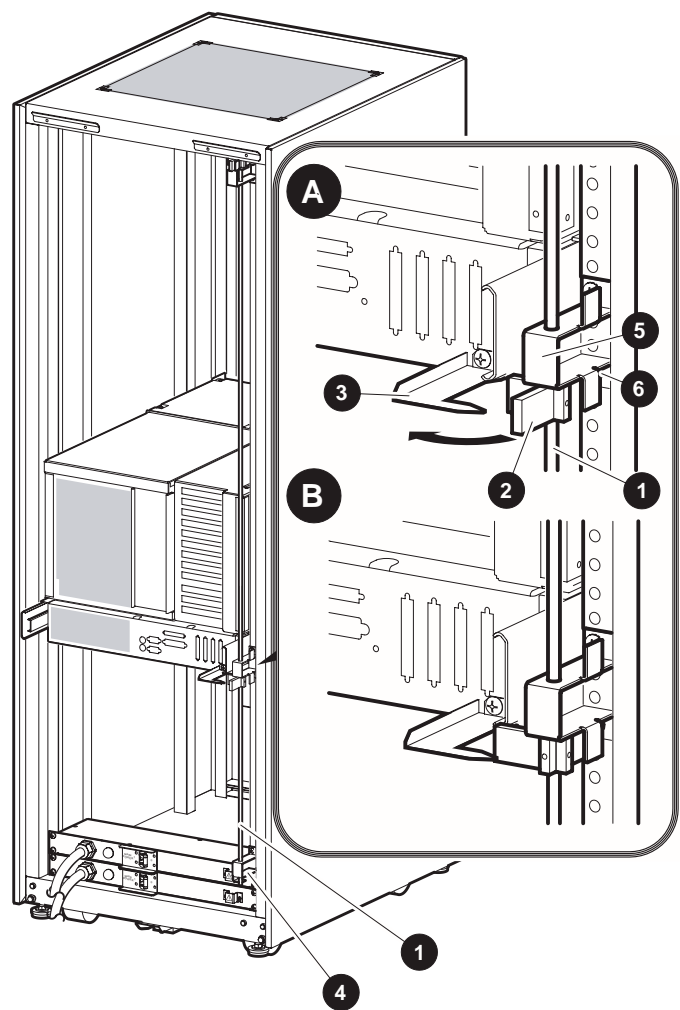

LJ-04287-T10