

Sun™ FastEthernet™ PCI Adapter Installation and User's Guide



THE NETWORK IS THE COMPUTER™

Sun Microsystems Computer Company

A Sun Microsystems, Inc. Business
2550 Garcia Avenue
Mountain View, CA 94043 USA
415 960-1300 fax 415 969-9131

Part No.: 805-1759-10
Revision A, July 1997

Copyright 1997 Sun Microsystems, Inc. 2550 Garcia Avenue, Mountain View, California 94043-1100 U.S.A. All rights reserved.

This product or document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, AnswerBook, SunDocs, FastEthernet., SunVTS, OpenBoot, and Solaris are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

RESTRICTED RIGHTS: Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.7202-3(a).

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 1997 Sun Microsystems, Inc., 2550 Garcia Avenue, Mountain View, Californie 94043-1100 Etatis-Unis. Tous droits réservés.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, AnswerBook, SunDocs, FastEthernet, SunVTS, OpenBoot, et Solaris sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

CETTE PUBLICATION EST FOURNIE "EN L'ETAT" ET AUCUNE GARANTIE, EXPRESSE OU IMPLICITE, N'EST ACCORDEE, Y COMPRIS DES GARANTIES CONCERNANT LA VALEUR MARCHANDE, L'APTITUDE DE LA PUBLICATION A REpondre A UNE UTILISATION PARTICULIERE, OU LE FAIT QU'ELLE NE SOIT PAS CONTREFAISANTE DE PRODUIT DE TIERS. CE DENI DE GARANTIE NE S'APPLIQUERAIT PAS, DANS LA MESURE OU IL SERAIT TENU JURIDIQUEMENT NUL ET NON AVENU.



Please
Recycle



Adobe PostScript

Regulatory Compliance Statements

Your Sun product is marked to indicate its compliance class:

- Federal Communications Commission (FCC) — USA
- Department of Communications (DOC) — Canada
- Voluntary Control Council for Interference (VCCI) — Japan

Please read the appropriate section that corresponds to the marking on your Sun product before attempting to install the product.

FCC Class A Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Shielded Cables: Connections between the workstation and peripherals must be made using shielded cables in order to maintain compliance with FCC radio frequency emission limits. Networking connections can be made using unshielded twisted-pair (UTP) cables.

Modifications: Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

FCC Class B Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Shielded Cables: Connections between the workstation and peripherals must be made using shielded cables in order to maintain compliance with FCC radio frequency emission limits. Networking connections can be made using unshielded twisted pair (UTP) cables.

Modifications: Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

DOC Class A Notice - Avis DOC, Classe A

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

DOC Class B Notice - Avis DOC, Classe B

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

VCCI 基準について


第一種VCCI基準について

第一種VCCIの表示があるワークステーションおよびオプション製品は、第一種情報装置です。これらの製品には、下記の項目が該当します。

この装置は、第一種情報装置(商工業地域において使用されるべき情報装置)で商工業地域での電波障害防止を目的とした情報処理装置等電波障害自主規制協議会(VCCI)基準に適合しております。したがって、本製品を、住宅地域または住宅地域に隣接した地域でご使用になりますと、ラジオ、テレビジョン受信機等に受信障害を与えることがあります。

取り扱い説明書に従って正しくお取り扱いください。

第二種VCCI基準について

第二種VCCIの表示  があるワークステーションおよびオプション製品は、第二種情報装置です。これらの製品には、下記の項目が該当します。

この装置は、第二種情報装置(住宅地域または住宅地域に隣接した地域において使用されるべき情報装置)で住宅地域での電波障害防止を目的とした情報処理装置等電波障害自主規制協議会(VCCI)基準に適合しております。しかし、本製品を、ラジオ、テレビジョン受信機に近接してご使用になりますと、受信障害の原因となることがあります。

取り扱い説明書に従って正しくお取り扱いください。

Declaration of Conformity

Compliance ID: FRESH-LITE

Product Name: SUN FE PCI

This product has been tested and complies with the following EMC and Safety standards:

EMC

FCC Class B – USA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EC – Europe

This equipment complies with the following requirements of the EMC Directive 89/336/EEC:

EN55022 / CISPR22 (1985)	Class B
EN50082-1	IEC801-2 (1991) 4 kV (direct), 8 kV (air)
	IEC801-3 (1984) 3 V/m
	IEC801-4 (1988) 1.0 kV power lines, 0.5 kV signal lines
EN61000-3-2/IEC1000-3-2 (1994)	Pass

Safety

This equipment complies with the following requirements of the Low Voltage Directive 73/23/EEC:

- EN60950/IEC950 (1993)

Supplementary Information

This product was tested and complies with all the requirements for the CE Mark when connected to a Sun workstation or server.

/ S /

Dennis P. Symanski
Manager, Product Compliance

Date

/ S /

John Shades
Manager, Quality Assurance

Date

Sun Microsystems Computer Company
2550 Garcia Avenue, M/S UMPK15-102
Mt. View, CA 94043, USA
Tel: 415-786-3255
Fax: 415-786-3723

Sun Microsystems Limited
Springfield, Linlithgow
West Lothian, EH49 7LR
Scotland, United Kingdom
Tel: 0506 670000
Fax: 0506 760011



THE NETWORK IS THE COMPUTER™

Contents

- 1. Product Overview 1**
 - Hardware and Software Requirements 2
 - Media Independent Interface (MII) Connector 2
 - Features 3
- 2. Installing the Sun FastEthernet PCI Adapter 5**
 - ▼ To Install the Adapter 5
- 3. Using the Sun FastEthernet PCI Adapter 7**
 - Verifying the Installation 7
 - ▼ To Verify the Installation 7
 - Diagnostics Testing 8
 - Auto-Negotiation 9
 - Monitoring Network Activity 10
 - Rebooting the System 10
 - Configuring Host Files 11
 - ▼ To Prepare Your System for the Sun FastEthernet PCI Adapter 11
 - Booting from the Network 12
 - ▼ To Boot from the Network 12
 - Post-Installation Procedures (Optional) 13

Configuring Driver Parameters	13
Increasing TCP/IP Performance	13
Forcing Network Speed Between 10 Mbps and 100 Mbps	14
Sun FastEthernet PCI Adapter's <code>local-mac-address</code> Property	15
External Transceivers	16
A. Using the <code>selftest</code> Diagnostics	17
Ethernet FCode <code>selftest</code> Diagnostic	18
B. Interface Signals	19
Sun FastEthernet PCI Adapter Connectors	19
MII Connector Signals	20
RJ-45 Connector Signals	21
C. Specifications	23
Physical Characteristics	23
Power Requirements	24
Performance Specifications	24

Preface

This manual describes how to install and configure your Sun™ FastEthernet™ PCI Adapter.

The procedures in this manual assume that you are a system or network administrator experienced in installing similar hardware in a Solaris™ operating environment.

How This Book Is Organized

The document is organized as follows:

Chapter 1, “Product Overview,” describes the hardware and software requirements of the Sun FastEthernet PCI Adapter as well as the adapter features.

Chapter 2, “Installing the Sun FastEthernet PCI Adapter,” tells you how to install the Sun FastEthernet PCI Adapter into your system.

Chapter 3, “Using the Sun FastEthernet PCI Adapter,” explains how to verify that the adapter is functioning properly and how to customize its performance.

Appendix A, “Using the selftest Diagnostics,” describes how to use the FCode `selftest` to verify the functionality of the adapter.

Appendix B, “Interface Signals,” lists the PCI adapter’s pin characteristics.

Appendix C, “Specifications,” lists the hardware specifications.

UNIX Commands

This document may not include specific software commands or procedures. Instead, it may name software tasks and refer you to operating system documentation or the handbook that was shipped with your new hardware.

The type of information that you might need to use references for includes:

- Shutting down the system
- Booting the system
- Configuring devices
- Other basic software procedures

See one or more of the following:

- *Solaris 2.x Handbook for SMCC Peripherals* contains Solaris™ 2.x software commands.
- Online AnswerBook™ for the complete set of documentation supporting the Solaris 2.x software environment.
- Other software documentation that you received with your system.

Typographic Conventions

The following table describes the typographic changes used in this book.

Typeface or Symbol	Meaning	Example
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. <code>machine_name%</code> You have mail.
AaBbCc123	What you type, contrasted with on-screen computer output	<code>machine_name% su</code> Password:
<i>AaBbCc123</i>	Command-line placeholder: replace with a real name or value	To delete a file, type <code>rm filename</code> .
<i>AaBbCc123</i>	Book titles, new words or terms, or words to be emphasized	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be root to do this.

Shell Prompts

The following table shows the default system prompt and superuser prompt for the C shell, Bourne shell, and Korn shell.

Shell	Prompt
C shell	machine_name%
C shell superuser	machine_name#
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

Related Documents

The following documents contain topics that relate to the information in the *Sun FastEthernet PCI Adapter Installation and User's Guide*.

Title	Part Number
<i>Solaris 2.x Handbook for SMCC Peripherals</i>	801-5488
<i>SunVTS 2.0 User's Guide</i>	802-5331
<i>Platform Notes: The hme Fast Ethernet Device Driver</i>	802-5333
<i>OpenBoot 3.x Command Reference Manual</i>	802-5837

Ordering Sun Documents

SunDocsSM is a distribution program for Sun Microsystems technical documentation. Contact SunExpress for easy ordering and quick delivery. You can find a listing of available Sun documentation on the World Wide Web.

TABLE P-1 SunExpress Contact Information

Country	Telephone	Fax
Belgium	02-720-09-09	02-725-88-50
Canada	1-800-873-7869	1-800-944-0661
France	0800-90-61-57	0800-90-61-58
Germany	01-30-81-61-91	01-30-81-61-92
Holland	06-022-34-45	06-022-34-46
Japan	0120-33-9096	0120-33-9097
Luxembourg	32-2-720-09-09	32-2-725-88-50
Sweden	020-79-57-26	020-79-57-27
Switzerland	0800-55-19-26	0800-55-19-27
United Kingdom	0800-89-88-88	0800-89-88-87
United States	1-800-873-7869	1-800-944-0661

World Wide Web: <http://www.sun.com/sunexpress/>

Sun Welcomes Your Comments

Please use the *Reader Comment Card* that accompanies this document. We are interested in improving our documentation and welcome your comments and suggestions.

If a card is not available, you can email or fax your comments to us. Please include the part number of your document in the subject line of your email or fax message.

- Email: smcc-docs@sun.com
- Fax: SMCC Document Feedback
1-415-786-6443

Product Overview

The Sun FastEthernet PCI Adapter offers 10 Mbps and 100 Mbps Ethernet networking with both an RJ-45 and a media independent interface (MII) connector.

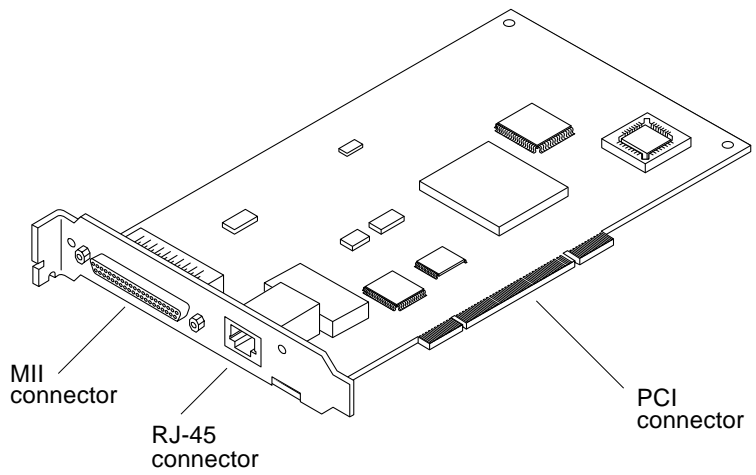


FIGURE 1-1 Sun FastEthernet PCI Adapter

Hardware and Software Requirements

Before using the Sun FastEthernet PCI Adapter, make sure your system meets the following hardware and software requirements:

TABLE 1-1 Hardware and Software Requirements

Hardware and Software	Requirements
Hardware requirements	Sun™ systems with an available PCI slot
Software requirements	Solaris 2.5.1 Hardware: 4/97 and later Solaris releases
Firmware	OpenBoot™ PROM version 3.0 or greater
External transceivers	Sun MII-AUI transceiver: order number X467A. IEEE 802.3u compliant third-party transceivers that support speeds of 10 or 100 Mbps and allow connection to fiber and Category 3, 4 and 5 UTP cable, depending on the type of MII transceiver.

Media Independent Interface (MII) Connector

The MII on the Sun FastEthernet PCI Adapter enables connection to external FastEthernet transceivers, thereby allowing compatibility with different wiring types. By default, the driver selects the MII connection. See TABLE 1-1 for compatibility standards.

Prior to proceeding, you should decide which network connection to use: either the RJ-45 or the MII, *but not both*. See “External Transceivers” on page 16, or your external transceiver documentation, for more detailed information.

Features

Following is a list of the Sun FastEthernet PCI Adapter features:

PCI Ethernet Interface

- 32-bit PCI up to 33 MHz
- 32-bit target access to internal registers
- 8-, 16-, or 32-bit target access to configuration registers
- 32-bit master data transfers
- Two DMA channels with 2 Kbyte FIFOs
- Unique IEEE MAC address stored on board

MII Interface

- MII complies with IEEE 802.3u standard
- Connects to TX, T4, FX, AUI and all supporting transceivers
- Rate of 2.5 MHz for 10 Mbps and 25 MHz for 100 Mbps

Network Interface

- 10BASE-T and 100BASE-TX interfaces with auto-negotiation half-duplex and full-duplex capabilities

PCI

- PCI Local Bus, Rev 2.1 compliant
- 32-bit PCI up to 33 MHz
- Universal add-in (3.3V and 5V signaling)
- One 64K x 8 OpenBoot PROM

Installing the Sun FastEthernet PCI Adapter

This chapter describes procedures for installing the adapter in your system.

Note – Refer to your system installation or service manual for detailed instructions for the following tasks.

▼ To Install the Adapter

1. **Power off your system and open the system unit.**
2. **Attach the adhesive copper strip of the wrist strap to the metal casing of the power supply. Wrap the other end twice around your wrist, with the adhesive side against your skin.**
3. **Holding the PCI adapter by the edges, unpack and place it on an antistatic surface.**
4. **Remove the PCI filler panel from the slot in which you want to insert the Sun FastEthernet PCI Adapter.**
5. **Holding the PCI adapter by the edges, align the adapter edge connector with the PCI slot. Slide the adapter face plate into the small slot at the end of the PCI opening.**
6. **Applying even pressure at both corners of the adapter, push the PCI adapter until it is firmly seated in the slot.**



Caution – Do not use excessive force when installing the adapter into the PCI slot. You may damage the adapter's PCI connector. If the adapter does not seat properly when you apply even pressure, remove the adapter and carefully reinstall it again.

7. If necessary, reinstall the PCI filler panel in the unused PCI opening.
8. Detach the wrist strap and close the system unit.

Note – See the next chapter to complete the software configuration and additional setup procedures.

Using the Sun FastEthernet PCI Adapter

This chapter tells you how to verify that the adapter is functioning properly and how to optimize its performance.

Verifying the Installation

*Before booting the system, verify the installation by performing the tasks that follow. Refer to the *Solaris Handbook for SMCC Peripherals* manual or your Solaris documentation for the detailed instructions.*

▼ To Verify the Installation

- 1. Power on the system.**
- 2. When the banner is displayed, press the Stop-A keys to interrupt the boot process and to get to the `ok` prompt.**

3. Use the `show-devs` command to list the system devices.

You should see output, similar to the following example, displayed on your screen.

```
ok show-devs
/SUNW,ffb@1e,0
/SUNW,UltraSPARC-II@0,0
/counter-timer@1f,1c00
/pci@1f,2000
/pci@1f,4000
/virtual-memory
/memory@0,60000000
/aliases
/options
/openprom
/chosen
/packages
/pci@1f,4000/SUNW,hme@4,1
/pci@1f,4000/pci108e,1000@4
/pci@1f,4000/pci@2
/pci@1f,4000/scsi@3
/pci@1f,4000/network@1,1
/pci@1f,4000/ebus@1
/pci@1f,4000/scsi@3/tape
/pci@1f,4000/scsi@3/disk
```

- `SUNW,hme` identifies the Sun FastEthernet PCI Adapter Ethernet device.
- `network` identifies the motherboard network interface.

If these devices are not listed, check that the adapter is properly seated and reinstall the adapter, if necessary.

Diagnostics Testing

For Sun FastEthernet PCI Adapter diagnostic testing, see **Appendix A, “Using the selftest Diagnostics,”** and refer to the *SunVTS User’s Guide*.

Auto-Negotiation

A key feature of the Sun FastEthernet PCI Adapter is auto-negotiation. The *auto-negotiation* protocol, as specified by the 100BASE-T standard, selects the operation mode (half-duplex or full-duplex) and auto-sensing protocol selects the speed (10 Mbps or 100 Mbps) for the adapter.

The link speed and modes supported by the Sun FastEthernet PCI Adapter are listed as follows in decreasing order of priority:

- 100 Mbps, full-duplex
- 100 Mbps, half-duplex
- 10 Mbps, full-duplex
- 10 Mbps, half-duplex

When the system is booted, the Sun FastEthernet PCI Adapter advertises these capabilities to the Link Partner at the other end of the link (a hub, switch, or another network interface card (NIC) in a host system). If the Link Partner also supports auto-negotiation, it will advertise its capabilities over the link. The common highest priority mode supported by both sides is selected automatically for the link operation.

If the Sun FastEthernet PCI Adapter is connected to a remote system or to an interface that is not capable of auto-negotiation, your system automatically selects the speed and half-duplex mode.

If the Sun FastEthernet PCI Adapter is connected to a Link Partner in which auto-negotiation protocol is not operational, you can configure the device to not use this protocol and force the driver to set up the link in the mode and speed of your choice.

Refer to the *Platform Notes: The hme Fast Ethernet Device Driver* document for more information on the `hme` device driver and auto-negotiation. This document is also available in the Solaris AnswerBook.

Monitoring Network Activity

Perform the following task to verify that the system recognizes the Ethernet connection. Make sure that you are connected to an active network.

- **To monitor network activity or incoming network packets, type the following at the `ok` prompt:**

```
ok apply watch-net <full path name of the hme interface>
Internal loopback test -- succeeded.
Transceiver check -- passed.
Looking for Ethernet Packets.
`.` is a Good Packet. `X` is a Bad Packet.
Type any key to stop.
.....
```

Note – In the example above, *<full path name of the hme interface>* is the full path name of the hme interface. Use the `show-devs` command at the `ok` prompt to display the full path name of the hme device.

Rebooting the System

After you have examined the network activity, perform a reconfiguration boot on your system so the operating environment can recognize the Sun FastEthernet PCI Adapter.

- **Perform a reconfiguration boot on the system.**

```
ok boot -r
```

Refer to the *Solaris 2.x Peripheral's Handbook* for more information.

Configuring Host Files

After installing the Sun FastEthernet PCI Adapter, you must create a `hostname.hme<num>` file for its Ethernet interface. You must also assign an IP address and a hostname for its Ethernet interface in the `/etc/hosts` file.

Your system motherboard Ethernet interface (`network`) uses the `hme` driver as well, with an interface identified as `hme0`. (The number 0 following `hme` represents the *first* instance of the interface.)

You may see the interface(s) represented in the `/etc/path_to_inst` file.

▼ To Prepare Your System for the Sun FastEthernet PCI Adapter

1. Create an `/etc/hostname.hme1` file.

The number 1 following `hme` represents the *second* instance of the `hme` device. Use the `hme2` extension for a second FastEthernet adapter, and so on.

- Do not create `/etc/hostname.hme<num>` files for the Sun FastEthernet PCI Adapter channels you do not plan to use. The `/etc/hostname.hme<num>` file must contain the hostname for the appropriate network interface.
- The hostname should have an IP address and should be entered in the `/etc/hosts` file.
- The hostname should be different from any other hostname of any other interface, for example: `/etc/hostname.hme0` and `/etc/hostname.hme1` cannot share the same hostname.
- The following is an example of the `/etc/hostname.hme<num>` files required for a machine called `zardoz` that will be known as `zardoz` and `zardoz-1` on the networks connected to the `hme0` and `hme1` Ethernet interfaces.

```
zardoz # cat /etc/hostname.hme0
zardoz
zardoz # cat /etc/hostname.hme1
zardoz-1
```

2. Create an appropriate entry in the `/etc/hosts` file for each active hme channel. Using the example in Step 1, you will have:

```
zardoz # cat /etc/hosts
...
127.0.0.1    localhost
129.144.10.57 zardoz    loghost
129.144.11.83 zardoz-1
```

Booting from the Network

You can use the Sun FastEthernet PCI Adapter interface as the boot device for your system.

▼ To Boot from the Network

1. At the `ok` prompt, type:

```
ok show-devs
```

The `show-devs` command lists the system devices. You should see the full path name of the hme device, similar to this example:

```
/pci@1f,2000/SUNW,hme@1,1
```

2. Type:

```
ok boot /pci@1f,2000/SUNW,hme@1,1
```

Post-Installation Procedures (Optional)

Perform the tasks in the following sections to customize the performance of the Sun FastEthernet PCI Adapter.

Configuring Driver Parameters

The `hme` device driver controls the `SUNW,hme` Ethernet device. The device driver automatically selects the link speed using the auto-negotiation protocol with the link partner. (See “Auto-Negotiation” on page 9.)

You can manually configure the `hme` device driver parameters to customize each `SUNW,hme` device in your system in three ways:

- Configure the `hme` driver parameters generally for all `SUNW,hme` devices in the system by entering the parameter variables in the `/etc/system` file.
- Set a parameter on a per-device basis by creating the `hme.conf` file in the `/kernel/drv` directory.
- Use the `ndd(1M)` utility to *temporarily* change a parameter. This change is lost when you reboot the system.

Refer to the *Platform Notes: The hme Fast Ethernet Device Driver* document for more information on configuring driver parameters. This document is also available on the Solaris AnswerBook.

Increasing TCP/IP Performance

You can increase the TCP/IP performance of the Sun FastEthernet PCI Adapter by changing the TCP highwater mark to 64K. This can be done with the `ndd(1M)` utility as shown in the following procedure.

▼ To Increase TCP/IP Performance

- As superuser, type:

```
# ndd -set /dev/tcp tcp_xmit_hiwat 65535
# ndd -set /dev/tcp tcp_recv_hiwat 65535
# ndd -set /dev/tcp tcp_cwnd_max 65534
```

The changes will take effect immediately and affect all system networking interfaces.

Forcing Network Speed Between 10 Mbps and 100 Mbps

▼ To Force Network Speed Between 10 Mbps and 100 Mbps

1. At the `ok` prompt, use the `show-devs` command to list the system devices.

The full path name of the `hme` device, similar to this example, is displayed:

```
/pci@1f,2000/SUNW,hme@1,1
```

2. Type:

```
ok nvedit
```

3. Type the following, pressing the Return key at the end of line 0:

```
0: probe-all install-console banner
1: apply transfer-speed=10 <full path name of the hme device>
```

4. Press the Control-C keys after typing <full path name of the hme device>.

Note – In the above example, the speed is forced to 10 Mbps. To force the speed to 100 Mbps, replace 10 with 100.

5. Type:

```
ok nvstore
ok setenv use-nvramrc? true
```

6. Reboot your system.

Refer to the *Platform Notes: The hme Fast Ethernet Device Driver* document for more information on the hme device driver and forcing network speed. This document is also available on the Solaris AnswerBook.

Sun FastEthernet PCI Adapter's local-mac-address Property

The network interface of the Sun FastEthernet PCI Adapter is assigned a unique MAC (Media Access Control) address, which represents the 48-bit ethernet address for the channel. The OpenBoot™ firmware reports this MAC address via the `local-mac-address` property in the device nodes corresponding to the network interfaces.

A system is not obligated to use this assigned MAC address if it has a system-wide MAC address. In such cases, the system-wide MAC address applies to all network interfaces on the system.

The device driver, or any other adapter utility, can use the network device's MAC address (`local-mac-address`) while configuring it. In future Solaris releases, you will be able to use the channel's MAC address when booting over the network.

The `mac-address` property of the network device specifies the network address (system-wide or `local-mac-address`) used for booting the system. To start using the MAC addresses assigned to the network interface of the Sun FastEthernet PCI Adapter, set the NVRAM configuration variable `local-mac-address?` to `true`.

```
ok setenv local-mac-address? true
```

External Transceivers

Some external transceivers support multiple link capabilities, such as 100BASE-T4, 100BASE-TX, and 10BASE-T, but not auto-negotiation. In this case, the driver attempts to bring-up the link in the highest priority capability in the following descending order of priority:

- 100BASE-T4
- 100BASE-TX
- 10BASE-T

To bring-up your external transceiver in a lower priority capability, you must configure the driver parameters to force the link to the desired mode.

Refer to your external transceiver documentation or the *Platform Notes: The hme Fast Ethernet Device Driver* document for more information on forcing the link mode.

When using an external transceiver with the Sun FastEthernet PCI Adapter, your system may not report the speed at which the link is operating, either 10 or 100 Mbps.

Using the `selftest` Diagnostics

The following tests are available to help identify problems when the system containing the Sun FastEthernet PCI Adapter does not boot.

The FCode `selftest` is added to the device tree during the probing phase of the OpenBoot PROM start-up sequence. You can invoke the FCode `selftest` diagnostics by using the OpenBoot user interface `test` or `test-all` commands. If you encounter an error while running the diagnostics, appropriate messages will be displayed. Refer to the *OpenBoot 3.x Command Reference Manual* for more information on the `test` and `test-all` commands.

`selftest` exercises most functionality of the adapter sub-section by sub-section and checks for the following conditions:

- Isolates faulty FRUs
- Checks, with a high confidence, that no hardware fault exists on No Trouble Found (NTF)
- Checks connectivity during adapter card installation
- Verifies that all components are functional

Ethernet FCode selftest Diagnostic

- **Type the following to run selftest using the test command:**

```
ok setenv diag-switch? true
ok test <device-path>
Hme register test -- succeeded.
Internal loopback test -- succeeded.
Transceiver check -- Using Onboard Transceiver - Link Up.
passed
Doing more loopback tests -- passed
ok
```

The following tests are run when the test command is executed:

- hme register
- MAC Internal Loopback
- 100 Mbps PHY Loopback
- 100 Mbps TP Loopback
- 10 Mbps XCVR Loopback

Interface Signals

This appendix lists the interface signals of the Sun FastEthernet PCI Adapter's connectors.

Sun FastEthernet PCI Adapter Connectors

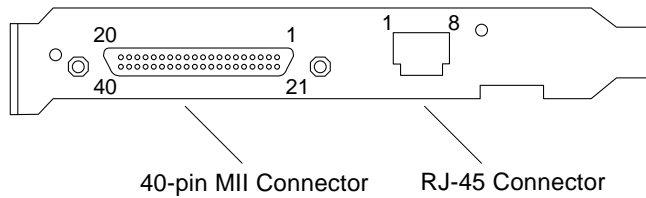


FIGURE B-1 Sun FastEthernet PCI Adapter Connectors

MII Connector Signals

TABLE B-1 MII Connector Signals

Pin	Signal	Pin	Signal
1	+5V	21	+5V
2	MDIO	22	GND
3	MDC	23	GND
4	RXD<3>	24	GND
5	RXD<2>	25	GND
6	RXD<1>	26	GND
7	RXD<0>	27	GND
8	RX_DV	28	GND
9	RX_CLK	29	GND
10	RX_ER	30	GND
11	TX_ER	31	GND
12	TX_CLK	32	GND
13	TX_EN	33	GND
14	TXD<0>	34	GND
15	TXD<1>	35	GND
16	TXD<2>	36	GND
17	TXD<3>	37	GND
18	COL	38	GND
19	CRS	39	GND
20	+5V	40	+5V

RJ-45 Connector Signals

TABLE B-2 RJ-45 Connector Signals

Pin	Signal
1	Transmit+
2	Transmit-
3	Receive+
4	No Connection
5	No Connection
6	Receive-
7	No Connection
8	No Connection

Specifications

Physical Characteristics

TABLE C-1 Physical Characteristics

Dimension	Measurement
Length (with bracket)	7.395 in (186.06 mm)
Width (with bracket)	4.759 in (120.88 mm)
Height (not including PCB):	
Primary component side	0.570 in. (14.48 mm)
Back side	0.105 in. (2.67 mm)
Weight	0.28 lb (127 g)

Power Requirements

TABLE C-2 Power Requirements

Specification	Measurement
Maximum power consumption	15 Watts
Voltage	5V +/- 5%
Ripple	Maximum 100 mV

Performance Specifications

TABLE C-3 Performance Specifications

Feature	Specification
PCI clock	33 MHz max.
PCI data burst transfer rate	132 MB/sec.
PCI data/Address lines	AD31-0
PCI modes	Master/slave
MII	25 MHz rate for 100 Mbps; 2.5 MHz rate for 10 Mbps Conforms to IEEE 802.3u Connects to TX, FX, AUI or any other MII-compatible external transceivers
100BASE-TX transfer rate	<= 100 Mbps (in each direction for full duplex)
10BASE-T transfer rate	<= 10 Mbps (in each direction for full duplex)

Ordering Sun Documents

SunDocsSM is a distribution program for technical documentation and is available from SunExpress. To order or for more information:

Country	Phone	Fax	Country	Phone	Fax
Belgium	02-72-09-09	02-72-88-50	Luxembourg	32-2-72-09-09	32-2-725-88-50
Canada	1-800-873-7869	1-800-944-0661	Sweden	020-79-57-26	020-79-57-27
France	0800-90-61-57	080-90-61-58	Switzerland	0800-55-19-26	0800-55-19-27
Germany	01-30-81-61-31	01-30-81-61-92	United Kingdom	0800-89-88-88	0800-89-88-87
Holland	06-022-34-45	06-022-34-46	United States	1-800-873-7869	1-800-944-0661
Japan	0120-33-9096	0120-33-9097			

World Wide Web: <http://www.sun.com/sunexpress/>

Sun Welcomes Your Comments

We are interested in improving our documentation and welcome your comments. Use the reader comment card or send comments via email to: smcc-docs@sun.com.

You can also send a fax to SMCC Doc Feedback at 1-415 786-6443.

Please include the part number of your document in the subject line of your email or fax message.

Reader Comment Card

For the Sun FastEthernet PCI Adapter Installation and User's Guide, part number 805-1759-10.

1. Were the procedures documented thoroughly? _____

 2. Were the illustrations helpful? _____

 3. Was the information accurate and easy to follow? _____

 4. Did you refer to this manual online? _____

 5. Additional comments. _____

- Your Name: _____
Title: _____
Company Name: _____
Address: _____
City: _____ State/Province: _____
Zip/Postal Code: _____ Country: _____
Email Address: _____
Telephone: _____

**AIR MAIL
PAR AVION**

IBRS/CCRI No. 808



NE PAS AFFRANCHIR

NO POSTAGE
NECESSARY
IF MAILED
TO THE
UNITED STATES

INTERNATIONAL BUSINESS REPLY MAIL/RESPONSE PAYEE

PERMIT NO. 808

MOUNTAIN VIEW CA

POSTAGE WILL BE PAID BY ADDRESSEE

INFORMATION PRODUCTS
M/S MPK14-108
SUN MICROSYSTEMS INC
2550 GARCIA AVE
MOUNTAIN VIEW CA 94043-9551
UNITED STATES OF AMERICA

