



# Sun™ Management Center 3.0 Supplement for Sun Fire™ 15K/12K Systems, Version 2

---

Sun Microsystems, Inc.  
4150 Network Circle  
Santa Clara, CA 95054 U.S.A.  
650-960-1300

Part No. 816-5007-11  
March 2003, Revision 02

Send comments about this document to: [docfeedback@sun.com](mailto:docfeedback@sun.com)

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Sun Microsystems, Inc. has intellectual property rights relating to technology embodied in the product that is described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the U.S. patents listed at <http://www.sun.com/patents> and one or more additional patents or pending patent applications in the U.S. and in other countries.

This document and the product to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of the product or of this document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, docs.sun.com, Solaris, Java, OpenBoot, Sun Management Center, Sun Fireplane, and Sun Fire are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries.

All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

---

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, Etats-Unis. Tous droits réservés.

Sun Microsystems, Inc. a les droits de propriété intellectuelle relatant à la technologie incorporée dans le produit qui est décrit dans ce document. En particulier, et sans la limitation, ces droits de propriété intellectuelle peuvent inclure un ou plus des brevets américains énumérés à <http://www.sun.com/patents> et un ou les brevets plus supplémentaires ou les applications de brevet en attente dans les Etats-Unis et dans les autres pays.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a.

Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, docs.sun.com, Solaris, Java, OpenBoot, Sun Management Center, Sun Fireplane, et Sun Firesont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.

Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciées de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ÉTAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.



# Contents

---

## **Preface xxiii**

Before You Read This Book xxiii

How This Book Is Organized xxiv

Using UNIX Commands xxv

Typographical Conventions xxv

Shell Prompts xxvi

Related Documentation xxvii

Accessing Sun Documentation Online xxviii

Sun Welcomes Your Comments xxviii

## **1. Introduction 1**

## **2. Installation and Setup 3**

Sun Fire 15K/12K System-Specific Packages 4

Preparing for Installation 5

    Choosing Server Machine 5

    Required Software Versions 5

    Network Port Configuration 6

Software Installation and Setup Summary 7

    Server Layers on Server Machine 9

Agent Layers on System Controllers and Sun Fire 15K/12K Domains	9
Console Layer and Basic Help on Workstations or Network	9
Installing and Setting Up Sun Management Center 3.0 Software	10
Installing From Downloaded Software	12
Stopping Server and Agents Running on Host Machine	12
Installing and Setting Up Server Machine	13
▼ To Install Core Software on Server Machine	13
▼ To Install Sun Fire 15K/12K Server Support on Server Machine	15
▼ To Set Up Software on Server Machine	16
Installing and Setting Up Sun Fire 15K/12K Domains	20
▼ To Install Core Software on Sun Fire 15K/12K Domains	20
▼ To Install Sun Fire 15K/12K Domain Agents	22
▼ To Set up Domain Agents	23
Installing and Setting Up System Controllers	26
▼ To Install Core Agent on System Controllers	27
▼ To Install Sun Fire 15K/12K Platform Agent on System Controllers	29
▼ To Set Up Software on System Controllers	30
Installing and Setting Up Workstations or Network	35
▼ To Install and Set Up Console Software on Workstations or Network	35
Installing Localized Versions of Sun Management Center Add-on Packages From the CD	37
▼ To Install Localized Packages	37
Reinstalling Sun Management Center 3.0 Software	38
Reinstalling Sun Fire 15K/12K Add-on Packages Only	38
Reconfiguring Sun Fire 15K/12K Setup Parameters	39
▼ To Rerun Setup Script	39
Starting Sun Management Center Software	41
▼ To Start Sun Management Center Software	41

Stopping and Exiting Sun Management Center Software	43
▼ To Stop Server and Agents	43
▼ To Exit Console	44
Sun Management Center Web Interface	44
Installation and Setup Log Files	44
<b>3. Security Access Setup</b>	<b>47</b>
Security Considerations for Defining Groups	47
Superuser Access	48
Name Service Switch	49
Network Name Service	49
Sun Management Center Groups	50
▼ To Add Users Into Sun Management Center User Groups	51
System Management Services Groups	52
▼ To Add Users Into System Management Services Groups	52
Using Sun Fire 15K/12K Modules	54
SMS Groups Required for PDSM Operations	54
Platform View Access Permissions	55
Domain View Access Permissions	55
Limit of 16 Group IDs for a User ID	56
<b>4. Sun Fire 15K/12K Topology Objects</b>	<b>57</b>
Sun Fire 15K/12K Platform Composites	57
▼ To Create a Sun Fire 15K/12K Composite Object	60
▼ To Discover a Sun Fire 15K/12K Composite	61
Updating a Sun Fire 15K/12K Platform Composite	62
▼ To Update Composite Created by Create Topology Object	63
▼ To Update Composite Created by Discovery	63
▼ To Troubleshoot Composite Failure	64

Sun Fire 15K/12K Platform Objects 65

▼ To Create a Sun Fire 15K/12K Platform Object 66

## 5. Sun Fire 15K/12K System Details Windows 67

Views Under the Hardware Tab 68

Hardware Summary 68

Physical View 68

Logical View 69

Sun Fire 15K/12K Platform Details Window 69

▼ To Find the Hardware Summary for the Sun Fire 15K/12K Platform 70

▼ To Find the Physical View of the Sun Fire 15K/12K Platform 73

▼ To Find the Logical View of the Sun Fire 15K/12K Platform 75

Sun Fire 15K/12K Domain Details Window 77

▼ To Find the Hardware Summary for a Sun Fire 15K/12K Domain 78

▼ To Find the Physical View of a Sun Fire 15K/12K Domain 79

▼ To Find the Logical View of a Sun Fire 15K/12K Domain 81

Sun Fire 15K/12K SC Details Window 82

▼ To Find the Hardware Summary for a Sun Fire 15K/12K System  
Controller 83

▼ To Find the Physical View of the Sun Fire 15K/12K System Controller 84

▼ To Find the Logical View of a Sun Fire 15K/12K System Controller 87

## 6. Sun Fire 15K/12K Agent Modules 89

Platform Modules Disabled 90

Sun Fire 15K/12K Module Properties 91

Sun Fire 15K/12K Module Alarm Rules 91

Platform Config Reader Module 92

Platform Config Reader Module Refresh 93

Platform Config Reader Properties 94

System	94
Centerplane	96
Expander Board	98
Centerplane Support Board	99
System Controller	100
System Controller Peripheral	102
Fan Tray	103
Power Supply	104
CPU Board	105
HPCI Board	107
HPCI+ Board	109
WPCI Board	112
MaxCPU Board	114
HPCI Cassette	116
Paroli Card	118
Processor	119
Memory Bank	120
DIMM	121
Domain	122
Discovery Object Table	124
Platform Config Reader Alarm Rules	125
Board Current Rule (scBCurr <sub>t</sub> )	125
Board Power Rule (scBPower)	125
Board Temperature Rule (scBTemp)	126
Board Voltage Rule (scBVolt)	127
Domain Stop and Record Stop Rule (scStop)	127
HPCI Cassette Rule (schPCId)	128
Failover State Rule (scFoStat)	128

OK/BAD/UNKNOWN State Rule (scOBURul)	129
OK/FAIL Rule (scOkFail)	130
ON/OFF Rule (scOnOff)	130
POST Status Rule (scPOST)	131
Power Supply Breaker Rule (scBreakr)	132
System Board DR State Rule (scDrStat)	132
System Board Test Status Rule (scBTest)	133
Domain Status Alarm Rule (scDmnSt)	133
Domain Bus Configuration Rule (scBusCfg)	136
Domain Config Reader Module	137
Domain Agent May Not Start on a Configuration With Many External Disks	138
▼ To Modify the agent-stats-d.def File	139
▼ To Modify Alarm Attributes for the Domain	139
Domain Config Reader Module Refresh Intervals	140
▼ To Refresh Domain Config Reader Data	140
Domain Config Reader Properties	140
System	141
CPU/Memory Board	141
HPCI/HPCI+ Board	142
WPCI Board	143
MaxCPU Board	144
HPCI Cassette	144
Paroli Card	146
Processor	147
Memory Controller	148
Memory Bank	149
DIMM	150



Disk Devices	151
Tape Devices	152
Network Interfaces	152
WCI	153
Domain Config Reader Alarm Rules	154
CPU Status Rule (scCPUStatus)	154
DIMM Error Count Rule (scDimmErrCnt)	154
Disk Error Count Rule (scDskErrCnt)	155
POST Status Rule (scPOSTStatus)	155
State Check Rule (scStateCheck)	156
Tape Error Count Rule (scTpeErrCnt)	156
Link Status Rule (scLnkSt)	157
Link Valid Rule (scLnkVld)	157
SC Config Reader Module	158
SC Config Reader Properties	159
System	160
CP 1500 Board	160
Processor	161
Memory Module	162
PCI Device	162
Disk Device	163
Tape Device	164
Network Interface	164
SC Config Reader Alarm Rules	165
Board Voltage Rule (cpBrdVolt)	165
CPU Status Rule (cpCPUStatus)	166
CPU Temperature Rule (cpCPUTemp)	166
Disk Error Count Rule (cpDskErrCnt)	167

Tape Error Count Rule (cpTpeErrCnt)	167
Platform/Domain State Management Module	168
Platform View	170
Platform Info	170
Platform Slot 0 Boards	171
Platform Slot 1 Boards	171
Platform Empty Slots	172
Power Supplies	173
Fan Trays	173
Domain X View	174
Domain X Info	174
Domain X Slot 0 Boards	175
Domain X Slot 1 Boards	175
Domain X Empty Slots	176
Dynamic Reconfiguration Module	177
Attachment Points	179
CPU/MEM	179
PCI/CPCI/HPCI IO	180
WPCI	181
CPCI/HPCI cards	182
SCSI	183
Empty Slots	184
MaxCPU	185
Dynamic Attachment Points	186
CPU Components	186
Memory Components	187
I/O Components	188
SCSI Components	189

SC Monitoring Module	190
SC Monitoring Properties—SC Daemon Process	192
SC Monitoring Alarm Rule—Process Down Rule ( <code>rDownProc</code> )	193
SC Status Module	194
SC Status Properties	195
SC Status Alarm Rule ( <code>rscstatus</code> )	196
Displaying Platform and Domain Log Files	196
<b>7. Platform/Domain State Management From the System Controller</b>	<b>197</b>
Prerequisites	198
SMS Commands Supported by PDSM	198
Platform Management Operations From the System Controller	199
Showing Platform Information	199
Adding a Board	200
▼ To Add a Board	200
Deleting a Board	201
▼ To Delete a Board	201
Moving a Board	202
▼ To Move a Board	202
Powering on a Board or Peripheral	203
▼ To Power on a Board or Peripheral	203
Powering off a Board or Peripheral	203
▼ To Power off a Board or Peripheral	203
Showing Status	204
▼ To Show Status	204
Domain Management Operations from the System Controller	205
Showing Domain Information from the System Controller	205
Adding a Board	206

- ▼ To Add a Board 206
    - Deleting a Board 207
  - ▼ To Delete a Board 207
    - Moving a Board 208
  - ▼ To Move a Board 208
    - Powering on a Board 209
  - ▼ To Power on a Board 209
    - Powering off a Board 210
  - ▼ To Power off a Board 210
    - Testing a Board 211
  - ▼ To Test a Board 211
    - Adding or Changing a Domain Tag 212
  - ▼ To Add or Change a Domain Tag 212
    - Deleting a Tag 213
  - ▼ To Delete a Domain Tag 213
    - Changing the Keyswitch Position 214
  - ▼ To Change the Keyswitch Position 214
    - Setting Up or Changing the Access Control List (ACL) 215
  - ▼ To Set Up or Change the Access Control List 215
    - Resetting a Domain 216
  - ▼ To Reset a Domain 216
    - Showing Status 216
  - ▼ To Show Status 217
- Possible Reasons for DR Operation Attempts Failing 217

## **8. Dynamic Reconfiguration From the Domain 219**

Prerequisites 219

Dynamic Reconfiguration Module 220

Attachment Points	222
Dynamic Attachment Points	222
Data Tables	223
Dynamic Reconfiguration Operations From the Domain	224
cfgadm Options Supported	225
Showing Domain Information From the Domain	225
Ensure Boards Are in a Domain's ACL	225
Assigning a Board	226
▼ To Assign a Board	226
Unassigning a Board	227
▼ To Unassign a Board	227
Attaching a System Board	228
▼ To Attach a System Board	228
Detaching a System Board	229
▼ To Detach a System Board	229
Connecting a Board	230
▼ To Connect a System Board	230
Disconnecting a Board	231
▼ To Disconnect a System Board Other Than a SCSI Board	231
▼ To Disconnect a SCSI Board	232
Configuring a Board, a Component, or Memory	233
▼ To Configure a System Board, a Component, or Memory	233
Unconfiguring a Board, a Component, or Memory	234
▼ To Unconfigure a System Board or a Component	234
▼ To Unconfigure Memory	235
Powering on a Board	236
▼ To Power on a Board	236

- Powering off a Board 237
- ▼ To Power off a Board 237
- Testing a Board 237
- ▼ To Test a Board 237
- Showing Status 238
- ▼ To Show Status 238

**Glossary 241**

**Index 249**

# Figures

---

FIGURE 2-1	Installation and Setup on Sun Fire 15K/12K Systems	8
FIGURE 4-1	Example of a Sun Fire 15K/12K Composite	61
FIGURE 5-1	Hardware Summary for a Sun Fire 15K/12K Platform	71
FIGURE 5-2	Sun Fire 15K/12K Platform Physical View—Front	74
FIGURE 5-3	Top of CPU Board in Platform Physical View	75
FIGURE 5-4	Sun Fire 15K/12K Platform Logical View	76
FIGURE 5-5	Hardware Summary for a Sun Fire 15K/12K Domain	78
FIGURE 5-6	Sun Fire 15K/12K Domain Physical View—Front	80
FIGURE 5-7	Top of HPCI Board in Domain Physical View	81
FIGURE 5-8	Sun Fire 15K/12K Domain Logical View	82
FIGURE 5-9	Hardware Summary for a Sun Fire 15K/12K System Controller	84
FIGURE 5-10	Sun Fire 15K/12K System Controller Physical View—Front	85
FIGURE 5-11	Top of System Controller Physical View	86
FIGURE 5-12	Sun Fire 15K/12K System Controller Logical View	88
FIGURE 6-1	Platform Config Reader Module	93
FIGURE 6-2	Domain Config Reader Module	138
FIGURE 6-3	SC Config Reader Module	159
FIGURE 6-4	Platform/Domain State Management (PDSM) Module	169
FIGURE 6-5	Dynamic Reconfiguration Module	178
FIGURE 6-6	SC Monitoring Module	191

FIGURE 6-7	SC Information Showing MAIN Status	195
FIGURE 8-1	Dynamic Reconfiguration Features	221
FIGURE 8-2	Detach Confirmation Box	229
FIGURE 8-3	Disconnect Dialog Box	231
FIGURE 8-4	Unconfigure Memory Dialog Box	235
FIGURE 8-5	Test Board Dialog Box	238
FIGURE 8-6	Unsuccessful Operation in Show Status for Domain DR Operation	239
FIGURE 8-7	Successful Operation in Show Status for Domain DR Operation	239



# Tables

---

TABLE 1-1	Sun Fire 15K/12K Agent Modules	1
TABLE 2-1	Sun Management Center Packages for the Sun Fire 15K/12K Systems	4
TABLE 2-2	Required Software Versions	5
TABLE 2-3	Default Sun Management Center Port Addresses	6
TABLE 2-4	Sun Fire 15K/12K System Hosts and Installed Layers	10
TABLE 2-5	Directory Structure for Add-on Software, Documentation, and Adapter Script	12
TABLE 3-1	Default Sun Management Center Administrative Groups	50
TABLE 3-2	Default SMS Administrative Groups	52
TABLE 3-3	Sun Fire 15K/12K Modules and Administrative Groups	54
TABLE 3-4	Sun Fire 15K/12K Platform View Management Operations and Access	55
TABLE 3-5	Sun Fire 15K/12K Domain View Management Operations and Access	55
TABLE 4-1	Sun Fire 15K/12K Icons	58
TABLE 5-1	Sun Fire 15K/12K Agent Modules Viewable from the Details Windows	67
TABLE 5-2	Sun Fire 15K/12K Platform Information	72
TABLE 5-3	Sun Fire 15K/12K Platform Hardware Resources	72
TABLE 5-4	Sun Fire 15K/12K Domain Hardware Summary	79
TABLE 5-5	Sun Fire 15K/12K SC Hardware Summary	84
TABLE 6-1	Summary of Sun Fire 15K/12K Agent Modules	89
TABLE 6-2	Required SMS Daemons for Platform Modules	90
TABLE 6-3	Sun Fire 15K/12K Platform Config Reader System	94

TABLE 6-4	Sun Fire 15K/12K Platform Config Reader Centerplane	96
TABLE 6-5	Sun Fire 15K/12K Platform Config Reader Expander Board	98
TABLE 6-6	Sun Fire 15K/12K Platform Config Reader Centerplane Support Board	99
TABLE 6-7	Sun Fire 15K/12K Platform Config Reader System Controller	100
TABLE 6-8	Sun Fire 15K/12K Platform Config Reader System Controller Peripheral	102
TABLE 6-9	Sun Fire 15K/12K Platform Config Reader Fan Tray	103
TABLE 6-10	Sun Fire 15K/12K Platform Config Reader Power Supply	104
TABLE 6-11	Sun Fire 15K/12K Platform Config Reader CPU Board	105
TABLE 6-12	Sun Fire 15K/12K Platform Config Reader HPCI Board	107
TABLE 6-13	Sun Fire 15K/12K Platform Config Reader HPCI+ Board	109
TABLE 6-14	Sun Fire 15K/12K Platform Config Reader WPCI Board	112
TABLE 6-15	Sun Fire 15K/12K Platform Config Reader MaxCPU Board	114
TABLE 6-16	Sun Fire 15K/12K Platform Config Reader HPCI Cassette	117
TABLE 6-17	Sun Fire 15K/12K Platform Config Reader Paroli Card	118
TABLE 6-18	Sun Fire 15K/12K Platform Config Reader Processor	119
TABLE 6-19	Sun Fire 15K/12K Platform Config Reader Power Memory Bank	120
TABLE 6-20	Sun Fire 15K/12K Platform Config Reader DIMM	121
TABLE 6-21	Sun Fire 15K/12K Platform Config Reader Domain	122
TABLE 6-22	Sun Fire 15K/12K Platform Config Reader Discovery Object Table	124
TABLE 6-23	Sun Fire 15K/12K Platform Config Reader Board Current Rule	125
TABLE 6-24	Sun Fire 15K/12K Platform Config Reader Board Power Rule	125
TABLE 6-25	Sun Fire 15K/12K Platform Config Reader Board Temperature Rule	126
TABLE 6-26	Sun Fire 15K/12K Platform Config Reader Board Voltage Rule	127
TABLE 6-27	Sun Fire 15K/12K Platform Config Reader Domain Stop and Record Stop Rule	127
TABLE 6-28	Sun Fire 15K/12K Platform Config Reader HPCI Cassette Rule	128
TABLE 6-29	Sun Fire 15K/12K Platform Config Reader Failover State Rule	128
TABLE 6-30	Sun Fire 15K/12K Platform Config Reader OK/BAD/UNKNOWN State Rule	129
TABLE 6-31	Sun Fire 15K/12K Platform Config Reader OK/FAIL Rule	130
TABLE 6-32	Sun Fire 15K/12K Platform Config Reader ON/OFF Rule	130
TABLE 6-33	Sun Fire 15K/12K Platform Config Reader POST Status Rule	131

TABLE 6-34	Sun Fire 15K/12K Platform Config Reader Power Supply Breaker Rule	132
TABLE 6-35	Sun Fire 15K/12K Platform Config Reader System Board DR State Rule	132
TABLE 6-36	Sun Fire 15K/12K Platform Config Reader System Board Test Status Rule	133
TABLE 6-37	Sun Fire 15K/12K Platform Config Reader Domain Status Alarm Rule	133
TABLE 6-38	Sun Fire 15K/12K Platform Config Reader Domain Bus Configuration Rule	136
TABLE 6-39	Sun Fire 15K/12K Domain Config Reader System	141
TABLE 6-40	Sun Fire 15K/12K Domain Config Reader CPU/Memory Board	141
TABLE 6-41	Sun Fire 15K/12K Domain Config Reader HPCI/HPCI+ Board	142
TABLE 6-42	Sun Fire 15K/12K Domain Config Reader WPCI Board	143
TABLE 6-43	Sun Fire 15K/12K Domain Config Reader MaxCPU Board	144
TABLE 6-44	Sun Fire 15K/12K Domain Config Reader HPCI Cassette	144
TABLE 6-45	Sun Fire 15K/12K Domain Config Reader Paroli Card	146
TABLE 6-46	Sun Fire 15K/12K Domain Config Reader Processor	147
TABLE 6-47	Sun Fire 15K/12K Domain Config Reader Memory Controller	148
TABLE 6-48	Sun Fire 15K/12K Domain Config Reader Memory Bank	149
TABLE 6-49	Sun Fire 15K/12K Domain Config Reader DIMM	150
TABLE 6-50	Sun Fire 15K/12K Domain Config Reader Disk Devices	151
TABLE 6-51	Sun Fire 15K/12K Domain Config Reader Tape Devices	152
TABLE 6-52	Sun Fire 15K/12K Domain Config Reader Network Interfaces	152
TABLE 6-53	Sun Fire 15K/12K Domain Config Reader WCI	153
TABLE 6-54	Sun Fire 15K/12K Domain Config Reader CPU Status Rule	154
TABLE 6-55	Sun Fire 15K/12K Domain Config Reader DIMM Error Count Rule	154
TABLE 6-56	Sun Fire 15K/12K Domain Config Reader Disk Error Count Rule	155
TABLE 6-57	Sun Fire 15K/12K Domain Config Reader POST Status Rule	155
TABLE 6-58	Sun Fire 15K/12K Domain Config Reader State Check Rule	156
TABLE 6-59	Sun Fire 15K/12K Domain Config Reader Tape Error Count Rule	156
TABLE 6-60	Sun Fire 15K/12K Domain Config Reader Link Status Rule	157
TABLE 6-61	Sun Fire 15K/12K Domain Config Reader Link Valid Rule	157
TABLE 6-62	Sun Fire 15K/12K SC Config Reader System	160
TABLE 6-63	Sun Fire 15K/12K SC Config Reader CP 1500 Board	160

TABLE 6-64	Sun Fire 15K/12K SC Config Reader Processor	161
TABLE 6-65	Sun Fire 15K/12K SC Config Reader Memory Module	162
TABLE 6-66	Sun Fire 15K/12K SC Config Reader PCI Device	162
TABLE 6-67	Sun Fire 15K/12K SC Config Reader Disk Device	163
TABLE 6-68	Sun Fire 15K/12K SC Config Reader Tape Device	164
TABLE 6-69	Sun Fire 15K/12K SC Config Reader Network Interface	164
TABLE 6-70	Sun Fire 15K/12K SC Config Reader Board Voltage Rule	165
TABLE 6-71	Sun Fire 15K/12K SC Config Reader CPU Status Rule	166
TABLE 6-72	Sun Fire 15K/12K SC Config Reader CPU Temperature Rule	166
TABLE 6-73	Sun Fire 15K/12K SC Config Reader Disk Error Count Rule	167
TABLE 6-74	Sun Fire 15K/12K SC Config Reader Tape Error Count Rule	167
TABLE 6-75	Sun Fire 15K/12K PDSM Module Platform Info	170
TABLE 6-76	Sun Fire 15K/12K PDSM Module Platform Slot 0 Boards	171
TABLE 6-77	Sun Fire 15K/12K PDSM Module Platform Slot 1 Boards	171
TABLE 6-78	Sun Fire 15K/12K PDSM Module Platform Empty Slots	172
TABLE 6-79	Sun Fire 15K/12K PDSM Module Platform Power Supplies	173
TABLE 6-80	Sun Fire 15K/12K PDSM Module Platform Fan Trays	173
TABLE 6-81	Sun Fire 15K/12K PDSM Module Domain X Info	174
TABLE 6-82	Sun Fire 15K/12K PDSM Module Domain X Slot 0 Boards	175
TABLE 6-83	Sun Fire 15K/12K PDSM Module Domain X Slot 1 Boards	175
TABLE 6-84	Sun Fire 15K/12K PDSM Module Domain X Empty Slots	176
TABLE 6-85	Attachment Point Properties for a CPU/MEM Board	179
TABLE 6-86	Attachment Point Properties for a PCI/CPCI/HPCI IO Board	180
TABLE 6-87	Attachment Point Properties for a WPCI Board	181
TABLE 6-88	Attachment Point Properties for a CPCI/HPCI card	182
TABLE 6-89	Attachment Point Properties for a SCSI	183
TABLE 6-90	Attachment Point Properties for Empty Slots	184
TABLE 6-91	Sun Fire 15K/12K Attachment Point Properties for a MaxCPU Board	185
TABLE 6-92	Dynamic Attachment Point Properties for CPU Components	186
TABLE 6-93	Dynamic Attachment Point Properties for Memory Components	187

TABLE 6-94	Dynamic Attachment Point Properties for I/O Components	188
TABLE 6-95	Dynamic Attachment Point Properties for SCSI Components	189
TABLE 6-96	Sun Fire 15K/12K SC Daemon Process	192
TABLE 7-1	SMS CLI Commands Supported by PDSM	198
TABLE 8-1	Dynamic Reconfiguration Data Table Format	223
TABLE 8-2	cfgadm Options Supported by Dynamic Reconfiguration	225



# Preface

---

This *Sun™ Management Center 3.0 Supplement for Sun Fire™ 15K/12K Systems* provides instructions on how to install, configure, and use Sun Management Center software on the Sun Fire 15K/12K systems.

This supplement is intended for Sun Fire 15K/12K system administrators who install and use the Sun Management Center software to monitor and manage their Sun Fire 15K/12K systems.

The Sun Management Center 3.0 software and documents for Sun Fire 15K/12K systems are not available in any language other than English for this release.

---

## Before You Read This Book

Read this supplement after the *Sun Management Center 3.0 Software Installation Guide*, which provides instructions for installing Sun Management Center 3.0 software and the *Sun Management Center 3.0 Software User's Guide*, which provides instructions for configuring and using Sun Management Center software.

---

**Note** – For the latest information about this product, go to the Sun Management Center Web site at <http://www.sun.com/sunmanagementcenter>.

---

---

# How This Book Is Organized

Chapter 1 introduces Sun Management Center software on the Sun Fire 15K/12K systems.

Chapter 2 describes how to install, set up, start, stop, uninstall, reinstall, and reconfigure Sun Management Center software on the Sun Fire 15K/12K systems. Use this chapter with the *Sun Management Center 3.0 Software Installation Guide*.

Chapter 3 describes how to set up administrative access security for Sun Management Center on the Sun Fire 15K/12K systems.

Chapter 4 describes how to create, modify, and discover Sun Fire 15K/12K system topology objects.

Chapter 5 describes platform, system controller, and domain data, which is specific to Sun Fire 15K/12K systems and is shown in the respective Details window.

Chapter 6 describes briefly each property and the alarm rules used by the Sun Fire 15K/12K systems add-on components.

Chapter 7 describes how to use the dynamic reconfiguration and other management commands from the Platform/Domain State Management (PDSM) module, which is based on the System Management Services (SMS) commands.

Chapter 8 describes how to use the dynamic reconfiguration and other management commands from the Dynamic Reconfiguration (DR) module, which is based on the configuration administration `cfgadm(1M)` command.

The glossary defines abbreviations and acronyms used in this supplement and in the Sun Management Center graphical user interface (GUI) for Sun Fire 15K/12K system-specific modules.

A comprehensive index helps find information quickly in this supplement.

To view license terms, attribution, and copyright statements for open source software included in this release, the default path is:

```
/cdrom/sunmc_3_0_sparc/image/Webserver/Solaris_9/SUNWtcatr \
/install/copyright
```

If you are using Solaris 8 software, substitute `Solaris_8` for `Solaris_9` in the path.



---

# Using UNIX Commands

This document may not contain information on basic UNIX® commands and procedures such as shutting down the system, booting the system, and configuring devices.

Refer to one or more of the following for this information:

- *Solaris Handbook for Sun Peripherals*
- Online documentation for the Solaris™ operating environment
- Other software documentation included with your system

---

# Typographical Conventions

Typeface <sup>1</sup>	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
<b>AaBbCc123</b>	What you type, when contrasted with on-screen computer output	% <b>su</b> Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized	Read Chapter 6 in the <i>Users Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this.
	Replace command-line variables with real names or values.	To delete a file, type <code>rm filename</code> .

---

1. The settings on your browser might differ from these settings.

---

# Shell Prompts

Shell	Prompt
C shell	<i>machine_name: directory task_no %</i>
C shell superuser	<i>machine_name#</i>
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

---

# Related Documentation

---

<b>Application</b>	<b>Title</b>	<b>Part Number</b>
Overview	<i>Sun Fire 15K/12K Software Overview Guide</i>	816-4958
Preinstallation	<i>Sun Management Center 3.0 Configuration and Deployment Guide</i> at <a href="http://www.sun.com/solaris/sunmanagementcenter/docs/config-deploy3.0.guide.html">http://www.sun.com/solaris/sunmanagementcenter/docs/config-deploy3.0.guide.html</a>	n/a
Installation	<i>Sun Management Center 3.0 Software Installation Guide</i>	806-5943
Usage	<i>Sun Management Center 3.0 Software User's Guide</i>	806-5942
Issues, Limitations, and Bugs	<i>Sun Management Center 3.0 Software Release Notes</i>	806-5944
Issues, Limitations, and Bugs for Platform Update 4	<i>Sun Management Center 3.0 Platform Update 4 Software Release Notes</i>	816-2700
Issues, Patches, Limitations, and Bugs for the Sun Fire 15K/12K Systems	<i>Sun Management Center 3.0 Platform Update 4 Release Notes for Sun Fire 15K/12K Systems, Version 2</i>	816-5008
Solaris 8 or 9 Reference	Sun Solaris 8 or 9 Reference Manual Collection at <a href="http://docs.sun.com">docs.sun.com</a>	n/a
Issues, Limitations, and Bugs for SMS and SMS DR	<i>System Management Services (SMS) 1.3 Installation Guide and Release Notes for the Sun Fire 15K/12K System</i>	816-5320 816-5321
SMS Reference	<i>System Management Services (SMS) 1.3 Reference Manual for the Sun Fire 15K/12K System</i>	816-5319
SMS Administration	<i>System Management Services (SMS) 1.3 Administrator Guide for the Sun Fire 15K/12K System</i>	816-5318
Issues, Limitations, and Bugs for Sun Fire 15K/12K DR	<i>Sun Fire 15K/12K Dynamic Reconfiguration Release Notes</i>	816-5080
Sun Fire 15K/12K DR	<i>Sun Fire 15K/12K Dynamic Reconfiguration User Guide</i>	816-5075
SMS DR	<i>System Management Services (SMS) 1.3 Dynamic Reconfiguration User Guide</i>	816-5076

---

<b>Application</b>	<b>Title</b>	<b>Part Number</b>
Hardware	<i>Sun Fire 15K/12K Systems Service Manual</i>	806-3512
luxadm	<i>Platform Notes: Using luxadm Software</i>	816-5074
Netra Servers	<i>Sun Management Center 3.0 Supplement for Netra Servers</i>	816-3407
Starfire Servers	<i>Sun Management Center 3.0 Supplement for Starfire Servers</i>	806-7231
Sun Fire 6800, 4810, 4800, and 3800 Systems	<i>Sun Management Center 3.0 Supplement for Sun Fire 6800, 4810, 4800, and 3800 Systems</i>	816-2703
Sun Fire™ Link Installation	<i>Sun Fire Link Software Installation Guide</i>	806-1405
Sun Fire™ Link Administration	<i>Sun Fire Link Fabric Administrator's Guide</i>	806-1405
Workgroup Servers	<i>Sun Management Center 3.0 Supplement for Workgroup Servers</i>	816-1581
Workstations	<i>Sun Management Center 3.0 Supplement for Workstations</i>	806-7146
Advanced System Monitoring (ASM)	<i>SPARCengine ASM Reference Manual</i>	805-7581

---

## Accessing Sun Documentation Online

You can view, print, or purchase a broad selection of Sun documentation, including localized versions, at:

<http://www.sun.com/documentation>

---

## Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

[docfeedback@sun.com](mailto:docfeedback@sun.com)

Please include the part number (816-5007-11) of your document in the subject line of your email.



# Introduction

---

Sun Management Center 3.0 software is an open, extensible system monitoring and management application that uses Java™ software protocol and Simple Network Management Protocol (SNMP) to provide an integrated and comprehensive enterprise-wide management of Sun™ products and their subsystems, components, and peripheral devices.

The add-on Sun Fire 15K/12K packages provide support for the Sun Fire 15K/12K platforms, system controllers, and domains. For the Sun Fire 15K/12K platforms, hardware configuration information resides on both system controllers (SCs), currently CP 1500s, and on each of the individual platform domains (up to 18 for the Sun Fire 15K system and up to 9 for the Sun Fire 12K system). Hardware configuration information, process monitoring, and management operations for the Sun Fire 15K/12K systems are provided by the Sun Fire 15K/12K agent modules listed in TABLE 1-1:

**TABLE 1-1** Sun Fire 15K/12K Agent Modules

<b>Agent Modules</b>	<b>Description</b>
Platform Config Reader (PCR)	Provides information about the hardware configuration for the entire Sun Fire 15K/12K platform
Platform/Domain State Management (PDSM)	Enables an administrator to perform platform and domain management, and global dynamic reconfiguration of system boards across the platform
Domain Config Reader (DCR)	Provides the hardware configuration for Sun Fire 15K/12K domains
Dynamic Reconfiguration (DR)	Enables an administrator to perform dynamic reconfiguration of boards on one domain at a time

**TABLE 1-1** Sun Fire 15K/12K Agent Modules (*Continued*)

<b>Agent Modules</b>	<b>Description</b>
SC Config Reader	Provides the hardware configuration for the Sun Fire 15K/12K system controllers
SC Monitoring (SCM)	Monitors the System Management Services (SMS) daemons on the active Sun Fire 15K/12K system controller
SC Status	Determines whether a Sun Fire 15K/12K system controller is the main or spare system controller

Refer to Chapter 1 of the *Sun Management Center 3.0 Software User's Guide*, which includes definitions, explanations, and diagrams that clarify the Sun Management Center architecture. Review that chapter whenever you have questions about how consoles, servers, agents, domains, and modules interact.



## Installation and Setup

---

This chapter describes how to install, set up, start, stop, uninstall, reinstall, and reconfigure the Sun Management Center 3.0 software for the Sun Fire 15K/12K systems.

The Sun Management Center software is divided into:

- Core packages that provide the Sun Management Center infrastructure and basic support
- Add-on components that provide support for particular hardware platforms
- Licensed add-on products for additional features

Sun Fire 15K/12K support requires the Sun Management Center 3.0 core packages and the add-on Sun Fire 15K/12K packages. The *Sun Management Center 3.0 Software Installation Guide* describes basic information about installing and setting up the Sun Management Center 3.0 core packages and starting and stopping the software. This chapter describes the processes specifically related to the Sun Fire 15K/12K systems.



---

**Caution** – Use the installation script (`es-inst`) and the setup scripts (`es-setup`) provided with the Sun Management Center 3.0 software. Do *not* manually add packages or manually change configuration files.

---

Your Sun Management Center 3.0 installation and setup scripts may not display exactly the same messages in exactly the same sequence as the examples shown in this chapter. However, these examples show the basic messages you will receive in approximately the sequence you will receive them. Your actual installation and setup scripts depend on the add-on components you choose to install and other choices you make.

---

# Sun Fire 15K/12K System-Specific Packages

The Sun Fire 15K/12K system-specific packages received with the Sun Management Center 3.0 basic functionality, and the minimum size required for installation in kilobytes (KB) are listed in TABLE 2-1. Refer to the *Sun Management Center 3.0 Software Installation Guide* for information about general Sun Management Center prerequisites, including minimum disk space requirements.

**TABLE 2-1** Sun Management Center Packages for the Sun Fire 15K/12K Systems

<b>Package</b>	<b>Description</b>	<b>Size (KB)</b>
SUNWesscp	Sun Management Center Sun Fire 15K/12K Platform Agent Support	2558 KB
SUNWesscd	Sun Management Center Sun Fire 15K/12K Domain Agent Support	1838 KB
SUNWscsca	Sun Management Center Sun Fire 15K/12K System Controller Agent Support	1500 KB
SUNWesscs	Sun Management Center Sun Fire 15K/12K Server Support	1500 KB
SUNWscscs	Sun Management Center Sun Fire 15K/12K System Controller Server Support	128 KB
SUNWesscg	Sun Management Center Sun Fire 15K/12K Common Support (Master Setup and Uninstall Scripts)	15 KB
SUNWesadf	Sun Management Center Agent Support for Dynamic Reconfiguration on Sun Fire 15K/12K/6800/4810/4800/3800 systems	176 KB
SUNWescdf	Sun Management Center Console Support for Dynamic Reconfiguration on Sun Fire 15K/12K/6800/4810/4800/3800 systems	160 KB
SUNWessdf	Sun Management Center Server Support for Dynamic Reconfiguration on Sun Fire 15K/12K/6800/4810/4800/3800 systems	140 KB
SUNWensca	Sun Management Center Sun Fire 15K/12K Message Files	88 KB

---

# Preparing for Installation

Your Sun Fire 15K/12K system must meet certain requirements before you install Sun Management Center 3.0 software. These requirements are explained in this section.

## Choosing Server Machine

Before installing the Sun Management Center software, determine which server is to be the Sun Management Center server machine. The server must have a minimum of 256 megabytes of memory available. The server should be a system with high availability. When the Sun Management Center server is down, you will *not* be able to use Sun Management Center software to manage your system. Refer to the *Sun Management Center 3.0 Configuration and Deployment Guide* for more information about server machine requirements.

## Required Software Versions

TABLE 2-2 lists the software versions required for Sun Fire 15K/12K platform support.

TABLE 2-2 Required Software Versions

Host	Required Software	Version
Server machine	Solaris operating environment	8, 9
	Sun Management Center base software	3.0
	Sun Fire 15K/12K add-on software	3.5
System controllers	Solaris operating environment	8, 9
	System Management Services (SMS)	1.3
	Sun Management Center base software	3.0
	Sun Fire 15K/12K add-on software	3.5
Sun Fire 15K/12K domains	Solaris operating environment	8, 9
	Sun Management Center base software	3.0
	Sun Fire 15K/12K add-on software	3.5

**TABLE 2-2** Required Software Versions (*Continued*)

Host	Required Software	Version
Workstations (for console layer)	Solaris operating environment	2.6, 2.7, 8, 9
	Sun Management Center base software	3.0
	Sun Fire 15K/12K add-on software	3.5



**Caution** – Sun Management Center software may terminate or print error messages if a new version of the SMS software is installed on the system controller, but the Sun Management Center software is not upgraded to a compatible release. Be sure that you restart the Sun Management Center software on the system controller after you upgrade the SMS software. If need be, upgrade your Sun Management Center software to a compatible release.

## Network Port Configuration

Sun Management Center software requires network ports to communicate with various components of the system. The default port addresses for these components are listed in TABLE 2-3:

**TABLE 2-3** Default Sun Management Center Port Addresses

Layer	Component	Default Port Number
Agent	Agent	161
Server	Trap handler	162
Server	Event manager	163
Server	Topology manager	164
Server	Configuration server	165
Agent	Platform agent	166
Server	Metadata	168

In some cases, this default port configuration conflicts with software already running on your system. Some Sun Fire 15K/12K domains might have port 161 conflicts because of the presence of legacy SMNP agents. During the Sun Management Center software setup, specify an alternate network port to avoid this conflict. Refer to the *Sun Management Center 3.0 Software Installation Guide* for further information about solving port conflicts.

To create and access topology objects, the Sun Management Center agent layer software uses port 161 by default. If you configure an agent to use an alternate port, you must specify that port when the topology object is created or discovered. To simplify your Sun Management Center network configuration and management and enable more efficient discovery of Sun Management Center agents, select an alternate port number and use that number for all agent installations that cannot use the default port configuration.


The Sun Fire 15K/12K system controller has two Sun Management Center agents: the agent and the platform agent. The agent provides information about the system controller and the platform agent provides information about the Sun Fire 15K/12K systems. Usually there are no port conflicts with the default port configuration for the platform agent. When a platform topology object is created or discovered, the correct default port is provided and does not need to be specified.

---

## Software Installation and Setup Summary

This section summarizes the procedures for installing and setting up Sun Management Center 3.0 software on Sun Fire 15K/12K systems. FIGURE 2-1 illustrates the Sun Management Center software that needs to be installed on the Sun Fire 15K/12K system controllers and other hosts.


### Sun Fire 15K/12K System Controllers

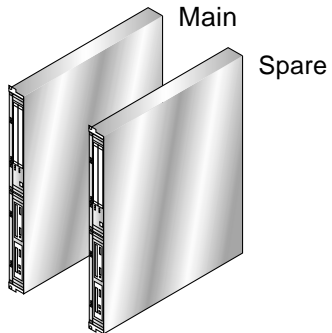

- Core Sun Management Center agent layer
- Sun Fire 15K/12K platform agent and system controller add-on components


### Sun Management Center Server

(can be any host with 256 MB of RAM)

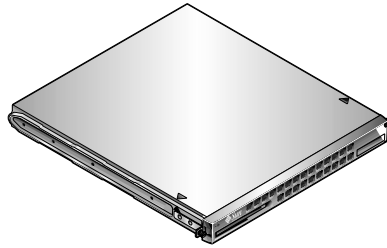

- Core Sun Management Center server layer and *optional* agent layer
- Sun Fire 15K/12K server and system controller server add-on components


### Sun Fire 15K/12K Domains

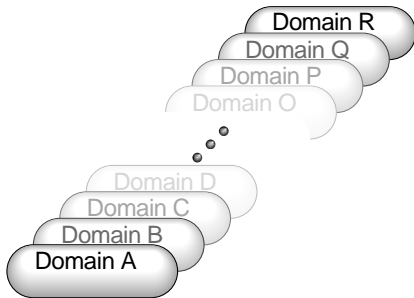

- Core Sun Management Center agent layer
- Sun Fire 15K/12K domain agent add-on component

### Workstations

(or a common network location)

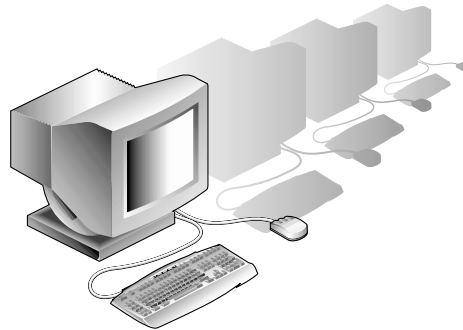

- Core Sun Management Center console layer and basic help component

FIGURE 2-1 Installation and Setup on Sun Fire 15K/12K Systems

## Server Layers on Server Machine

Following is a summary of the procedures for installing Sun Management Center 3.0 software on the server machine.

- Install and set up the Sun Management Center 3.0 core server layer and Sun Fire 15K/12K and system controller server add-on components on the designated Sun Management Center server machine.
- *(Optional)* Install and set up the Sun Management Center 3.0 core agent layer on the Sun Management Center 3.0 server machine if you want to monitor the server machine itself.

## Agent Layers on System Controllers and Sun Fire 15K/12K Domains

Following is a summary of the procedures for installing and setting up Sun Management Center 3.0 software on the system controllers and Sun Fire 15K/12K domains:

1. Install and set up the Sun Management Center 3.0 core agent layer and Sun Fire 15K/12K domain agent add-on component for each Sun Fire 15K/12K domain you want to monitor.
2. Install and set up the Sun Management Center 3.0 core agent layer and the Sun Fire 15K/12K platform agent and system controller add-on components on the main and spare system controllers.

## Console Layer and Basic Help on Workstations or Network

Following is a summary of the procedures for installing Sun Management Center 3.0 software on workstations or the network:

- Install and set up the Sun Management Center 3.0 core console layer and basic help component on a common network location or on each workstation from which you want to monitor by using the GUI.

---

# Installing and Setting Up Sun Management Center 3.0 Software

For Sun Fire 15K/12K system support, install and set up the Sun Management Center 3.0 software on the Sun Fire 15K/12K system hosts as shown in TABLE 2-4. The *Sun Management Center 3.0 Software Installation Guide* provides information about installing and setting up the core software. It also provides instructions for starting and stopping Sun Management Center 3.0 software. The sections following TABLE 2-4 provide instructions for installing and setting up the Sun Management 3.0 software on the various hosts in the Sun Fire 15K/12K systems.

**TABLE 2-4** Sun Fire 15K/12K System Hosts and Installed Layers

Host	Layer	Installed Software
Sun Management Center server machine	Server	Core Sun Management Center server layer Core Sun Management Center agent layer ( <i>optional</i> ) Sun Fire 15K/12K server add-on component Sun Fire 15K/12K system controller server add-on component Sun Fire 15K/12K/6800/4810/4800/3800 server DR support Sun Fire 15K/12K common support Sun Fire 15K/12K message files
Sun Fire 15K/12K domains	Agent	Core Sun Management Center agent layer Sun Fire 15K/12K domain agent add-on component Sun Fire 15K/12K common support Sun Fire 15K/12K message files



**TABLE 2-4** Sun Fire 15K/12K System Hosts and Installed Layers *(Continued)*

Host	Layer	Installed Software
Main SC	Agent	Core Sun Management Center agent layer Sun Fire 15K/12K platform agent add-on component Sun Fire 15K/12K system controller add-on component Sun Fire 15K/12K/6800/4810/4800/3800 agent DR support Sun Fire 15K/12K common support Sun Fire 15K/12K message files No other Sun Management Center layers should be installed here.
Spare SC	Agent	Core Sun Management Center agent layer Sun Fire 15K/12K platform agent add-on component Sun Fire 15K/12K system controller add-on component Sun Fire 15K/12K/6800/4810/4800/3800 agent DR support Sun Fire 15K/12K common support Sun Fire 15K/12K message files No other Sun Management Center layers should be installed here.
Workstations or common network location	Console	Core Sun Management Center console layer and basic help component Sun Fire 15K/12K/6800/4810/4800/3800 console DR support

# Installing From Downloaded Software

The `sunmanagementcenter_sunfiresupplements_3_03` directory contains the software, documentation, and adapter script necessary for installing and using Sun Management Center 3.0 software with the Sun Fire 15K/12K systems for this release. The directory structure is listed in TABLE 2-5.

**TABLE 2-5** Directory Structure for Add-on Software, Documentation, and Adapter Script

<b>disk1</b>	<b>disk2</b>	<b>disk3</b>	<b>adapter_script</b>
image	image	Docs	README.txt adapter script
Addons	Addons	sunfire_15k	
Add-on package structure	SerengetiDomDR Sun-Fire-15000	Supplement PDF file Release Notes PDF file	

Following is a brief description of the contents of each second level directory.

- `disk1` contains the add-on package structure.
- `disk2` contains these Sun Fire 15K/12K software packages:
  - `SerengetiDomDR`—Support for Sun Fire 15K/12K dynamic reconfiguration
  - `Sun-Fire-15000`—Support for Sun Fire 15K/12K systems
- `disk3` contains the supplemental documentation for Sun Fire 15K/12K for this release.
  - *Sun Management Center 3.0 Supplement Platform Update 4 for Sun Fire 15K/12K Systems, Version 2* (PN 816-5007-11)
  - *Sun Management Center 3.0 Platform Update 4 Release Notes for Sun Fire 15K/12K Systems, Version 2* (PN 816-5008-11)
- `adapter_script` contains the adapter script, which enables you to run the Sun Fire 15K/12K add-ons for this release with Sun Management Center 3.0 software, and a README file with instructions for using the adapter script.

## Stopping Server and Agents Running on Host Machine

If the Sun Management Center server or any agents are already running on a host where you are going to install Sun Management Center software, stop them first (see “Stopping and Exiting Sun Management Center Software” on page 43).

# Installing and Setting Up Server Machine

This section describes how to install and set up Sun Management Center 3.0 software on the Sun Management Center dedicated server machine.

---

**Note** – When setting up or installing the Sun Management Center software, type **y** for yes, **n** for no, or **q** to quit.

---

## ▼ To Install Core Software on Server Machine

1. Log in as superuser on the server machine.
2. Change the directory to the *PUn\_path/sbin* directory, where *n* is the number of the Platform Update, and *PUn\_path* is the location of the Sun Management Center 3.0 Platform Update *n*(1 of 3) CD or the disk copy of the CD.

```
# cd PUn_path/sbin
```

3. Start the installation by entering:

```
# ./es-inst
```

The system displays this message:

```
Please enter the target directory [/opt]:
```

4. Press Return to accept the default directory of */opt* or type another directory where the Sun Management Center 3.0 core software is to be installed.

---

**Note** – If you type your own directory, be sure you replace your directory for /opt in any path in subsequent instructions.

---

The system displays this message:

```
Select one of the following:

(1) Production Environment (PE)
(2) Developer Environment (DE)

Enter your choice: [1|2]
```

**5. Type 1 for the Production Environment.**

The system displays the following message:

```
Production Environment Installation
-----
There are 3 layers for your selection:
Do you want to install components in layer: Server Layer? [y|n|q]
Do you want to install components in layer: Agent Layer? [y|n|q]
Do you want to install components in layer: Console Layer? [y|n|q]
```

**6. Type y to install the Server Layer. Type n to not install the Agent Layer and Console Layer.**

After the system finishes installing the core software, the system displays a similar message to this, depending on your system configuration:

```
=====
Sun Management Center 3.0 Addons Product Selection:
=====

Do you want to install the product: Advanced System Monitoring? [y|n|q]
Do you want to install the product: Premier Management Applications? [y|n|q]
Do you want to install the product: Monitoring and Management of A5x00 and T3
devices [y|n|q]
Do you want to install the product: Sun Fire 15K/12K Monitoring? [y|n|q]
Do you want to install the product: System Reliability Manager Product? [y|n|q]
Do you want to install the product: Sun Management Center Integration for
Unicenter TNG? [y|n|q]
```

7. The only product listed in the preceding box that is essential for monitoring the Sun Fire 15K/12K systems is Sun Fire 15K/12K Monitoring. Determine which other products to install based on licenses you have for additional features or any additional servers in your installation that you want to monitor. If you want to install Sun Fire 15K/12K add-on products now, go to Step 5 in the next procedure “To Install Sun Fire 15K/12K Server Support on Server Machine” on page 15.

If you choose not to install Sun Fire 15K/12K add-on products now, the system displays this message, after finishing the remainder of the installation:

```
Do you want to run setup now? [y|n|q]
```

8. Because the system can take up to 20 minutes running server setup and you will have to set up the server again after you install the Sun Fire 15K/12K packages, it is more efficient to type `n` to *not* run setup now.

## ▼ To Install Sun Fire 15K/12K Server Support on Server Machine

If you are installing only Sun Fire 15K/12K server support now and have not already installed core server software, perform Steps 1 through 4. If the core software has been installed already, continue with Step 5.

1. Log in as superuser on the server machine.
2. Change the directory to the `/opt/SUNWsymon/sbin` directory.

This example assumes that you are installing in the default area `/opt`. If not replace `/opt` with your own path.

```
# cd /opt/SUNWsymon/sbin
```

3. Start the installation by entering:

```
# ./es-inst
```

The system displays this message:

```
Please enter the source directory:
```

4. **Type the source directory where the Sun Fire 15K/12K server add-on packages (SUNWesscs and SUNWscscs) reside.**

For example, if you are installing from the Sun Management Center CD-ROM, you would type:

```
Please enter the source directory: /cdrom/Sun_Management_Center_3_0xx/image
```

where *xx* is the number of the CD. The system displays this message:

```
=====
Sun Management Center 3.0 Addons Product Selection:
=====

Do you want to install the product: Sun Fire 15K/12K Monitoring? [y|n|q]
```

5. **Type *y* to install the Sun Fire 15K/12K server add-on packages (SUNWesscs and SUNWscscs) now.**
6. **The Sun Fire 15K/12K server support packages are installed, and the system displays these messages:**

```
....
....
Installation of <SUNWesscs> was successful.
....
....
Installation of <SUNWscscs> was successful.

Do you want to run setup now? [y|n|q]
```

7. **See the following procedure for setting up the Sun Management Center 3.0 software on the server machine.**

## ▼ To Set Up Software on Server Machine

After you have successfully installed the Sun Management Center 3.0 core software and Sun Fire 15K/12K add-on components on the server machine, the system displays this message:

```
Do you want to run setup now? [y|n|q]
```



---

**Caution** – Be aware that you need to run setup before using the system initially, and anytime you need to make changes to the configuration file.

---

**1. Do one of the following:**

**a. Type `n` for no to *not* run the setup now. The setup script ends.**

**b. Type `y` for yes to run the setup now.**

The system displays this message:

```
-----  
Sun Management Center Setup Program  
-----  
....  
....  
You have the following Sun Management Center components installed  
  
Sun Management Center Server  
Sun Management Center Agent  
....  
....  
This part of setup generates security keys used for communications  
between processes....  
....  
....  
Do you want to generate these keys using the Sun Management Center  
default seed? [y|n|q]
```

**2. Type `y` for yes to use the default seed.**

The system displays this message:

```
....  
....  
The Sun Management Center base URL is relative to the Sun Management Center  
Console.  
The Sun Management Center Console is able to request help documentation via the  
network.  
If you have installed Sun Management Center help documentation in an http-  
accessible location within your network, you may specify this location.  
If Sun Management Center help is installed on the console host, simply accept  
the default value.  
Please enter base URL to Sun Management Center help [local]:
```

**3. Press Return if Sun Management Center help is installed on the console host. If Sun Management Center help is in an http-accessible location within your network, specify the URL.**

Either way, the system might display the following message if you install the agent layer on the server machine, and another process is using the default port of 161:

```
-----WARNING-----
It appears that agent.snmpPort 161 is already in use.
Sun Management Center agent may not be able to run due to this conflict.
There are two ways to correct this conflict:
1. Reconfigure the port that Sun Management Center uses.
2. Stop the process that is using the port.
You are currently running snmpdx, which may be causing the conflict.

Do you want to use a different port number for agent? [y|n|q]
```

**4. Do one of the following:**

**a. If you do not want a different port number, type n for no.**

This system displays this message:

```
NOTE: Prior to starting Sun Management Center agent, stop the
process using port 161.
```

Go to the message about starting the Sun Management Center Sun Fire 15K/12K Server setup in Step 5.

**b. If you do want a different port number, type y for yes.**

The system displays the message:

```
Please enter any port [ 1100 to 65535 ] :
```

**5. Type the new port number.**

The system displays this message:

```
-----
Starting Sun Management Center Sun Fire 15K/12K Server Setup
-----

Would you like to setup this Sun Management Center package? [y|n|q]
```



6. Type **y** to set up the Sun Fire 15K/12K server support now. Type **n** to *not* set up the Sun Fire 15K/12K server support now.

Either way, the system displays this message:

```
-----  
Starting Sun Management Center Sun Fire 15K/12K System Controller Server Setup  
-----  
  
Would you like to setup this Sun Management Center package? [y|n|q]
```

7. Type **y** to set up the Sun Fire 15K/12K system controller server support now. Type **n** to *not* set up the Sun Fire 15K/12K system controller server support now.

Either way, the system displays this message:

```
Do you want to setup Sun Fire (6800/4810/4800/3800) platform administration  
module [y|n|q]
```

---

**Note** – You do *not* need the Sun Fire (6800/4810/4800/3800) platform administration module to monitor your Sun Fire 15K/12K system. You need to set up this module *only* if you want to monitor a Sun Fire (6800/4810/4800/3800) platform from this server.

---

8. Type **y** to set up the Sun Fire (6800/4810/4800/3800) platform administration module now. Type **n** to *not* set up this module now.

Either way, the system displays this message, where *nnnnnnnnnnnn.nnnn* is the identifying number of the setup log:

```
Please wait, Sun Management Center database setup in progress. It may take 15  
to 20 minutes.  
....  
....  
Setup log stored in /var/opt/SUNWsymon/install/setup.nnnnnnnnnnnn.nnnn  
  
Do you want to start Sun Management Center agent and server components now?  
[y|n|q]
```

9. Type **y** to start the Sun Management Center core agent, server, and Sun Fire 15K/12K server support now. Type **n** to *not* start this software now.

# Installing and Setting Up Sun Fire 15K/12K Domains

This section describes how to install and set up the Sun Management Center 3.0 core software and Sun Fire 15K/12K domain agents. Install and set up this software for each Sun Fire 15K/12K domain to be monitored using the Sun Management Center GUI. The procedure is the same for installing and setting up each domain. If you are reinstalling Sun Management Center software on a domain, be sure you uninstall the Sun Management Center 3.0 software on a domain, before you reinstall (see “Installing Localized Versions of Sun Management Center Add-on Packages From the CD” on page 37).

---

**Note** – When setting up or installing the Sun Management Center software, type **y** for yes, **n** for no, or **q** to quit.

---

## ▼ To Install Core Software on Sun Fire 15K/12K Domains

1. **Log in as superuser on the Sun Fire 15K/12K domain.**
2. **Change the directory to the *PUn\_path/sbin* directory, where *n* is the number of the Platform Update, and *PUn\_path* is the location of the Sun Management Center 3.0 Platform Update *n*(1 of 3) CD or the disk copy of the CD.**

```
# cd PUn_path/sbin
```

3. **Start the installation by typing:**

```
# ./es-inst
```

The system displays this message:

```
Please enter the target directory [/opt]:
```

4. **Press Return to accept the default directory of */opt* or type another directory where the Sun Management Center 3.0 core software is to be installed.**

---

**Note** – If you type your own directory, be sure you replace your directory for /opt in any path in subsequent instructions.

---

The system displays this message:

```
Select one of the following:

(1) Production Environment (PE)
(2) Developer Environment (DE)

Enter your choice: [1|2]
```

**5. Type 1 for the Production Environment.**

The system displays the following message:

```
Production Environment Installation
-----
There are 3 layers for your selection:
Do you want to install components in layer: Server Layer? [y|n|q]
Do you want to install components in layer: Agent Layer? [y|n|q]
Do you want to install components in layer: Console Layer? [y|n|q]
```

**6. Type y to install the Agent Layer. Type n to not install the Server Layer and Console Layer.**

After the system finishes installing the core software, the system displays a similar message to this, depending on your system configuration:

```
=====
Sun Management Center 3.0 Addons Product Selection:
=====

Do you want to install the product: Advanced System Monitoring? [y|n|q]
Do you want to install the product: Premier Management Applications? [y|n|q]
Do you want to install the product: Monitoring and Management of A5x00 and T3
devices [y|n|q]
Do you want to install the product: Sun Fire 15K/12K Monitoring? [y|n|q]
Do you want to install the product: System Reliability Manager Product? [y|n|q]
Do you want to install the product: Sun Management Center Integration for
Unicenter TNG? [y|n|q]
```

- 7. The only product listed in the preceding box that is essential for monitoring the Sun Fire 15K/12K systems is Sun Fire 15K/12K Monitoring. Determine which other products to install based on licenses you have for additional features or any additional servers in your installation that you want to monitor. If you want to install Sun Fire 15K/12K domain agents now, go to Step 5 in the next procedure “To Install Sun Fire 15K/12K Domain Agents” on page 22.**

If you choose not to install Sun Fire 15K/12K add-on products now, the system displays this message after finishing the remainder of the installation:

```
Do you want to run setup now? [y|n|q]
```

- 8. It is more efficient to type `n` to *not* run setup now if you need to install the Sun Fire 15K/12K packages. Otherwise, type `y` to run setup now.**

## ▼ To Install Sun Fire 15K/12K Domain Agents

Install the Sun Fire 15K/12K domain agent software for each domain to be monitored using the Sun Management Center software. If you are only installing Sun Fire 15K/12K domain agents and have not installed core software already, perform Steps 1 through 4. If you have installed core software already, continue with Step 5.

- 1. Log in as superuser on the Sun Fire 15K/12K domain.**
- 2. Change the directory to the `/opt/SUNWsymon/sbin` directory.**

This example assumes that you are installing in the default area `/opt`. If not, replace `/opt` with your own path.

```
# cd /opt/SUNWsymon/sbin
```

- 3. Start the installation by typing:**

```
# ./es-inst
```

The system displays this message:

```
Please enter the source directory:
```

4. **Type the source directory where the Sun Fire 15K/12K domain agent package (SUNWesscd) resides.**

For example, if you are installing from the Sun Management Center CD-ROM, you would type:

```
Please enter the source directory: /cdrom/Sun_Management_Center_3_0xx/image
```

where *xx* is the number of the CD. The system displays this message:

```
=====  
Sun Management Center 3.0 Addons Product Selection:  
=====  
  
Do you want to install the product: Sun Fire 15K/12K Monitoring? [y|n|q]
```

5. **Type *y* for yes to install the Sun Fire 15K/12K domain agent package (SUNWesscd) now.**

The system installs the Sun Fire 15K/12K domain agent and displays this message:

```
Installation of <SUNWesscd> was successful.
```

## ▼ To Set up Domain Agents

After you have successfully installed the Sun Fire 15K/12K domain agent, the system displays this message:

```
Do you want to run setup now? [y|n|q]
```



---

**Caution** – Be aware that you need to run setup before using the system initially, and anytime you need to make changes in the configuration file.

---

1. **Do one of the following:**

- a. **Type *n* for no to *not* set up the Sun Fire 15K/12K domain agent now. The setup script ends.**

**b. Type `y` for yes to set up the Sun Fire 15K/12K domain agent now.**

The system displays this message:

```
You have the following Sun Management Center components installed

Sun Management Center Agent

This part of setup generates security keys used for communications
between processes....
....
....
Do you want to generate these keys using the Sun Management Center
default seed? [y|n|q]
```

**2. Type `y` for yes to use the default seed.**

The system displays this message:

```
Please enter the Sun Management Center Server Hostname:
```

**3. Type your server host name.**

The system might display the following message if another process is using the default port of 161:

```
-----WARNING-----
It appears that agent.snmpPort 161 is already in use.
Sun Management Center agent may not be able to run due to this conflict.
There are two ways to correct this conflict:
1. Reconfigure the port that Sun Management Center uses.
2. Stop the process that is using the port.
You are currently running snmpdx, which may be causing the conflict.

Do you want to use a different port number for agent? [y|n|q]
```

**4. Do one of the following:**

**a. If you do not want to use a different port number, type *n* for no.**

This system displays this message:

```
NOTE: Prior to starting Sun Management Center agent, stop the
process using port 161.
```

Go to the message about starting the Sun Management Center Sun Fire 15K/12K domain setup in Step 6.

**b. If you do want a different port number, type *y* for yes.**

The system displays the message:

```
Please enter any port [ 1100 to 65535 ] :
```



---

**Caution** – Be sure you specify the same port number for *all* Sun Fire 15K/12K domains. Otherwise, the Sun Fire 15K/12K composite will *not* work. See also Steps 4 and 5 in the procedure “To Set Up Software on System Controllers” on page 30.

---

**5. Type the new port number.**

The system displays this message:

```
Do you want to setup Sun Fire (6800/4810/4800/3800) platform administration
module [y|n|q]
```

---

**Note** – You do *not* need the Sun Fire (6800/4810/4800/3800) platform administration module to monitor your Sun Fire 15K/12K system. You need to set up this module *only* if you want to monitor a Sun Fire (6800/4810/4800/3800) platform from this domain.

---

6. Type **y** to set up the Sun Fire (6800/4810/4800/3800) platform administration module now. Type **n** to *not* set up this module now.

Either way, the system displays this message:

```
-----  
Starting Sun Management Center Sun Fire 15K/12K Domain Setup  
-----  
  
Would you like to setup this Sun Management Center package? [y|n|q]
```

7. Type **y** to set up the Sun Fire 15K/12K domain now. Type **n** to *not* set up the Sun Fire 15K/12K domain now.

Either way, the system displays this message:

```
Do you want to start Sun Management Center agent now [y|n|q]
```

8. Type **y** for yes to start the Sun Management Center core agent and Sun Fire 15K/12K domain agent now. Type **n** to *not* start this software now.

## Installing and Setting Up System Controllers

This section describes how to install and set up the Sun Management Center 3.0 software on a system controller. You need to install and set up this software on both system controllers; the procedure is the same for both. If you are reinstalling software, be sure to uninstall the Sun Management Center software before you reinstall (see “Installing Localized Versions of Sun Management Center Add-on Packages From the CD” on page 37).

---

**Note** – When setting up or installing the Sun Management Center software, type **y** for yes, **n** for no, or **q** to quit.

---



## ▼ To Install Core Agent on System Controllers

1. Log in as superuser on the system controller.
2. Change the directory to the *PU<sub>n</sub>\_path/sbin* directory, where *n* is the number of the Platform Update, and *PU<sub>n</sub>\_path* is the location of the Sun Management Center 3.0 Platform Update *n*(1 of 3) CD or the disk copy of the CD.

```
# cd PUn_path/sbin
```

3. Start the installation by typing:

```
# ./es-inst
```

The system displays this message:

```
Please enter the target directory [/opt]:
```

4. Press Return to accept the default directory of */opt* or type another directory where the Sun Management Center 3.0 core software is to be installed.

---

**Note** – If you type your own directory, be sure to replace your directory for */opt* in any path in subsequent instructions.

---

The system displays this message:

```
Select one of the following:  
  
(1) Production Environment (PE)  
(2) Developer Environment (DE)  
  
Enter your choice: [1|2]
```

**5. Type 1 for the Production Environment.**

The system displays the following message:

```
Production Environment Installation
-----
There are 3 layers for your selection:
Do you want to install components in layer: Server Layer? [y|n|q]
Do you want to install components in layer: Agent Layer? [y|n|q]
Do you want to install components in layer: Console Layer? [y|n|q]
```

**6. Type y to install the Agent Layer. Type n to not install the Server Layer and Console Layer.**

The system displays a similar message to this, depending on your system configuration:

```
=====
Sun Management Center 3.0 Addons Product Selection:
=====

Do you want to install the product: Advanced System Monitoring? [y|n|q]
Do you want to install the product: Premier Management Applications? [y|n|q]
Do you want to install the product: Monitoring and Management of A5x00 and T3
devices [y|n|q]
Do you want to install the product: Sun Fire 15K/12K Monitoring? [y|n|q]
Do you want to install the product: System Reliability Manager Product? [y|n|q]
Do you want to install the product: Sun Management Center Integration for
Unicenter TNG? [y|n|q]
```

**7. The only product listed in the preceding box that is essential for monitoring the Sun Fire 15K/12K systems is Sun Fire 15K/12K Monitoring. Determine which other products to install based on licenses you have for additional features or any additional servers in your installation that you want to monitor. If you want to install Sun Fire 15K/12K add-on products now, go to Step 5 in the next procedure “To Install Sun Fire 15K/12K Platform Agent on System Controllers” on page 29.**

If you choose not to install Sun Fire 15K/12K add-on products now, the system displays this message after finishing the remainder of the installation:

```
Do you want to run setup now? [y|n|q]
```

**8. It is more efficient to type n to not run setup now if you still need to install the Sun Fire 15K/12K Platform Agent. Otherwise, type y to run setup now.**

## ▼ To Install Sun Fire 15K/12K Platform Agent on System Controllers

If you are only installing the Sun Fire 15K/12K platform agent now and have not installed the core software already, perform Steps 1 through 4. If you have installed the core software already, continue with Step 5.

### 1. Log in as superuser on the system controller.

### 2. Change the directory to the `/opt/SUNWsymon/sbin` directory.

This example assumes that you are installing in the default area `/opt`. If not, replace `/opt` with your own path.

```
# cd /opt/SUNWsymon/sbin
```

### 3. Start the installation by typing:

```
# ./es-inst
```

The system displays this message:

```
Please enter the source directory:
```

### 4. Type the source directory where the Sun Fire 15K/12K platform agent add-ons (SUNWesscp and SUNWscsca) reside.

For example, if you are installing from the Sun Management Center CD-ROM, you would type:

```
Please enter the source directory: /cdrom/Sun_Management_Center_3_0xx/image
```

where `xx` is the number of the CD. The system displays this message:

```
=====
Sun Management Center 3.0 Addons Product Selection:
=====

Do you want to install the product: Sun Fire 15K/12K Monitoring? [y|n|q]
```

5. Type **y** for yes to install the Sun Fire 15K/12K platform agent add-ons (SUNWesscp and SUNWscsca) now.

The Sun Fire 15K/12K platform agent add-ons are installed, and the system displays this message:

```
Installation of <SUNWesscp> was successful.  
....  
....  
Installation of <SUNWscsca> was successful.
```

## ▼ To Set Up Software on System Controllers

After successfully installing the Sun Fire 15K/12K platform agent support, the system displays this message:

```
Do you want to run setup now? [y|n|q]
```



---

**Caution** – Be aware that you need to run setup before using the system initially, and anytime you need to make changes in the configuration file.

---

1. Do one of the following:
  - a. Type **n** for no to *not* run the setup now. The setup script ends.

**b. Type `y` for yes to run the setup now.**

The system sets up the core agent layer on the system controller and displays this message:

```
-----  
Sun Management Center Setup Program  
-----  
....  
....  
You have the following Sun Management Center components installed  
  
Sun Management Center Agent  
  
This part of setup generates security keys used for communications  
between processes....  
....  
....  
Do you want to generate these keys using the Sun Management Center  
default seed? [y|n|q]
```

**2. Type `y` for yes to use the default seed.**

The system displays this message:

```
Please enter the Sun Management Center Server Hostname:
```

**3. Type your server host name.**

The system might display the following message if another process is using the default port of 161:

```
-----WARNING-----  
It appears that agent.snmpPort 161 is already in use.  
Sun Management Center agent may not be able to run due to this  
conflict.  
There are two ways to correct this conflict:  
1. Reconfigure the port that Sun Management Center uses.  
2. Stop the process that is using the port.  
You are currently running snmpdx. which may be causing the  
conflict.  
  
Do you want to use a different port number for agent? [y|n|q]
```

**4. Do one of the following:**

**a. If you do not want a different port number, type n for no.**

This system displays this message:

```
NOTE: Prior to starting Sun Management Center agent, stop the
process using port 161.
```

Go to the message about starting the Sun Management Center Sun Fire 15K/12K Platform setup in Step 6.

**b. If you do want a different port number, type y for yes.**

The system displays the message:

```
Please enter any port [ 1100 to 65535 ] :
```

**5. Type the new port number.**

The system displays this message:

```
Do you want to setup Sun Fire (6800/4810/4800/3800) platform administration
module [y|n|q]
```

---

**Note** – You do *not* need the Sun Fire (6800/4810/4800/3800) platform administration module to monitor your Sun Fire 15K/12K system. Set up this module *only* to monitor a Sun Fire (6800/4810/4800/3800) platform from this system controller.

---

**6. Type y to set up the Sun Fire (6800/4810/4800/3800) platform administration module now. Type n to not set up this module now.**

Either way, the system displays this message:

```
-----
Starting Sun Management Center Sun Fire 15K/12K Platform Setup
-----

Would you like to setup this Sun Management Center package? [y|n|q]
```

**7. Type *y* for yes to set up Sun Fire 15K/12K platform agent now.**

The system displays this message:

```
Is this Sun Fire 15K/12K platform configured with a spare SC?  
[y|n|q]
```

**8. Type *y* for yes if your Sun Fire 15K/12K system is configured with a spare system controller, or type *n* for no if there is no spare system controller.**

If you choose yes, the system displays this message:

```
Please enter the alternate SC hostname (not main_hostname) for this  
platform.  
Alternate SC hostname: alternate_hostname
```

**9. If you have a spare system controller, type in the host name for the spare (or alternate) system controller.**

The system displays this message:

```
The Platform agent will create a composite object that includes  
Sun Management Center agents loaded on Sun Fire 15K/12K domains.  
  
The default port to be checked for Sun Fire 15K/12K Domains is:  
161.  
  
Do you want to change the port that will be checked? [y|n|q]
```



---

**Caution** – Specify the *same* port number that you specified when setting up the domain agents on *all* Sun 15K/12K domains. Otherwise, the Sun Fire 15K/12K composite will *not* work. See also Steps 4 and 5 of the procedure “To Set up Domain Agents” on page 23. Type *n* to *not* change the default port or *y* to change the default port. If you type *y*, you are prompted to specify a new default port number; type in the port number.

---

Either way, the system completes the platform agent setup and displays this message, where *port\_number* is the default port number you specified:

```
Sun Fire 15K/12K domain agent ports: port_number
...
...
-----
Starting Sun Management Center Sun Fire 15K/12K System Controller
Agent Setup
-----

Would you like to setup this Sun Management Center package? [y|n|q]
```

**10. Type *y* to set up the system controller agent now.**

The system displays the following message. Note that the `es-startup` script loads the following drivers automatically on the CP1500 if you type *y* for yes to continue:

```
Proper setup requires loading the drivers i2c, i2cadc, i2cgpio.
This will enable us to collect voltage and temperature data for
the CP1500.
Please refer to the SPARCengine ASM Reference Manual for more
information.

Would you like to continue? [y|n|q]
```

**11. Type *y* to load the three drivers automatically and continue the system controller agent setup.**

The system completes the system controller agent setup and displays this message:

```
Do you want to start Sun Management Center agent now? [y|n|q]
```

**12. Type *y* to start the Sun Management Center core agent, Sun Fire 15K/12K platform agent, and Sun Fire 15K/12K system controller agent now. Type *n* to *not* start this software now.**



# Installing and Setting Up Workstations or Network

This section describes how to install and set up the Sun Management Center 3.0 core console software. There is no Sun Fire 15K/12K system-specific console software. You need to install and set up the core console software on a common network location or for each workstation where you want to monitor the Sun Fire 15K/12K system by using the Sun Management Center GUI. The procedure is the same for installing and setting up the common network location or each workstation. If you are reinstalling Sun Management Center software on a common network location or a workstation, be sure you uninstall the Sun Management Center 3.0 software on the common network location or a workstation, before you reinstall (see “Installing Localized Versions of Sun Management Center Add-on Packages From the CD” on page 37).

---

**Note** – When setting up or installing the Sun Management Center software, type **y** for yes, **n** for no, or **q** to quit.

---

## ▼ To Install and Set Up Console Software on Workstations or Network

1. Log in as superuser on the workstation or network where the Sun Management Center 3.0 console software is to be installed.
2. Change the directory to the *PUn\_path/sbin* directory, where *n* is the number of the Platform Update, and *PUn\_path* is the location of the Sun Management Center 3.0 Platform Update *n*(1 of 3) CD or the disk copy of the CD.

```
# cd PUn_path/sbin
```

3. Start the installation by typing:

```
# ./es-inst
```

The system displays this message:

```
Please enter the target directory [/opt]:
```

**4. Press Return to accept the default directory of /opt or type another directory where you want Sun Management Center 3.0 console software to be installed.**

---

**Note** – If you type your own directory, be sure you replace your directory for /opt in any path in subsequent instructions.

---

The system displays this message:

```
Select one of the following:

(1) Production Environment (PE)
(2) Developer Environment (DE)

Enter your choice: [1|2]
```

**5. Type 1 for the Production Environment.**

The system displays the following message:

```
Production Environment Installation
-----
There are 3 layers for your selection:
Do you want to install components in layer: Server Layer? [y|n|q]
Do you want to install components in layer: Agent Layer? [y|n|q]
Do you want to install components in layer: Console Layer? [y|n|q]
```

**6. Type y to install the Console Layer. Type n to not install the Server Layer and Agent Layer.**

After the system finishes the installation, the system displays a similar message to this, depending on your system configuration:

```
=====
Sun Management Center 3.0 Addons Product Selection:
=====

Do you want to install the product: Advanced System Monitoring? [y|n|q]
Do you want to install the product: Premier Management Applications? [y|n|q]
Do you want to install the product: Monitoring and Management of A5x00 and T3
devices? [y|n|q]
Do you want to install the product: Sun Fire 15K/12K Monitoring? [y|n|q]
Do you want to install the product: System Reliability Manager Product? [y|n|q]
Do you want to install the product: Sun Management Center Integration for
Unicenter TNG? [y|n|q]
```

7. **None of the products listed in the preceding box is essential for monitoring the Sun Fire 15K/12K systems. Determine which products to install based on licenses you have for additional features or any additional servers in your installation that you want to monitor.**

After the system finishes the remainder of the installation, the system displays this message:

```
Do you want to run setup now? [y|n|q]
```

8. **Because there are no Sun Fire 15K/12K system-specific console packages to install, it is more efficient to type `y` to run setup now.**

If you type `y`, the system performs the console setup

---

## Installing Localized Versions of Sun Management Center Add-on Packages From the CD

To install the localized packages, perform the following steps *after* the installation of the English Sun Management Center 3.0 software and add-on product packages is complete.

### ▼ To Install Localized Packages

1. **Insert the Platform Update 4 CD (2 of 3) into the CD-ROM drive.**
2. **Open a command window and (if you are not already superuser) become superuser by using the `su -` command.**
3. **Change to the CD-ROM directory and type the following command:**

```
# cd /cdrom/sun_management_center_3_0
```

4. From the `localization` directory, type the following command to run the installation script:

```
# ./es-inst-110n
```

5. Remove the following Sun Fire 15K/12K localization packages:

```
# pkgrm SUNWccscs SUNWccss SUNWdcscs SUNWdcss SUNWecscs SUNWeess  
SUNWfcscs SUNWfcss SUNWhcscs SUNWhcss SUNWicscs SUNWiess SUNWjcscs  
SUNWjcss SUNWkcscs SUNWkcscs
```

---

## Reinstalling Sun Management Center 3.0 Software

Before reinstalling Sun Management Center software, uninstall the existing software using the uninstall script (`es-uninst`). Refer to the *Sun Management Center 3.0 Software Installation Guide* for instructions about how to uninstall the software. The Sun Fire 15K/12K system-specific components are uninstalled with the rest of the Sun Management Center software. Before reinstalling the software, ensure that there are no files remaining in the `/var/opt/SUNWsymon` directory.

---

## Reinstalling Sun Fire 15K/12K Add-on Packages Only

When reinstalling Sun Fire 15K/12K add-on packages *only*, remove and uninstall the Sun Fire 15K/12K add-on packages first. You do not need to remove and uninstall the Sun Management Center 3.0 core packages. Use the `pkgrm(1)` command to remove the Sun Fire 15K/12K add-on packages. See the list of Sun Fire 15K/12K add-on packages in TABLE 2-1.

---

# Reconfiguring Sun Fire 15K/12K Setup Parameters

You can reconfigure the Sun Fire 15K/12K setup parameters at any time by running the setup script (`es-setup`) again. You must reconfigure the appropriate Sun Fire 15K/12K setup parameters if certain changes occur, including:

- If the Sun Fire 15K/12K system name is changed, reconfigure the Sun Fire 15K/12K domain and platform components.
- If the Sun Management Center agent port configuration changes for the Sun Fire 15K/12K domain agents, reconfigure the Sun Fire 15K/12K platform component.
- If a spare system controller is added or removed from the platform configuration, reconfigure the Sun Fire 15K/12K platform component.
- If the Sun Management Center server host or trap agent port configuration changes, reconfigure the Sun Fire 15K/12K platform and domain components.
- If a host IP address changes, reconfigure the components on that host.

For information about where these components are located, see TABLE 2-4.

---

**Note** – You do not need to rerun setup after System Management Services (SMS) software is reinstalled; however, you do need to restart the Sun Management Center software.

---

## ▼ To Rerun Setup Script

1. **Log in as superuser on the machine where the components are that you want to reconfigure (see TABLE 2-4 for the location of the components).**
2. **Change the directory to the `/opt/SUNWsymon/sbin` directory.**

This example assumes that you are using the default area `/opt`. If not, replace `/opt` with your own path.

```
# cd /opt/SUNWsymon/sbin
```

3. **Stop the components to be reconfigured.**

The command you use to stop the component depends on which component you are reconfiguring:

- a. To stop the Sun Fire 15K/12K server and agent components if they are currently running on the server machine:

```
# ./es-stop -sa
```

- b. To stop a Sun Fire 15K/12K domain agent currently running in a domain, type:

```
# ./es-stop -a
```

- c. To stop the host agent, which monitors the SC, and platform agent, if they are currently running on the SC:

```
# ./es-stop -al
```

4. Run the setup script to set up the component layers:

```
# ./es-setup
```

5. Follow the instructions in the setup procedures for the corresponding components with these two additional prompts:

- a. Sun Management Center Server

In the setup for the Sun Management Center server, the system displays this message:

```
Do you want to preserve your existing data? [y|n|q]
```

---

**Note** – If you answer **y** for yes, the system preserves any data in the database, including open and closed alarms, loaded modules and their configurations, discoveries, managed objects, and rule thresholds.

---

Type **y** to keep any existing topology and event data; or type **n** to discard the data.

### b. Sun Fire 15K/12K Domain Agent

In the setup for the Sun Fire 15K/12K domain agent, the system displays this message:

```
server-hostname appears to be configured as your Sun Management Center
server. Is this correct? [y|n|q]
```

Type **y** for yes if this is your Sun Management Center server, or type **n** for no if not. If you type **n**, you are prompted to type your correct server host name.

### 6. Restart the components that you stopped.

---

## Starting Sun Management Center Software

The `es-start` command requires different command arguments, depending on which component you are starting. Refer to the *Sun Management Center 3.0 Software Installation Guide* for a list of the options for `es-start`. The `-h` option for `es-start` also lists all the options. The following procedure describes some common `es-start` options.

### ▼ To Start Sun Management Center Software

1. Log in as superuser on the machine where the components are to be started (see TABLE 2-4 for the location of the components).

**2. Change the directory to the /opt/SUNWsymon/sbin directory.**

This example assumes that your software is in the default area /opt. If not, replace /opt with your own path.:

```
# cd /opt/SUNWsymon/sbin
```

On the system controller, start the Sun Management Center agents:

```
# ./es-start -al
```

This command starts the core and platform agents. The platform agent provides all the Sun Fire 15K/12K system information to Sun Management Center software.

**3. To start the Sun Management Center agent on a Sun Fire 15K/12K domain with only the Sun Management Center agent layer installed, type:**

```
# ./es-start -a
```

**4. To start all the Sun Management Center components on the Sun Management Center server host with all layers installed, type:**

```
# ./es-start -A
```

---

**Note** – Upon rebooting, all Sun Management Center agents start automatically.

---

**5. To start the console, type:**

```
# ./es-start -c
```

---

**Note** – To start the console, you can also be logged in as your own user ID; you do not have to be logged in as superuser. However, to access the Platform or Domain Config Reader, you must be in the appropriate security access groups. See “Security Considerations for Defining Groups” on page 47.

---



---

# Stopping and Exiting Sun Management Center Software

This section describes stopping and exiting Sun Management Center software:

- Stop the server and agent components by typing the `es-stop` command with the correct command argument.
- Exit the console through the main console window.

## ▼ To Stop Server and Agents

The `es-stop` command requires different command arguments depending on which component you are stopping. Refer to the *Sun Management Center 3.0 Software Installation Guide* for a list of the `es-stop` options. The `-h` option for `es-stop` also lists all the options. The following procedure describes some common `es-stop` options.

1. **Log in as superuser on the machine where the components are to be stopped (see TABLE 2-4 for the location of the components).**
2. **Change the directory to the `/opt/SUNWsymon/sbin` directory.**

This example assumes that your software is in the default area `/opt`. If not, replace `/opt` with your own path:

```
# cd /opt/SUNWsymon/sbin
```

3. **To stop the server and agent components on the server machine, type:**

```
# ./es-stop -sa
```

4. **To stop the domain agent components on the host machine for a domain, type:**

```
# ./es-stop -a
```

5. On the system controller, to stop the host agent, which monitors the SC, and platform agent:

```
# ./es-stop -al
```

## ▼ To Exit Console

1. From the menu bar on the main console window, select File and Exit.
2. Click the Exit button on the Exit Sun Management Center dialog box.

---

# Sun Management Center Web Interface

The Sun Management Center Web Interface is an optional, licensed Sun Management Center feature that provides most of the functionality available in the Sun Management Center Java-based Console. For a detailed description of the Sun Management Center Web Interface, refer to Chapter 20 in the *Sun Management Center 3.0 Software User's Guide*.

---

**Note** – Be aware that the Web Interface provides no physical or logical views of the Sun Fire 15K/12K system. See Chapter 5 in this document for more information about physical and logical views.

---

---

## Installation and Setup Log Files

This sections provides examples of messages the system displays at the end of the installation and setup scripts. You can look at these files to see if there were any problems during installation and setup, and you can use these files for diagnosing errors.

This example shows a message when an installation script completes, where *nnnnnnnnnnnn.nnnnn* is the identifying number of the installation log:

```
Log file: /var/opt/SUNWsymon/install/install.nnnnnnnnnnnn.nnnnn
```

This example shows a message when a setup script completes, where *nnnnnnnnnnnn.nnnn* is the identifying number of the setup log:

```
Log file: /var/opt/SUNWsymon/install/setup.nnnnnnnnnnnn.nnnn
```



## Security Access Setup

---

This chapter describes how to set up user privileges to perform Sun Management Center administrative tasks on Sun Fire 15K/12K systems. After the Sun Management Center software is installed and set up, you need to set up users in two different software administrative groups according to the tasks they will perform:

- Sun Management Center user groups—refer to Chapter 14, “Sun Management Center Security,” in the *Sun Management Center 3.0 Software User's Guide* for more information about general Sun Management Center security.
- System Management Services (SMS) user groups—because SMS software manages the Sun Fire 15K/12K system controller, you need to set up user privileges in SMS groups, as well as Sun Management Center groups, to manage the Sun Fire 15K/12K platform and domains from the system controller. Refer to Chapter 2, “SMS Security,” in the *System Management Services (SMS) 1.3 Administrator Guide* for more information about general SMS security.

---

## Security Considerations for Defining Groups

To use a Sun Management Center tool or module that requires membership in a System Management Services administrative group, your user ID must be listed as a member of that group in the group definition accessed by each of the two software packages. In other words, both the Sun Management Center and the System Management Services software must find your user ID as a member of the appropriate administrative group.

There are two ways to ensure that both Sun Management Center and System Management Services identify your user ID as a member of the appropriate System Management Services administrative group:

- Define and maintain the groups in a centralized network name service such as Network Information Service (NIS) that both the Sun Management Center and System Management Services software access.
- Define and maintain the groups locally in separate `/etc/groups` files on the Sun Management Center server host and the Sun Fire 15K/12K system controller and make sure that the System Management Services group definition on the Sun Management Center server host is identical to (or a subset of) the definition on the Sun Fire 15K/12K system controller. In other words, user IDs listed as members of System Management Services administrative groups on the Sun Management Center server host must also be identified as members of those groups on the Sun Fire 15K/12K system controller.

Obviously, maintaining a single file on a centralized name server host is more convenient and less prone to error than maintaining two separate files with identical information on two different machines. But there are security considerations that might affect the method you choose and how you implement it.

## Superuser Access

Both the Sun Management Center and SMS environments provide different administrative groups, so that you can assign different administrative privileges to different users. This system assumes that the power to add or remove users from these groups is tightly controlled. However, anyone with superuser privileges on the machine where group membership is defined has the power to create or delete groups and add or remove group members. Clearly, if unauthorized users have superuser privileges, they gain the ability to add themselves (or others) to administrative groups and that undercuts the purpose of having such groups.

Therefore, a key security consideration is how many people (and which people) have superuser privileges on either the central name server or the combination of Sun Management Center server host and Sun Fire 15K/12K system controller. While it is assumed that superuser privileges on the system controller are tightly controlled, in some environments, superuser privileges on the Sun Management Center server host are held by many people. At other sites, superuser privileges are tightly restricted. In some environments, many people are granted superuser privileges on the name server. In others, superuser access to the name server is strictly limited.

# Name Service Switch

The `group` setting in the name service switch file (`/etc/nsswitch.conf`) on both the Sun Management Center server host and the Sun Fire 15K/12K system controller affects group membership security. By default, most switch files are set up so that if an application does not find the group information it needs in one source (such as the `/etc/group` file), it looks in another source such as an NIS name server; or vice versa. Therefore, if security is a consideration, you need to edit the `group` setting in the name service switch file to specify only a single source.

- To specify that the only source for group membership is the NIS server, edit the `group` line in the `/etc/nsswitch.conf` file on both the Sun Management Center and the Sun Fire 15K/12K system controller to read:

```
group nis
```

- To specify that the only source for group membership is the local `/etc/groups` file, edit the `group` line in `/etc/nsswitch.conf` file on both the Sun Management Center and the Sun Fire 15K/12K system controller to read:

```
group files
```

# Network Name Service

If you have more than one Sun Fire 15K/12K system and you maintain group definitions on a central NIS name server, you may want to rename the System Management Services administrative groups from their default values. If group membership is maintained on a central name server, and two or more Sun Fire 15K/12K systems use the same name for an SMS administrative group, then members of that group have administrative privileges on *both* machines.

For example, the default name for the Domain B administrative group is `dmnbadmn`. If more than one machine uses that name, then members of that group have administrative privileges over each machine's Domain B. You can restrict administrative privileges to a single machine by renaming the administrative groups on each machine to have unique values such as `dmnbadmn1` and `dmnbadmn2`.

---

# Sun Management Center Groups

TABLE 3-1 describes the default Sun Management Center administrative groups.

**TABLE 3-1** Default Sun Management Center Administrative Groups

Group Name	Group	Description
esadm	Administrator group	Can perform all administrative tasks including loading and unloading modules, maintaining access control for users and groups, and working with administrative domains, hosts, and modules.
esops	Operator group	Has a subset of <code>esadm</code> privileges. Can enable and disable modules but cannot load and unload them. Can perform monitoring tasks. Can acknowledge, delete, or fix events.
esdomadm	Domain group	Has a Sun Management Center domain-specific subset of <code>esadm</code> privileges. Can create administrative domains, create groups within administrative domains, add objects to groups or administrative domains.
General user	General user group	By default, anyone listed in the <code>esusers</code> file is considered to be a member of the <code>ANYGROUP</code> group. Can view administrative domains, hosts, modules, events; graph data; and trigger manual refreshes. Can also run ad-hoc commands.



## ▼ To Add Users Into Sun Management Center User Groups

- Add the user IDs of *all* Sun Management Center users in the `/var/opt/SUNWsymon/cfg/esusers` file on the Sun Management Center server host.

The user IDs must be valid UNIX user IDs.

The following example is a typical partial listing in the `/var/opt/SUNWsymon/cfg/esusers` file for *all* Sun Management Center users:

```
esmaster
espublic
root
user1
user2
user3
user4
user5
....
....
```

---

**Note** – The Sun Management Center user ID `esmaster` is comparable to being a superuser or `root` in UNIX; it provides administrative privileges. The Sun Management Center user ID `espublic` is comparable to logging into a UNIX system as `guest`; it provides general access privileges. These two user IDs are added to the Sun Management Center `esusers` file when the software is installed on the server and *cannot* be changed. To use these user IDs to perform management operations on a Sun Fire 15K/12K platform or domain, add these IDs to the appropriate SMS group.

---

---

# System Management Services Groups

TABLE 3-2 describes the default SMS administrative groups.

**TABLE 3-2** Default SMS Administrative Groups

Group Name	Group	Description
platadm	Platform administrator group	Has all platform administrative privileges including controlling boards and components power and assigning system boards to Sun Fire 15K/12K domains. Does not have platform service privileges. Can assign board to domains if the board is free (unassigned). Can delete (unassign) a board from a domain if the board is not connected. Cannot connect, configure, unconfigure, or disconnect a board from a domain.
platooper	Platform operator group	Has a subset of platadm privileges. Can view platform status.
dmnxadm <sup>1</sup>	Domain administrator group	Can access the Sun Fire 15K/12K domain's console and perform Sun Fire 15K/12K domain control, status, and access control tasks. Can connect, configure, unconfigure, and disconnect system boards from the domain. Can assign boards to the domain if they are listed in the domain's ACL and they have not been assigned to some other domain.
dmnxrcfg <sup>2</sup>	Domain reconfiguration group	Has a subset of dmnxadm privileges. Can reconfigure and control power to system boards in the Sun Fire 15K/12K domain.

1. Where *x* is a letter from *a* through *r* indicating a specific Sun Fire 15K/12K domain. For example, `dmnbadm` is the administrative group for domain B.

2. Where *x* is a letter from *a* through *r* indicating a specific Sun Fire 15K/12K domain. For example, `dmnbrcfg` is the reconfiguration group for domain B.

## ▼ To Add Users Into System Management Services Groups

---

**Note** – The user IDs must be valid UNIX user IDs.

---

1. Add user IDs to the appropriate SMS group either in a central name service such as Network Information Service (NIS), which both the Sun Management Center server and the Sun Fire 15K/12K can access, or in the `/etc/group` file on the Sun Management Center server host *and* the Sun Fire 15K/12K system controller.
2. If you are using the `/etc/group` files, the group IDs are automatically created during SMS installation on the system controllers. Use the `smsconfig(1M)` command with the `-a` option to add user IDs one at a time to the `/etc/group` file on the system controllers. Refer to the *Sun System Management Services (SMS) 1.3 Reference Manual* for more information about using the `smsconfig(1M)` command.
3. On the Sun Management Center server, add the group IDs and user ID in the `/etc/group` file in the exact manner they appear in the system controllers' `/etc/group` files.

For example, this is a typical partial listing in the `/etc/group` file of groups and user IDs for access to various Sun Management Center tasks:

```
root::0:root
other::1:
bin::2:root,bin,daemon
sys::3:root,bin,sys,adm
adm::4:root,adm,daemon
uucp::5:root,uucp
mail::6:root
tty::7:root,tty,adm
lp::8:root,lp,adm
nuucp::9:root,nuucp
staff::10:
daemon::12:root,daemon
sysadmin::14:
nobody::60001:
noaccess::60002:
nogroup::65534:
esadm::1000:root,guest,user1,user2
esdomadm::1001:root,guest,user3
esops::1002:guest,user4
platadm::118:root,guest,user1,user2
platoper::119:root,guest,user4
dmnaadm::121:user1, user3
dmnarcfg::122:user3
dmnbadm::123:user1, user5
dmnbrcfg::124:user5
....
....
....
dmnradm::155:
dmnrrcfg::156:
```

# Using Sun Fire 15K/12K Modules

Administrative group requirements for using Sun Fire 15K/12K modules are summarized in TABLE 3-3.

TABLE 3-3 Sun Fire 15K/12K Modules and Administrative Groups

Module Name	Sun Management Center Groups	System Management Services Groups
Platform Config Reader	Any	platadm, platoper
Platform/Domain State Management (PDSM)	Any	Depends on operation (see “SMS Groups Required for PDSM Operations”)
Domain Config Reader	esadm	No requirement
Dynamic Reconfiguration	esadm	No requirement
SC Config Reader	Any	No requirement
SC Monitoring	Any	No requirement
SC Status	Any	No requirement

For more information about setting up or changing service administrative groups, refer to *Sun System Management Services (SMS) 1.3 Administrator Guide*. For more information about setting up, changing, or further access privileges of Sun Management Center groups, refer to *Sun Management Center 3.0 Software User's Guide*.

## SMS Groups Required for PDSM Operations

To perform Sun Fire 15K/12K Platform/Domain State Management (PDSM) operations, you must be a member of the appropriate SMS group for that operation:

- Platform View (TABLE 3-4)
- Domain View (TABLE 3-5)

## Platform View Access Permissions

The platform view is readable only by the platform administrator (`platadm`) and platform operator (`platoper`). TABLE 3-4 describes the management operations available in the platform view and the access privileges required for each operation.

**TABLE 3-4** Sun Fire 15K/12K Platform View Management Operations and Access

Platform View Operation	Access
System Controller Power	<code>platadm</code> , <code>platoper</code>
Power Supply Power	<code>platadm</code> , <code>platoper</code>
Fan Tray Speed	<code>platadm</code> , <code>platoper</code>
Slot 0 and Slot 1 Board Power	<code>platadm</code> , <code>platoper</code>
Addboard for Slot 0 and 1 Boards and Empty Slots	<code>platadm</code>
Deleteboard for Slot 0 and 1 Boards and Empty Slots	<code>platadm</code>
Moveboard for Slot 0 and 1 Boards and Empty Slots	<code>platadm</code>
Show Status	<code>platadm</code> , <code>platoper</code>

## Domain View Access Permissions

The 18 Sun Fire 15K domains (`a` through `r`) and 9 Sun Fire 12K domains are readable only by their respective Sun Fire 15K/12K domain administrator (`dmnxadm`) and Sun Fire 15K/12K domain reconfigurer (`dmnxrcfg`), and for some tasks performed by the platform administrator (`platadm`) and platform operator (`platoper`). TABLE 3-5 describes the management operations available in the Sun Fire 15K/12K domain view and the access privileges required for each operation.

**TABLE 3-5** Sun Fire 15K/12K Domain View Management Operations and Access

Domain View Operation	Access
Domain Tag	<code>platadm</code>
Keyswitch	<code>dmnxadm</code>
Domain ACL	<code>platadm</code>
Reset	<code>dmnxadm</code>
Slot 0 and Slot 1 Board Power	<code>dmnxadm</code> , <code>dmnxrcfg</code> , <code>platadm</code> , <code>platoper</code>
Slot 0 and Slot 1 Board Test	<code>dmnxadm</code>

**TABLE 3-5** Sun Fire 15K/12K Domain View Management Operations and Access  
(Continued)

Domain View Operation	Access
Addboard for Slot 0 and Slot 1 Boards and Empty Slots	dmnxadm, dmnxrcfg, platadm
Deleteboard for Slot 0 and 1 Boards and Empty Slots	dmnxadm, dmnxrcfg, platadm
Moveboard for Slot 0 and 1 Boards and Empty Slots	dmnxadm, dmnxrcfg, platadm
Show Status	dmnxadm, dmnxrcfg, platadm, platoper

---

## Limit of 16 Group IDs for a User ID



**Caution** – Any single user ID can have up to 16 group IDs associated with it; any group ID over 16 is ignored, which causes access problems for the user ID. In other words, a user might appear to belong to a group, but if the 16 group limit is exceeded, the user might not have the access privileges of that group. For more information about how the system reacts when a user has more than 16 group IDs, see “Possible Reasons for DR Operation Attempts Failing” on page 217.

---

## Sun Fire 15K/12K Topology Objects

---

This chapter describes how to create, modify, and discover Sun Fire 15K/12K topology objects. Refer to Chapter 3 of the *Sun Management Center 3.0 Software User's Guide* for general information about creating and monitoring Sun Management Center objects.

---

### Sun Fire 15K/12K Platform Composites

A Sun Fire 15K/12K composite is a Sun Management Center group object that contains all hosts associated with a Sun Fire 15K/12K platform. This composite includes these icons:

- Sun Fire 15K/12K group
- Main Sun Fire 15K/12K platform
- Spare Sun Fire 15K/12K platform, designated with a circled X on the lower-right corner
- Each Sun Fire 15K/12K domain
- Main Sun Fire 15K/12K system controller (CP 1500)
- Spare Sun Fire 15K/12K system controller (CP 1500), designated with a circled X on the lower-right corner

The Sun Fire 15K/12K composite groups these objects together to enable easier management of components of the Sun Fire 15K/12K platform. TABLE 4-1 shows the Sun Fire 15K/12K icons.

**TABLE 4-1** Sun Fire 15K/12K Icons






Icon	Description
	Sun Fire 15K/12K Group Icon
	Main Sun Fire 15K/12K Platform Icon
	Spare Sun Fire 15K/12K Platform Icon or required SMS daemon(s) is stopped
	Sun Fire 15K/12K Platform Icon (when Sun Management Center agent is not running)
	Sun Fire 15K/12K Domain Icon



TABLE 4-1 Sun Fire 15K/12K Icons (Continued)

Icon	Description
	Sun Fire 15K/12K Domain Icon (when Sun Management Center agent is not running)
	Main Sun Fire 15K/12K System Controller (CP 1500)
	Spare Sun Fire 15K/12K System Controller (CP 1500)

---

**Note** – Icons for the hosts monitored by Sun Management Center agents include a tag with the machine model, such as F15K/F12K. The icons for hosts that are not monitored by Sun Management Center agents display no tags.

---

The Sun Fire 15K/12K system controller and domain hosts are independent hosts running their own Solaris operating environment, so they also can be created and discovered independently from the Sun Fire 15K/12K platform composite. The Sun Fire 15K/12K system controller and domains can be created individually without having to create a Sun Fire 15K/12K platform composite.

The Sun Fire 15K/12K system controller and domain hosts in a Sun Fire 15K/12K platform composite can be included in multiple groupings in the Sun Management Center topology so that you can view the hosts by their Sun Fire 15K/12K platform association as well as by their network grouping. When Sun Fire 15K/12K hosts are found by a discovery request, they are placed in the topology according to their network groupings.

A Sun Fire 15K platform can have up to 18 domain hosts, and the Sun Fire 12K platform can have up to 9 domain hosts. Only domains that are active and running the Solaris operating environment are included in the composite object.

To monitor Sun Fire 15K/12K domains and platforms, create a Sun Management Center Sun Fire 15K/12K composite from the Create Topology Object window, or use a Sun Management Center discovery request.

## ▼ To Create a Sun Fire 15K/12K Composite Object

For more information about this procedure, see “Creating a Composite Object” in Chapter 3 of the *Sun Management Center 3.0 Software User's Guide*.

1. **In the hierarchy view of the main console window, select the level in the Sun Management Center domain topology where the new composite object is to be created.**
2. **In the main console window, select Create an Object from the Edit menu.**
3. **Click the Composite tab in the Create Topology Object window.**
4. **From the Object list box, select the Sun Fire 15K/12K Composite object.**
5. **Type relevant information in the text boxes.**
6. **Click OK.**

The system displays this message:

Creating composite object... Please Wait.

The amount of time this operation requires depends on how many Sun Fire 15K/12K domains are running.

You can see the Sun Fire 15K/12K folder added to the current location in the Sun Management Center domain topology. If the Sun Fire 15K/12K composite is not created, follow the steps in “To Troubleshoot Composite Failure”.

7. **Open the composite folder to see all the objects associated with the Sun Fire 15K/12K platform.**

See FIGURE 4-1 for an example of a Sun Fire 15K/12K composite.

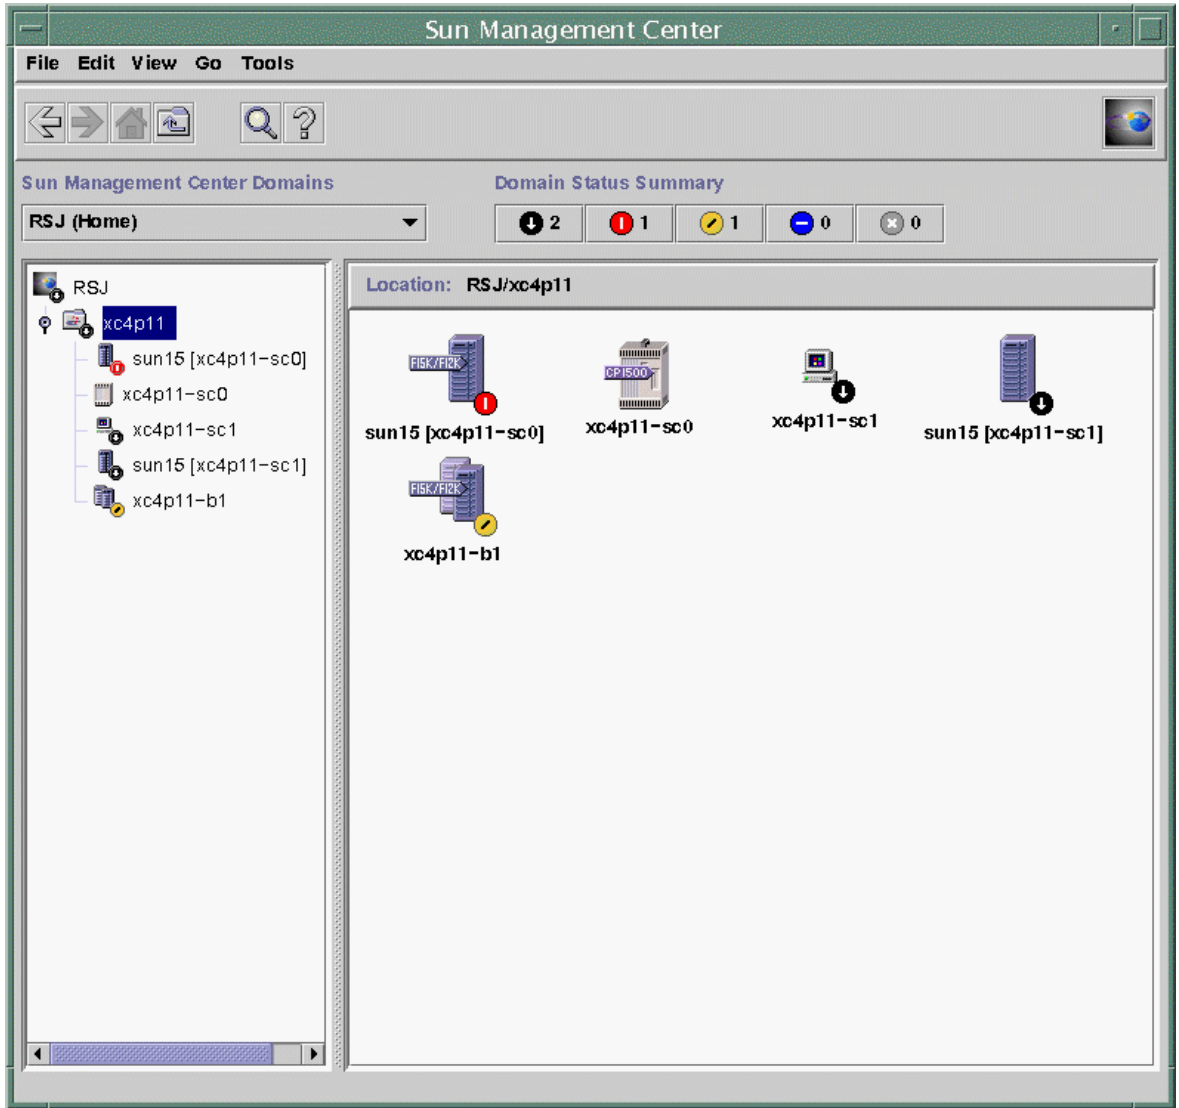


FIGURE 4-1 Example of a Sun Fire 15K/12K Composite

## ▼ To Discover a Sun Fire 15K/12K Composite

For more information about this procedure, refer to “Initiating a Discovery Request” in Chapter 4 of the *Sun Management Center 3.0 Software User’s Guide*.

1. In the hierarchy view of the main console window, select the level in the Sun Management Center domain topology where you want to discover a Sun Fire 15K/12K composite object.
2. Select Discover from the Tools menu.
3. In the Discovery Requests dialog box, click Add.
4. Type information in the New Discover Request dialog box.
5. If the Sun Fire 15K/12K composite is not created, follow the steps in “To Troubleshoot Composite Failure” on page 64.

---

**Note** – If the system controller was busy at the time the discovery request was made, run the discovery request again or increase the discovery request SNMP time-out value.

---

You can use the following Discovery Request filter options to customize your Sun Fire 15K/12K composite discovery request:

- The Platform Type filter criteria enable you to include or exclude Sun Fire 15K/12K domain and platform types.
- Sun Fire 15K/12K domain hosts and the system controller within the composite can be filtered by the host names and operating system filter criteria. The host names and operating system filter criteria do not filter Sun Fire 15K/12K platform objects.
- If the system controller is excluded by a filter criterion, the Sun Fire 15K/12K composite objects are still examined by the Discovery Manager for inclusion in the Sun Management Center domain.

## Updating a Sun Fire 15K/12K Platform Composite

After you have created the Sun Fire 15K/12K platform composite, the contents and type of the composite Sun Management Center topology objects do not change. The composite objects must be updated if:

- Sun Fire 15K/12K domains become active (running the Solaris operating environment).
- Spare system controller is added to or deleted from the platform configuration.
- Sun Management Center monitoring for an object no longer shows the correct monitor type. For example, if the Sun Management Center agent is not running on the Sun Fire 15K/12K domain at the time the composite was created, an ICMP Ping monitoring type host object is created for the Sun Fire 15K/12K domain.

After the Sun Management Center agent is running again, the Sun Fire 15K/12K domain host object needs to be updated so that it can be monitored as a Sun Management Center Agent—Host type.

---

**Note** – If Sun Fire 15K/12K domain hosts running the Sun Management Center agent are monitored as a type other than a Sun Management Center Agent—Host, verify that you have specified the correct Sun Fire 15K/12K domain ports during system controller platform setup.

---

## ▼ To Update Composite Created by Create Topology Object

- **If the Sun Fire 15K/12K platform composite was created using the Create Topology Object window, perform all updates to the composite manually.**
  - If Sun Fire 15K/12K composite objects have been added or deleted, delete or create the objects as described in Chapter 3 of the *Sun Management Center 3.0 Software User's Guide*.
  - If the monitoring type has changed, modify the topology object as described in the “Modifying Objects” section of Chapter 3 in the *Sun Management Center 3.0 Software User's Guide*.

---

**Note** – If the changes are numerous, it may be easier to delete the current Sun Fire 15K/12K composite object from the topology and recreate it. See “To Create a Sun Fire 15K/12K Composite Object” for instructions.

---

## ▼ To Update Composite Created by Discovery

1. **If the Sun Fire 15K/12K platform composite was created by the Discovery Manager, many of the updates can be made by running a discovery request for the main system controller. This discovery request can either be started manually or scheduled for periodic running.**

Running the discovery request makes these changes:

- New Sun Fire 15K/12K object, such as a spare system controller, is added to the platform composite.

- If an object monitoring type has changed to a level of higher monitoring capability, the monitoring type is updated. Monitoring capability increases from the ICMP Ping monitoring type to the SNMP Ping monitoring type to the Sun Management Center Agent - Host monitoring type.

When running a discovery request, be aware of the following:

- Topology objects are *not* deleted from the platform composite.
  - If any of the topology objects have been modified from the Sun Management Center console window, the object monitoring type is *not* updated.
2. **If you prefer, you can create an updated platform composite by deleting the Sun Fire 15K/12K platform composite from the topology and running a discovery request.**

## ▼ To Troubleshoot Composite Failure

If you are unable to create a Sun Fire 15K/12K platform composite, check for the following:

1. **Verify that the correct system controller host name and Sun Management Center agent port number were specified in the Create Topology Object procedure or discovery request.**

---

**Note** – The system controller must be the main system controller for the platform, not the spare system controller.

---

2. **Log in to the system controller and verify that the two Sun Management Center agents are running:**

```
SC# ps -ef | grep esd
root 21020 1 2 Mar 10 ? 84:03 esd - init agent -dir
/var/opt/SUNWsymon
root 21858 1 3 Mar 10 ? 103:07 esd - init platform -dir
/var/opt/SUNWsymon
```

3. **Try rerunning the discovery request or increasing the discovery request SNMP time-out value.**
4. **Create the Sun Fire 15K/12K platform object directly by creating a node as described in “To Create a Sun Fire 15K/12K Platform Object” on page 66.**

5. Examine the Browser tab of the platform Details window to confirm that the Config Reader (Sun Fire 15K) module is loaded under Hardware and that the module is not disabled. The Discovery Object Table provided by this module defines the objects that are included in the Sun Fire 15K/12K platform composite.
6. On the system controller, run this command to ensure that the Discovery Table was created correctly:

```
SC# /opt/SUNWsymon/sbin/es-dt -v
```

If the output is not present or does not have the information contained in the following example, the Discovery Table was *not* created correctly:

```
Label          Sun-Fire-15K-12K
Host           <host name>
Port           <port number>
OID            1.3.6.1.4.1.42.2.85.1.1.22
Node Object Type Sun-Fire-15K-12K-platform-group
```

If you do not see this type of output, repeat the process starting with Step 5. If that still does not work, contact your Sun service representative.

---

## Sun Fire 15K/12K Platform Objects

Sun Fire 15K/12K platform information is provided by a Sun Management Center platform agent running on the main system controller. When a spare system controller is configured, two Sun Fire 15K/12K platform objects are present in the Sun Fire 15K/12K platform composite. Sun Fire 15K/12K platform information is only available from the platform object associated with the main system controller. When a platform object is created as part of a composite, the platform object name includes the associated system controller name in square brackets. The spare system controller object and its associated spare Sun Fire 15K/12K platform topology objects are designated with a circled X on the lower-right corner of the icon to distinguish the spare from the main topology objects (TABLE 4-1).

After Sun Management Center has been installed and set up on the main and spare system controllers and the Sun Fire 15K/12K platform objects have been created, no Sun Management Center configuration changes are required when the spare system controller becomes the acting main system controller. When this switch from spare

to acting main system controller occurs, the platform agent on the acting main system controller becomes active and collects current information about the Sun Fire 15K/12K platform.

Not all information that was available prior to this switch is available from the newly active platform agent. The number of domain stops (`dstops`) and record stops (`rstops`) encountered are reset to zero. A current error, such as a high temperature, is reported if the condition still persists.

The Sun Management Center agents on the spare and main system controller are not automatically synchronized. If you modify any of the default limits, attributes, or loaded modules on either the main or spare system controller, you should make the corresponding changes to the agents operating on the other system controller.

## ▼ To Create a Sun Fire 15K/12K Platform Object

Sun Fire 15K/12K platform objects are created as part of the Sun Fire 15K/12K composite. You can also create the platform objects directly.

1. **Follow the instructions in “Creating a Node” in Chapter 3 of the *Sun Management Center 3.0 Software User’s Guide* to create a Sun Fire 15K/12K platform object.**
2. **In Step 3 of that procedure, select the Agent - Platform monitoring type from the pull-down menu (Monitor Via).**
3. **In Step 4 of that procedure, type the requested information.**

---

**Note** – The default platform agent port number is port 166. Do not change this port number unless the platform agent was configured on a different port during Sun Management Center setup.

---

4. **Click OK.**



## Sun Fire 15K/12K System Details Windows

This chapter describes how to find hardware summaries, physical views, and logical views from the platform, domain, and system controller Details windows for Sun Fire 15K/12K systems. TABLE 5-1 lists the Sun Management Center agent modules for the Sun Fire 15K/12K systems that are viewable from the Sun Fire 15K/12K system Details windows:

**TABLE 5-1** Sun Fire 15K/12K Agent Modules Viewable from the Details Windows

<b>Module Name</b>	<b>Details Window</b>
Platform Config Reader (PCR)	Sun Fire 15K/12K platform
Platform/Domain State Management (PDSM)	Sun Fire 15K/12K platform
SC Monitoring Module (SCM)	Sun Fire 15K/12K platform
Domain Config Reader (DCR)	Sun Fire 15K/12K domain
Dynamic Reconfiguration (DR)	Sun Fire 15K/12K domain
SC Config Reader	Sun Fire 15K/12K system controller
SC Status	Sun Fire 15K/12K system controller

These modules provide Sun Fire 15K/12K hardware monitoring and management capabilities and provide information about the Sun Fire 15K/12K composite configuration. See Chapter 6 in this supplement for detailed information about the objects and properties provided by these modules. See Chapter 7 and Chapter 8 in this supplement for detailed information about performing Sun Fire 15K/12K platform and domain dynamic reconfiguration and other management operations.

This chapter provides details about the Sun Fire 15K/12K platform, system controller, and domain information shown in the Details window. Three related chapters in the *Sun Management Center 3.0 Software User's Guide* provide general information about using the Sun Management Center Details window:

- Chapter 5, “Sun Management Center Software Main Console Window,” describes how to use the main Sun Management Center console window.
- Chapter 6, “Browser,” describes how to display the Details window from the main Sun Management Center console window.
- Chapter 13, “Details,” describes how to use the Details window.

---

**Note** – The Sun Fire 15K/12K Platform Config Reader module does not provide configuration information for I/O devices attached to the platform. To view this information, open a Sun Fire 15K/12K domain Details window for each domain whose I/O devices you want to check.

---

## Views Under the Hardware Tab

For the Sun Fire 15K/12K platform, domain, and SC Details windows, you can access three types of views from the Hardware tab.

- Hardware Summary
- Physical View
- Logical View

### Hardware Summary

The Hardware Summary provides a table summary of the resources available to that entity.

### Physical View

The Physical View provides a photo-realistic view of the Sun Fire 15K/12K system. The Physical View shows only components that are visible in the chassis. For example, the centerplane board and I/O devices are not shown in the Physical View. To view information on these devices, examine the Logical View or Browser displays.

## Logical View

The Logical View provides a hierarchical view of the boards and components in that entity. Unlike the Physical View, which shows only those boards and components physically visible in the chassis, the Logical View shows all the boards and components, such as the centerplane and I/O devices.

---

## Sun Fire 15K/12K Platform Details Window

The Sun Management Center Details window for a Sun Fire 15K/12K platform displays information about the entire platform hardware. This window includes the following tabs, which are explained in Chapter 13 of the *Sun Management Center 3.0 Software User's Guide*:

- Info
- Browser
- Alarms
- Hardware

---

**Note** – If your Sun Fire 15K/12K Platform Details window does not include the preceding four tabs, Sun Fire 15K/12K support has not been correctly installed on your Sun Management Center server machine. Confirm that the add-on Sun Fire 15K/12K components have been installed and set up correctly, and that the Sun Management Center server process has been restarted following installation.

---

The Sun Fire 15K/12K platform is monitored by a Sun Management Center platform agent on the system controller. The platform agent is dedicated to this task; therefore, you cannot load or unload agent modules from the Sun Fire 15K/12K platform Details window.

This section describes using the Hardware tab to display information provided by the Sun Fire 15K/12K Platform Config Reader module. This module provides up-to-date information about platform hardware, including:

- Voltage and temperature
- All boards
- Power supplies
- Fan trays
- Hardware errors encountered, such as the number of domain stops (`dstop`)

## ▼ To Find the Hardware Summary for the Sun Fire 15K/12K Platform

To find a summary of the Sun Fire 15K/12K platform's hardware resources (FIGURE 5-1):

1. **Open the Sun Fire 15K/12K platform Details window.**
2. **Click on the Hardware tab.**
3. **In the Views pull-down menu, select Hardware Summary.**

sun15 [xc4p11-sc0] Details

sun15 [xc4p11-sc0]

Info Browser Alarms Hardware

Views Hardware Summary

**Sun Fire 15K/12K Platform Information:**

Property	Value
Platform Name	sun15
Main System Controller Hostname	xc4p11-sc0
Spare System Controller Hostname	xc4p11-sc1
Main System Controller	SC0
Number of Active Domains	1

**Sun Fire 15K/12K Platform Hardware Resources:**

Property	Value
Number of Expander Boards	8
Number of Slot0 System Boards	8
Number of Slot1 System Boards	7
Number of System Controllers	2
Number of System Controller Peripherals	2
Number of Centerplanes	1
Number of Centerplane Support Boards	2
Number of Fan Trays	8
Number of Bulk Power Supplies	6
Total Memory (MB)	8192
Total Processors	8

Close Help

Loading Hardware Resource failed.

FIGURE 5-1 Hardware Summary for a Sun Fire 15K/12K Platform

The Sun Fire 15K/12K Platform Information table shown in FIGURE 5-1 includes these properties (TABLE 5-2):

**TABLE 5-2** Sun Fire 15K/12K Platform Information

<b>Property</b>	<b>Description</b>
Platform Name	Name given to the platform during SMS configuration
Main System Controller Hostname	Host name of the main system controller
Spare System Controller Hostname	Host name of the spare system controller
Main System Controller	Identifier of the primary system controller: SC0 or SC1
Number of Active Domains	Number of active domains for Sun Fire 15K platform (up to 18) or Sun Fire 12K platform (up to 9)

The Sun Fire 15K/12K Platform Hardware Resources table shown in FIGURE 5-1 includes these properties (TABLE 5-3):

**TABLE 5-3** Sun Fire 15K/12K Platform Hardware Resources

<b>Property</b>	<b>Description</b>
Number of Expander Boards	Number of expander boards
Number of Slot0 System Boards	Number of system boards in slot 0
Number of Slot1 System Boards	Number of system boards in slot 1
Number of System Controllers	Number of system controllers
Number of System Controller Peripherals	Number of system controller peripherals
Number of Centerplanes	Number of Sun™ Fireplane interconnects, also known as centerplanes
Number of Centerplane Support Boards	Number of centerplane support boards
Number of Fan Trays	Number of fan trays
Number of Bulk Power Supplies	Number of bulk power supplies
Total Memory (MB)	Total memory in megabytes as configured by the power-on self-test (POST)
Total Processors	Total number of processors as configured by POST

## ▼ To Find the Physical View of the Sun Fire 15K/12K Platform

To find a photo-realistic view of the Sun Fire 15K/12K platform (FIGURE 5-2):

1. **Open the Sun Fire 15K/12K platform Details window.**
2. **Click on the Hardware tab.**
3. **In the Views pull-down menu, click system under Physical View.**
4. **In the Rotate Current View pull-down menu, click system—Front to view the front of the platform.**

FIGURE 5-2 illustrates a Physical View of a Sun Fire 15K/12K platform from the front. For more information about navigating the Physical Views, refer to “Physical View” in Chapter 13 in the *Sun Management Center 3.0 Software User’s Guide*.

---

**Note** – The Physical View of the Sun Fire 15K/12K platform shows *only* processors that are known to be present. The Physical View of the Sun Fire 15K/12K platform does *not* show processors whose presence is unknown. For example, a processor with a POST status of `BLACKLISTED` in the Processor Table may or may not be physically present, but is not shown in the platform Physical View.

---



FIGURE 5-2 Sun Fire 15K/12K Platform Physical View—Front



5. Click on one of the CPU boards in the top slots of the Sun Fire 15K/12K platform to display a Physical View of the top of a CPU board (FIGURE 5-3).

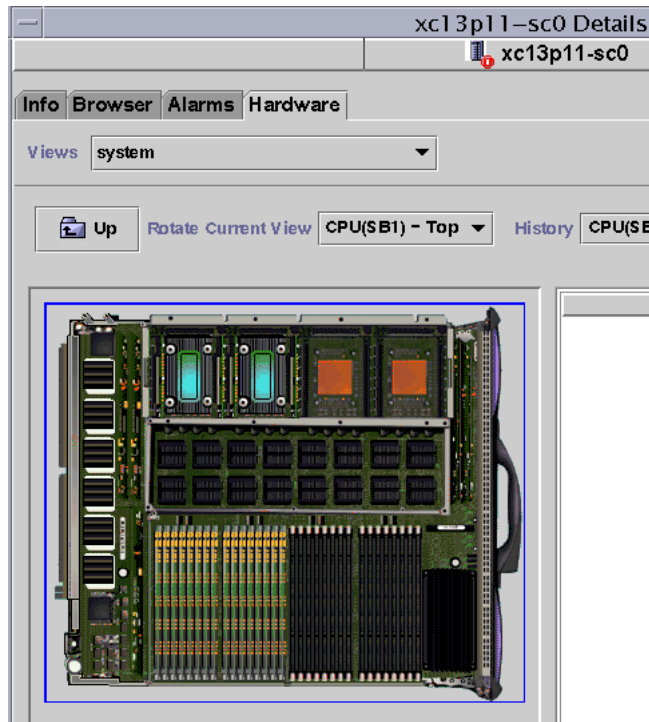


FIGURE 5-3 Top of CPU Board in Platform Physical View

## ▼ To Find the Logical View of the Sun Fire 15K/12K Platform

The platform Logical View shows the hierarchy of all boards and components attached to the entire Sun Fire 15K/12K system. To find a hierarchical view of a Sun Fire 15K/12K platform:

1. Open the Sun Fire 15K/12K platform Details window.
2. Click on the Hardware tab.
3. In the Views pull-down menu, click system under Logical View.
4. Click on the Expand All button and then click on an object in the left pane to see a logical view similar to FIGURE 5-4.

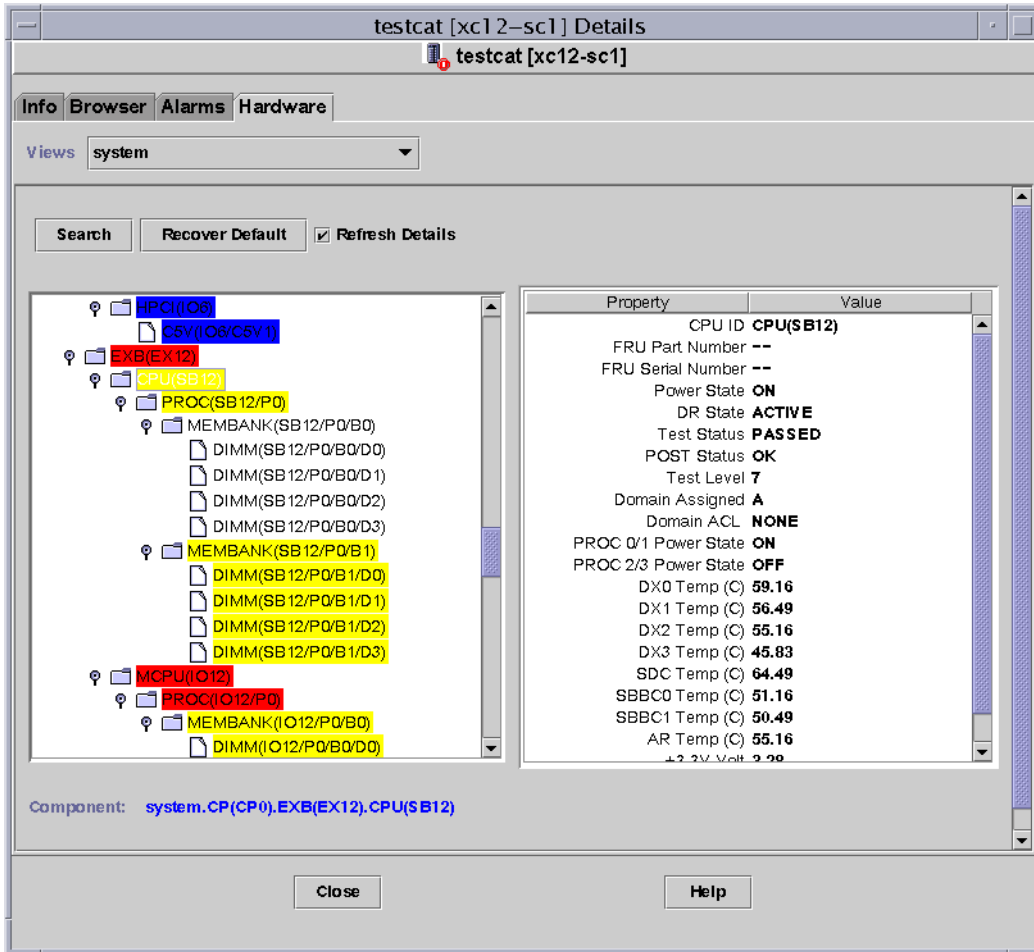


FIGURE 5-4 Sun Fire 15K/12K Platform Logical View

For more information about navigating Logical Views, refer to “Logical View” in Chapter 13 in the *Sun Management Center 3.0 Software User’s Guide*

---

# Sun Fire 15K/12K Domain Details Window

The Sun Management Center Details window for a Sun Fire 15K/12K domain displays information about that domain's hardware. The Sun Fire 15K/12K domain Details window resembles the host Details window described in Chapter 13 of the *Sun Management Center 3.0 Software User's Guide*.

Only the boards and components allocated to the Sun Fire 15K/12K domain are included in this information. Information about the hardware configuration of the entire platform can be viewed from the Sun Fire 15K/12K platform Details window. See "Sun Fire 15K/12K Platform Details Window" on page 69 for more information.

This window includes the following tabs, which are explained in Chapter 13 of the *Sun Management Center 3.0 Software User's Guide*:

- Info
- Browser
- Alarms
- Modules
- Applications
- Hardware

---

**Note** – If your Sun Fire 15K/12K domain Details window does not include the preceding six tabs, Sun Fire 15K/12K support has not been installed correctly on your Sun Management Center server machine. Confirm that the add-on Sun Fire 15K/12K components have been installed and set up correctly, and that the Sun Management Center server process has been restarted following installation.

---


This section describes using the Hardware tab to display information provided by the Sun Fire 15K/12K Domain Config Reader module. This module provides up-to-date information about system boards and components that reside on those boards including:

- Processors
- Memory
- Attached I/O devices

## ▼ To Find the Hardware Summary for a Sun Fire 15K/12K Domain

To find a summary of a Sun Fire 15K/12K domain's hardware resources (FIGURE 5-5):

1. Open the Sun Fire 15K/12K domain Details window.
2. Click on the Hardware tab.
3. In the Views pull-down menu, select Hardware Summary.

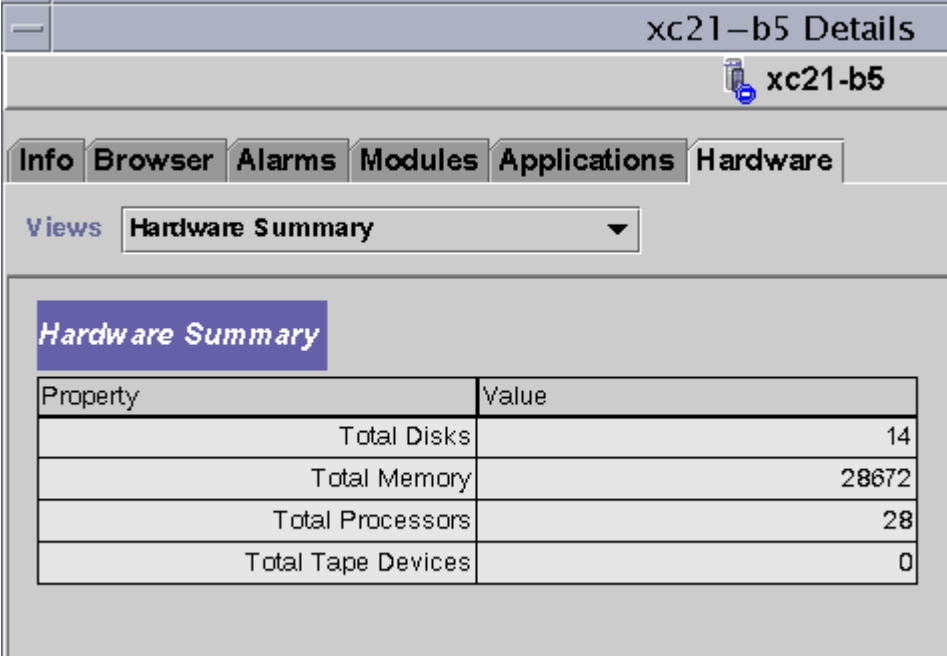

The screenshot shows a window titled "xc21-b5 Details". Below the title bar, there is a toolbar with tabs for "Info", "Browser", "Alarms", "Modules", "Applications", and "Hardware". The "Hardware" tab is selected. Below the tabs, there is a "Views" pull-down menu with "Hardware Summary" selected. The main content area displays a "Hardware Summary" section with a table of hardware resources.

Property	Value
Total Disks	14
Total Memory	28672
Total Processors	28
Total Tape Devices	0

FIGURE 5-5 Hardware Summary for a Sun Fire 15K/12K Domain

The Sun Fire 15K/12K domain information shown in FIGURE 5-5 includes these properties (TABLE 5-4):

**TABLE 5-4** Sun Fire 15K/12K Domain Hardware Summary

Property	Description
Total Disks	Number of disks present in the system
Total Memory	Total memory in megabytes
Total Processors	Number of processors, which includes all processors allocated to the domain
Total Tape Devices	Number of tape devices present in the system

## ▼ To Find the Physical View of a Sun Fire 15K/12K Domain

In the Physical View of a Sun Fire 15K/12K domain, the picture has dimmed areas, such as power supplies, fan trays, the system controller, and the system controller peripherals. Only domain system board information is available from the Physical View of a Sun Fire 15K/12K domain.

To find a photo-realistic view of system board information for a Sun Fire 15K/12K domain (FIGURE 5-6):

1. **Open the Sun Fire 15K/12K domain Details window.**
2. **Click on the Hardware tab.**
3. **In the Views pull-down menu, click system under Physical View.**
4. **In the Rotate Current View pull-down menu, click system—Front to see the system boards assigned to the domain, which are physically in the front of the platform.**

FIGURE 5-6 illustrates a Physical View of systems boards assigned to the domain, which are physically in the front of the Sun Fire 15K/12K platform. For more information about navigating Physical Views, refer to “Physical View” in Chapter 13 in the *Sun Management Center 3.0 Software User’s Guide*.

---

**Note** – The domain chassis image in the physical view is the same as that of the platform with the fan trays and power supplies dimmed.

---

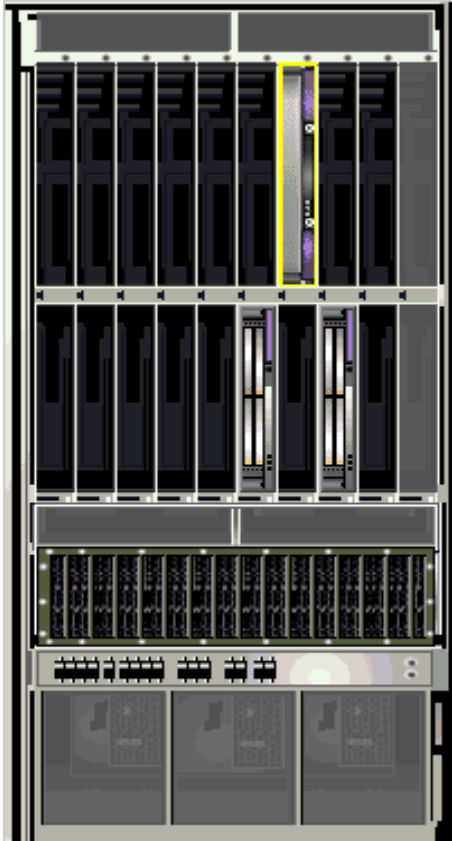


FIGURE 5-6 Sun Fire 15K/12K Domain Physical View—Front

5. Click on one of the HPCI boards in the bottom slots of the Sun Fire 15K/12K domain to display a Physical View of the top of a HPCI board (FIGURE 5-7).

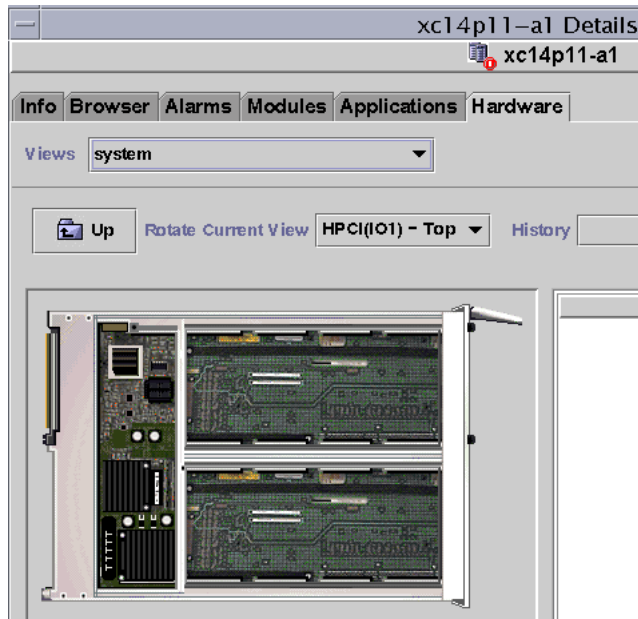


FIGURE 5-7 Top of HPCI Board in Domain Physical View

## ▼ To Find the Logical View of a Sun Fire 15K/12K Domain

The domain Logical View shows the hierarchy of all boards and components attached to a Sun Fire 15K/12K domain. To find the hierarchical view of a Sun Fire 15K/12K domain:

1. Open the Sun Fire 15K/12K domain Details window.
2. Click on the Hardware tab.
3. In the Views pull-down menu, click system under Logical View.
4. Click on the Expand All button and then click on an object in the left pane to see a logical view similar to FIGURE 5-8.

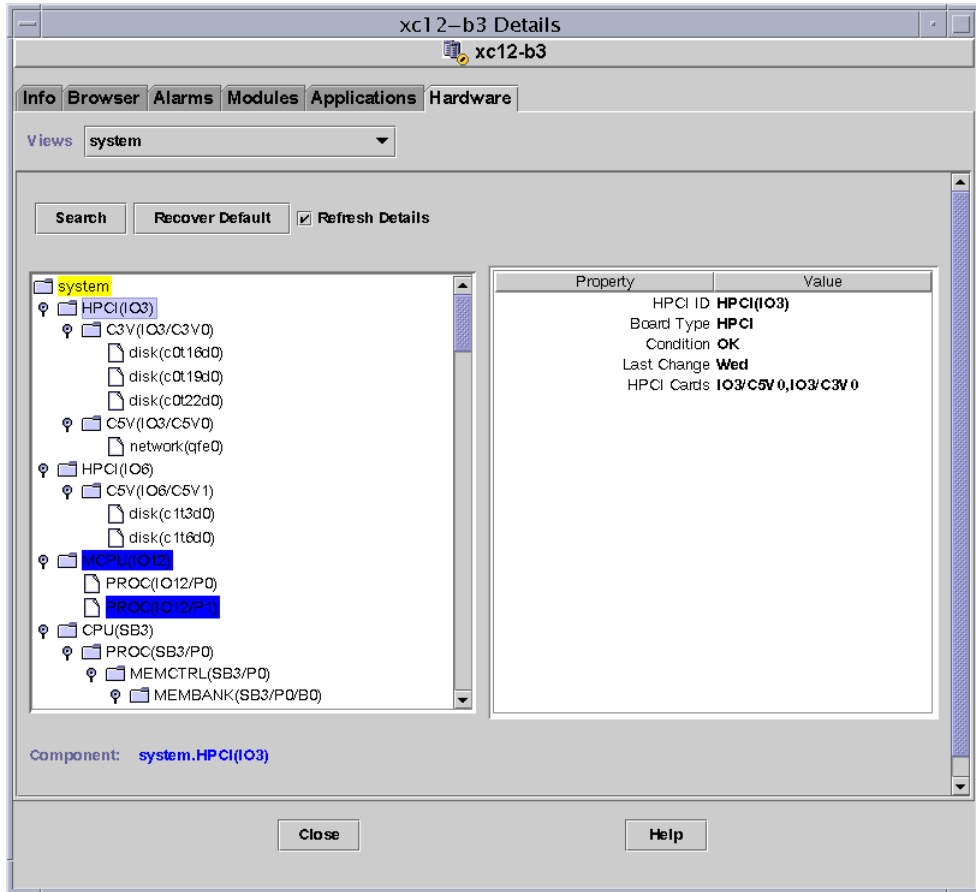


FIGURE 5-8 Sun Fire 15K/12K Domain Logical View

For more information about navigating Logical Views, refer to “Logical View” in Chapter 13 in the *Sun Management Center 3.0 Software User’s Guide*

## Sun Fire 15K/12K SC Details Window

The Sun Management Center Details window for a Sun Fire 15K/12K SC displays information about the system controller’s hardware. The Sun Fire 15K/12K SC Details window resembles the host Details window described in the *Sun Management Center 3.0 Software User’s Guide*.



Only boards and components allocated to the Sun Fire 15K/12K system controller are included in this information. Information about the hardware configuration of the entire platform can be viewed from the Sun Fire 15K/12K platform Details window. See “Sun Fire 15K/12K Platform Details Window” on page 69 for more information.

The window includes the following tabs, which are explained in the *Sun Management Center 3.0 Software User's Guide*:

- Info
- Browser
- Alarms
- Modules
- Applications
- Hardware

---

**Note** – If your Sun Fire 15K/12K SC Details window does not include each of the preceding six tabs, the Sun Fire 15K/12K support has not been installed correctly on your Sun Management Center server machine. Confirm that the add-on Sun Fire 15K/12K components have been installed and set up correctly, and that the Sun Management Center server process has been restarted following installation.

---


This section describes using the Hardware tab to display information provided by the Sun Fire 15K/12K SC Config Reader module. This module provides up-to-date information about the system boards and the components that reside on those boards including:

- Processors
- Memory
- Attached I/O devices

## ▼ To Find the Hardware Summary for a Sun Fire 15K/12K System Controller

To find a summary of the hardware resources for a Sun Fire 15K/12K system controller (FIGURE 5-9):

1. **Open the Sun Fire 15K/12K SC Details window.**
2. **Click on the Hardware tab.**
3. **In the Views pull-down menu, select Hardware Summary.**

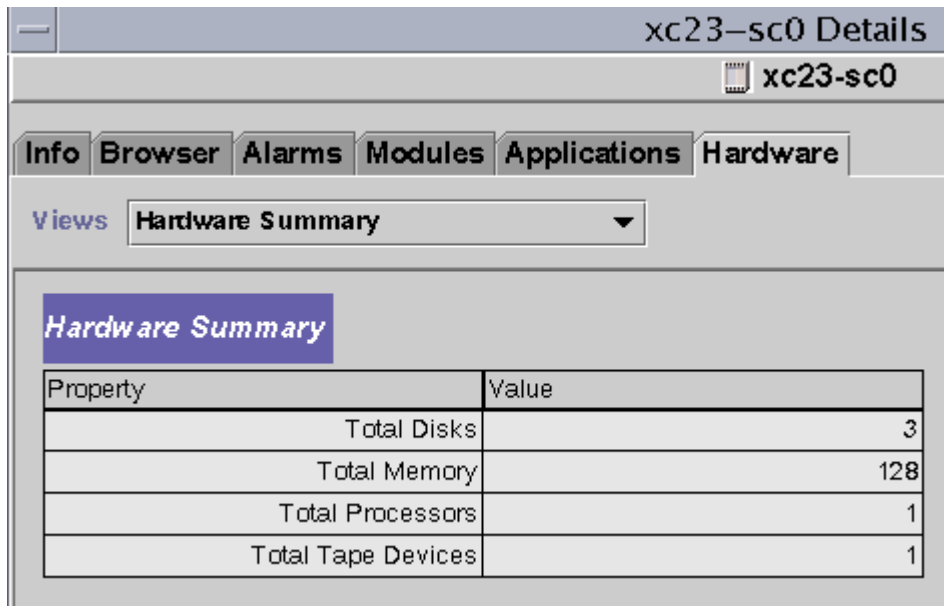

**FIGURE 5-9** Hardware Summary for a Sun Fire 15K/12K System Controller

The Sun Fire 15K/12K SC information shown in FIGURE 5-9 includes these properties (TABLE 5-5):

**TABLE 5-5** Sun Fire 15K/12K SC Hardware Summary

Property	Description
Total Disks	Number of disks present in the system
Total Memory	Total memory in megabytes
Total Processors	Number of processors in the system controller
Total Tape Devices	Number of tape devices present in the system

## ▼ To Find the Physical View of the Sun Fire 15K/12K System Controller

The system controller is in the upper-right corner of the Sun Fire 15K/12K platform. To find a photo-realistic view of a Sun Fire 15K/12K system controller (FIGURE 5-10):

1. **Open the Sun Fire 15K/12K SC Details window.**
2. **Click on the Hardware tab.**

3. In the Views pull-down menu, click system under Physical View.
4. To see the system controller in the front of the platform, click system - Front in the Rotate Current View pull-down menu.

---


**Note** – The system controller chassis image in the physical view is the same as that of the platform except the system controller slot is populated.

---



**FIGURE 5-10** Sun Fire 15K/12K System Controller Physical View—Front

5. Click on the system controller in the upper right of the Sun Fire 15K/12K platform to display a Physical View of the top of a system controller (FIGURE 5-11).

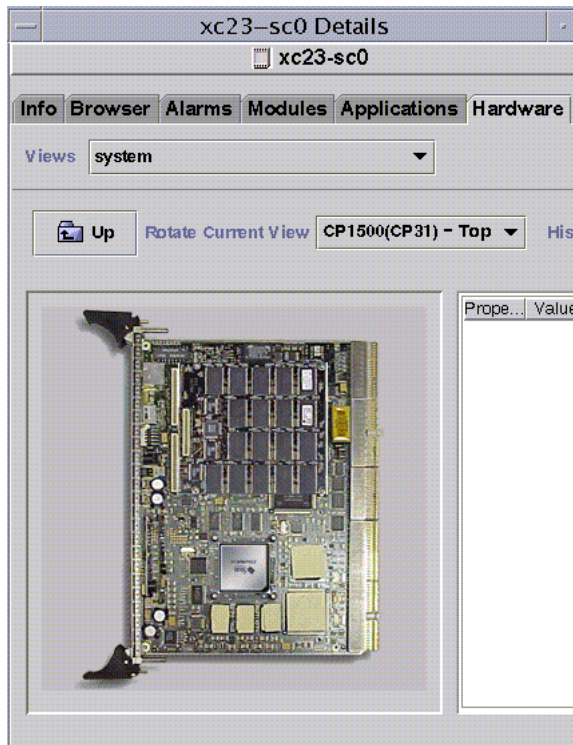

**FIGURE 5-11** Top of System Controller Physical View

FIGURE 5-11 illustrates a Physical View of the top of a system controller. For more information about navigating Physical Views, refer to "Physical View" in Chapter 13 in the *Sun Management Center 3.0 Software User's Guide*.

## ▼ To Find the Logical View of a Sun Fire 15K/12K System Controller

The Logical View of a system controller shows the hierarchy of all the boards and components attached to the system controller. To find a hierarchical view of a Sun Fire 15K/12K system controller (FIGURE 5-12):

1. **Open the Sun Fire 15K/12K SC Details window.**
2. **Click on the Hardware tab.**
3. **In the Views pull-down menu, click system under Logical View.**
4. **Click on the Expand All button and then click on an object in the left pane to see a logical view similar to FIGURE 5-12.**

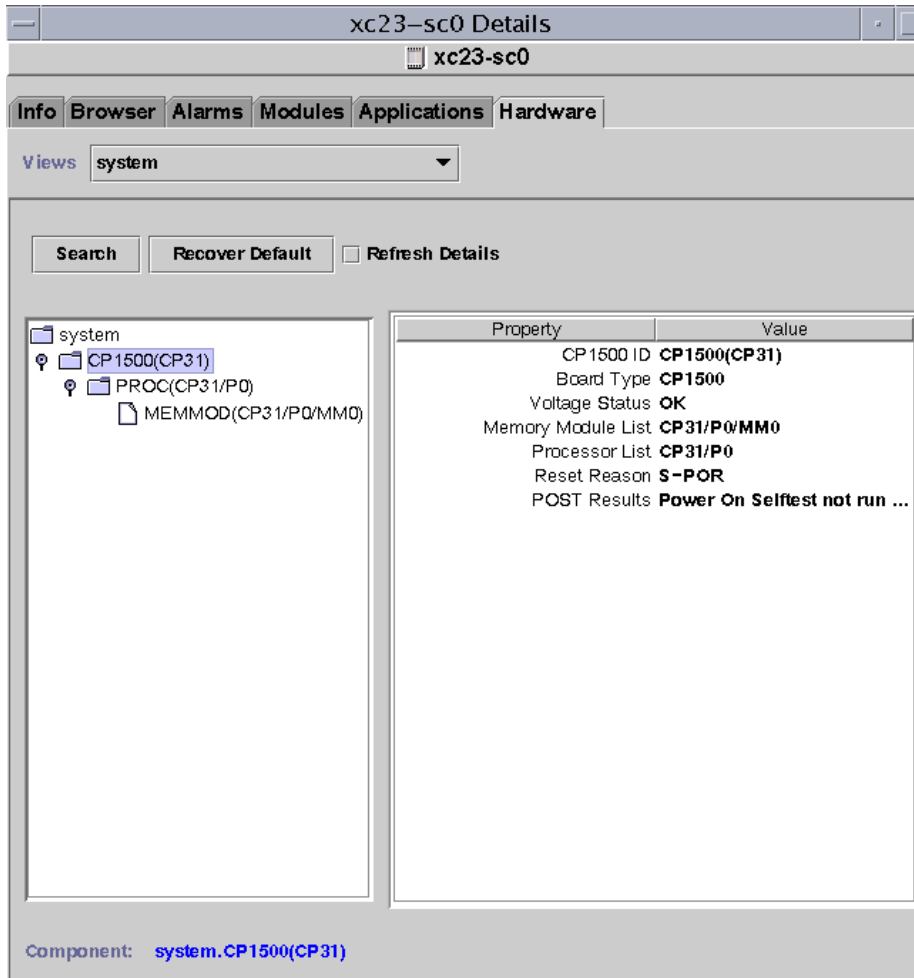


FIGURE 5-12 Sun Fire 15K/12K System Controller Logical View

For more information about navigating Logical Views, refer to “Logical View” in Chapter 13 in the *Sun Management Center 3.0 Software User’s Guide*

## Sun Fire 15K/12K Agent Modules

This chapter describes how to open each of the Sun Fire 15K/12K system-specific agent modules and describes the tables, properties, and alarm rules for each module.

TABLE 6-1 shows each Sun Fire 15K/12K system-specific module, a brief description, and whether the module is loaded by default, loadable, or unloadable. For specific information about loading and unloading Sun Management Center modules, refer to Chapter 11, “Managing Modules,” in the *Sun Management Center 3.0 Software User’s Guide*.

**TABLE 6-1** Summary of Sun Fire 15K/12K Agent Modules

Module	Description	Loaded by Default?	Loadable?	Unloadable?
Platform Config Reader	Provides information about the hardware configuration for the entire Sun Fire 15K/12K platform	yes	no	no
Domain Config Reader	Provides the hardware configuration for a Sun Fire 15K/12K domain	yes	yes	yes
SC Config Reader	Provides the hardware configuration for Sun Fire 15K/12K system controllers (SCs)	yes	yes	yes
SC Status	Determines whether a Sun Fire 15K/12K system controller is the main or spare system controller	yes	yes	yes
SC Monitoring	Monitors the System Management Services (SMS) daemons on the active Sun Fire 15K/12K system controller	yes	yes	yes

**TABLE 6-1** Summary of Sun Fire 15K/12K Agent Modules (Continued)

Module	Description	Loaded by Default?	Loadable?	Unloadable?
Platform/ Domain State Management	Enables an administrator to perform platform and domain management, and global dynamic reconfiguration of system boards across the platform from the system controller	no	yes	yes
Dynamic Reconfiguration	Enables an administrator to perform dynamic reconfiguration of boards on one Sun Fire 15K/12K domain at a time from the domain	no	yes	yes

Appendix D of the *Sun Management Center 3.0 Software User's Guide* describes the core Sun Management Center modules that monitor various components of the system, including hardware, operating environment, local applications, and remote systems.

## Platform Modules Disabled

The platform modules—Platform Config Reader, Platform/Domain State Management, and SC Monitoring—are automatically disabled if either of these conditions exist:

- System controller is the spare system controller
- One of the required SMS daemons for a given platform module is not active (TABLE 6-2)

**TABLE 6-2** Required SMS Daemons for Platform Modules

Platform Module	Required SMS Daemons
Platform Config Reader	Event Front-end Daemon (efe) Environmental Status Monitoring Daemon (esmd) Failover Management Daemon (fomd) Hardware Access Daemon (hwad) Platform Configuration Daemon (pcd)
Platform/Domain State Management	Event Front-end Daemon (efe) Environmental Status Monitoring Daemon (esmd) Failover Management Daemon (fomd) Hardware Access Daemon (hwad) Platform Configuration Daemon (pcd)
SC Monitoring	Event Front-end Daemon (efe)



When a platform module is automatically disabled, an alarm is generated and the platform icon is designated with a circled X on the lower-right corner.

---

## Sun Fire 15K/12K Module Properties

The tables in this chapter provide brief descriptions of each property in each module, if any. Properties that can be graphed are noted in the property description. Refer to Chapter 8 of the *Sun Management Center 3.0 Software User's Guide* for more information about graphing properties.

---

## Sun Fire 15K/12K Module Alarm Rules

Each module section contained in the Sun Fire 15K/12K add-on component describes the alarm rules for that module, if any. You cannot change the limits for any of these rules. The system provides a message with the alarm stating the current property and the limit. If a property is monitored by a Sun Management Center rule, the name of that rule is shown in the property tables for each module.

For descriptions of the alarm rules for each module, see:

- “Platform Config Reader Alarm Rules” on page 125
- “Domain Config Reader Alarm Rules” on page 154
- “SC Config Reader Alarm Rules” on page 165
- “SC Monitoring Alarm Rule—Process Down Rule (`rDownProc`)” on page 193

Appendix E of the *Sun Management Center 3.0 Software User's Guide* lists the Sun Management Center alarm rules for core Sun Management Center modules.

---

# Platform Config Reader Module

The Platform Config Reader module provides information about the hardware configuration for the entire Sun Fire 15K/12K platform. During Sun Fire 15K/12K platform add-on setup, this module loads automatically, and you *cannot* unload it.

FIGURE 6-1 shows the icon for the module—Config Reader (Sun Fire 15K/12K)—as it is displayed in the platform Details window under the Browser tab and Hardware icon.

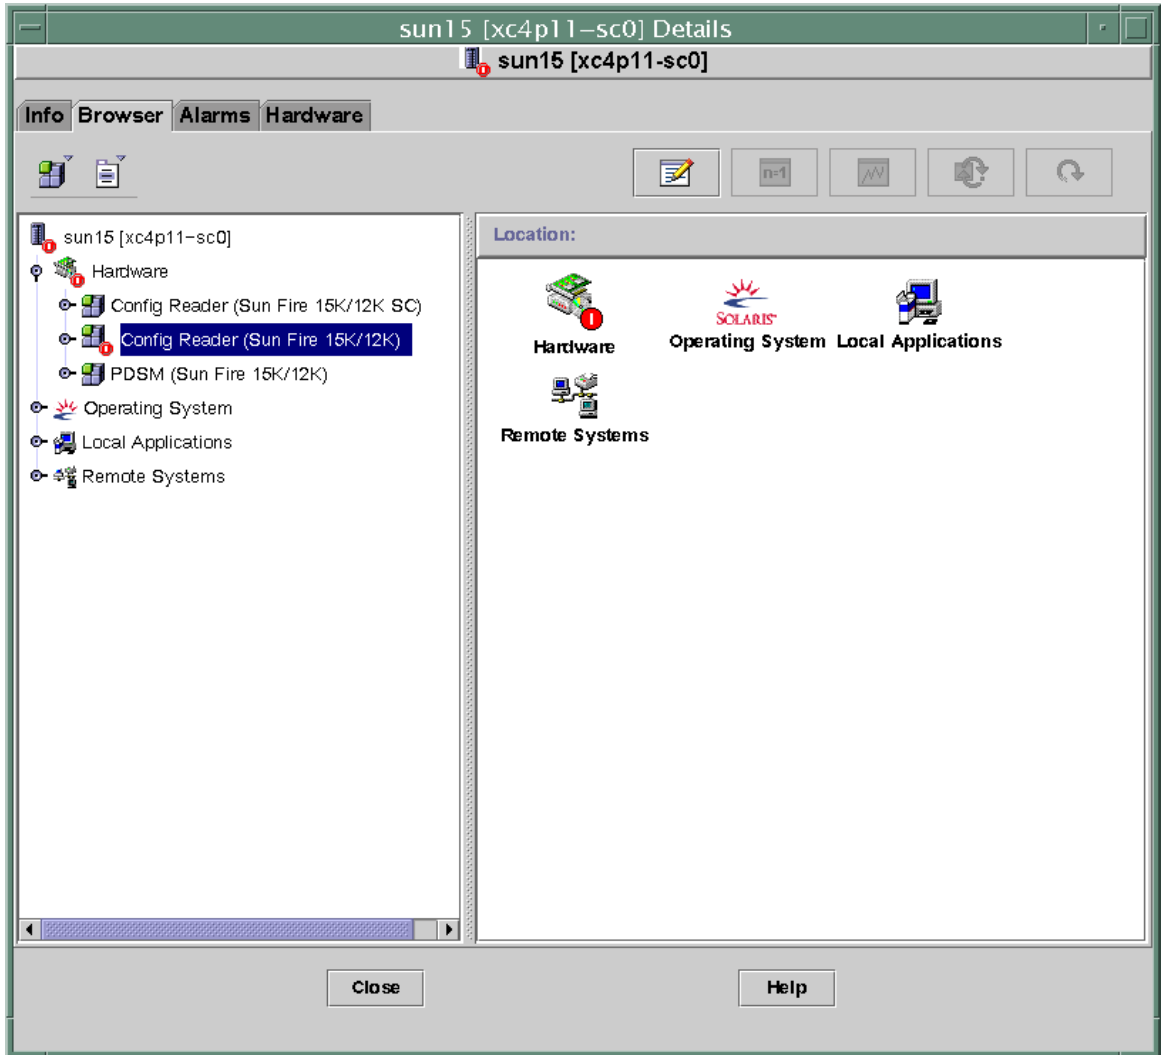


FIGURE 6-1 Platform Config Reader Module

## Platform Config Reader Module Refresh

The Platform Config Reader module stores platform information in an internal cache. It gathers and refreshes this information in two ways:

- At periodic intervals, currently set at 60 minutes, the Platform Config Reader interacts with SMS daemons on the SC to repopulate the entire contents of the cache. You cannot change the value of the refresh interval.

- Whenever platform properties change, such as temperature or voltage changes, SMS daemons notify the Sun Management Center software. The Platform Config Reader then updates the affected hardware table in the Browser view.

By using the browser from the platform Details window, you can refresh any module property; however, doing so only retrieves the current value of the property from the platform agent. It does not force a recalculation of the data.

## Platform Config Reader Properties

The tables in this section describe each of the visible properties for each Sun Fire 15K/12K Platform Config Reader object. If a property has a value of -- or -1, the Platform Config Reader is unable to get data for that property.

---

**Note** – All temperatures are measured in degrees Celsius (C).

---

### System

The following table provides a brief description of the properties for the Sun Fire 15K/12K Platform Config Reader system (TABLE 6-3):

**TABLE 6-3** Sun Fire 15K/12K Platform Config Reader System

Property	Rule (if any)	Description
Name		system
Platform Type		Platform type identifier
Platform Name		Name assigned to this Sun Fire 15K/12K platform during SMS software configuration
Chassis Host ID		Chassis host identifier
Failover State	scFoStat	Current failover state: ACTIVATING, DISABLED, or FAILED
Admin Group		Administrative group identifier, such as platadm
Operator Group		Operator group identifier, such as platoper
Service Group		Service group identifier, such as platsvc

**TABLE 6-3 Sun Fire 15K/12K Platform Config Reader System (Continued)**

<b>Property</b>	<b>Rule (if any)</b>	<b>Description</b>
Main System Controller Hostname		Host name of the main system controller
Spare System Controller Hostname		Host name of the spare system controller
Main System Controller		Identifier of the current main system controller: SC0 or SC1
System Controller Internal IP Address		Internal IP address of the current main system controller
Clock Frequency (MHz)		Clock frequency in megahertz
Clock Type		Clock type used
Number of Active Domains		Number of active domains for Sun Fire 15K platform (1–18) or Sun Fire 12K platform (1–9)
Number of Expander Boards		Number of expander boards for Sun Fire 15K platform (1–18) or Sun Fire 12K platform (1–9)
Number of Slot0 System Boards		Number of system boards in slot 0 (1–18)
Number of Slot1 System Boards		Number of system boards in slot 1 (1–18)
Number of System Controllers		Number of system controllers (1–2)
Number of System Controller Peripherals		Number of system controller peripherals (1–2)
Number of Centerplanes		Number of centerplanes (1)
Number of Centerplane Support Boards		Number of centerplane support boards (1–2)
Number of Fan Trays		Number of fan trays (1–8)
Number of Bulk Power Supplies		Number of bulk power supplies (1–6)
Total Memory (MB)		Total memory in megabytes as configured by the power-on self-test (POST)
Total Processors		Total number of processors as configured by POST
Last Full Refresh		Last date and time the data in the internal cache was fully updated

## Centerplane

The following table provides a brief description of the properties for the Sun Fire 15K/12K Platform Config Reader Sun Fireplane interconnect—also known as the centerplane (TABLE 6-4):

**TABLE 6-4** Sun Fire 15K/12K Platform Config Reader Centerplane

Property	Rule (if any)	Description
CP ID		Centerplane identifier containing FRU ID(Slot ID): CP (CP0)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
CSBs Present		Comma-separated list of the numbers for the centerplane support boards that are present
EXBs Present		Comma-separated list of the numbers for the expander boards that are present
SCs Present		Comma-separated list of the numbers for the system controllers that are present
SCPERs Present		Comma-separated list of the numbers for the system controller peripherals that are present
DARB Temp 0	scBTemp	(graphable) Temperature of the DARB ASIC on centerplane board 0
RMX Temp 0	scBTemp	(graphable) Temperature of the RMX ASIC on logical centerplane board 0
AMX0 Temp 0	scBTemp	(graphable) Temperature of the AMX0 ASIC on logical centerplane board 0
AMX1 Temp 0	scBTemp	(graphable) Temperature of the AMX1 ASIC on logical centerplane board 0

**TABLE 6-4** Sun Fire 15K/12K Platform Config Reader Centerplane *(Continued)*

<b>Property</b>	<b>Rule (if any)</b>	<b>Description</b>
DMX0 Temp 0	scBTemp	(graphable) Temperature of the DMX0 ASIC on logical centerplane board 0
DMX1 Temp 0	scBTemp	(graphable) Temperature of the DMX1 ASIC on logical centerplane board 0
DMX3 Temp 0	scBTemp	(graphable) Temperature of the DMX3 ASIC on logical centerplane board 0
DMX5 Temp 0	scBTemp	(graphable) Temperature of the DMX5 ASIC on logical centerplane board 0
DARB Temp 1	scBTemp	(graphable) Temperature of the DARB ASIC on logical centerplane board 1
RMX Temp 1	scBTemp	(graphable) Temperature of the RMX ASIC on logical centerplane board 1
AMX0 Temp 1	scBTemp	(graphable) Temperature of the AMX0 ASIC on logical centerplane board 1
AMX1 Temp 1	scBTemp	(graphable) Temperature of the AMX1 ASIC on logical centerplane board 1
DMX0 Temp 1	scBTemp	(graphable) Temperature of the DMX0 ASIC on logical centerplane board 1
DMX1 Temp 1	scBTemp	(graphable) Temperature of the DMX1 ASIC on logical centerplane board 1
DMX3 Temp 1	scBTemp	(graphable) Temperature of the DMX3 ASIC on logical centerplane board 1
DMX5 Temp 1	scBTemp	(graphable) Temperature of the DMX5 ASIC on logical centerplane board 1

## Expander Board

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader expander board (TABLE 6-5).

**TABLE 6-5** Sun Fire 15K/12K Platform Config Reader Expander Board

Property	Rule (if any)	Description
EXB ID		Expander board identifier containing FRU ID(Slot ID): EXB( EXX), where x is the expander board number (0–17)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Power State	scBPower	Indicates whether the expander board power is ON or OFF
Slot 0		Identifier of the system board that occupies slot 0: CPU( SBx) or NOT_PRESENT, where x is the number of the centerplane slot containing the board (0–17)
Slot 1		Identifier of the system board that occupies slot 1: HPCI( IOx), MCPU( IOx), or NOT_PRESENT, where x is 0–17
PS0 State	scOBURu1	Status of power supply 0: OK, BAD, or UNKNOWN
PS1 State	scOBURu1	Status of power supply 1: OK, BAD, or UNKNOWN
Ambient Top Temp (C)	scBTemp	(graphable) Ambient top temperature
Ambient Bottom Temp (C)	scBTemp	(graphable) Ambient bottom temperature
SBBC Temp (C)	scBTemp	(graphable) Temperature of the SBBC ASIC
SDI5 Temp (C)	scBTemp	(graphable) Temperature of the SDI5 ASIC



**TABLE 6-5** Sun Fire 15K/12K Platform Config Reader Expander Board *(Continued)*

Property	Rule (if any)	Description
SDI0 Temp (C)	scBTemp	(graphable) Temperature of the SDI0, or master, ASIC
SDI3 Temp (C)	scBTemp	(graphable) Temperature of the SDI3 ASIC
AXQ Temp (C)	scBTemp	(graphable) Temperature of the AXQ ASIC
+3.3HK Volt	scBVolt	(graphable) Voltage level for the board +3.3 VDC housekeeping power
+3.3V Volt	scBVolt	(graphable) Voltage level for the board +3.3 VDC power
+1.5V Volt	scBVolt	(graphable) Voltage level for the board +1.5 VDC power
+2.5V Volt	scBVolt	(graphable) Voltage level for the board +2.5 VDC power

## Centerplane Support Board

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader centerplane support board (TABLE 6-6).

**TABLE 6-6** Sun Fire 15K/12K Platform Config Reader Centerplane Support Board

Property	Rule (if any)	Description
CSB ID		Centerplane support board identifier containing FRU ID(Slot ID): CSB(CS0) or CSB(CS1)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit

**TABLE 6-6** Sun Fire 15K/12K Platform Config Reader Centerplane Support Board  
(Continued)

Property	Rule (if any)	Description
Power State	scBPower	Indicates whether the board power is ON or OFF
PS0 State	scOBURul	Status of power supply 0: OK, BAD, or UNKNOWN
PS1 State	scOBURul	Status of power supply 1: OK, BAD, or UNKNOWN
Ambient Top Temp (C)	scBTemp	(graphable) Ambient top temperature
Ambient Bottom Temp (C)	scBTemp	(graphable) Ambient bottom temperature
SBBC Temp (C)	scBTemp	(graphable) Temperature of the SBBC ASIC
+3.3HK Volt	scBVolt	(graphable) Voltage level for the board +3.3 VDC housekeeping power
+3.3V Volt	scBVolt	(graphable) Voltage level for the board +3.3 VDC power
+2.5V Volt	scBVolt	(graphable) Voltage level for the board +2.5 VDC power
+1.5V Volt	scBVolt	(graphable) Voltage level for the board +1.5 VDC power

## System Controller

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader system controller (TABLE 6-7).

**TABLE 6-7** Sun Fire 15K/12K Platform Config Reader System Controller

Property	Rule (if any)	Description
SC ID		System controller identifier containing FRU ID(Slot ID): SC(SC0) or SC(SC1)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit

**TABLE 6-7 Sun Fire 15K/12K Platform Config Reader System Controller (Continued)**

Property	Rule (if any)	Description
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Power State	scBPower	Indicates whether the SC power is ON or OFF
RIO Temp (C)	scBTemp	(graphable) Temperature of the RIO board
IOA0 Temp (C)	scBTemp	(graphable) Temperature of the input/output adapter (IOA0) board
PS0 Temp (C)	scBTemp	(graphable) Temperature of power supply 0
PS1 Temp (C)	scBTemp	(graphable) Temperature of power supply 1
SBBC Temp (C)	scBTemp	(graphable) Temperature of the SBBC ASIC. The value of this property is 0.0 if the SC is the spare SC.
CBH Temp (C)	scBTemp	(graphable) Temperature of the CBH ASIC. The value of this property is 0.0 if the SC is the spare SC.
+12V Volt	scBVolt	(graphable) Voltage level for the +12 VDC power supply
-12V Volt	scBVolt	(graphable) Voltage level for the -12 VDC power supply
+3.3HK Volt	scBVolt	(graphable) Voltage level for the +3.3 VDC housekeeping power
+3.3V Volt	scBVolt	(graphable) Voltage level for the +3.3 VDC power supply
+1.5V Volt	scBVolt	(graphable) Voltage level for the +1.5 VDC power supply
+5.0V Volt	scBVolt	(graphable) Voltage level for the +5 VDC power supply
+5V Current 0	scBCurr	(graphable) Current level 0 for the +5 VDC power
+5V Current 1	scBCurr	(graphable) Current level 1 for the +5 VDC power
+3.3V Current 0	scBCurr	(graphable) Current level 0 for the +3.3 VDC power
+3.3V Current 1	scBCurr	(graphable) Current level 1 for the +3.3 VDC power

## System Controller Peripheral

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader system controller peripheral (TABLE 6-8).

**TABLE 6-8** Sun Fire 15K/12K Platform Config Reader System Controller Peripheral

Property	Rule (if any)	Description
SCPER ID		System controller peripheral identifier containing FRU ID(Slot ID): <code>SCPER(SCPER0)</code> or <code>SCPER(SCPER1)</code>
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Power State	<code>scBPower</code>	Indicates whether the power is ON or OFF
Ambient0 Temp (C)		(graphable) Ambient temperature for probe point 0
Ambient1 Temp (C)		(graphable) Ambient temperature for probe point 1
Ambient2 Temp (C)		(graphable) Ambient temperature for probe point 2
Average Ambient Temp (C)	<code>scBTemp</code>	(graphable) Average ambient temperature for the three probe points
+12V Volt	<code>scBVolt</code>	(graphable) Voltage level for the board +12 VDC power
+5.0V Volt	<code>scBVolt</code>	(graphable) Voltage level for the board +5 VDC power
+3.3HK Volt	<code>scBVolt</code>	(graphable) Voltage level for the board +3.3 VDC housekeeping power

## Fan Tray

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader fan tray (TABLE 6-9):

**TABLE 6-9** Sun Fire 15K/12K Platform Config Reader Fan Tray

Property	Rule (if any)	Description
FANTRAY ID		Fan tray identifier containing FRU ID(Slot ID): FT(FT0) through FT(FT7)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Power State	scOnOff	Indicates whether the fan power is ON or OFF
Speed		Fan tray speed: NORMAL, HIGH, or FAILED
Fan0 State	scOkFail	State of fan 0: OK or FAIL
Fan1 State	scOkFail	State of fan 1: OK or FAIL
Fan2 State	scOkFail	State of fan 2: OK or FAIL
Fan3 State	scOkFail	State of fan 3: OK or FAIL
Fan4 State	scOkFail	State of fan 4: OK or FAIL
Fan5 State	scOkFail	State of fan 5: OK or FAIL
Fan6 State	scOkFail	State of fan 6: OK or FAIL

## Power Supply

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader power supply (TABLE 6-10):

**TABLE 6-10** Sun Fire 15K/12K Platform Config Reader Power Supply

Property	Rule (if any)	Description
PS ID		Power supply identifier containing FRU ID(Slot ID): PS(PS0) through PS(PS5)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
State	scOkFail	Overall state of the entire power supply: OK or FAIL
Fan0 State	scOkFail	State of fan 0: OK or FAIL
Fan1 State	scOkFail	State of fan 1: OK or FAIL
AC0 State	scOkFail	State of the alternating current input from the power supply (AC0): OK or FAIL
AC1 State	scOkFail	State of the alternating current input from the power supply (AC1): OK or FAIL
Breaker0 State	scBreakr	State of circuit breaker 0: OPEN or CLOSE
Breaker1 State	scBreakr	State of circuit breaker 1: OPEN or CLOSE
DC0 Power State	scOnOff	State of the direct current from the facility power source DC 0 is ON or OFF
DC1 Power State	scOnOff	Indicates whether the direct current from the facility power source DC 1 is ON or OFF
Current0		(graphable) Current 0 level

**TABLE 6-10** Sun Fire 15K/12K Platform Config Reader Power Supply (Continued)

Property	Rule (if any)	Description
Current1		(graphable) Current 1 level
+48V Volt		(graphable) Voltage level for the +48 VDC power
+3.3HK Volt		(graphable) Voltage level for the +3.3 VDC housekeeping power

## CPU Board

The following table provides a brief description of the properties for the Sun Fire 15K/12K Platform Config Reader CPU board (TABLE 6-11):

**TABLE 6-11** Sun Fire 15K/12K Platform Config Reader CPU Board

Property	Rule (if any)	Description
CPU ID		CPU board identifier containing FRU ID(Slot ID): CPU(SBx), where x is the number of the centerplane slot containing the board (0-17).
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Power State	scBPower	Indicates whether the CPU board power is ON or OFF
DR State	scDrStat	Indicates whether the dynamic reconfiguration state of the CPU board is UNKNOWN, FREE, ASSIGNED, or ACTIVE
Test Status	scBTest	Indicates whether the test status of the CPU is UNKNOWN, IPOST (in POST), PASSED, DEGRADED, or FAILED

**TABLE 6-11** Sun Fire 15K/12K Platform Config Reader CPU Board (Continued)

Property	Rule (if any)	Description
POST Status	scPOST	Indicates whether the POST status of the CPU board is UNKNOWN, OK, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBE, FAIL, BLACKLISTED, or REDLISTED
Test Level		(graphable) POST test level for this board
Domain Assigned		Domain to which this board is assigned: A-R or UNASSIGNED
Domain ACL		Domain access control list—comma-separated list of domains to which this board is available: A-R or NONE
COD Enable		Indicates whether board is a COD board (COD), not a COD board (NONCOD), or unable to be determined (UNKNOWN) if SMS is in the initialization process.
DX0 Temp (C)	scBTemp	(graphable) Temperature of the DX0 ASIC on this board
DX1 Temp (C)	scBTemp	(graphable) Temperature of the DX1 ASIC on this board
DX2 Temp (C)	scBTemp	(graphable) Temperature of the DX2 ASIC on this board
DX3 Temp (C)	scBTemp	(graphable) Temperature of the DX3 ASIC on this board
SDC Temp (C)	scBTemp	(graphable) Temperature of the SDC ASIC on this board
SBBC0 Temp (C)	scBTemp	(graphable) Temperature of the SBBC0 ASIC on this board
SBBC1 Temp (C)	scBTemp	(graphable) Temperature of the SBBC1 ASIC on this board
AR Temp (C)	scBTemp	(graphable) Temperature of the AR ASIC on this board
+3.3V Volt	scBVolt	(graphable) Voltage level for the +3.3 VDC power
+1.5V Volt	scBVolt	(graphable) Voltage level for the +1.5 VDC power



## HPCI Board

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader hot-swap PCI (HPCI) board (TABLE 6-12):

**TABLE 6-12** Sun Fire 15K/12K Platform Config Reader HPCI Board

Property	Rule (if any)	Description
HPCI ID		HPCI board identifier containing FRU ID(Slot ID): HPCI ( IOx ), where x is the number of the centerplane slot containing the board (0-17)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Power State	scBPower	Indicates whether the HPCI board power is ON or OFF
DR State	scDrStat	Indicates whether the dynamic reconfiguration state of the HPCI board is UNKNOWN, FREE, ASSIGNED, or ACTIVE
Test Status	scBTest	Indicates whether the test status of the HPCI board is UNKNOWN, IPOST (in POST), PASSED, DEGRADED, or FAILED
POST Status	scPOST	Indicates whether the POST status of the HPCI board is UNKNOWN, OK, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, or REDLISTED
Test Level		(graphable) POST test level for this board
Domain Assigned		Domain to which this board is assigned: A-R or UNASSIGNED
Domain ACL		Domain access control list—comma-separated list of domains to which this board is available: A-R or NONE

**TABLE 6-12 Sun Fire 15K/12K Platform Config Reader HPCI Board (Continued)**

<b>Property</b>	<b>Rule (if any)</b>	<b>Description</b>
PS0 Temp (C)	scBTemp	(graphable) Temperature of power supply 0
PS1 Temp (C)	scBTemp	(graphable) Temperature of power supply 1
IOA0 Temp (C)	scBTemp	(graphable) Temperature of the IOA0 ASIC on this board
IOA1 Temp (C)	scBTemp	(graphable) Temperature of the IOA1 ASIC on this board
DX0 Temp (C)	scBTemp	(graphable) Temperature of the DX0 ASIC on this board
DX1 Temp (C)	scBTemp	(graphable) Temperature of the DX1 ASIC on this board
SDC Temp (C)	scBTemp	(graphable) Temperature of the SDC ASIC on this board
SBBC Temp (C)	scBTemp	(graphable) Temperature of the SBBC ASIC on this board
AR Temp (C)	scBTemp	(graphable) Temperature of the AR ASIC on this board
+12V Volt	scBVolt	(graphable) Voltage level for the +12 VDC power
-12V Volt	scBVolt	(graphable) Voltage level for the -12 VDC power
+3.3V Volt	scBVolt	(graphable) Voltage level for the +3.3 VDC power
+3.3HK Volt	scBVolt	(graphable) Voltage level for the +3.3 VDC housekeeping power
+1.5V Volt	scBVolt	(graphable) Voltage level for the +1.5 VDC power
+1.5V Converter 0	scBCurr	(graphable) Voltage level for the +1.5 VDC converter 0
+1.5V Converter 1	scBCurr	(graphable) Voltage level for the +1.5 VDC converter 1
+5.0V Volt	scBVolt	(graphable) Voltage level for the +5 VDC power
+5V Current 0	scBCurr	(graphable) Current level 0 for the +5 VDC power
+5V Current 1	scBCurr	(graphable) Current level 1 for the +5 VDC power
+3.3V Current 0	scBCurr	(graphable) Current level 0 for the +3.3 VDC power
+3.3V Current 1	scBCurr	(graphable) Current level 1 for the +3.3 VDC power

## HPCI+ Board

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader hot-swap PCI plus (HPCI+) board (TABLE 6-13):

**TABLE 6-13** Sun Fire 15K/12K Platform Config Reader HPCI+ Board

Property	Rule (if any)	Description
HPCI+ ID		HPCI+ board identifier containing FRU ID(Slot ID): HPCI+( IOX), where x is the number of the centerplane slot containing the board (0–17)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Power State	scBPower	Indicates whether the HPCI+ board power is ON or OFF
DR State	scDrStat	Indicates whether the dynamic reconfiguration state of the HPCI+ board is UNKNOWN, FREE, ASSIGNED, or ACTIVE
Test Status	scBTest	Indicates whether the test status of the HPCI+ board is UNKNOWN, IPOST (in POST), PASSED, DEGRADED, or FAILED
POST Status	scPOST	Indicates whether the POST status of the HPCI+ board is UNKNOWN, OK, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, or REDLISTED
Test Level		(graphable) POST test level for this board
Domain Assigned		Domain to which this board is assigned: A-R or UNASSIGNED
Domain ACL		Domain access control list—comma-separated list of domains to which this board is available: A-R or NONE

**TABLE 6-13 Sun Fire 15K/12K Platform Config Reader HPCI+ Board (Continued)**

Property	Rule (if any)	Description
PS0 Temp0 (C)	scBTemp	(graphable) Temperature 0 of power supply 0
PS0 Temp1 (C)	scBTemp	(graphable) Temperature 1 of power supply 0
PS0 Temp2 (C)	scBTemp	(graphable) Temperature 2 of power supply 0
PS1 Temp0 (C)	scBTemp	(graphable) Temperature 0 of power supply 1
PS1 Temp1 (C)	scBTemp	(graphable) Temperature 1 of power supply 1
PS1 Temp2 (C)	scBTemp	(graphable) Temperature 2 of power supply 1
IOA0 Temp (C)	scBTemp	(graphable) Temperature of the IOA0 ASIC on this board
IOA1 Temp (C)	scBTemp	(graphable) Temperature of the IOA1 ASIC on this board
DX0 Temp (C)	scBTemp	(graphable) Temperature of the DX0 ASIC on this board
DX1 Temp (C)	scBTemp	(graphable) Temperature of the DX1 ASIC on this board
SDC Temp (C)	scBTemp	(graphable) Temperature of the SDC ASIC on this board
SBBC Temp (C)	scBTemp	(graphable) Temperature of the SBBC ASIC on this board
AR Temp (C)	scBTemp	(graphable) Temperature of the AR ASIC on this board
+12V Volt PS0	scBVolt	(graphable) Voltage level for the +12 VDC on power supply 0
+12V Volt PS1	scBVolt	(graphable) Voltage level for the +12 VDC on power supply 1
-12V Volt PS0	scBVolt	(graphable) Voltage level for the -12 VDC on power supply 0
-12V Volt PS1	scBVolt	(graphable) Voltage level for the -12 VDC on power supply 1
-12V Volt PS2	scBVolt	(graphable) Voltage level for the -12 VDC on power supply 2
+3.3V Volt PS0	scBVolt	(graphable) Voltage level for the +3.3 VDC on power supply 0
+3.3V Volt PS1	scBVolt	(graphable) Voltage level for the +3.3 VDC on power supply 1
+3.3HK Volt PS0	scBVolt	(graphable) Voltage level for the +3.3 VDC housekeeping on power supply 0

**TABLE 6-13 Sun Fire 15K/12K Platform Config Reader HPCI+ Board (Continued)**

Property	Rule (if any)	Description
+3.3HK Volt PS1	scBVolt	(graphable) Voltage level for the +3.3 VDC housekeeping on power supply 1
+1.5V Volt PS0	scBVolt	(graphable) Voltage level for the +1.5 VDC on power supply 0
+1.5V Volt PS1	scBVolt	(graphable) Voltage level for the +1.5 VDC on power supply 1
+5.0 Volt PS0	scBVolt	(graphable) Voltage level for the +5 VDC on power supply 0
+5.0 Volt PS1	scBVolt	(graphable) Voltage level for the +5 VDC on power supply 1
+1.5 or +2.5 Volt PS0	scBVolt	(graphable) Voltage level for the +1.5 or +2.5 VDC on power supply 0
+1.5 or +2.5 Volt PS1	scBVolt	(graphable) Voltage level for the +1.5 or +2.5 VDC on power supply 1
+12 Volt PS0 OK	scOkFail	Power supply 0 to +12 Volt is OK or FAIL
+12 Volt PS1 OK	scOkFail	Power supply 1 to +12 Volt is OK or FAIL
-12 Volt PS0 OK	scOkFail	Power supply 0 to -12 Volt is OK or FAIL
-12 Volt PS1 OK	scOkFail	Power supply 1 to -12 Volt is OK or FAIL
+5 Volt PS0 OK	scOkFail	Power supply 0 to +5 Volt is OK or FAIL
+5 Volt PS1 OK	scOkFail	Power supply 1 to +5 Volt is OK or FAIL
+3.3 Volt PS0 OK	scOkFail	Power supply 0 to +3.3 Volt is OK or FAIL
+3.3 Volt PS1 OK	scOkFail	Power supply 1 to +3.3 Volt is OK or FAIL
+1-2.5 Volt PS0 OK	scOkFail	Power supply 0 to +1-2.5 Volt is OK or FAIL
+1-2.5 Volt PS1 OK	scOkFail	Power supply 1 to +1-2.5 Volt is OK or FAIL
+1.5 Volt PS0 OK	scOkFail	Power supply 0 to +1.5 Volt is OK or FAIL
+1.5 Volt PS1 OK	scOkFail	Power supply 1 to +1.5 Volt is OK or FAIL
+3.3HK Volt PS0 OK	scOkFail	Power supply 0 to +3.3HK Volt is OK or FAIL
+3.3HK Volt PS1 OK	scOkFail	Power supply 1 to +3.3HK Volt is OK or FAIL
PS0 OK	scOkFail	Power supply 0 is OK or FAIL
PS1 OK	scOkFail	Power supply 1 is OK or FAIL

## WPCI Board

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader Sun Fire Link PCI (WPCI) board (TABLE 6-14). Refer to the *Sun Fire Link Fabric Administrator's Guide* for more information about Sun Fire Link systems.

**TABLE 6-14** Sun Fire 15K/12K Platform Config Reader WPCI Board

Property	Rule (if any)	Description
WPCI ID		WPCI board identifier containing FRU ID(Slot ID): WPCI( IOx), where x is the number of the centerplane slot containing the board (0-17)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Power State	scBPower	Indicates whether the WPCI board power is ON or OFF
DR State	scDrStat	Indicates whether the dynamic reconfiguration state of the WPCI board is UNKNOWN, FREE, ASSIGNED, or ACTIVE
Test Status	scBTest	Indicates whether the test status of the WPCI board is UNKNOWN, IPOST (in POST), PASSED, DEGRADED, or FAILED
POST Status	scPOST	Indicates whether the POST status of the WPCI board is UNKNOWN, OK, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, or REDLISTED
Test Level		(graphable) POST test level for this board
Domain Assigned		Domain to which this board is assigned: A-R or UNASSIGNED

**TABLE 6-14** Sun Fire 15K/12K Platform Config Reader WPCI Board (Continued)

Property	Rule (if any)	Description
Domain ACL		Domain access control list—comma-separated list of domains to which this board is available: A–R or NONE
+1.5 Converter 0 OK	scOkFail	Converter status is OK or FAIL
+1.5 Converter 1 OK	scOkFail	Converter status is OK or FAIL
+1.5 Converter 0 PS Status	scOkFail	Converter power supply status is OK or FAIL
+1.5 Converter 1 PS Status	scOkFail	Converter power supply status is OK or FAIL
+2.5 Converter 0 OK	scOkFail	Converter status is OK or FAIL
+2.5 Converter 1 OK	scOkFail	Converter status is OK or FAIL
+2.5 Converter 0 PS Status	scOkFail	Converter power supply status is OK or FAIL
+2.5 Converter 1 PS Status	scOkFail	Converter power supply status is OK or FAIL
+3.3 Converter 0 OK	scOkFail	Converter status is OK or FAIL
+3.3 Converter 1 OK	scOkFail	Converter status is OK or FAIL
+3.3 Converter 2 OK	scOkFail	Converter status is OK or FAIL
+3.3 Converter 0 PS Status	scOkFail	Converter power supply status is OK or FAIL
+3.3 Converter 1 PS Status	scOkFail	Converter power supply status is OK or FAIL
+3.3 Converter 2 PS Status	scOkFail	Converter power supply status is OK or FAIL
+5.0 Converter 0 OK	scOkFail	Converter status is OK or FAIL
+5.0 Converter 1 OK	scOkFail	Converter status is OK or FAIL
+5.0 Converter 0 PS Status	scOkFail	Converter power supply status is OK or FAIL
+5.0 Converter 1 PS Status	scOkFail	Converter power supply status is OK or FAIL
IOA Temp (C)	scBTemp	(graphable) Temperature of the IOA ASIC on this board
DX0 Temp (C)	scBTemp	(graphable) Temperature of the DX0 ASIC on this board
DX1 Temp (C)	scBTemp	(graphable) Temperature of the DX1 ASIC on this board
SDC Temp (C)	scBTemp	(graphable) Temperature of the SDC ASIC on this board
SBBC Temp (C)	scBTemp	(graphable) Temperature of the SBBC ASIC on this board
AR Temp (C)	scBTemp	(graphable) Temperature of the AR ASIC on this board

**TABLE 6-14** Sun Fire 15K/12K Platform Config Reader WPCI Board (Continued)

Property	Rule (if any)	Description
WCI0 Temp (C)	scBTemp	(graphable) Temperature of the WCI0 ASIC on this board
WCI1 Temp (C)	scBTemp	(graphable) Temperature of the WCI1 ASIC on this board
+12V Volt	scBVolt	(graphable) Voltage level for the +12 VDC power
-12V Volt	scBVolt	(graphable) Voltage level for the -12 VDC power
+3.3HK Volt	scBVolt	(graphable) Voltage level for the +3.3 VDC housekeeping power
+3.3V Volt	scBVolt	(graphable) Voltage level for the +3.3 VDC power
+1.5V Volt	scBVolt	(graphable) Voltage level for the +1.5 VDC power
+2.5V Volt	scBVolt	(graphable) Voltage level for the +2.5 VDC power
+5.0V Volt	scBVolt	(graphable) Voltage level for the +5 VDC power

## MaxCPU Board

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader MaxCPU board (TABLE 6-15):

**TABLE 6-15** Sun Fire 15K/12K Platform Config Reader MaxCPU Board

Property	Rule (if any)	Description
MCPU ID		MaxCPU board identifier containing FRU ID(Slot ID): $MCPU( IOx)$ , where $x$ is the number of the centerplane slot containing the board (0-17)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit



**TABLE 6-15 Sun Fire 15K/12K Platform Config Reader MaxCPU Board (Continued)**

Property	Rule (if any)	Description
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Power State	scBPower	Indicates whether the MaxCPU board power is ON or OFF
DR State	scDrStat	Indicates whether the dynamic reconfiguration state of the MaxCPU board is UNKNOWN, FREE, ASSIGNED, or ACTIVE
Test Status	scBTest	Indicates whether the test status of the MaxCPU board is UNKNOWN, IPOST (in POST), PASSED, DEGRADED, or FAILED
POST Status	scPOST	Indicates whether the POST status of the MaxCPU board is UNKNOWN, OK, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, or REDLISTED
Test Level		POST test level for this board
Domain Assigned		Domain to which this board is assigned: A-R or UNASSIGNED
Domain ACL		Domain access control list— comma-separated list of the domains to which this board is available: A-R or NONE
COD Enable		Indicates whether board is a COD board (COD), not a COD board (NONCOD), or unable to be determined (UNKNOWN) if SMS is in the initialization process.
Core 0 Power 0 Status	scOkFail	Power supply 0 to PROC 0 is OK or FAIL
Core 0 Power 1 Status	scOkFail	Power supply 1 to PROC 0 is OK or FAIL
Core 0 Power 2 Status	scOkFail	Power supply 2 to PROC 0 is OK or FAIL
Core 1 Power 0 Status	scOkFail	Power supply 0 to PROC 1 is OK or FAIL
Core 1 Power 1 Status	scOkFail	Power supply 1 to PROC 1 is OK or FAIL
Core 1 Power 2 Status	scOkFail	Power supply 2 to PROC 1 is OK or FAIL
+3.3V Power 0 Status	scOkFail	Power supply 0 to +3.3V is OK or FAIL
+3.3V Power 1 Status	scOkFail	Power supply 1 to +3.3V is OK or FAIL
+1.5V Power 0 Status	scOkFail	Power supply 0 to +1.5V is OK or FAIL

**TABLE 6-15** Sun Fire 15K/12K Platform Config Reader MaxCPU Board *(Continued)*

Property	Rule (if any)	Description
+1.5V Power 1 Status	scOkFail	Power supply 1 to +1.5V is OK or FAIL
DX0 Temp (C)	scBTemp	(graphable) Temperature of the DX0 ASIC on this board
DX1 Temp (C)	scBTemp	(graphable) Temperature of the DX1 ASIC on this board
DX2 Temp (C)	scBTemp	(graphable) Temperature of the DX2 ASIC on this board
DX3 Temp (C)	scBTemp	(graphable) Temperature of the DX3 ASIC on this board
SDC Temp (C)	scBTemp	(graphable) Temperature of the SDC ASIC on this board
SBBC Temp (C)	scBTemp	(graphable) Temperature of the SBBC ASIC on this board
AR Temp (C)	scBTemp	(graphable) Temperature of the AR ASIC on this board
+3.3V Volt	scBVolt	(graphable) Voltage level for the +3.3 VDC power
+3.3HK Volt	scBVolt	(graphable) Voltage level for the +3.3 VDC housekeeping power
+1.5V Volt	scBVolt	(graphable) Voltage level for the +1.5 VDC power

## HPCI Cassette

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader hot-swap PCI (HPCI) cassette, which can contain two HPCI cards (TABLE 6-16).

---

**Note** – HPCI cassette information is available only when the corresponding HPCI board is powered on. When an HPCI board is powered off, information for the HPCI cassettes on that board is not available.

---

**TABLE 6-16** Sun Fire 15K/12K Platform Config Reader HPCI Cassette

Property	Rule (if any)	Description
Cassette ID		HPCI cassette identifier containing FRU ID(Slot ID): FRU ID is either C3V for a 3.3-volt card or C5V for a 5-volt card. Slot ID is IOx/CyVz, where x is the number of the centerplane slot containing the card (0–17), y is the card voltage (3 or 5), and z is the PCI controller containing the card (0 or 1)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Slot Power State	scOnOff	Indicates whether the slot power is ON or OFF
Card Present		YES indicates a card is present in the cassette; NO indicates no card is present in the cassette
Slot Frequency (MHz)		Indicates the frequency of the slot in megahertz (MHz): 33, 66, or 132
Slot Condition	scHPCId	Indicates whether the condition of the slot is GOOD, UNKNOWN, BAD SLOT, or BAD CARD
Slot Power Status	scOkFail	Indicates whether or not the power to the slot successfully switched on: OK or FAIL
Slot Power Fault	scOkFail	Indicates whether or not a power fault is detected in the slot: OK or FAIL

---

## Paroli Card

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader parallel optical link (Paroli) card (TABLE 6-17). Refer to the *Sun Fire Link Fabric Administrator's Guide* for more information about the Sun Fire Link system.

---

**Note** – Paroli card information is available only when the corresponding WPCI board is powered on. When a WPCI board is powered off, information for the Paroli cards on that board is not available.

---

**TABLE 6-17** Sun Fire 15K/12K Platform Config Reader Paroli Card

Property	Rule (if any)	Description
Paroli ID		Paroli card identifier containing FRU ID(Slot ID): PARS( IOX/PARY), where x is the number of the centerplane slot containing the card (0-17), and y is the Paroli card number (0 or 1)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
Power State	scOnOff	Indicates whether the Paroli card power is ON or OFF
+1.5V Volt	scBVolt	(graphable) Voltage level for the +1.5 VDC power
+3.3V Volt	scBVolt	(graphable) Voltage level for the +3.3 VDC power

## Processor

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader processor (TABLE 6-18).

---

**Note** – Processor information is available only when a domain is up (in OpenBoot™ PROM or running the Solaris operating environment). When a domain is down, processor information for that domain is not available.

---

**TABLE 6-18** Sun Fire 15K/12K Platform Config Reader Processor

Property	Rule (if any)	Description
PROC ID		Processor identifier containing ID(SlotID): PROC(SBx/Py), where x is the number of the centerplane slot containing the board (0–17) and y is the processor number (0–3)
Power State	scOnOff	Power state for this processor: ON or OFF
POST Status	scPOST	Indicates whether the POST status of the processor is UNKNOWN, OK, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, REDLISTED, or NO_LICENSE
Clock Frequency (MHz)		Processor clock frequency in megahertz (MHz)
Temperature (C)	scBTemp	(graphable) Temperature of the processor
Voltage	scBVolt	(graphable) Voltage level for the processor
Ecache Size		(graphable) External cache size in megabytes
Memory Bank List		Comma-separated list of memory banks used by this processor (0, 1)

## Memory Bank

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader memory bank (TABLE 6-19).

---

**Note** – Memory bank information is available only when a domain is up (in OpenBoot PROM or running the Solaris operating environment). When a domain is down, memory bank information for that domain is not available.

---

**TABLE 6-19** Sun Fire 15K/12K Platform Config Reader Power Memory Bank

Property	Rule (if any)	Description
MEMBANK ID		Memory bank identifier containing ID(Slot ID): MEMBANK ( SBx/Py/Bz ), where x is the number of the centerplane slot containing the board (0–17), y is the processor number (0–3), and z is the physical memory bank number (0 or 1)
Logical Bank 0 POST Status	scPOST	Indicates whether the POST status of logical memory bank 0 is UNKNOWN, OK, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, or REDLISTED
Logical Bank 1 POST Status	scPOST	Indicates whether the POST status of logical memory bank 1 is UNKNOWN, OK, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, or REDLISTED
Memory Size (MB)		(graphable) Memory bank size in megabytes

# DIMM

The following table provides a brief description of the properties for the Sun Fire 15K/12K Platform Config Reader Dual Inline Memory Module (DIMM) (TABLE 6-20).

---

**Note** – DIMM information is available only when a domain is up (in OpenBoot PROM or running the Solaris operating environment). When a domain is down, DIMM information for that domain is not available.

---

**TABLE 6-20** Sun Fire 15K/12K Platform Config Reader DIMM

Property	Rule (if any)	Description
DIMM ID		DIMM identifier containing FRU ID(Slot ID): DIMM(SBW/Px/By/Dz), where w is the number of the centerplane slot containing the board (0-17), x is the processor number (0-3), y is the physical memory bank number (0 or 1), and z is the DIMM number (0-3)
FRU Part Number		Part number of the field-replaceable unit
FRU Serial Number		Serial number of the field-replaceable unit
Dash Level		Dash level of the field-replaceable unit
Rev Level		Revision level of the field-replaceable unit
Short Name		Short name of the field-replaceable unit
Description		Description of the field-replaceable unit
Manufacturer Location		Location of the manufacturer of the field-replaceable unit
Date of Manufacture		Date and time the field-replaceable unit was manufactured
Vendor Name		Vendor name for the field-replaceable unit
POST Status	scPOST	Indicates whether the POST status of the DIMM is UNKNOWN, OK, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, or REDLISTED

## Domain

The following table provides a brief description of the properties for a Sun Fire 15K/12K Platform Config Reader domain (TABLE 6-21):

**TABLE 6-21** Sun Fire 15K/12K Platform Config Reader Domain

Property	Rule (if any)	Description
DOMAIN ID		Sun Fire 15K/12K domain identifier: A-R
Status	scDmnSt	Domain status as output from the SMS <code>showplatform</code> command, such as <code>Running Solaris</code> , <code>Running Domain POST</code> , or <code>Powered Off</code> . Refer to <code>showplatform(1M)</code> in the <i>System Management Services SMS 1.3 Reference Manual</i> for more information.
Domain Stop	scStop	Number of domain stops for this domain after the platform agent restarted or the alarm is acknowledged
Record Stop	scStop	Number of record stops for this domain after the platform agent restarted or the alarm is acknowledged
OS Version		Version of operating environment running in this domain, such as <code>Solaris 2.8</code> or <code>9</code>
OS Type		Type of operating environment running in this domain, such as <code>Solaris</code> , <code>Trusted</code>
Domain Tag		Tag name of the domain, such as <code>domainA</code> through <code>domainR</code>
External Host Name		External host name of the domain
Internal Host Name		Internal host name of the domain
Internal IP Address		Internal IP address of the domain
Slot0 Available Boards		Comma-separated list of slot 0 boards available to this domain (0-17) or NONE
Slot1 Available Boards		Comma-separated list of slot 1 boards available to this domain (0-17) or NONE
Slot0 Assigned Boards		Comma-separated list of slot 0 boards assigned to this domain (0-17) or NONE
Slot1 Assigned Boards		Comma-separated list of slot 1 boards assigned to this domain (0-17) or NONE
Slot0 Active Boards		Comma-separated list of slot 0 boards active on this domain (0-17) or NONE



**TABLE 6-21 Sun Fire 15K/12K Platform Config Reader Domain (Continued)**

Property	Rule (if any)	Description
Slot1 Active Boards		Comma-separated list of slot 1 boards active on this domain (0-17) or NONE
Primary I/O Board		Identifier of the primary I/O board used for communication between the domain and the system controller: <code>HPCI( IOx)</code> , where <code>x</code> is the number of the centerplane slot containing the board (0-17)
Keyswitch		Virtual keyswitch position: ON, STANDBY, OFF, DIAG, SECURE, or UNKNOWN
Address Bus Config	<code>scBusCfg</code>	Address bus not configured (UNCONFIGURED), in degraded mode using CSB0 only (CSB0), in degraded mode using CSB1 only (CSB1), or fully functional using both centerplane support boards (BOTH)
Data Bus Config	<code>scBusCfg</code>	Data bus not configured (UNCONFIGURED), in degraded mode using CSB0 only (CSB0), in degraded mode using CSB1 only (CSB1), or fully functional using both centerplane support boards (BOTH)
Response Bus Config	<code>scBusCfg</code>	Response bus not configured (UNCONFIGURED), in degraded mode using CSB0 only (CSB0), in degraded mode using CSB1 only (CSB1), or fully functional using both centerplane support boards (BOTH)
Active Ethernet Board		Identifier of the I/O board that contains the active Ethernet controller: <code>HPCI( IOx)</code> , where <code>x</code> is the number of the centerplane slot containing the board (0-17)
Admin Group		Administrative group identifier for the domain, such as <code>dmnxadm</code> , where <code>x</code> is <code>a-r</code>
Reconfigure Group		Reconfigure group identifier for the domain, such as <code>dmnxrcfg</code> , where <code>x</code> is <code>a-r</code>
Creation Time		Date and time the domain was created or UNKNOWN

## Discovery Object Table

The Discovery Object table provides information used by the Discovery Manager and the Create Topology Object GUI to create Sun Fire 15K/12K composites. This information is presented largely for diagnostics purposes and contains information not directly relevant to the Sun Management Center software user. This information consists of a table identifier (the Magic Number), followed by a table containing information for each topology object created as part of the Sun Fire 15K/12K composite. A Magic Number value of 53444f54 identifies the following table as a valid Discovery Object Table.

The following table provides a brief description of the properties for Sun Fire 15K/12K Platform Config Reader Discovery Object table (TABLE 6-22):

**TABLE 6-22** Sun Fire 15K/12K Platform Config Reader Discovery Object Table

Property	Rule (if any)	Description
TOPOLOGY ID		Encoded topology identifier
Topology Parent		Topology identifier of the parent of this object
Discovery Type		Encoded discovery type
IP Address		IP address for this topology object
Agent Port		Network port number for this topology object
Family Type		Topology object family type
Label		Object label displayed in the Sun Management Center topology
Description		Optional description of the object

**Note** – A value of -1 for the Agent Port indicates that the object is a Platform Group object.

# Platform Config Reader Alarm Rules

This section describes the alarm rules for the Platform Config Reader module. You cannot change the limits for these rules. The system provides a message with the alarms telling what the current property is and what the limit is.

## Board Current Rule (`scBCurrT`)

The board current rule generates a critical alarm when a current probe point is not within  $x$  percent of the average of all like components (TABLE 6-23). SMS software will take appropriate automatic system recovery (ASR) actions. Refer to the *Sun System Management Services (SMS) 1.3 Administrator Guide*, Chapter 9, Section “Environmental Events”.

TABLE 6-23 Sun Fire 15K/12K Platform Config Reader Board Current Rule

Current Threshold	Alarm Level	Meaning
Good		Current is within $x$ percent of the average of all like components, where $x$ is set by Sun service personnel.
Error	Critical	Current is <i>not</i> within $x$ percent of the average of all like components, where $x$ is set by Sun service personnel.

**Action:** Use the SMS `showenvironment(1M)` command to check whether the `showenvironment` command output is consistent with the value shown in the Sun Management Center table.

## Board Power Rule (`scBPower`)

The board power rule generates an alarm when the board power state is OFF (TABLE 6-24). A caution alarm is for information only and is not an error.

TABLE 6-24 Sun Fire 15K/12K Platform Config Reader Board Power Rule

Power State	Alarm Level	Meaning
ON		Board power is on.
OFF	Caution	Board power is off.

**Action:** Use the SMS `poweron(1M)` command to power on a board. Use the SMS `showboards(1M)` command to check whether the `showboards` command output is consistent with the value shown in the Sun Management Center table.

## Board Temperature Rule (scBTemp)

The board temperature rule generates a caution, alert, or critical alarm when the temperature falls within a certain temperature threshold range shown in TABLE 6-25. Temperature alarms are *not* generated when the board is powered off.

**TABLE 6-25** Sun Fire 15K/12K Platform Config Reader Board Temperature Rule

Temperature Threshold	Alarm Level	Meaning
Low Critical	Critical	Temperature is in the low critical range as set by Sun service personnel.
Low Warning	Alert	Temperature is in the low warning range as set by Sun service personnel.
High Warning	Caution	Temperature is in the high warning range as set by Sun service personnel.
High Critical	Alert	Temperature is in the high critical range as set by Sun service personnel.
Over Limit	Critical	Temperature is in the over limit range as set by Sun Service personnel.

### *Actions:*

- For the Low Critical, High Critical, and Over Limit alarms, SMS will take appropriate automatic system recovery (ASR) actions. Refer to the *Sun System Management Services (SMS) 1.3 Administrator Guide*, Chapter 9, Section “Environmental Events”.
- For the Low Warning and High Warning alarms, contact your Sun service personnel for information about bringing the temperature within limits.

Use the SMS `showenvironment(1M)` command to check whether the `showenvironment` command output is consistent with the value shown in the Sun Management Center table.

## Board Voltage Rule (`scBVolt`)

The board voltage rule generates a critical alarm when the voltage falls within a certain voltage threshold range shown in TABLE 6-26. The voltage alarms are *not* generated when the board is powered off.

**TABLE 6-26** Sun Fire 15K/12K Platform Config Reader Board Voltage Rule

Voltage Threshold	Alarm Level	Meaning
Low Minimum	Critical	Voltage is in the low minimum range as set by Sun service personnel.
High Maximum	Critical	Voltage is in the high maximum range as set by Sun service personnel.

**Actions:** For the Low Minimum and High Maximum alarms, SMS will take appropriate automatic system recovery (ASR) actions. Refer to the *Sun System Management Services (SMS) 1.3 Administrator Guide*, Chapter 9, Section “Environmental Events”. Use the `SMS showenvironment(1M)` command to check whether the `showenvironment` command output is consistent with the value shown in the Sun Management Center table.

## Domain Stop and Record Stop Rule (`scStop`)

The domain stop and record stop rule checks for domain stops and record stops on a domain. The rule generates an alarm when either of the counts is greater than zero (TABLE 6-27). The domain stop and record stop counts are set to zero when the platform agent is restarted or when the alarm is acknowledged.

**TABLE 6-27** Sun Fire 15K/12K Platform Config Reader Domain Stop and Record Stop Rule

Number of Stops	Alarm Level	Meaning
0		Either or both the domain stops and record stops are zero.
>0	Caution	Number of record stops is greater than zero.
>0	Critical	Number of domain stops is greater than zero.

**Actions:**

- The caution alarm when the record stop count is greater than zero is for information only and is not an error. The domain is still up and running. If necessary, provide your Sun service personnel with the appropriate record stop dump for analysis. The record stop dump is located in

`/var/opt/SUNWSMS/adm/[A-R]/dump`. Refer to the *Sun System Management Services (SMS) 1.3 Administrator Guide*, Chapter 9, Section “Hardware Error Events”.

- When a domain stop error occurs and the critical alarm is generated, SMS software will take appropriate automatic system recovery (ASR) actions. Provide your Sun service personnel with a domain stop dump for analysis. The domain stop dump is located in `/var/opt/SUNWSMS/adm/[A-R]/dump`. Refer to the *Sun System Management Services (SMS) 1.3 Administrator Guide*, Chapter 9, Section “Hardware Error Events”.

## HPCI Cassette Rule (`sCHPCIcd`)

The hot-swap PCI (HPCI) cassette rule generates a caution or critical alarm when the condition of the PCI slot is UNKNOWN, BAD SLOT, or BAD CARD (TABLE 6-28). Alarms are *not* generated if the HPCI cassette is powered off.

**TABLE 6-28** Sun Fire 15K/12K Platform Config Reader HPCI Cassette Rule

OK/BAD/UNKNOWN State	Alarm Level	Meaning
GOOD		Slot condition is good.
UNKNOWN	Caution	Slot condition is unknown.
BAD SLOT	Critical	Slot condition is bad.
BAD CARD	Critical	Card is bad.

### Actions:

- The caution alarm is for information only and is not an error. If necessary, contact your Sun service personnel to see why the condition is UNKNOWN.
- For the critical alarm, contact your Sun service personnel.

## Failover State Rule (`sCFoStat`)

The failover state rule generates a caution or critical alarm when the current failover state is not ACTIVE (TABLE 6-29).

**TABLE 6-29** Sun Fire 15K/12K Platform Config Reader Failover State Rule

Failover State	Alarm Level	Meaning
ACTIVE		Failover is enabled.
DISABLED	Caution	Failover is disabled.
FAILED	Critical	Problem prevents failover from occurring.

*Actions:*

- The caution alarm is for information only and is not an error. You can enable failover by using the SMS `setfailover(1M)` command.
- The critical alarm means that at least one fault has occurred, which will prevent the failover mechanism from working. You can get more information about the faults by using the SMS `showfailover(1M)` command. You can also look at the SMS platform log file located in `/var/opt/SUNWSMS/adm/platform/messages` for messages from the SMS `fomd` process.

## OK/BAD/UNKNOWN State Rule (SCOBURUL)

The OK/BAD/UNKNOWN state rule generates a critical or caution alarm when a component is in a BAD or UNKNOWN state (TABLE 6-30). Alarms are *not* generated if the containing component is powered off.

**TABLE 6-30** Sun Fire 15K/12K Platform Config Reader OK/BAD/UNKNOWN State Rule

OK/BAD/UNKNOWN State	Alarm Level	Meaning
OK		Component is in normal operational state.
BAD	Critical	Component is in a nonoperational state.
UNKNOWN	Caution	System is not able to determine the component's operational state.

*Actions:*

- The caution alarm is for information only and is not an error. If necessary, contact your Sun service personnel to see why the condition is UNKNOWN.
- For a critical alarm, contact your Sun service personnel.

## OK/FAIL Rule (`scOkFail`)

The OK/FAIL rule generates a critical alarm when a component is found to have failed (TABLE 6-31). Alarms are *not* generated if the containing component is either powered off or in a FAIL state.

**TABLE 6-31** Sun Fire 15K/12K Platform Config Reader OK/FAIL Rule

OK/FAIL State	Alarm Level	Meaning
OK		Component is okay.
FAIL	Critical	Component has failed.

*Action:* For the critical alarm, contact your Sun service personnel.

## ON/OFF Rule (`scOnOff`)

The ON/OFF Rule generates a caution alarm when the system detects a component is off (TABLE 6-32). Alarms are not generated if the containing component is either powered off or in the FAIL state.

**TABLE 6-32** Sun Fire 15K/12K Platform Config Reader ON/OFF Rule

ON/OFF State	Alarm Level	Meaning
ON		Component is on.
OFF	Caution	Component is off.

*Actions:* The caution alarm is for information only and is not an error. The reasons for the alarm and the actions you can take depend on the type of component:

- If the component is a fan tray or power supply, you can use the SMS `poweron(1M)` command to power on the component.
- If the component is a processor, the board could be powered off or the processor has been powered off by SMS software because of automatic system recovery (ASR) actions.
- If the component is an HPCI cassette, the board could be powered off or the cassette is empty (does not contain a card).



## POST Status Rule (scPOST)

The power-on self-test (POST) Status Rule generates a caution, alert, or critical alarm when the POST status is not OK (TABLE 6-33).

**TABLE 6-33** Sun Fire 15K/12K Platform Config Reader POST Status Rule

POST Status	Alarm Level	Meaning
OK		POST status is okay.
UNKNOWN	Caution	POST status is unknown.
BLACKLISTED	Caution	Component is blacklisted.
REDLISTED	Caution	Component is redlisted.
NO_LICENSE	Caution	Component does not have a COD license.
DISABLED	Alert	Component is disabled.
UNDEFINED	Alert	Component is undefined.
MISCONFIGURED	Alert	Component is misconfigured.
FAIL-OBP	Critical	Component has failed in OBP.
FAIL	Critical	Component has failed POST.

### *Actions:*

- A caution alarm is for information only and is not an error. Refer to the *Sun System Management Services (SMS) 1.3 Administrator Guide*, Chapter 5, Section “Hardware Control”.
- An alert alarm does not always indicate a problem, but you should inform your system administrator or Sun service personnel of a possible problem.
- A critical alarm indicates a problem. Contact your Sun service personnel.

For more information, look at the POST log file on the system controller. The POST log file is located in `/var/opt/SUNWSMS/adm/[A-R]/post`.

## Power Supply Breaker Rule (scBreakr)

The Power Supply Breaker Rule generates a caution alarm when the power supply circuit breaker is OPEN (TABLE 6-34). The caution alarm is for information only and is not an error.

**TABLE 6-34** Sun Fire 15K/12K Platform Config Reader Power Supply Breaker Rule

Power Supply Breaker State	Alarm Level	Meaning
CLOSE		Circuit breaker is closed.
OPEN	Caution	Circuit breaker is open.

## System Board DR State Rule (scDrStat)

The system board DR state rule generates a caution alarm when the dynamic reconfiguration (DR) state is UNKNOWN (TABLE 6-35).

**TABLE 6-35** Sun Fire 15K/12K Platform Config Reader System Board DR State Rule

DR State	Alarm Level	Meaning
FREE		Board is free.
ASSIGNED		Board is assigned to a domain.
ACTIVE		Board is active in a domain.
UNKNOWN	Caution	Dynamic reconfiguration state is unknown.

**Action:** The caution alarm is for information only and is not an error. The UNKNOWN state is equivalent to the board being free. If you issue the SMS `showboards(1M)` command, you will see that the UNKNOWN boards are marked as available.

## System Board Test Status Rule (sCBTest)

The system board test status rule generates a caution, alert, or critical alarm when the test status is UNKNOWN, IPOST (in POST), DEGRADED, or FAILED (TABLE 6-36). The caution alarm is for information only and is not an error.

**TABLE 6-36** Sun Fire 15K/12K Platform Config Reader System Board Test Status Rule

Test Status	Alarm Level	Meaning
PASSED		POST passed.
UNKNOWN	Caution	POST status is unknown.
IPOST (in POST)	Caution	POST is in progress.
DEGRADED	Alert	POST status is degraded.
FAILED	Critical	POST failed.

*Actions:* The reasons for the alarms and the actions to take depend on the test status.

- SMS software automatically sets test status to UNKNOWN whenever a board is powered on or off. It also implies that the board is not configured into any domain. When a board is configured into a domain, POST is run and gives the appropriate test status.
- When the test status is DEGRADED and an alert alarm is generated, contact your Sun service personnel.
- When the test status is FAILED and a critical alarm is generated, there is something wrong with the board. Contact your Sun service personnel.

For more information, look at the POST log file. The POST log file is located in `/var/opt/SUNWSMS/adm/[A-R]/post`.

## Domain Status Alarm Rule (sCDmnSt)

The domain status alarm rule generates an alarm depending on the domain's status during domain boot, normal operations, and error recovery (TABLE 6-37).

**TABLE 6-37** Sun Fire 15K/12K Platform Config Reader Domain Status Alarm Rule

Domain Status	Alarm Level	Meaning
Booting OBP		OpenBoot PROM for the domain is booting.
Booting Solaris		Domain is booting Solaris software.
Keyswitch Standby		Keyswitch for the domain is in STANDBY position.

**TABLE 6-37 Sun Fire 15K/12K Platform Config Reader Domain Status Alarm Rule**  
(Continued)

Domain Status	Alarm Level	Meaning
Loading OBP		OpenBoot PROM for the domain is being loaded.
Loading Solaris		OpenBoot PROM is loading Solaris software.
Powered Off		Domain is powered off.
Running Domain POST		Domain power-on self-test is running.
Running OBP		OpenBoot PROM for the domain is running.
Running Solaris		Solaris software is running on the domain.
Solaris Quiesce In-progress		Solaris software quiesce is in progress.
Solaris Quiesced		Solaris software has quiesced.
Debugging Solaris	Caution	Debugging Solaris software; this is not a hung condition.
Domain Exited OBP	Caution	Domain OpenBoot PROM exited.
Exited OBP	Caution	OpenBoot PROM has exited.
In OBP Callback	Caution	Domain has been halted and has returned to the OpenBoot PROM.
OBP Debugging	Caution	OpenBoot PROM is being used as a debugger.
OBP in sync Callback to OS	Caution	OpenBoot PROM is in sync callback to the Solaris software.
Solaris Halt	Caution	Solaris software is halted.
Solaris Halted, in OBP	Caution	Solaris software is halted and the domain is in OpenBoot PROM.
Solaris Resume In-progress	Caution	Solaris software resume is in progress.
Domain Down	Alert	Domain is down, and <code>setkeyswitch</code> is in the ON, DIAG, or SECURE position.
In Recovery	Alert	Domain is in the midst of an automatic system recovery.
Solaris Exited	Alert	Solaris software has exited.
Solaris Panic	Alert	Solaris software has panicked; panic flow has started.
Solaris Panic Continue	Alert	Exited debugger mode and continuing panic flow.
Solaris Panic Debug	Alert	Solaris software panicked, and is entering debugger mode.

**TABLE 6-37 Sun Fire 15K/12K Platform Config Reader Domain Status Alarm Rule**  
(Continued)

Domain Status	Alarm Level	Meaning
Solaris Panic Dump	Alert	Panic dump has started.
Solaris Panic Exit	Alert	Solaris software exited as a result of a panic.
Booting Solaris Failed	Critical	OpenBoot PROM running; boot attempt failed
Environmental Domain Halt	Critical	Domain was shut down due to an environmental emergency.
Environmental Emergency	Critical	Environmental emergency has been detected.
In OBP Error Reset	Critical	Domain is in Open Boot PROM due to an error reset condition.
Loading Solaris Failed	Critical	OpenBoot PROM running; loading attempt failed.
OBP Failed	Critical	Domain OpenBoot PROM failed.
Unknown	Critical	Domain state could not be determined, or for Ethernet addresses, it indicates the domain idprom image file does not exist. Contact your Sun service personnel.

**Actions:** When an error occurs and an alarm is generated, SMS software takes appropriate automatic system recovery (ASR) actions. However, sometimes the domain hardware does not meet the requirements for safe and correct operation and is unable to recover. In this event, refer to the Domain Events chapter of the *System Management Services (SMS) 1.3 Administrator Guide*. This details the immediate actions to take and where to obtain the event log file. Then contact your Sun service personnel and provide the needed log file information.

## Domain Bus Configuration Rule (scBusCfg)

The domain bus configuration rule generates an alert alarm when the address, data, or response bus is unconfigured (UNCONFIGURED) or in a degraded mode (CSB0 or CSB1). In other words, the rule generates an alarm when the bus is not configured to use both CSBs (TABLE 6-38).

**TABLE 6-38** Sun Fire 15K/12K Platform Config Reader Domain Bus Configuration Rule

Bus Configuration	Alarm Level	Meaning
BOTH		Bus is using both CSBs.
CSB0	Alert	Bus is in a degraded mode.
CSB1	Alert	Bus is in a degraded mode.
UNCONFIGURED	Alert	Bus is unconfigured.

*Action:* Contact your Sun service personnel to properly configure the bus.

---

# Domain Config Reader Module

The Domain Config Reader module provides the hardware configuration for a Sun Fire 15K/12K domain. During Sun Fire 15K/12K domain agent setup, this module is automatically loaded, and you *can* unload it.

FIGURE 6-2 shows the icon for the module—Config Reader (Sun Fire 15K/12K Domain)—as it is displayed in the host Details window on a domain under the Browser tab and Hardware icon.

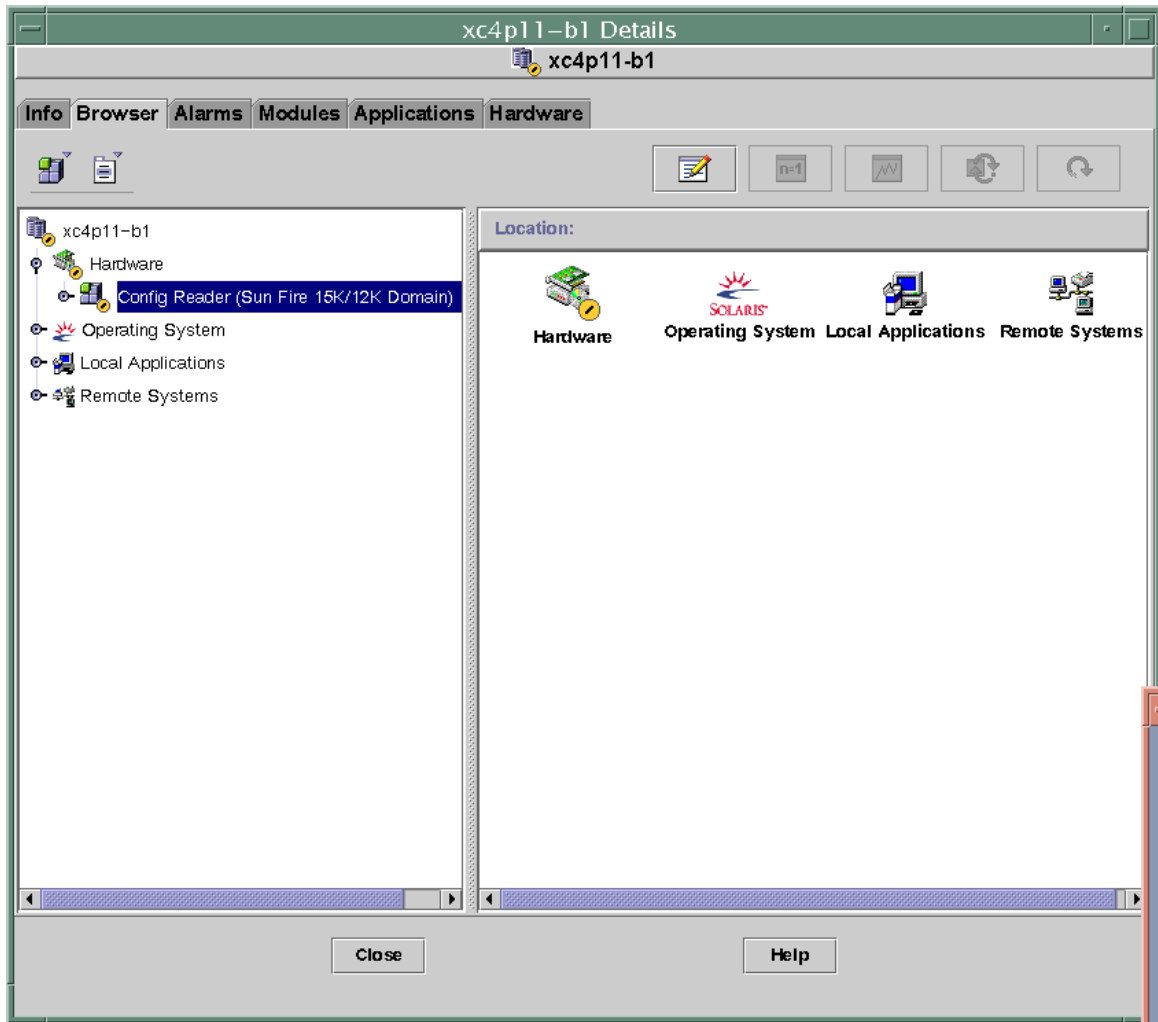


FIGURE 6-2 Domain Config Reader Module

## Domain Agent May Not Start on a Configuration With Many External Disks

On a configuration with many external disks attached—for example, over 5,000 disks—you must make modifications to the `agent-stats-d.def` file to start the domain agent on the domain. Then you need to modify the attributes to the alarms that are generated. Once you do this you will receive an Alert alarm (yellow) instead of a Critical alarm (red), and you will be able to monitor the domain.



Perform these two procedures on the Sun Fire 15K/12K domain:

1. Modify the `agent-stats-d.def` file
2. Modify two alarm attributes in the Sun Management Center 3.0 graphical user interface (GUI) for the domain.

## ▼ To Modify the `agent-stats-d.def` File

In the `/var/opt/SUNWsymon/cfg/agent-stats-d.def` file:

1. **Change the** `procstats:size:alarmlimit:error-gt` **to** 500000
2. **Change the** `procstats:size:alarmlimit:warning-gt` **to** 250000
3. **Change the** `procstats:rss:alarmlimit:warning-gt` **to** 250000

## ▼ To Modify Alarm Attributes for the Domain

1. **Double-click on the domain you want to change in the hierarchical view of the Sun Management Center 3.0 GUI.**
2. **Double-click on Local Applications.**
3. **Double-click on Agent Statistics.**
4. **Double-click on Sun Management Center Total Process Statistics.**
5. **In the Sun Management Center Total Process Statistics table, right-click on the value for the property Total Virtual Size (KB) and Total Res Set Size.**
6. **Click on the Attribute Editor in the pull-down menu.**
7. **Click on the Alarms tab.**
8. **In the Critical Threshold text box, change the size to 500000.**
9. **In the Alert Threshold text box, change the size to 250000.**
10. **Click on the Apply button.**
11. **In the Sun Management Center Total Process Statistics table, right-click on the value for the property Total Res Set Size (KB).**
12. **Click on the Attribute Editor in the pull-down menu.**
13. **Click on the Alarms tab.**

14. In the **Critical Threshold** text box, change the size to 500000.
15. In the **Alert Threshold** text box, change the size to 250000.
16. Click on the **Apply** button.

## Domain Config Reader Module Refresh Intervals

The Domain Config Reader module performs a complete refresh of all tables every 30 minutes.

The Domain Config Reader module also stores domain information in an internal cache. It gathers and refreshes this information in two ways:

- At periodic intervals, currently every two minutes, the Domain Config Reader checks for changes to the disk hardware, software, and transport error count and processor status (online or offline). You cannot change the value of the refresh interval for the Sun Fire 15K/12K Domain Config Reader.
- The events module informs the Domain Config Reader whenever a dynamic reconfiguration operation has occurred, which means that a board or a component has changed, and that information is stored in the internal cache.

When viewing the module data from the Browser, you can request an immediate refresh of the module data from the internal cache.

### ▼ To Refresh Domain Config Reader Data

1. Open the domain **Details** window and select the **Browser** tab.
2. Select any property within the **System** folder and refresh that data.  
This causes the Domain Config Reader to refresh data from the internal cache.
3. If you want to view information not contained in the **System** folder, select that property in the **Browser** and refresh the data.

This updates the Browser with the latest value of that property from the internal cache.

## Domain Config Reader Properties

The tables in this section describe each of the visible properties for each Sun Fire 15K/12K Domain Config Reader object. If a property has a value of --, the Domain Config Reader is unable to get data for that property.

## System

The following table provides a brief description of the properties for the Sun Fire 15K/12K Domain Config Reader system (TABLE 6-39):

**TABLE 6-39** Sun Fire 15K/12K Domain Config Reader System

Property	Rule (if any)	Description
Node Name		system
Hostname		Sun Fire 15K/12K domain host name
Host ID		Host identification number
Operating System		Operating system running in the Sun Fire 15K/12K domain
OS Version		Version of the operating system running
Architecture		Machine architecture
Last Update		Date and time the configuration information was last updated
Total Disks		Number of disks present in the domain
Total Memory		Total memory in megabytes
Total Processors		Number of processors, which includes all processors allocated to the domain
Total Tape Devices		Number of tape devices present in the domain

## CPU/Memory Board

The following table provides a brief description of the properties for a Sun Fire 15K/12K Domain Config Reader CPU/memory board (TABLE 6-40):

**TABLE 6-40** Sun Fire 15K/12K Domain Config Reader CPU/Memory Board

Property	Rule (if any)	Description
CPU ID		CPU/memory board identifier containing FRU ID(Slot ID): CPU(SBx), where x is the number of the expander slot containing the board (0-17)
Board Type		CPU board type identifier: CPU
Memory Size		Total memory for all CPUs on this board

**TABLE 6-40** Sun Fire 15K/12K Domain Config Reader CPU/Memory Board (*Continued*)

Property	Rule (if any)	Description
Memory Controllers		Comma-separated list of identifiers for the memory controllers on this CPU/memory board: <i>SBx/Py</i> , where <i>x</i> is the number of the expander slot containing the board (0-17) and <i>y</i> is the processor number (0-3)
Memory Banks		Comma-separated list of identifiers for the memory banks on this CPU/memory board: <i>SBx/Py/Bz</i> , where <i>x</i> is the number of the expander slot containing the board (0-17), <i>y</i> is the processor number (0-3), and <i>z</i> is the memory bank number (0 or 1)
Processor List		Comma-separated list of identifiers for the processors on this CPU/memory board: <i>SBx/Py</i> , where <i>x</i> is the number of the expander slot containing the board (0-17) and <i>y</i> is the processor number (0-3)
Condition	<code>scStateCheck</code>	Attachment point condition of the CPU/memory board from <code>cfgadm</code> : OK, FAIL, or UNKNOWN
Last Change		Date and time of the last change or UNKNOWN

## HPCI/HPCI+ Board

The following table provides a brief description of the properties for a Sun Fire 15K/12K Domain Config Reader hot-swap PCI (HPCI) board or hot-swap PCI+ (HPCI+) board (TABLE 6-41):

**TABLE 6-41** Sun Fire 15K/12K Domain Config Reader HPCI/HPCI+ Board

Property	Rule (if any)	Description
HPCI ID		HPCI board identifier containing FRU ID(Slot ID): <i>HPCI (IOx)</i> , where <i>x</i> is the number of the expander slot containing the board (0-17)
Board Type		HPCI board type identifier: HPCI or HPCI+

**TABLE 6-41** Sun Fire 15K/12K Domain Config Reader HPCI/HPCI+ Board (Continued)

Property	Rule (if any)	Description
Condition	scStateCheck	Attachment point condition of the HPCI board from <code>cfgadm</code> : OK, FAIL, or UNKNOWN
Last Change		Date and time of the last change or UNKNOWN
HPCI Cards		Comma-separated list of identifiers for HPCI cards connected to this board: <code>IOx/CyVz</code> , where <i>x</i> is the number of the expander slot containing the board (0–17), <i>y</i> is the card voltage (3 or 5), and <i>z</i> is the PCI controller number (0 or 1)

## WPCI Board

The following table provides a brief description of the properties for a Sun Fire 15K/12K Domain Config Reader Sun Fire Link PCI (WPCI) board (TABLE 6-42). Refer to the *Sun Fire Link Fabric Administrator's Guide* for more information about the Sun Fire Link system.

**TABLE 6-42** Sun Fire 15K/12K Domain Config Reader WPCI Board

Property	Rule (if any)	Description
WPCI ID		WPCI board identifier containing FRU ID(Slot ID): <code>WPCI(IOx)</code> , where <i>x</i> is the number of the expander slot containing the board (0–17)
Board Type		WPCI board type identifier: <code>WPCI</code>
Condition	scStateCheck	Attachment point condition of the WPCI board from <code>cfgadm</code> : OK, FAIL, or UNKNOWN
Last Change		Date and time of the last change or UNKNOWN
HPCI/Paroli Cards		Comma-separated list of identifiers for HPCI cards and Paroli cards on this WPCI board. The HPCI card identifier is <code>IOx/CyVz</code> , where <i>x</i> is the number of the expander slot containing the board (0–17), <i>y</i> is the card voltage (3 or 5), and <i>z</i> is the PCI controller number (0 or 1). The Paroli card identifier is <code>IOx/PARY</code> , where <i>x</i> is the number of the expander slot containing the board (0–17) and <i>y</i> is the number of the Paroli card (0,1).

## MaxCPU Board

The following table provides a brief description of the properties for Sun Fire 15K/12K Domain Config Reader MaxCPU board (TABLE 6-43):

**TABLE 6-43** Sun Fire 15K/12K Domain Config Reader MaxCPU Board

Property	Rule (if any)	Description
MCPU ID		MaxCPU board identifier containing FRU ID(Slot ID): <code>MCPU(I0x)</code> , where <i>x</i> is the number of the expander slot containing the board (0-17)
Board Type		Board type identifier: <code>MCPU</code>
Processor List		Comma-separated list of identifiers for processors on the MaxCPU board: <code>CPU(SBx)</code> , where <i>x</i> is the number of the expander slot containing the board (0-17)
Condition	<code>scStateCheck</code>	Attachment point condition of the MaxCPU board from <code>cfgadm</code> : OK, FAIL, or UNKNOWN
Last Change		Date and time of the last change or UNKNOWN

## HPCI Cassette

The following table provides a brief description of the properties for a Sun Fire 15K/12K Domain Config Reader hot-swap PCI (HPCI) cassette (TABLE 6-44). An HPCI cassette can contain two HPCI cards.

**TABLE 6-44** Sun Fire 15K/12K Domain Config Reader HPCI Cassette

Property	Rule (if any)	Description
CARD ID		HPCI card identifier containing FRU ID(Slot ID): FRU ID is either <code>C3V</code> for a 3.3-volt card or <code>C5V</code> for a 5-volt card. Slot ID is <code>I0x/CyVz</code> , where <i>x</i> is the number of the expander slot containing the board (0-17), <i>y</i> is the card voltage (3 or 5), and <i>z</i> is the PCI controller number (0 or 1)
Device Type		Device type identifier for the HPCI card, such as <code>network</code> , <code>scsi-fcp</code> , or <code>fcal</code>
Device Class		Device class for the HPCI card, such as <code>Mass Storage Controller, SCSI</code> ; <code>Network Controller, Ethernet</code> ; <code>Network Controller, FDDI</code> ; or <code>Network Controller, ATM</code>
Condition	<code>scStateCheck</code>	Attachment point condition of the HPCI card from <code>cfgadm</code> : OK, FAIL, or UNKNOWN

**TABLE 6-44** Sun Fire 15K/12K Domain Config Reader HPCI Cassette *(Continued)*

<b>Property</b>	<b>Rule (if any)</b>	<b>Description</b>
Last Change		Date and time of the last change or UNKNOWN
Name		Sun name for this HPCI card, such as SUNW,qlc; SUNW,qfe; SUNW,hme; or network
Manufacturer		Manufacturer of this HPCI card
Model		Model identifier of this HPCI card
Version		Version of this HPCI card
Revision ID		Revision identifier of this HPCI card
Vendor ID		Vendor identifier of this HPCI card

## Paroli Card

The following table provides a brief description of the properties for a Sun Fire 15K/12K Domain Config Reader parallel optical link (Paroli) card (TABLE 6-45). Refer to the *Sun Fire Link Fabric Administrator's Guide* for more information about the Sun Fire Link system.

---

**Note** – Paroli card presence can be determined only if the domain is part of a Sun Fire Link cluster. If the domain is not part of a Sun Fire Link cluster, the Paroli card table will be empty; however, this is not an indication that there is no Paroli card in the domain.

---

**TABLE 6-45** Sun Fire 15K/12K Domain Config Reader Paroli Card

Property	Rule (if any)	Description
CARD ID		Paroli card identifier containing FRU ID(Slot ID): PARS( IOX/PARy), where x is the number of the expander slot containing the board (0-17) and y is the number of the Paroli card (0 or 1)
Type		Type identifier for the Paroli card: DUAL or SINGLE
Link Number		Link number of the Paroli card: 0, 1, or 2
Link Validity	scLnkVld	Validity of the Paroli card link: VALID or INVALID
Link Status	scLnkSt	Status of the Paroli card link: LINK UP, LINK DOWN, LINK NOT PRESENT, WAIT FOR SC LINK TAKEDOWN, WAIT FOR SC LINK UP, SC ERROR WAIT FOR LINK DOWN, or UNKNOWN
Remote Link Number		Number of the remote link
Remote Port ID		Port identifier on the remote end of the link
Remote Cluster Member		Host name of the domain on the remote end of the link.



## Processor

The following table provides a brief description of the properties for a Sun Fire 15K/12K Domain Config Reader Processor (TABLE 6-46):

**TABLE 6-46** Sun Fire 15K/12K Domain Config Reader Processor

Property	Rule (if any)	Description
PROC ID		Processor identifier containing ID(Slot ID): PROC(SBx/Py), where x is the number of the expander slot containing the board (0-17) and y is the processor number (0-3)
Processor Number		Processor number or port ID assigned to this processor
Module Revision		Processor module revision number
Module Type		Processor module type identifier
Manufacturer		Processor manufacturer identifier
SPARC Version		SPARC version identifier
Clock Frequency (MHz)		Processor clock frequency in megahertz (MHz)
Icache Size (KB)		Instruction cache size in kilobytes (KB)
Dcache Size (KB)		Data cache size in kilobytes (KB)
Ecache Size (KB)		External cache size in kilobytes (KB)
Status	scCPUStatus	Current status of the processor: ONLINE, OFFLINE, or POWERED OFF
Condition	scStateCheck	Attachment point condition of the processor from cfgadm: OK, FAIL, or UNKNOWN
Last Change		Date and time of last change or UNKNOWN

## Memory Controller

The following table provides a brief description of the properties for Sun Fire 15K/12K Domain Config Reader memory controller (TABLE 6-47):

**TABLE 6-47** Sun Fire 15K/12K Domain Config Reader Memory Controller

Property	Rule (if any)	Description
Memory Controller ID		Memory controller identifier containing ID(Slot ID): MEMCTRL(SBX/Py), where <i>x</i> is the number of the expander slot containing the board (0-17) and <i>y</i> is the processor number (0-3)
Memory Bank List		Comma-separated list of slot IDs for the memory banks: SBX/Py/Bz, where <i>x</i> is the number of the expander slot containing the board (0-17), <i>y</i> is the processor number (0-3), and <i>z</i> is the physical memory bank number (0 or 1)
Condition	scStateCheck	Attachment point condition of the memory controller from <code>cfgadm</code> : OK, FAIL, or UNKNOWN
Last Change		Date and time of last change or UNKNOWN

# Memory Bank

The following table provides a brief description of the properties for a Sun Fire 15K/12K Domain Config Reader memory bank (TABLE 6-48).

---

**Note** – It is possible to have an entry for a non-existing memory bank in this table. The entry will have `DISABLED` in the POST Status property.

---

**TABLE 6-48** Sun Fire 15K/12K Domain Config Reader Memory Bank

Property	Rule (if any)	Description
Memory Bank ID		Memory bank identifier containing ID(Slot ID): <code>MEMBANK(SBx/Py/Bz)</code> , where <i>x</i> is the number of the expander slot containing the board (0–17), <i>y</i> is the processor number (0–3), and <i>z</i> is the physical memory bank number (0 or 1)
Memory Size		Memory size in megabytes of this memory bank
DIMM List		Comma-separated list of slot IDs for the DIMMS on this memory bank: <code>SEw/Px/By/Dz</code> , where <i>w</i> is the number of the expander slot containing the board (0–17), <i>x</i> is the processor number (0–3), <i>y</i> is the physical memory bank number (0 or 1), and <i>z</i> is the DIMM number (0–3)
Logical Bank 0 POST Status	<code>scPOSTStatus</code>	Indicates whether the POST status of logical memory bank 0 is UNKNOWN, OKAY, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, or REDLISTED
Logical Bank 1 POST Status	<code>scPOSTStatus</code>	Indicates whether the POST status of logical memory bank 1 is UNKNOWN, OKAY, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, or REDLISTED
Processor ID		Processor identifier for this memory bank: <code>SBx/Py</code> , where <i>x</i> is the number of the expander slot containing the board (0–17) and <i>y</i> is the processor number (0–3)
SEEPROM ID		Identifier of the SEEPROM; currently --

## DIMM

The following table provides a brief description of the properties for Sun Fire 15K/12K Domain Config Reader dual inline memory module (DIMM) (TABLE 6-49).

---

**Note** – It is possible to have an entry for a non-existing DIMM in this table. The entry will have `DISABLED` in the POST Status property

---

**TABLE 6-49** Sun Fire 15K/12K Domain Config Reader DIMM

Property	Rule (if any)	Description
DIMM ID		DIMM identifier containing FRU ID(Slot ID): <code>DIMM(SBw/Px/By/Dz)</code> , where <i>w</i> is the number of the expander slot containing the board (0–17), <i>x</i> is the processor number (0–3), <i>y</i> is the physical memory bank number (0 or 1), and <i>z</i> is the DIMM number (0–3)
Memory Size		Size of the memory for the DIMM in kilobytes (KB)
SEEPROM ID		Identifier of the SEEPROM; currently --
POST Status	<code>scPOSTStatus</code>	Indicates whether the POST status of the DIMM is UNKNOWN, OKAY, DISABLED, UNDEFINED, MISCONFIGURED, FAIL-OBP, FAIL, BLACKLISTED, or REDLISTED
ECC Memory Errors	<code>scDimmErrCnt</code>	Number of error-correcting code (ECC) memory errors for the DIMM

## Disk Devices

The following table provides a brief description of the properties for Sun Fire 15K/12K Domain Config Reader disk devices (TABLE 6-50):

**TABLE 6-50** Sun Fire 15K/12K Domain Config Reader Disk Devices

Property	Rule (if any)	Description
Disk ID		Disk device identifier: <code>disk(cxydz)</code> where <i>x</i> is the PCI controller number (0 or 1), <i>y</i> is the target number, and <i>z</i> is the logical unit number; such as <code>c0t64d0</code> . If the disk is dual-ported, two disk device identifiers will be separated by a comma.
Card ID		Card identifier: <code>IOx/cyVz</code> , where <i>x</i> is the number of the expander slot containing the board (0–17), <i>y</i> is the card voltage (3 or 5), and <i>z</i> is the PCI controller number (0 or 1)
Enclosure Name		Enclosure identifier from <code>luxadm</code> or <code>--</code> . Refer to <i>Platform Notes: Using luxadm Software</i> for more information.
Path		Physical path to the disk device
Block Size		Block size established when the disk was partitioned
Block Count		Number of blocks allocated for the file system
Blocks Available		Number of unused blocks for the file system
File Count		Number of files existing on the file system
Files Available		Number of unused files available for the file system
Status		Status of this disk: <code>OK</code> or a message describing the problem encountered
Hardware Errors	<code>scDskErrCnt</code>	Number of hardware-related errors
Software Errors	<code>scDskErrCnt</code>	Number of software-related errors
Transport Errors	<code>scDskErrCnt</code>	Number of transport-related errors

## Tape Devices

The following table provides a brief description of the properties for Sun Fire 15K/12K Domain Config Reader tape devices (TABLE 6-51).

**TABLE 6-51** Sun Fire 15K/12K Domain Config Reader Tape Devices

Property	Rule (if any)	Description
Tape ID		Tape device identifier, following the standard naming convention for tape devices
Card ID		Card identifier: IOx/CyVz, where x is the number of the expander slot containing the board (0-17), y is the card voltage (3 or 5), and z is the PCI controller containing the card (0 or 1)
Path		Physical path to the tape device
Device Name		Name that identifies the tape device, such as Exabyte 4mm or QIC 8mm archive. Can be up to 64 characters.
Status		Status of this tape device: OK or a message describing the problem encountered
Tape Errors	scTpeErrCnt	Number of tape errors as recorded in the syslog file

## Network Interfaces

The following table provides a brief description of the properties for Sun Fire 15K/12K Domain Config Reader network interfaces (TABLE 6-52):

**TABLE 6-52** Sun Fire 15K/12K Domain Config Reader Network Interfaces

Property	Rule (if any)	Description
Network ID		Network interface identifier, such as network(dman0) or network(qfe0)
Card ID		Card identifier: IOx/CyVz, where x is the number of the expander slot containing the board (0-17), y is the card voltage (3 or 5), and z is the PCI controller number (0 or 1)
Symbolic Name		Host name of the host computer associated with this network interface
Ethernet Address		Ethernet address for the network interface

**TABLE 6-52** Sun Fire 15K/12K Domain Config Reader Network Interfaces (*Continued*)

Property	Rule (if any)	Description
IP Address		IP address for the network interface
Status		Status of this network interface: OK or blank
Network Error		If the system cannot obtain information for any network interface property, or obtains an error code, that message is shown here.

## WCI

The following table provides a brief description of the properties for Sun Fire 15K/12K Domain Config Reader Sun Fire Link Interface (WCI) (TABLE 6-53). Refer to the *Sun Fire Link Administrator's Guide* for more information about the Sun Fire Link system.

**TABLE 6-53** Sun Fire 15K/12K Domain Config Reader WCI

Property	Rule (if any)	Description
WCI ID		Sun Fire Link Interface identifier containing FRU ID(Slot ID):: WCI ( IOx/WCI ), where <i>x</i> is the number of the expander slot containing the WCI
Name		Driver or device name: SUNW,wci
Compatible		Drivers compatible with the WCI: wrsm or wssm
Number of Parolis		Number of parallel optical links

# Domain Config Reader Alarm Rules

This section describes the alarm rules for the Domain Config Reader module. You cannot change the limits for these rules. The system provides a message with the alarms telling what the current property is and what the limit is.

## CPU Status Rule (`scCPUStatus`)

The CPU status rule generates a caution alarm if the processor is `OFFLINE` (TABLE 6-54). This alarm is for information only and is not an error.

**TABLE 6-54** Sun Fire 15K/12K Domain Config Reader CPU Status Rule

CPU Status	Alarm Level	Meaning
ONLINE		CPU is online.
OFFLINE	Caution	CPU is offline.
POWERED OFF		CPU is powered off.

*Action:* You can use `psradm(1M)` to change the operational status of processors if necessary.

## DIMM Error Count Rule (`scDimmErrCnt`)

The DIMM error count rule generates a caution, alert, or critical alarm depending on the number of error-correcting code (ECC) errors that have occurred in the memory module (TABLE 6-55).

**TABLE 6-55** Sun Fire 15K/12K Domain Config Reader DIMM Error Count Rule

Number of Errors	Alarm Level	Meaning
5	Caution	ECC memory error count exceeds 5.
10	Alert	ECC memory error count exceeds 10.
15	Critical	ECC memory error count exceeds 15.

*Action:* Dispatch a technician to test the memory module. Refer to the `syslog` file for the error descriptions.



## Disk Error Count Rule (scDskErrCnt)

The disk error count rule generates a caution, alert, or critical alarm depending on the number of hardware, software, or transport errors that have occurred on a disk. (TABLE 6-56).

**TABLE 6-56** Sun Fire 15K/12K Domain Config Reader Disk Error Count Rule

Number of Errors	Alarm Level	Meaning
5	Caution	Hardware, software, or transport error count exceeds 5.
10	Alert	Hardware, software, or transport error count exceeds 10.
15	Critical	Hardware, software, or transport error count exceeds 15.

*Action:* Dispatch a technician to test the disk.

## POST Status Rule (scPOSTStatus)

The power-on self-test (POST) Status Rule generates a caution, alert, or critical alarm when the POST status is not OKAY (TABLE 6-57).

**TABLE 6-57** Sun Fire 15K/12K Domain Config Reader POST Status Rule

POST Status	Alarm Level	Meaning
OKAY		POST status is okay.
UNKNOWN	Caution	POST status is unknown.
BLACKLISTED	Caution	Component is blacklisted.
REDLISTED	Caution	Component is redlisted.
DISABLED	Alert	Component is disabled.
UNDEFINED	Alert	Component is undefined.
MISCONFIGURED	Alert	Component is misconfigured.
FAIL-OBP	Critical	Component failed in OBP.
FAIL	Critical	Component failed POST.

### *Actions:*

- A caution alarm is for information only and is not an error. Refer to the *Sun System Management Services (SMS) 1.3 Administrator Guide*, Chapter 5, Section “Hardware Control”.
- An alert alarm does not always indicate a problem, but you should inform your system administrator or Sun service personnel of a possible problem.

- A critical alarm indicates a problem. Contact your Sun service personnel.

For more information, look at the POST log file on the system controller. The POST log file is located in `/var/opt/SUNWSMS/adm/[A-R]/post`.

## State Check Rule (`scStateCheck`)

The state check rule generates a caution alarm if any of the board, CPU, or memory controller attachment point conditions are not OK as reported from `cfgadm(1M)` (TABLE 6-58).

**TABLE 6-58** Sun Fire 15K/12K Domain Config Reader State Check Rule

CPU Status	Alarm Level	Meaning
OK		Attachment point condition from <code>cfgadm</code> is okay.
UNKNOWN	Caution	Attachment point condition from <code>cfgadm</code> is unknown.
FAIL	Caution	Attachment point condition from <code>cfgadm</code> is fail.

*Action:* If the condition is not OK, run `cfgadm(1M)` to double-check the condition of the attachment point. Contact your systems administrator.

## Tape Error Count Rule (`scTpeErrCnt`)

The tape error count rule generates a caution, alert, or critical alarm depending on the number of errors that have occurred on a tape drive (TABLE 6-59).

**TABLE 6-59** Sun Fire 15K/12K Domain Config Reader Tape Error Count Rule

Number of Errors	Alarm Level	Meaning
10	Caution	Tape error count exceeds 10.
20	Alert	Tape error count exceeds 20.
30	Critical	Tape error count exceeds 30.

*Action:* Dispatch a technician to test the tape drive. Refer to the `syslog` file for the error descriptions.

## Link Status Rule (scLnkSt)

The link status rule generates an alarm if the Link Status is not LINK UP (TABLE 6-60).

**TABLE 6-60** Sun Fire 15K/12K Domain Config Reader Link Status Rule

Link Status	Alarm Level	Meaning
LINK UP		Link is up.
LINK DOWN	Critical	Link is down.
LINK NOT PRESENT	Caution	Link is not present.
WAIT FOR SC LINK TAKEDOWN	Alert	Wait for the SC LINK TAKEDOWN status.
WAIT FOR SC LINK UP	Alert	Wait for the SC LINK UP status.
SC ERROR WAIT FOR LINK DOWN	Alert	SC error, wait for LINK DOWN status.
UNKNOWN	Critical	Link status is unknown.

**Action:** Dispatch a technician to analyze and fix the problem. The technician can look in the `syslog` file for more information.

## Link Valid Rule (scLnkVld)

The link valid rule generates an alert alarm when the Link Validity is INVALID (TABLE 6-61).

**TABLE 6-61** Sun Fire 15K/12K Domain Config Reader Link Valid Rule

Link Validity	Alarm Level	Meaning
VALID		Link configuration is valid.
INVALID	Alert	Link configuration is invalid.

**Action:** The configuration problem could be in the striping, switch nodes, compute nodes, or partitions, depending on the installation topology. Dispatch a technician to analyze and fix the problem. The technician can look in the `syslog` file for more information.

---

# SC Config Reader Module

The Sun Fire 15K/12K SC Config Reader module provides the hardware configuration for a Sun Fire 15K/12K system controller, which is a Sun CP 1500 machine. During Sun Fire 15K/12K agent setup, this module is automatically loaded, and you *can* unload it.

FIGURE 6-3 shows the icon for the module—Config-Reader (Sun Fire 15K/12K SC)—as it is displayed in the host (SC) Details window under the Browser tab and Hardware icon.

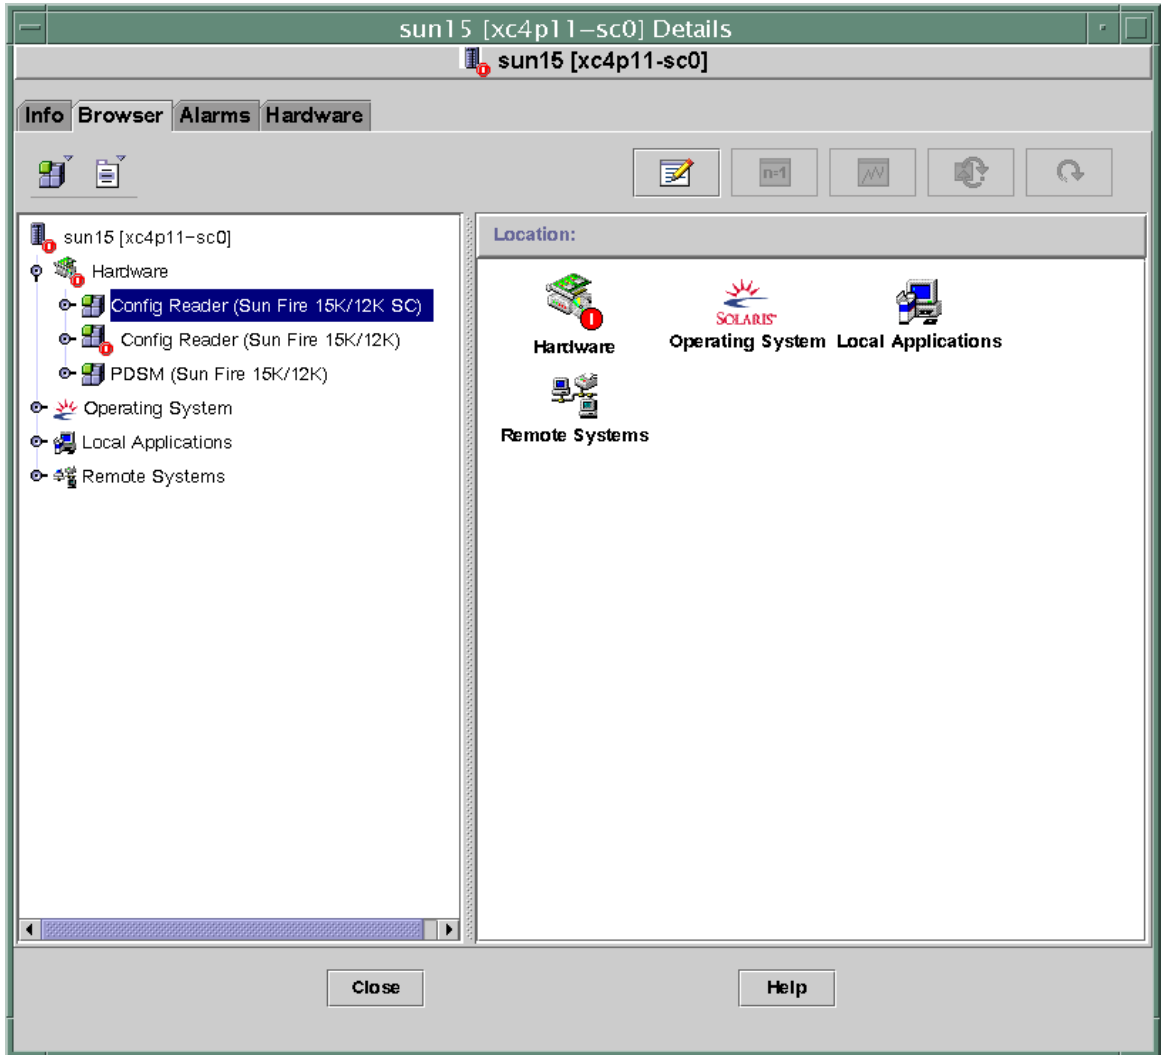


FIGURE 6-3 SC Config Reader Module

## SC Config Reader Properties

The tables in this section describe each of the visible properties for each Sun Fire 15K/12K SC Config Reader object. If a property has a value of --, the SC Config Reader is unable to get data for that property.

## System

The following table provides a brief description of the properties for a Sun Fire 15K/12K SC Config Reader system (TABLE 6-62):

**TABLE 6-62** Sun Fire 15K/12K SC Config Reader System

Property	Rule (if any)	Description
Node Name		system
Hostname		Sun Fire 15K/12K system controller host name
Host ID		Sun Fire 15K/12K system controller serial number
Operating System		Operating system running on the Sun Fire 15K/12K system controller
OS Version		Version of the operating system running
System Clock Frequency (MHz)		Frequency in megahertz (MHz) of the clock that provides system timing
Architecture		Machine architecture
Last Update		Date and time of the last update
Total Disks		Number of disks present for this system controller
Total Memory		Total memory in megabytes (MB) from the memory modules on this system controller
Total Processors		Number of processors for this system controller: 1
Total Tape Devices		Number of tape devices attached to this system controller.

## CP 1500 Board

The following table provides a brief description of the properties for a Sun Fire 15K/12K SC Config Reader CP 1500 board, which is a system controller (TABLE 6-63):

**TABLE 6-63** Sun Fire 15K/12K SC Config Reader CP 1500 Board

Property	Rule (if any)	Description
CP1500 ID		CP 1500 identifier containing FRU ID(Board ID); for example, CP1500 (CP31)
Board Type		CP1500
Voltage Status	cpBrdVolt	Status of input voltage to CP 1500 board: OK, FAIL, or UNKNOWN

**TABLE 6-63** Sun Fire 15K/12K SC Config Reader CP 1500 Board (*Continued*)

Property	Rule (if any)	Description
Memory Module List		Identifiers of the one or two memory modules for this board; for example CP31/P0/MM0
Processor List		Identifier of the processor for this board; for example, CP31/P0
Reset Reason		Reset type from the last hardware reset; for example, S-POR
POST Results		Results of power-on self-test; also indicates whether POST ran during the last reset.

## Processor

The following table provides a brief description of the properties for a Sun Fire 15K/12K SC Config Reader processor (TABLE 6-64):

**TABLE 6-64** Sun Fire 15K/12K SC Config Reader Processor

Property	Rule (if any)	Description
PROC ID		Identifier of the processor containing FRU ID(CPU ID); for example, PROC(CP31/P0)
Processor Number		UltraSPARC Port Architecture (UPA) port ID for the processor
Temperature (C)	cpCPUTemp	Temperature of the processor. Displays -1 if the temperature cannot be determined.
Module Revision		Revision number of this module type
Module Type		Type of processor, such as SUNW,UltraSPARC-III
Manufacturer		Manufacturer number
SPARC Version		Version number of this SPARC processor architecture
Clock Frequency (MHz)		Clock frequency in megahertz (MHz) of this processor
Icache Size (KB)		Size of the processor's instruction cache in kilobytes (KB)
Dcache Size (KB)		Size of the processor's data cache in kilobytes (KB)
Ecache Size (KB)		Size of the processor's external cache in kilobytes (KB)
Status	cpCPUStatus	Current processor status: ONLINE or OFFLINE

## Memory Module

The following table provides a brief description of the properties for a Sun Fire 15K/12K SC Config Reader memory module (TABLE 6-65):

**TABLE 6-65** Sun Fire 15K/12K SC Config Reader Memory Module

Property	Rule (if any)	Description
MEMMOD ID		Identifier of the memory module containing FRU ID(Memory Module ID); for example, MEMMOD(CP31/P0/MM0)
Memory Size (MB)		Size of memory in the memory module in megabytes (MB)

## PCI Device

The following table provides a brief description of the properties for a Sun Fire 15K/12K SC Config Reader PCI device (TABLE 6-66):

**TABLE 6-66** Sun Fire 15K/12K SC Config Reader PCI Device

Property	Rule (if any)	Description
DEVICE ID		Identifier of the PCI device containing FRU ID(Device Driver ID): PCI(XXX), where XXX is eri, glm, hci 1394, hme, or usb
Device Type		Device I/O protocol type used, such as pci, sbus, network, or scsi-2
Device Class		Required PCI class code, such as Network Controller, Ethernet; Mass Storage Controller, SCSI; Serial Bus Controller
Clock Frequency (MHz)		Clock frequency in megahertz (MHz)
Name		Device driver common or symbolic name, such as network, scsi, firewire, or usb
Manufacturer		Manufacturer number
Model		Device driver model number, such as SUNW, pci-eri; or Symbios, 53C875
Version		Version of the driver
Revision ID		Driver revision
Vendor ID		Vendor number



## Disk Device

The following table provides a brief description of the properties for Sun Fire 15K/12K SC Config Reader disk device (TABLE 6-67):

**TABLE 6-67** Sun Fire 15K/12K SC Config Reader Disk Device

Property	Rule (if any)	Description
Disk ID		Disk device identifier: <code>disk(cxydz)</code> where <i>x</i> is the PCI controller number (0 or 1), <i>y</i> is the target number, and <i>z</i> is the logical unit number; such as <code>c0t4d0</code> . If the disk is dual-ported, two disk device identifiers will be separated by a comma.
Path		Physical path to the disk device; such as <code>/pci@1f,0/pci@1,1/scsi@2/sd@0,0;...1,0;</code> or <code>6,0</code>
Block Size		Block size established when the disk was partitioned
Block Count		Number of blocks allocated for the file system
Blocks Available		Number of unused blocks for the file system
File Count		Number of files existing on the file system
Files Available		Number of unused files available for the file system
Status		Status of this disk: <code>OK</code> or a message describing the problem encountered
Hardware Errors	<code>cpDskErrCnt</code>	Number of hardware-related errors
Software Errors	<code>cpDskErrCnt</code>	Number of software-related errors
Transport Errors	<code>cpDskErrCnt</code>	Number of transport-related errors

## Tape Device

The following table provides a brief description of the properties for a Sun Fire 15K/12K SC Config Reader tape device (TABLE 6-68):

**TABLE 6-68** Sun Fire 15K/12K SC Config Reader Tape Device

Property	Rule (if any)	Description
Tape ID		Tape device identifier, following the standard naming convention for tape devices, such as <code>tape (0)</code>
Path		Physical path to the tape device, such as <code>/devices/pci@1f,0/pci@1,1/scsi@2/st@4,0</code>
Device Name		Name that identifies the tape device, such as HP DDS-3 4MM DAT
Status		Status of this tape device: OK or a message describing the problem encountered
Tape Errors	<code>cpTpeErrCnt</code>	Number of tape errors as recorded in the <code>syslog</code> file

## Network Interface

The following table provides a brief description of the properties for a Sun Fire 15K/12K SC Config Reader network interface (TABLE 6-69):

**TABLE 6-69** Sun Fire 15K/12K SC Config Reader Network Interface

Property	Rule (if any)	Description
Network ID		Network interface identifier, such as <code>network(hme0)</code> , <code>network(scman1)</code> , or <code>network(scman1:1)</code>
Symbolic Name		Host name of the host computer associated with this network interface
Ethernet Address		Ethernet address for the network interface
IP Address		IP address for the network interface
Status		Status of this network interface: OK or blank
Network Error		If the system cannot obtain information for any network interface property, or obtains an error code, that message is shown here.

# SC Config Reader Alarm Rules

This section describes the alarm rules for the SC Config Reader module. You cannot change the limits for some of these rules. The system provides a message with the alarms telling what the current property is and what the limit is.

## Board Voltage Rule (cpBrdVOLT)

The board voltage rule generates an alarm when the voltage is not within 5 percent of the nominal value of 5 volts (TABLE 6-70). A voltage alarm is *not* generated when the board is powered off.

**TABLE 6-70** Sun Fire 15K/12K SC Config Reader Board Voltage Rule

Voltage Threshold	Alarm Level	Meaning
OK		Voltage is in range.
UNKNOWN	Caution	Unable to determine voltage.
FAIL	Critical	Voltage is out of range.

### Actions:

- Contact your Sun service personnel for a critical alarm.



**Caution** – Shut down the system controller if the voltage is not within 5 percent of the nominal value. If the voltage is not within 10 percent of the nominal value, the system performs a power-on reset (POR).

Refer to Appendix A.2 of the *SPARCengine ASM Reference Manual* for more information.

- A caution alarm indicates that one or more i2c device drivers are not loaded and the module is unable to take voltage readings. Rerun the system controller agent setup to load the needed i2c device drivers. See “To Set Up Software on System Controllers” on page 30 for more information.

## CPU Status Rule (cpCPUStatus)

The CPU status rule generates a caution alarm if the processor is OFFLINE (TABLE 6-71).

**TABLE 6-71** Sun Fire 15K/12K SC Config Reader CPU Status Rule

CPU Status	Alarm Level	Meaning
ONLINE		CPU is online.
OFFLINE	Caution	CPU is offline.
POWERED OFF		CPU is powered off.

*Action:* The caution alarm is for information only and is not an error. Use psradm(1M) to change the operational status of processors if necessary.

## CPU Temperature Rule (cpCPUTemp)

The CPU temperature rule generates an alarm when the temperature is above certain default threshold values (TABLE 6-72). A temperature alarm is *not* generated when the board is powered off.

**TABLE 6-72** Sun Fire 15K/12K SC Config Reader CPU Temperature Rule

Temperature Threshold	Alarm Level	Meaning
Warning	Alert	Temperature is over the default limit of 69 degrees Celsius.
	Caution	Temperature cannot be determined. (Temperature property in the Processor table displays -1.)
Error	Critical	Temperature is over the default limit of 74 degrees Celsius.

*Action:* Contact your Sun service personnel for an alert or a critical alarm.

**Note** – The default threshold values are specified in the OpenBoot PROM setup. Refer to Appendix A.3 of the *SPARCengine™ ASM Reference Manual* for a complete description. If these thresholds are changed, they also must be changed in the ruleinit file.

## Disk Error Count Rule (cpDskErrCnt)

The disk error count rule generates a caution, alert, or critical alarm depending on the number of hardware, software, or transport errors that have occurred on a disk (TABLE 6-73).

**TABLE 6-73** Sun Fire 15K/12K SC Config Reader Disk Error Count Rule

Error Counts	Alarm Level	Meaning
5	Caution	Hardware, software, or transport error count exceeds 5.
10	Alert	Hardware, software, or transport error count exceeds 10.
15	Critical	Hardware, software, or transport error count exceeds 15.

*Action:* Dispatch a technician to test the disk.

## Tape Error Count Rule (cpTpeErrCnt)

The tape error count rule generates a caution, alert, or critical alarm depending on the numbers of errors that have occurred on a tape drive (TABLE 6-74).

**TABLE 6-74** Sun Fire 15K/12K SC Config Reader Tape Error Count Rule

Tape Errors	Alarm Level	Meaning
10	Caution	Tape error count exceeds 10.
20	Alert	Tape error count exceeds 20.
30	Critical	Tape error count exceeds 30.

*Action:* Dispatch a technician to test the tape drive. Refer to the `syslog` file for error descriptions.

---

# Platform/Domain State Management Module

The Platform/Domain State Management (PDSM) module enables an administrator to perform platform and domain management, and dynamic reconfiguration of system boards in the same manner that you would with the command-line interface (CLI) commands in SMS only with the Sun Management Center 3.0 GUI.

During the software installation, this module is automatically installed. You need to load this module to use it the first time. You must load it from the platform Details window (where the Platform Config Reader is automatically loaded.) You can unload the module, but you may want to keep it loaded as long as it is being used. For specific information about loading and unloading Sun Management Center modules, refer to Chapter 11, “Managing Modules,” in the *Sun Management Center 3.0 Software User’s Guide*.

FIGURE 6-4 shows the icon for the module—PDSM (Sun Fire 15K/12K)—as it is displayed in the platform Details window under the Browser tab and Hardware icon.

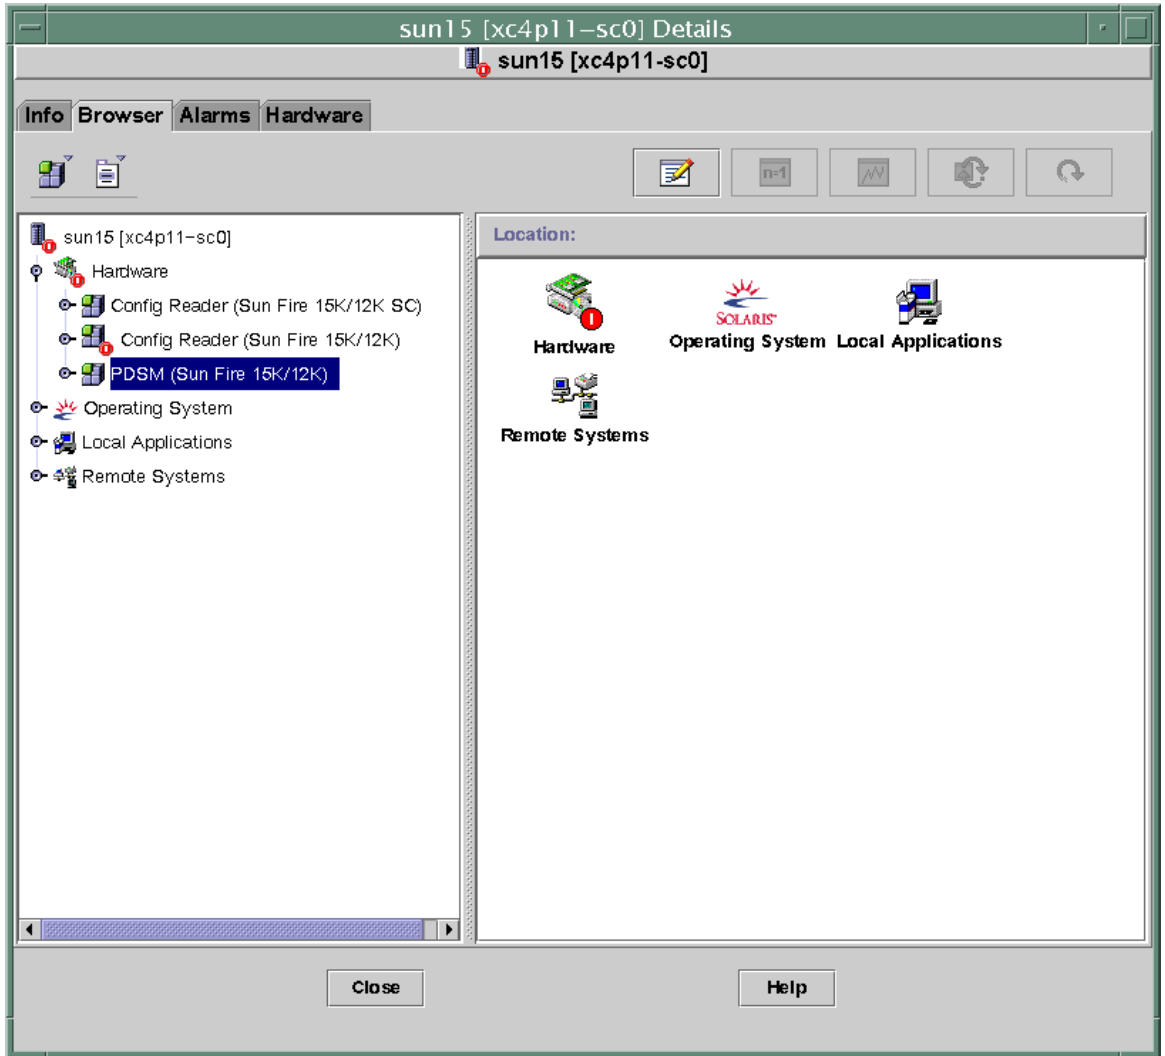


FIGURE 6-4 Platform/Domain State Management (PDSM) Module

The PDSM module has two types of views:

- Platform View
- Domain Views (one for each domain A through R)

## Platform View

The Platform View contains the following tables:

- Platform Info
- Platform Slot 0 Boards
- Platform Slot 1 Boards
- Platform Empty Slots
- Power Supplies
- Fan Trays

## Platform Info

The following table provides a brief description of the properties for the Sun Fire 15K/12K PDSM platform info (TABLE 6-75):

**TABLE 6-75** Sun Fire 15K/12K PDSM Module Platform Info

Property	Rule (if any)	Description
Platform ID		Platform identifier
Platform Type		Platform type
Max Domains		Maximum number of domains (18)
Active Domains		Number of active domains on this Sun Fire 15K/12K system
SC Power		Power state of the system controller: ON or OFF



## Platform Slot 0 Boards

The following table provides a brief description of the properties for the Sun Fire 15K/12K PDSM platform slot 0 boards (TABLE 6-76):

**TABLE 6-76** Sun Fire 15K/12K PDSM Module Platform Slot 0 Boards

Property	Rule (if any)	Description
Board ID		Board identifier in slot 0 containing FRU ID(Slot ID): CPU(SB $x$ ), where $x$ is the number of the expander slot containing the board (0-17)
Board State		State of the board in slot 0: ACTIVE, ASSIGNED, or FREE
Power State		Indicates whether the power state of the board in slot 0 is ON or OFF
Test Status		Indicates whether the test status of the CPU is UNKNOWN_TEST_STATUS, IPOST (in POST), PASSED, DEGRADED, or FAILED
Test Level		POST test level for this board in slot 0
Domain ID		Identifier of the domain assigned to this board in slot 0: A-R or UNASSIGNED

## Platform Slot 1 Boards

The following table provides a brief description of the properties for the Sun Fire 15K/12K PDSM platform slot 1 boards (TABLE 6-77):

**TABLE 6-77** Sun Fire 15K/12K PDSM Module Platform Slot 1 Boards

Property	Rule (if any)	Description
Board ID		Board identifier in slot 1 containing FRU ID(Slot ID): HPCI(IO $x$ ), where $x$ is the number of the expander slot containing the board (0-17)
Board State		State of the board in slot 1: ACTIVE, ASSIGNED, or FREE
Power State		Indicates whether the power state of the board in slot 1 is ON or OFF

**TABLE 6-77** Sun Fire 15K/12K PDSM Module Platform Slot 1 Boards *(Continued)*

Property	Rule (if any)	Description
Test Status		Indicates whether the test status of the board is UNKNOWN_TEST_STATUS, IPOST (in POST), PASSED, DEGRADED, or FAILED
Test Level		POST test level for this board in slot 1
Domain ID		Identifier of the domain assigned to this board in slot 1: A-R or UNASSIGNED

## Platform Empty Slots

The following table provides a brief description of the properties for the Sun Fire 15K/12K PDSM platform empty slots (TABLE 6-78):

**TABLE 6-78** Sun Fire 15K/12K PDSM Module Platform Empty Slots

Property	Rule (if any)	Description
Board ID		Available board identifier: Input/output card number (IOx) or system board number (SBx), where x is the number of the expander slot containing the board (0-17)
Board State		State of the available board: FREE or ASSIGNED
Power State		Indicates whether the power state of the available board is OFF or --
Test Status		Indicates whether the test status of the available board is UNKNOWN or --
Test Level		POST test level for this available board
Domain ID		Identifier of the domain assigned to this available board: A-R or UNASSIGNED

## Power Supplies

The following table provides a brief description of the properties for the Sun Fire 15K/12K PDSM platform power supplies (TABLE 6-79):

**TABLE 6-79** Sun Fire 15K/12K PDSM Module Platform Power Supplies

Property	Rule (if any)	Description
Power Supply ID		Power supply identifier containing FRU ID(SlotID): PS(PSx), where x is the power supply number (0-5)
Power State		If either DC 0 or DC 1 is on, the power state indicates ON. If both DC 0 and DC 1 are off, the power state indicates OFF.

## Fan Trays

The following table provides a brief description of the properties for the Sun Fire 15K/12K PDSM platform fan trays (TABLE 6-80):

**TABLE 6-80** Sun Fire 15K/12K PDSM Module Platform Fan Trays

Property	Rule (if any)	Description
Fan Tray ID		Fan tray identifier containing FRU ID(SlotID): FT(FTx), where x is the fan tray number (0-7)
Power State		Power state of the fan tray: ON or OFF
Fan Speed		Speed of the fan: OFF, NORMAL, or HIGH

# Domain X View

The Domain X View, where X is the domain identifier A through R, contains the following tables for each domain.

- Domain X Info
- Domain X Slot 0 Boards
- Domain X Slot 1 Boards
- Domain X Empty Slots

## Domain X Info

The following table provides a brief description of the properties for the Sun Fire 15K/12K PDSM domain X info (TABLE 6-81):

**TABLE 6-81** Sun Fire 15K/12K PDSM Module Domain X Info

Property	Rule (if any)	Description
Domain ID		Domain identifier: A-R
Domain Tag		Domain tag: domainX, where X is A-R
Domain State		Domain status as output from the SMS showplatform command, such as Running Solaris or Powered Off. Refer to showplatform(1M) in the <i>System Management Services SMS 1.3 Reference Manual</i> for more information.
Solaris Node Name		Host name of the Solaris operating environment node
Keyswitch		Virtual keyswitch position: ON, STANDBY, OFF, DIAG, SECURE, or UNKNOWN
Domain ACL		Domain access control list—space-separated input/output card numbers (IOx) and system board numbers (SBx), where x is the number of the expander slot containing the board (0-17)
Primary IO Board		Identifier of the primary input/output board used for communication between the domain and the system controller: HPCI(IOx), where x is the number of the expander slot containing the board (0-17).
Internal Ethernet Board		Identifier of the I/O board that contains the active Ethernet controller: HPCI(IOx), where x is the number of the expander slot containing the board (0-17).

## Domain X Slot 0 Boards

The following table provides a brief description of the properties for the Sun Fire 15K/12K PDSM domain X slot 0 boards (TABLE 6-82):

**TABLE 6-82** Sun Fire 15K/12K PDSM Module Domain X Slot 0 Boards

Property	Rule (if any)	Description
Board ID		Board identifier in slot 0: CPU(SBx), where x is the number of the expander slot containing the board (0-17)
Board State		State of the board in slot 0: ACTIVE, ASSIGNED, or FREE
Power State		Indicates whether the power state of the board in slot 0 is ON or OFF
Test Status		Indicates whether the test status of the CPU is UNKNOWN_TEST_STATUS, IPOST (in POST), PASSED, DEGRADED, or FAILED
Test Level		POST test level for this board in slot 0
Domain ID		Identifier of the domain assigned to this board in slot 0: A-R or UNASSIGNED

## Domain X Slot 1 Boards

The following table provides a brief description of the properties for the Sun Fire 15K/12K PDSM domain X slot 1 boards (TABLE 6-83):

**TABLE 6-83** Sun Fire 15K/12K PDSM Module Domain X Slot 1 Boards

Property	Rule (if any)	Description
Board ID		Board identifier in slot 1: HPCI(IOx), where x is the number of the expander slot containing the board (0-17)
Board State		State of the board in slot 1: ACTIVE, ASSIGNED, FREE
Power State		Indicates whether the power state of the board in slot 1 is ON or OFF

**TABLE 6-83** Sun Fire 15K/12K PDSM Module Domain X Slot 1 Boards *(Continued)*

Property	Rule (if any)	Description
Test Status		Indicates whether the test status of the CPU is UNKNOWN_TEST_STATUS, IPOST (in POST), PASSED, DEGRADED, or FAILED
Test Level		POST test level for this board in slot 1
Domain ID		Identifier of the domain assigned to this board in slot 1: A-R or UNASSIGNED

## Domain X Empty Slots

The following table provides a brief description of the properties for the Sun Fire 15K/12K PDSM domain X empty slots (TABLE 6-84):

**TABLE 6-84** Sun Fire 15K/12K PDSM Module Domain X Empty Slots

Property	Rule (if any)	Description
Board ID		Available board identifier: Input/output card number (IO $x$ ) or system board number (SB $x$ ), where $x$ is the number of the expander slot containing the board (0-17)
Board State		State of the available board: FREE or ASSIGNED
Power State		Indicates whether the power state of the available board is OFF or --
Test Status		Indicates whether the test status of the available board is UNKNOWN or --
Test Level		POST test level for this available board
Domain ID		Identifier of the domain assigned to this available board: A-R or UNASSIGNED

---

# Dynamic Reconfiguration Module

The Dynamic Reconfiguration module enables you to perform dynamic reconfiguration operations from the domain in the same manner that you would with the `cfgadm(1M)` command only with the Sun Management Center 3.0 GUI. This module works on Sun Fire 3800, 4800, 4810, 6800, 12K, and 15K systems.

During the software installation, this module is automatically installed. You need to load this module to use it the first time. You can unload the module, if desired. For specific information about loading and unloading Sun Management Center modules, refer to Chapter 11, “Managing Modules,” in the *Sun Management Center 3.0 Software User’s Guide*.

FIGURE 6-5 shows the icon for the module—Dynamic Reconfiguration Sun Fire (3800-15K)—as it is displayed in the host Details window on a domain under the Browser tab and Hardware icon.

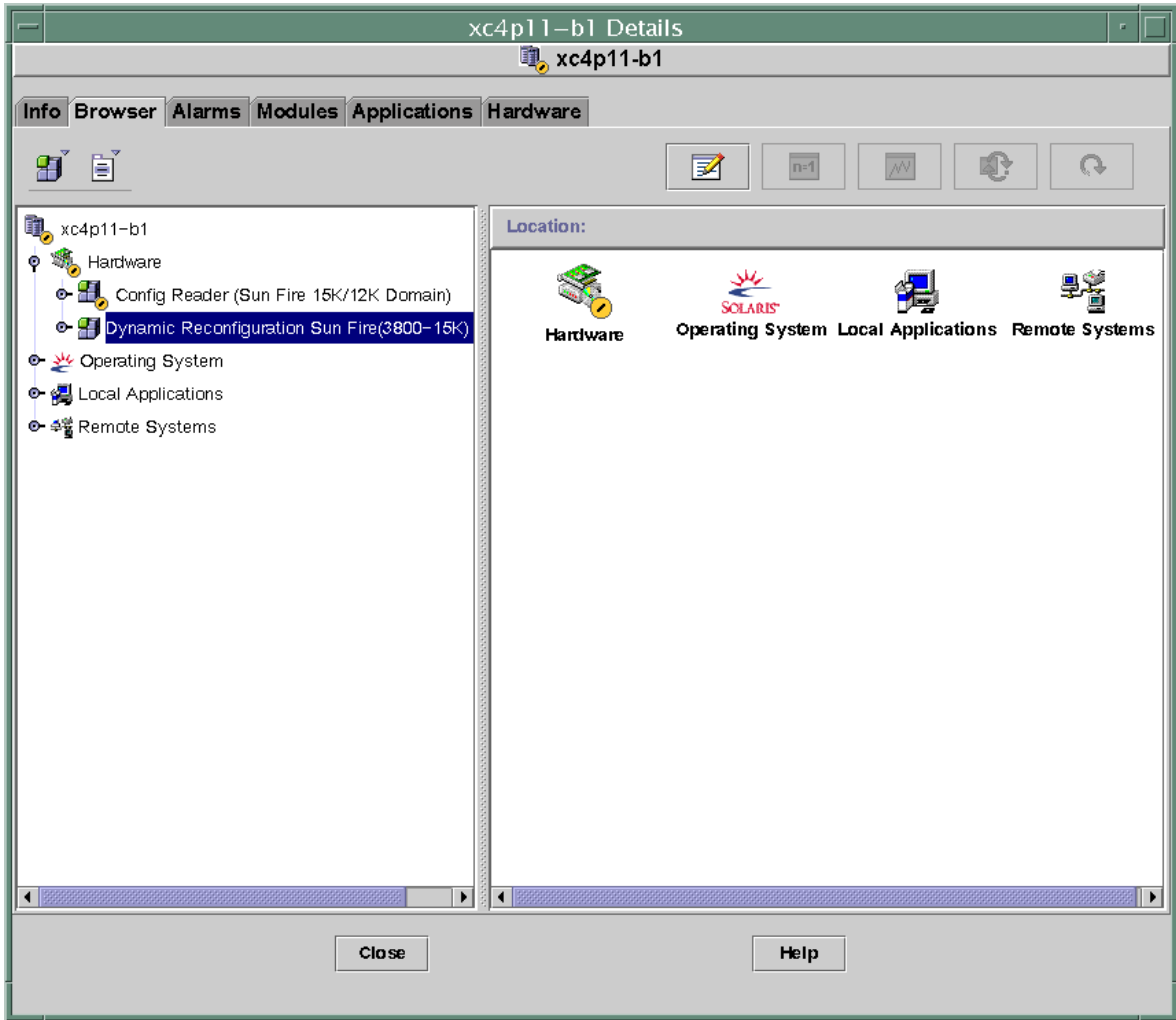


FIGURE 6-5 Dynamic Reconfiguration Module



# Dynamic Reconfiguration Properties

There are two sections of tables:

- Attachment Points—single attachment points for larger assemblies such as system boards and I/O boards
- Dynamic Attachment Points—dynamic attachment points for individual devices and components such as CPU modules, DIMMs, and SCSI drives

## Attachment Points

An attachment point is a collective term for a board and its slot. The Attachment Points tables show information about the following types of board slots:

- CPU/MEM
- PCI/CPCI/HPCI IO
- WPCI
- CPCI/HPCI cards
- SCSI
- Empty Slots
- MaxCPU

The Dynamic Reconfiguration Module allows you to perform dynamic reconfiguration operations from the domain on the attachment points in the tables. See Chapter 8 for the procedures for dynamic reconfiguration operations from the domain.

## CPU/MEM

The following table provides a brief description of the attachment point properties for a CPU/memory board (TABLE 6-85):

**TABLE 6-85** Attachment Point Properties for a CPU/MEM Board

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point ID from <code>cfgadm: SBx</code> , where <code>x</code> is the number of the centerplane slot containing the board (0-17)
Slot State		Slot availability state: <code>assigned</code> or <code>unassigned</code>
Power State		Power state: <code>powered-on</code> or <code>powered-off</code>
Receptacle		Receptacle state: <code>connected</code> , <code>disconnected</code> , or <code>empty</code>

**TABLE 6-85** Attachment Point Properties for a CPU/MEM Board

Property	Rule (if any)	Description
Occupant		State of the occupant, which is the combination of the board and its attached devices: <i>configured</i> or <i>unconfigured</i>
Type		Board type: <i>CPU</i>
Condition		Board condition: <i>ok</i> , <i>unknown</i> , <i>failed</i> , or <i>unusable</i>
Information		General board type information; for example, <i>powered-on</i> , <i>assigned</i>
When		Date and time when the board was configured into the domain
Busy		<i>y</i> (yes) indicates a state, availability, or condition change operation is in progress; <i>n</i> (no) indicates <i>no</i> state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID: <i>/devices/pseudo/dr@0:SBx</i> , where <i>x</i> is the number of the centerplane slot containing the board (0-17)

## PCI/CPCI/HPCI IO

The following table provides a brief description of the attachment point properties for a PCI/CPCI/HPCI IO board (TABLE 6-86). For a Sun Fire 3800, 4800, 4810, or 6800 system, the table shows properties *only* for PCI and CPCI IO boards. For a Sun Fire 15K/12K system, the table shows properties *only* for HPCI IO boards.

**TABLE 6-86** Attachment Point Properties for a PCI/CPCI/HPCI IO Board

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point ID from <i>cfgadm: IOx</i> , where <i>x</i> is the number of the centerplane slot containing the board (0-17)
Slot State		Slot availability state: <i>assigned</i> or <i>unassigned</i>
Power State		Power state: <i>powered-on</i> or <i>powered-off</i>
Receptacle		Receptacle state: <i>connected</i> , <i>disconnected</i> , or <i>empty</i>
Occupant		State of the occupant, which is the combination of the board and its attached devices: <i>configured</i> or <i>unconfigured</i>

**TABLE 6-86** Attachment Point Properties for a PCI/CPCI/HPCI IO Board (*Continued*)

Property	Rule (if any)	Description
Type		Board type, such as PCI, CPCI, or HPCI
Condition		Board condition: ok, unknown, failed, or unusable
Information		General board type information; for example, powered-on, assigned
When		Date and time when the board was configured into the domain
Busy		y (yes) indicates a state, availability, or condition change operation is in progress; n (no) indicates no state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID: /devices/pseudo/dr/@0:IOx, where x is the number of the centerplane slot containing the board (0-17)

## WPCI

The following table provides a brief description of the attachment point properties for a WPCI board (TABLE 6-87). Refer to the *Sun Fire Link Fabric Administrator's Guide* for more information about the Sun Fire Link system.

**TABLE 6-87** Attachment Point Properties for a WPCI Board

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point ID from cfgadm: IOx, where x is the number of the centerplane slot containing the board (0-17)
Slot State		Slot availability state: assigned or unassigned
Power State		Power state: powered-on or powered-off
Receptacle		Receptacle state: connected, disconnected, or empty
Occupant		State of the occupant, which is the combination of the board and its attached devices: configured or unconfigured
Type		Board type: WPCI
Condition		Board condition: ok, unknown, failed, or unusable

**TABLE 6-87** Attachment Point Properties for a WPCI Board (*Continued*)

Property	Rule (if any)	Description
Information		General board type information; for example, powered-on, assigned
When		Date and time when the board was configured into the domain
Busy		y (yes) indicates a state, availability, or condition change operation is in progress; n (no) indicates <i>no</i> state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID: /devices/pseudo/dr/@0:IOx, where x is the number of the centerplane slot containing the board (0-17)

## CPCI/HPCI cards

The following table provides a brief description of the attachment point properties for the CPCI/HPCI card (TABLE 6-88). For a Sun Fire 3800, 4800, 4810, or 6800 system, the table shows properties *only* for CPCI cards. For a Sun Fire 15K/12K system, the table shows properties *only* for HPCI cards.

**TABLE 6-88** Attachment Point Properties for a CPCI/HPCI card

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point ID from <code>cfgadm</code> , such as <code>pcisch2:e04b1slot3</code>
Slot State		Slot availability state: assigned or unassigned
Power State		Power state: powered-on or powered-off
Receptacle		Receptacle state: connected, disconnected, or empty
Occupant		State of the occupant, which is the combination of the board and its attached devices: configured or unconfigured
Type		Type, such as <code>pci-pci/hp</code>
Condition		Board condition: ok, unknown, failed, or unusable
Information		General information; for example, unknown

**TABLE 6-88** Attachment Point Properties for a CPCI/HPCI card (Continued)

Property	Rule (if any)	Description
When		Date and time when the board was configured into the domain
Busy		y (yes) indicates a state, availability, or condition change operation is in progress; n (no) indicates <i>no</i> state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID, such as /devices/pci@9d,7000000:e04b1slot3

## SCSI

The following table provides a brief description of the attachment point properties for a SCSI (TABLE 6-89):

**TABLE 6-89** Attachment Point Properties for a SCSI

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point ID from <code>cfgadm</code> , such as <code>pcisch3:e04b1slot2</code>
Slot State		Slot availability state: assigned or unassigned
Power State		Power state: powered-on or powered-off
Receptacle		Receptacle state: connected, disconnected, or empty
Occupant		State of the occupant, which is the combination of the board and its attached devices: configured or unconfigured
Type		Type, such as <code>scsi/hp</code>
Condition		Component condition: ok, unknown, failed, or unusable
Information		General component information, such as unknown

**TABLE 6-89** Attachment Point Properties for a SCSI

Property	Rule (if any)	Description
When		Date and time when the component was configured into the domain
Busy		y (yes) indicates a state, availability, or condition change operation is in progress; n (no) indicates <i>no</i> state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID, such as /devices/pci@9d,600000:e04b1slot2

## Empty Slots

The following table provides a brief description of the attachment point properties for empty slots (TABLE 6-90):

**TABLE 6-90** Attachment Point Properties for Empty Slots

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point ID from <i>cfgadm</i> , such as <i>pcisch0:e17b1slot1</i>
Slot State		Slot availability state: assigned or unassigned
Power State		Power state: powered-on or powered-off
Receptacle		Receptacle state: connected, disconnected, or empty
Occupant		State of the occupant, which is the combination of the board and its attached devices: configured or unconfigured
Type		Board type: unknown
Condition		Component condition: ok, unknown, failed, or unusable
Information		General board type information: assigned or unknown
When		Date and time when the slot was configured into the domain
Busy		n (no) indicates <i>no</i> state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID, such as /devices/pci@9d,6000000:e17b1slot1

## MaxCPU

The following table provides a brief description of the attachment point properties for a MaxCPU board (TABLE 6-91). This table appears *only* for a Sun Fire 15K/12K system.

**TABLE 6-91** Sun Fire 15K/12K Attachment Point Properties for a MaxCPU Board

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point ID from <code>cfgadm</code> for the MaxCPU board
Slot State		Slot availability state: <code>assigned</code> or <code>unassigned</code>
Power State		Power state: <code>powered-on</code> or <code>powered-off</code>
Receptacle		Receptacle state: <code>connected</code> , <code>disconnected</code> , or <code>empty</code>
Occupant		State of the occupant, which is the combination of the board and its attached devices: <code>configured</code> or <code>unconfigured</code>
Type		Board type: <code>MCPU</code>
Condition		Board condition: <code>ok</code> , <code>unknown</code> , <code>failed</code> , or <code>unusable</code>
Information		General board type information; for example, <code>powered-on</code> , <code>assigned</code>
When		Date and time when the board was configured into the domain
Busy		<code>y</code> (yes) indicates a state, availability, or condition change operation is in progress; <code>n</code> (no) indicates <i>no</i> state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID for the MaxCPU board

# Dynamic Attachment Points

Dynamic attachment points refer to components on the system boards, such as CPUs, memory, and I/O devices. The dynamic attachment points are created by the DR driver. Refer to the `dr(7D)` man page in the Sun Solaris 8 or 9 Reference Manual Collection for more details about the DR driver. The Dynamic Attachment Point tables show information about the following types of components:

- CPU
- Memory
- I/O
- SCSI Components

The Dynamic Reconfiguration Module allows you to perform dynamic reconfiguration operations from the domain on the dynamic attachment points in the tables. See Chapter 8 for the procedures for dynamic reconfiguration operations from the domain.

## CPU Components

The following table provides a brief description of the dynamic attachment point properties for CPU components (TABLE 6-92):

**TABLE 6-92** Dynamic Attachment Point Properties for CPU Components

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point identifier from <code>cfgadm: SBx: :cpu<math>y</math></code> , where $x$ is the number of the centerplane slot containing the board (0-17) and $y$ is the CPU number (0-3)
Slot State		Slot availability state: <code>assigned</code> or <code>unassigned</code>
Power State		Power state: <code>powered-on</code> or <code>powered-off</code>
Receptacle		Receptacle state: <code>connected</code>
Occupant		State of the occupant, which is the combination of the board and its attached devices: <code>configured</code> or <code>unconfigured</code>
Type		Component type: <code>cpu</code>
Condition		Component condition: <code>ok</code> , <code>unknown</code> , or <code>failed</code>
Information		General CPU type information: for example, <code>cpuid 2</code> , <code>speed 750 MHz</code> , <code>ecache 8 MBytes</code> . Refer to the <code>cfgadm_sbd(1M)</code> man page in the Solaris 8 or 9 Reference Manual Collection for descriptions of the fields.



**TABLE 6-92** Dynamic Attachment Point Properties for CPU Components *(Continued)*

Property	Rule (if any)	Description
When		Date and time when the components were configured into the domain
Busy		y (yes) indicates a state, availability, or condition change operation is in progress; n (no) indicates <i>no</i> state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID: /devices/pseudo/dr@0:SBx: :cpu $y$ , where $x$ is the number of the centerplane slot containing the board (0-17), and $y$ is the CPU number (0-3)

## Memory Components

The following table provides a brief description of the dynamic attachment point properties for memory components (TABLE 6-93):

**TABLE 6-93** Dynamic Attachment Point Properties for Memory Components

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point identifier from <code>cfgadm</code> : such as <code>SBx: :memory</code> , where $x$ is the number of the centerplane slot containing the board (0-17)
Slot State		Slot availability state: <code>assigned</code> or <code>unassigned</code>
Power State		Power state: <code>powered-on</code> or <code>powered-off</code>
Receptacle		Receptacle state: <code>connected</code>
Occupant		State of the occupant, which is the combination of the board and its attached devices: <code>unconfigured</code> or <code>configured</code>
Type		Component type: <code>memory</code>
Condition		Component condition: <code>ok</code> , <code>unknown</code> , or <code>failed</code>
Information		General information for the memory type, as appropriate; for example, base address <code>0x0</code> , 2097 152 KBytes total, 420920 KBytes permanent. Refer to the <code>cfgadm_sbd(1M)</code> man page in the Solaris 8 or 9 Reference Manual Collection for descriptions of the fields.

**TABLE 6-93** Dynamic Attachment Point Properties for Memory Components *(Continued)*

Property	Rule (if any)	Description
When		Date and time when the components were configured into the domain
Busy		y (yes) indicates a state, availability, or condition change operation is in progress; n (no) indicates <i>no</i> state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID: /devices/pseudo/dr@0:SBx::memory, where x is the number of the centerplane slot containing the board (0-17)

## I/O Components

The following table provides a brief description of the dynamic attachment point properties for I/O components (TABLE 6-94):

**TABLE 6-94** Dynamic Attachment Point Properties for I/O Components

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point identifier from <code>cfgadm: IOx::pci.y</code> , where x is the number of the centerplane slot containing the board (0-17) and y is the PCI number (0-3)
Slot State		Slot availability state: <code>assigned</code> or <code>unassigned</code>
Power State		Power state: <code>powered-on</code> or <code>powered-off</code>
Receptacle		Receptacle state: <code>connected</code>
Occupant		State of the occupant, which is the combination of the board and its attached devices: <code>configured</code> or <code>unconfigured</code>
Type		Component type: <code>io</code>
Condition		Component condition: <code>ok</code> , <code>unknown</code> , or <code>failed</code>
Information		General information for the <code>io</code> type; for example, <code>device/pci@23d,700000</code> referenced. Refer to the <code>cfgadm_sbd(1M)</code> man page in the Solaris 8 or 9 Reference Manual Collection for descriptions of the fields.

**TABLE 6-94** Dynamic Attachment Point Properties for I/O Components (*Continued*)

Property	Rule (if any)	Description
When		Date and time when the components were configured into the domain
Busy		y (yes) indicates a state, availability, or condition change operation is in progress; n (no) indicates <i>no</i> state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID: /devices/pseudo/dr@0:IOx:pci $y$ , where $x$ is the number of the centerplane slot containing the board (0-17) and $y$ is the PCI number (0-3)

## SCSI Components

The following table provides a brief description of the dynamic attachment point properties for SCSI components (TABLE 6-95):

**TABLE 6-95** Dynamic Attachment Point Properties for SCSI Components

Property	Rule (if any)	Description
Unique Ap_Id		Unique logical attachment point identifier from <code>cfgadm</code> for the SCSI component
Slot State		Slot availability state: <code>assigned</code> or <code>unassigned</code>
Power State		Power state: <code>powered-on</code> or <code>powered-off</code>
Receptacle		Receptacle state: <code>connected</code>
Occupant		State of the occupant, which is the combination of the board and its attached devices: <code>configured</code> or <code>unconfigured</code>
Type		Component type: <code>disk</code> , <code>CD-ROM</code> , or <code>tape</code>
Condition		Component condition: <code>ok</code> , <code>unknown</code> , or <code>failed</code>
Information		General information for the type
When		Date and time when the components were configured into the domain
Busy		y (yes) indicates a state, availability, or condition change operation is in progress; n (no) indicates <i>no</i> state, availability, or condition change operation is in progress
Phys_Id		Physical attachment point ID for the SCSI component

---

# SC Monitoring Module

The SC Monitoring module monitors the System Management Services (SMS) daemons on the active, or main, Sun Fire 15K/12K system controller. The Sun Fire 15K/12K SC Monitoring Module table is automatically loaded when the agent is installed on the system controller, and you *can* unload it.

FIGURE 6-6 shows the icon for the module—SC Monitoring (Sun Fire 15K/12K)—as it is displayed in the platform host Details window under the Browser tab and Local Applications icon.

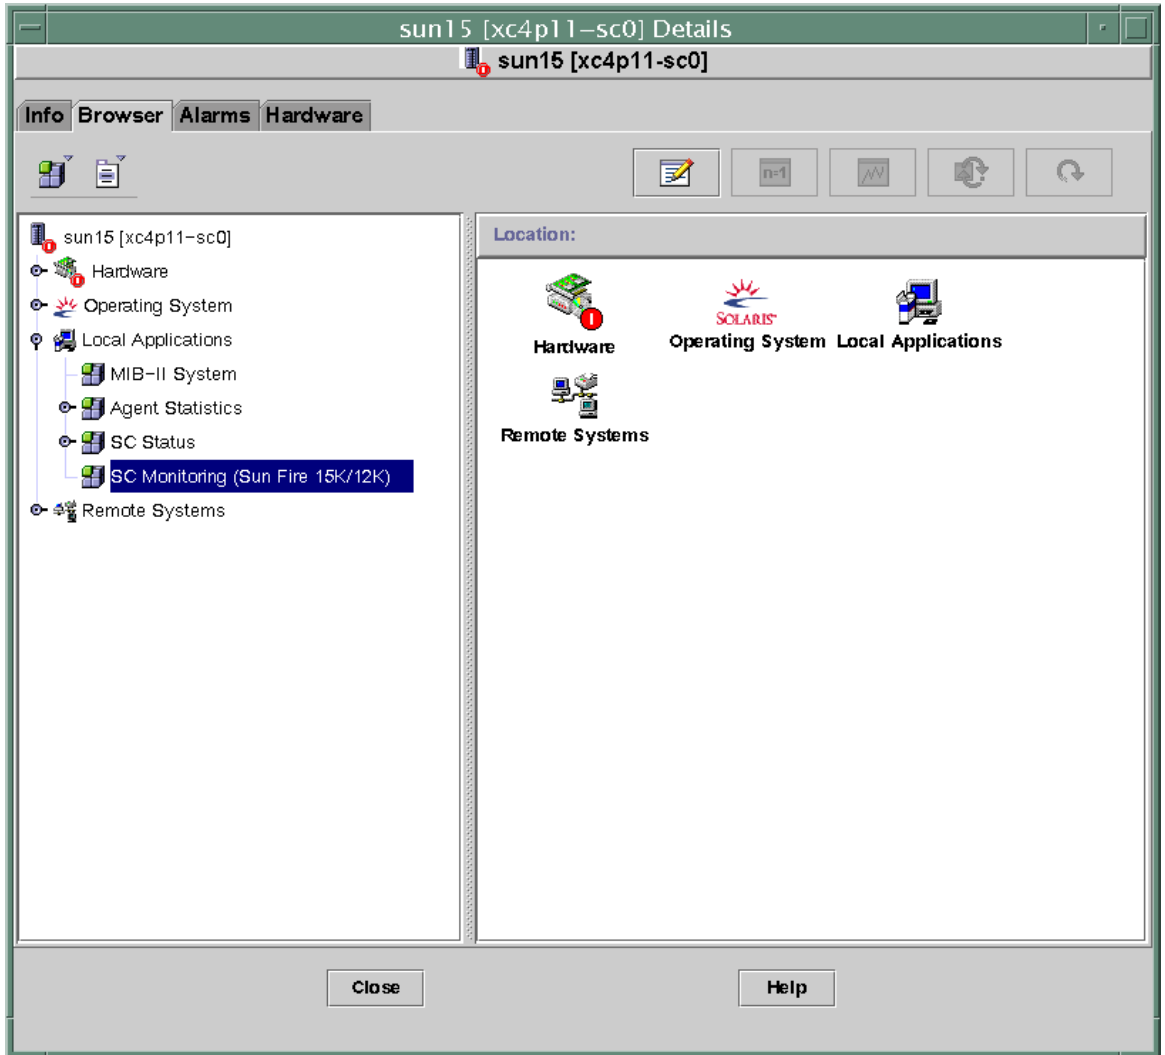


FIGURE 6-6 SC Monitoring Module

Many of the SMS daemons are critical to the operation of the Sun Fire 15K/12K system, and this module generates an alarm according to the assigned priority when any of the SMS daemons fails, even if it restarts. Refer to the *System Management Services (SMS) 1.3 Administrator Guide* for more information about the SMS daemons. Refer to the `ps(1)` command for more information about displaying the status of current processes.

This module monitors the following SMS daemons:

- Domain Configuration Administration (dca) – One per domain

- Domain Services Monitoring Daemon (dsmd)
- Domain X Server (x/dxs), where *x* is domain a–r
- Event Front-end Daemon (efe)
- Environmental Status Monitoring Daemon (esmd)
- Failover Management Daemon (fomd)
- FRU Access Daemon (frad)
- Hardware Access Daemon (hwad)
- Key Management Daemon (kmd)
- Management Network Daemon (mand)
- Message Logging Daemon (mld)
- OpenBoot PROM Support Daemon (osd)
- Platform Configuration Daemon (pcd)
- SMS Startup Daemon (ssd)
- Task Manager Daemon (tmd)

## SC Monitoring Properties—SC Daemon Process

The following table provides a brief description of the properties for a Sun Fire 15K/12K SC daemon process (TABLE 6-96):

**TABLE 6-96** Sun Fire 15K/12K SC Daemon Process

Property	Rule (if any)	Description
Command		Command name for this daemon
Process ID		Process identifier number for the daemon
Parent Process ID		Parent process identifier number for the daemon
User ID		User identifier under which the daemon is running
User Name		Name of the user associated with the User ID
Effective User ID		Effective user identifier
Group ID		Group identifier for the user
Effective Group ID		Effective group identifier for the user
Session ID		Process identifier of the session leader
Process Group ID		Process identifier of the process group leader
TTY		Controlling terminal for the daemon; should always be blank
Start Time		Time (within 24 hours) or date (after 24 hours) when the process was started
CPU Time		CPU time this process has run

**TABLE 6-96** Sun Fire 15K/12K SC Daemon Process (*Continued*)

Property	Rule (if any)	Description
State		State of the daemon, such as <code>R</code> for running or <code>S</code> for sleeping.
Wait Channel		Address of an event on which the process is sleeping. If blank, the process is running.
Schedule Class		Scheduling class name for the process, which indicates three possible scheduling algorithms: <ul style="list-style-type: none"> <li>• <code>SYS</code> - System process owned by the kernel, which has the highest priority</li> <li>• <code>RT</code> - Real-time process, which has a fixed priority that is not changed by the scheduler</li> <li>• <code>TS</code> - Time-sharing process, which has a dynamic priority that is set lower if it takes too much CPU time and higher if it is not getting enough CPU time</li> </ul>
Address		Memory address for the process
Size		Size (in pages) in main memory for the image of the swappable process
Priority		Process priority
Nice		Decimal value of the system scheduling priority of the process, if applicable
Percent CPU Time		Current CPU usage for the daemon expressed as a percentage of CPU time available
Percent Memory		Current memory usage for the daemon expressed as a percentage of the physical memory on the machine
Command Line	<code>rDownProc</code>	Full command string used to start the daemon

## SC Monitoring Alarm Rule—Process Down Rule (`rDownProc`)

This section describes the alarm rule for the SC Monitoring module. You cannot change the limits for this rule. The system provides a message with the alarm telling what the current property is and what the limit is.

The process down rule generates a critical alarm when any SMS daemon other than `dca` or `dxs` is down. If the Command Line column of the SC Monitoring Module table is `--`, the system considers the process down.

**Action:** Contact your systems administrator for a critical alarm.

---

## SC Status Module

The SC Status module monitors the main or spare status of the system controller. The module enables the user to see at a glance which system controller is the active, or main, system controller. For further information about the status of the system controller, see the SC Config Reader tables.

The Sun Fire 15K/12K SC Status module is automatically loaded when the agent is installed on the system controller, and you *can* unload it.

To find the module, first open the SC Details Window. (For more information about finding the SC Details Window, see “SC Config Reader Module” on page 158.)

FIGURE 6-7 shows the icon for the module—SC Status—as it is displayed in the host (SC) Details window under the Browser tab and Local Applications icon. FIGURE 6-7 also shows the SC Information icon, under the SC Status icon, which you click to view the SC Information table.



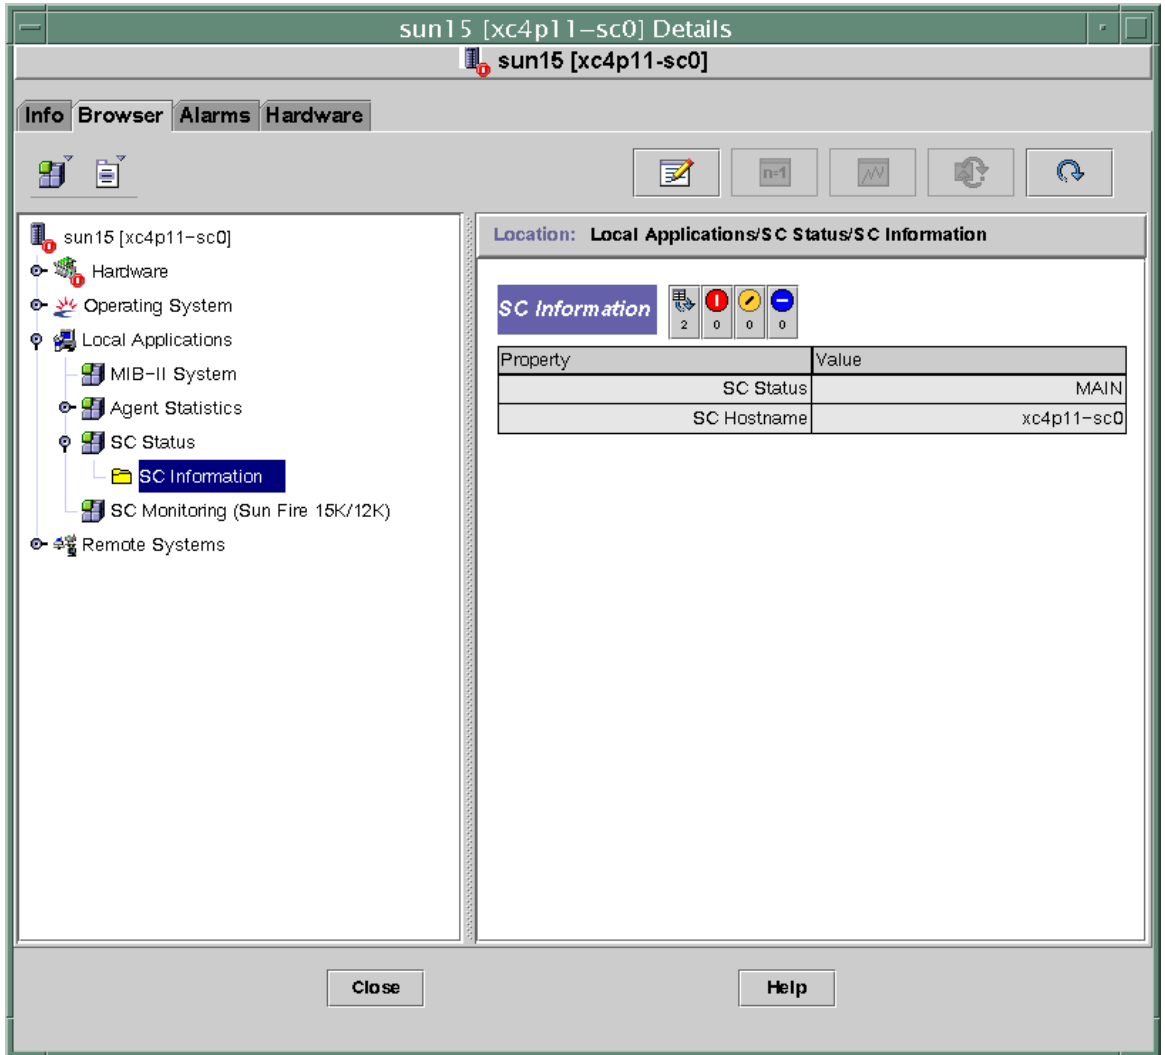


FIGURE 6-7 SC Information Showing MAIN Status

## SC Status Properties

The SC Status property has three possible values:

- MAIN – This system controller is acting as the main system controller (FIGURE 6-7).
- SPARE – This system controller is acting as the spare system controller.
- UNKNOWN – The role of this system controller could not be determined.

## SC Status Alarm Rule (`rscstatus`)

The SC status alarm rule generates a disabled alarm when the status of the system controller is not `MAIN`.

---

## Displaying Platform and Domain Log Files

To display platform and domain log files for diagnosing errors, type these commands:

```
# /opt/SUNWsymon/sbin/es-run ccat /var/opt/SUNWsymon/log/platform.log
# /opt/SUNWsymon/sbin/es-run ccat /var/opt/SUNWsymon/log/agent.log
```

# Platform/Domain State Management From the System Controller

---

This chapter describes how to perform dynamic reconfiguration (DR) and other management operations for Sun Fire 15K/12K systems using the Sun Management Center 3.0 GUI and the PDSM module. The dynamic reconfiguration operations include such operations as adding a board to a Sun Fire 15K/12K domain, removing a board from a Sun Fire 15K/12K domain, and moving a board between Sun Fire 15K/12K domains. Some other management operations that you might want to perform either as part of a dynamic reconfiguration operation or as part of another operation are testing a board, updating the ACL, or powering a board off or on.

Two Sun Fire 15K/12K system-specific modules contain functionality for managing the Sun Fire 15K/12K platform and domains:

- Platform/Domain State Management (PDSM), which runs on the system controller and is described in this chapter.
- Dynamic Reconfiguration (DR), which runs on a Sun Fire 15K/12K domain. (See Chapter 8 for information about using this module.)

The PDSM monitoring and management capabilities from the Sun Management Center console are organized into one platform view and up to 18 domain views. See “Platform/Domain State Management Module” on page 168 for information about where this module is located and what tables you can view.

---

## Prerequisites

You need to be familiar with dynamic reconfiguration operations before you use the Sun Management Center 3.0 GUI to perform DR operations. Refer to the following documents to learn more about dynamic reconfiguration operations on Sun Fire 15K/12K systems:

- *System Management Services (SMS) 1.3 Dynamic Reconfiguration User Guide* (underlying operations for the PDSM module, which is discussed in this chapter)
- *Sun Fire 15K/12K Dynamic Reconfiguration User Guide* (underlying operations for the domain DR module, which is discussed in Chapter 8)
- `cfgadm` man page (underlying command for the domain DR module, which is discussed in Chapter 8)

For the latest general issues, known limitations, and known bugs about dynamic reconfiguration operations, refer to the *System Management Services (SMS) 1.3 Installation Guide and Release Notes*.

---

## SMS Commands Supported by PDSM

Some of the System Management Services (SMS) command-line interface (CLI) commands are supported by the Platform/Domain State Management module. In other words, you can use the Sun Management Center graphical user interface (GUI) to monitor and manage the system components rather than using the SMS CLI commands that do the same thing. Refer to the *System Management Services (SMS) 1.3 Reference Manual* for more information about the SMS commands.

TABLE 7-1 lists the SMS CLI commands that are supported by PDSM.

**TABLE 7-1** SMS CLI Commands Supported by PDSM

SMS CLI Command	Sun Management Center GUI Menu Item	Description
<code>addboard</code>	Add Board	Assign, connect, and configure a board to a domain
<code>addtag</code>	Add Tag	Assign a domain name (tag) to a domain
<code>deleteboard</code>	Delete Board	Unconfigure, disconnect, and unassign a board from a domain
<code>deletetag</code>	Delete Tag	Remove the domain name (tag) associated with the domain

**TABLE 7-1** SMS CLI Commands Supported by PDSM (*Continued*)

SMS CLI Command	Sun Management Center GUI Menu Item	Description
<code>moveboard</code>	Move Board	Move a board from one domain to another
<code>poweroff</code>	Power Off	Control power off
<code>poweron</code>	Power On	Control power on
<code>rcfgadm -t</code>	Test Board	Test a board
<code>reset</code>	Reset Domain	Send reset to all CPU ports of a specified domain
<code>setkeyswitch</code>	Keyswitch	Change the position of the virtual keyswitch
<code>setupplatform -a -r</code>	Access Control List	Add or remove boards from the existing ACL

---

## Platform Management Operations From the System Controller

This section contains procedures that describe how to perform platform-wide management operations from the system controller. The following dynamic reconfiguration procedures are described:

- Adding a board
- Deleting a board
- Moving a board

The following additional management procedures are described:

- Powering off a board or peripheral
- Powering on a board or peripheral
- Showing status

### Showing Platform Information

Before you attempt to perform any of the platform-wide management operations from the system controller, look at the Platform View tables in the PDSM module under Hardware. See “Platform View” on page 170 for more information about Platform View tables.

# Adding a Board

This operation assigns, connects, or configures a board to a domain on the platform. Refer to the `addboard(1M)` command in the *Sun System Management Services 1.3 Reference Manual* for more information about adding a board.

## ▼ To Add a Board

---

**Note** – Empty slots can only be assigned.

---

- 1. Log in to the Sun Management Center console as a member of the `platadmin` group.**
- 2. Right-click on the board you want to add in the Platform Slot 0 or 1 Boards or Empty Slots table.**

The system displays a menu of board operations.
- 3. Left-click on the Add Board menu selection.**

The system displays the Add Board dialog box.
- 4. After ensuring that you have selected the board you want to add, select the domain to which to add the board in the drop-down list box.**
- 5. Left-click on the appropriate radio button to select the state in which you want the board to be after the board is added.**
- 6. Left-click on the Add Board button.**

You can see the progress of the Add Board operation in the dialog box.
- 7. If you want to abort the operation after it has started, left-click on the Abort button.**

You can see the progress of the Abort operation in the dialog box.

# Deleting a Board

This operation unconfigures, disconnects, or unassigns a system board from a domain on the platform. Refer to the `deleteboard(1M)` command in the *Sun System Management Service (SMS) 1.3 Reference Manual* for more information about deleting a board.

## ▼ To Delete a Board

- 1. Log in to the Sun Management Center console as a member of the `platadm` group.**
- 2. Right-click on the board you want to delete in the Platform Slot 0 or 1 Boards table.**

The system displays a menu of board operations.
- 3. Left-click on the Delete Board menu selection.**

The system displays the Delete Board dialog box.
- 4. Ensure that you have selected the board you want to delete.**
- 5. Left-click on the appropriate radio button to select the state in which you want the board to be after the board is deleted.**
- 6. Left-click on the Delete Board button.**

You can see the progress of the Delete Board operation in the dialog box.
- 7. If you want to abort the operation after it has started, left-click on the Abort button.**

You can see the progress of the Abort operation in the dialog box.

# Moving a Board

This operation moves a board from one domain to another on the platform. The board you are moving must be in the ACL of both affected domains. Refer to the `moveboard(1M)` command in the *Sun System Management Service 1.3 Reference Manual* for more information about moving a board.

## ▼ To Move a Board

**1. Log in to the Sun Management Center console as a member of the `platadmin` group.**

**2. Right-click on the board you want to move in the Platform Slot 0 or 1 Boards table.**

The system displays a menu of board operations.

**3. Left-click on the Move Board menu selection.**

The system displays the Move Board dialog box.

**4. After ensuring that you have selected the board you want to move, select the domain to which you want to move the board in the drop-down list box.**

**5. Left-click on the appropriate radio button to select the state in which you want the board to be after the board is moved.**

**6. Left-click on the Move Board button.**

You can see the progress of the Move Board operation in the dialog box.

**7. If you want to abort the operation after it has started, left-click on the Abort button.**

You can see the progress of the Abort operation in the dialog box.



# Powering on a Board or Peripheral

This operation powers on a board, power supply, or fan tray on the platform. Refer to the `poweron(1M)` command in the *Sun System Management Service 1.3 Reference Manual* for more information about powering on a board or peripheral.

## ▼ To Power on a Board or Peripheral

- 1. Log in to the Sun Management Center console as a member of the `platadm` or `platooper` group.**
- 2. Right-click on the board, power supply, or fan tray you want to power on in the corresponding Platform View table.**  
The system displays a menu of operations.
- 3. Left-click on the Power On menu selection.**  
The system displays the Power On dialog box.
- 4. After ensuring that you have selected the correct board or peripheral to power on, left-click on the OK button.**

# Powering off a Board or Peripheral

This operation powers off a board, power supply, or fan tray on the platform. Refer to the `poweroff(1M)` command in the *Sun System Management Service 1.3 Reference Manual* for more information about powering off a board or peripheral.

## ▼ To Power off a Board or Peripheral

- 1. Log in to the Sun Management Center console as a member of the `platadm` or `platooper` group.**
- 2. Right-click on the board, power supply, or fan tray you want to power off in the corresponding Platform View table.**  
The system displays a menu of operations.
- 3. Left-click on the Power Off menu selection.**  
The system displays the Power Off dialog box.
- 4. After ensuring that you have selected the correct board or peripheral to power off, left-click on the OK button.**

# Showing Status

This operation shows the status of the last dynamic reconfiguration command executed for that board or slot. The status display is dynamically updated with the status of the command currently being executed. If the command being executed halts on an error, an error message is displayed. The message “No status from the agent” is displayed if no command has been executed, or if a command finishes execution without errors.

---

**Note** – You receive a status message if you attempt a dynamic reconfiguration operation that is not permitted. Refer to the *Sun System Management Services 1.3 Installation Guide and Release Notes* for any known limitations on dynamic reconfiguration operations in this release.

---

## ▼ To Show Status

1. **Log in as a member of the `platadm` or `platooper` group.**
2. **Right-click on the system board or slot for which you want to show status in the appropriate board table.**

The system displays a menu of board or slot operations.

3. **Left-click on the Show status menu selection.**

The system displays the Status box showing the execution status of the most current dynamic reconfiguration command, if any. There can be a slight delay (up to a minute) before you receive the most current status.

For example, if an operation fails, the status shows the type of message in FIGURE 8-6 on page 223.

As another example, after the configure operation finishes successfully—or if no command has been executed—the status shows the type of message in FIGURE 8-7 on page 223.

4. **Left-click on the OK button when you are finished looking at the status.**

---

# Domain Management Operations from the System Controller

This section contains procedures that describe how to perform Sun Fire 15K/12K domain management operations from the system controller. The following dynamic reconfiguration procedures are described:

- Adding a board
- Deleting a board
- Moving a board

The following additional management procedures are described:

- Powering on a board
- Powering off a board
- Testing a board
- Adding a tag
- Deleting a tag
- Changing the position of the keyswitch
- Updating the Access Control List (ACL)
- Resetting a domain
- Showing status

## Showing Domain Information from the System Controller

Before you perform Sun Fire 15K/12K domain management operations from the system controller, look at the Domain View tables in the PDSM modules under Hardware. See “Domain X View” on page 174 for more information about the Domain View tables.

# Adding a Board

This operation adds a board to a specific domain. Refer to the `addboard(1M)` command in the *Sun System Management Service (SMS) 1.3 Reference Manual* for more information about adding a board.

## ▼ To Add a Board

1. **Log in to the Sun Management Center console as a member of the `platadm`, `dmnxadm`, or `dmnxrcfg` group, where `x` is the domain where you want to add a board.**

2. **Right-click on the board you want to add in the Domain X Slot 0 or 1 Boards table.**

The system displays a menu of board operations.

3. **Left-click on the Add Board menu selection.**

The system displays the Add Board dialog box.

4. **After ensuring that you have selected the board you want to add, select the domain to which to add the board.**

5. **Left-click on the appropriate radio button to select the state in which you want the board to be after the board is added.**

6. **Left-click on the Add Board button.**

You can see the progress of the Add Board operation in the dialog box.

7. **If you want to abort the operation after it has started, left-click on the Abort button.**

You can see the progress of the Abort operation in the dialog box.

# Deleting a Board

This operation unconfigures, disconnects, and unassigns a system board from a specific domain. Refer to the `deleteboard(1M)` command in the *Sun System Management Service (SMS) 1.3 Reference Manual* for more information about deleting a board.

## ▼ To Delete a Board

- 1. Log in to the Sun Management Center console as a member of the `platadm`, `dmnxadm`, or `dmnxrcfg` group, where `x` is the domain where you want to delete a board.**
- 2. Right-click on the board you want to delete in the Domain X Slot 0 or 1 Boards table.**

The system displays a menu of board operations.
- 3. Left-click on the Delete Board menu selection.**

The system displays the Delete Board dialog box.
- 4. Ensure that you have selected the board you want to delete.**
- 5. Left-click on the appropriate radio button to select the state in which you want the board to be after the board is deleted.**
- 6. Left-click on the Delete Board button.**

You can see the progress of the Delete Board operation in the dialog box.
- 7. If you want to abort the operation after it has started, left-click on the Abort button.**

You can see the progress of the Abort operation in the dialog box.

# Moving a Board

This operation moves a board from one domain to another. The board you are moving must be in the ACL of both affected domains. Refer to the `moveboard(1M)` command in the *Sun System Management Service (SMS) 1.3 Reference Manual* for more information about moving a board.

## ▼ To Move a Board

**1. Log in to the Sun Management Center console.**

If you log in as a member of the `platadmin` group, you do not need additional access privileges. If you log in as a member of the `dmnxadmin` or `dmnxrcfg` group, where `x` is the domain, you need to have access to both affected domains.

**2. Right-click on the board you want to move in the Domain X Slot 0 or 1 Boards table.**

The system displays a menu of board operations.

**3. Left-click on the Move Board menu selection.**

The system displays the Move Board dialog box.

**4. After ensuring that you have selected the board you want to move, select the domain to which to move the board.**

**5. Left-click on the appropriate radio button to select the state in which you want the board to be after the board is moved.**

**6. Left-click on the Move Board button.**

You can see the progress of the Move Board operation in the dialog box.

**7. If you want to abort the operation after it has started, left-click on the Abort button.**

You can see the progress of the Abort operation in the dialog box.

# Powering on a Board

This operation powers on a board for a specific domain. Refer to the `poweron(1M)` command in the *Sun System Management Service (SMS) 1.3 Reference Manual* for more information about powering on a board.

## ▼ To Power on a Board

Before you power on a board, the power state must be OFF.

- 1. Log in to the Sun Management Center console as a member of the `platadm`, `platooper`, `dmnxadm`, or `dmnxrcfg` group, where `x` is the domain where you want to power on a board.**
- 2. Right-click on the board you want to power on in the one of the Domain X View tables.**

The system displays a menu of board operations.
- 3. Left-click on the Power On menu selection.**

The system displays the Power On dialog box.
- 4. After ensuring that you have selected the correct board to power on, left-click on the OK button.**

# Powering off a Board

This operation powers off a board for a specific domain. Refer to the `poweroff(1M)` command in the *Sun System Management Service (SMS) 1.3 Reference Manual* for more information about powering off a board.

## ▼ To Power off a Board

Before you power off a board, the power state must be ON.

- 1. Log in to the Sun Management Center console as a member of the `platadm`, `platooper`, `dmnxadm`, or `dmnxrcfg` group, where `x` is the domain where you want to power off a board.**
- 2. Right-click on the board you want to power off in the Domain X Slot 0 or 1 Boards table.**

The system displays a menu of board operations.
- 3. Left-click on the Power Off menu selection.**

The system displays the Power Off dialog box.
- 4. After ensuring that you have selected the correct board to power off, left-click on the OK button.**



# Testing a Board

This operation tests a board in a specific domain. Refer to the `rcfgadm(1M)` command, option `-t`, in the *Sun System Management Services 1.3 Reference Manual* for more information about testing a board.

## ▼ To Test a Board

- 1. Log in to the Sun Management Center console as a member of the `dmnxadmin` group, where `x` is the domain where you want to test a board.**
- 2. Right-click on the board you want to test in the Domain X View table.**  
The system displays a menu of board operations.
- 3. Left-click on the Test Board menu selection.**  
The system displays the Test Board dialog box.
- 4. Left-click on the radio button beside the test option you want.**
- 5. If you want to force the test, left-click on the check box beside Use Force Option. If you do choose this option, note the caution on the menu. If you do not want to force the test, be sure that the check box is blank.**
- 6. After ensuring that you have selected the correct board to test and have the correct options checked, left-click on the Start Test button.**  
You can see the progress of the Test Board operation in the dialog box.
- 7. If you want to abort the operation after it has started, left-click on the Abort button.**  
You can see the progress of the Abort operation in the dialog box.

# Adding or Changing a Domain Tag

This operation adds the specified domain tag name to a domain or changes the domain tag name. Only one name tag can be assigned to a domain, and it must be unique across all domains. Refer to the `addtag(1M)` command in the *Sun System Management Services 1.3 Reference Manual* for more information about adding or changing a domain tag.

## ▼ To Add or Change a Domain Tag

- 1. Log in to the Sun Management Center console as a member of the `platadmin` group.**
- 2. Right-click on the Domain (A-R) in the Domain X Info table for which you want to add or change a tag.**  
The system displays a menu of domain operations.
- 3. Left-click on the Add Tag menu selection.**  
The system displays the Add Tag dialog box.
- 4. After ensuring that you have selected the correct domain for which you want to add a tag, type the new domain tag name in the text box under Set new tag:**
- 5. Left-click on the OK button.**

# Deleting a Tag

This operation removes the domain tag name associated with the domain. Refer to the `deletetag(1M)` command in the *Sun System Management Services 1.3 Reference Manual* for more information about deleting a tag.

## ▼ To Delete a Domain Tag

- 1. Log in to the Sun Management Center console as a member of the `platadmin` group.**
- 2. Right-click on the Domain (A-R) in the Domain X Info table for which you want to delete a tag.**  
The system displays a menu of domain operations.
- 3. Left-click on the Delete Tag menu selection.**  
The system displays the Delete Tag dialog box.
- 4. After ensuring that you have selected the correct domain for which you want to delete a tag, left-click on the OK button.**

# Changing the Keyswitch Position

This operation changes the position of the virtual keyswitch for a domain to one of these specified values:

- On
- Off
- Diagnostics
- Secure
- Standby

Refer to the `setkeyswitch(1M)` command in *Sun System Management Services (SMS) 1.3 Reference Manual* for more information about the virtual keyswitch and definitions of the positions.

## ▼ To Change the Keyswitch Position

1. **Log in to the Sun Management Center console as a member of the `dmnxadmin` group, where `x` is the domain for which you want to change the keyswitch position.**
2. **Right-click on the Domain (A-R) in the Domain X Info table for which you want to change the keyswitch position.**  
The system displays a menu of domain operations.
3. **Left-click on the Keyswitch menu selection.**  
The system displays the Keyswitch dialog box.
4. **Left-click on the radio button next to the position you want to set for the domain.**



---

**Caution** – If you attempt to change a keyswitch position directly from On to Off, the operation fails, and you do *not* receive a message that it fails. If you want to change a keyswitch position from On to Off, go through Standby first. In other words, go from On to Standby and Standby to Off.

---

5. **Left-click on the OK button.**

# Setting Up or Changing the Access Control List (ACL)

This operation sets up or changes the Access Control List for the domain. The default for an ACL for a domain is empty. You need to set up the ACL list for a domain initially and put in all boards you want to assign to the domain. You cannot assign a board from a domain if the board is not in the domain's ACL. Refer to the `setupplatform(1M)` command in *Sun System Management Services (SMS) 1.3 Reference Manual* for more information about setting up or changing the ACL.

---

**Note** – The Access Control List in the Sun Management Center 3.0 GUI is the same list that is called the Available Component List in the Systems Management Services (SMS) `setupplatform(1M)` command.

---

## ▼ To Set Up or Change the Access Control List

- 1. Log in to the Sun Management Center console as a member of the `platadmin` group.**
- 2. Right-click on the Domain (A-R) in the Domain X Info table for which you want to set up or change the Access Control List.**  
The system displays a menu of domain operations.
- 3. Left-click on the Access Control List menu selection.**  
The system displays the Access Control List dialog box.
- 4. If you want to add a slot to the ACL for a domain, select the slot from the left list box (Add To ACL List:), and left-click on Add. If you want to remove a slot from the ACL for a domain, select the slot from the right list box (Slots in ACL:), and left-click on Remove.**
- 5. When you have the ACL exactly the way you want it, left-click on the OK button.**

## Resetting a Domain

This operation resets all the CPU ports of a specified domain; in other words, resets the hardware to a clean state. Refer to the `reset(1M)` command in the *Sun System Management Services (SMS) 1.3 Reference Manual* for more information about resetting a domain.

### ▼ To Reset a Domain

To reset a domain, the virtual keyswitch must *not* be in the `secure` position. If the keyswitch is in the `secure` position and you attempt to reset the domain, you receive an error message. See “Changing the Keyswitch Position” on page 214 for instructions on changing the keyswitch position.

1. **Log in to the Sun Management Center console as a member of the `dmnxadmin` group, where `x` is the domain you want to reset.**

2. **Right-click on the Domain (A–R) in the Domain X Info table that you want to reset.**

The system displays a menu of domain operations.

3. **Left-click on the Reset Domain menu selection.**

The system displays the Reset Domain dialog box.

4. **If you are sure this is the domain you want to reset, left-click on the OK button.**

## Showing Status

This operation shows the status of the last dynamic reconfiguration command executed for that board or slot. The status display is dynamically updated with the status of the command currently being executed. If the command being executed halts on an error, an error message is displayed. The message “No status from the agent” is displayed if no command has been executed, or if a command finishes execution without errors.

---

**Note** – You receive a status message if you attempt a dynamic reconfiguration operation that is not permitted. Refer to the *Sun System Management Services 1.3 Installation Guide and Release Notes* for any known limitations on dynamic reconfiguration operations in this release.

---

## ▼ To Show Status

1. **Log in as a member of the `platadmin`, `platoper`, `dmnxadmin`, or `dmnxrcfg` group, where `x` is the domain in which you want to show status for a system board or slot.**
2. **Right-click on the system board or slot for which you want to show status in the appropriate board table.**

The system displays a menu of board or slot operations.

3. **Left-click on the Show status menu selection.**

The system displays the Status box showing the execution status of the most current dynamic reconfiguration command, if any. There can be a slight delay (up to a minute) before you receive the most current status.

For example, if an operation fails, the status shows the type of message in FIGURE 8-6 on page 223.

As another example, after the configure operation finishes successfully—or if no command has been executed—the status shows the type of message in FIGURE 8-7 on page 223.

4. **Left-click on the OK button when you are finished looking at the status.**

---

## Possible Reasons for DR Operation Attempts Failing

There are a number of reasons why a dynamic reconfiguration operation attempt might fail:

- User does not have permission to do the operation. In most cases, these operations are disallowed at the console level. However, there are cases (most notably with move board operations) where the operation privilege cannot be determined without the console being queried. In these cases, the user can attempt the operation, but it fails with an error message stating `Generic data request error`.
- User does not have proper authorization for the operation, either because of an inconsistency in group settings between the Sun Management server and agent, or because of problems exceeding the 16 group limit. The operation fails with an error message stating `Insufficient security privilege` or `Not writable error`. See Chapter 3 for more information about security access. Specifically, see “Limit of 16 Group IDs for a User ID” on page 56 for more information about the 16 group limit.

- Network connection to the platform agent is down. The operation fails with an error message stating `Timeout error`.

When you receive any of these messages other than `Timeout error`, refer to the following files for more information:

- `platform.log` and `pdsm.log` files in `/var/opt/SWUNWsymon/log`
- `/tmp/pdsm.log` file
- console log file
- `/var/opt/SUNWSMW/SMS version/adm/platform/messages`, where *SMS version* is the running version of SMS, such as `SMS1.3`



# Dynamic Reconfiguration From the Domain

---

This chapter describes how to perform dynamic reconfiguration (DR) operations from a Sun Fire 15K/12K or 6800/4810/4800/3800 domain using the Sun Management Center 3.0 GUI and the Dynamic Reconfiguration module. The dynamic reconfiguration operations include such operations as attaching a board to a Sun Fire domain, detaching a board from a Sun Fire domain, and configuring a board on a Sun Fire domain. Some other management operations that you might want to perform either as part of a dynamic reconfiguration operation or as part of another operation are testing a board or powering a board off or on.

---

## Prerequisites

You need to be familiar with dynamic reconfiguration operations before you use the Sun Management Center 3.0 GUI to perform DR operations. Refer to the following documents to learn more about dynamic reconfiguration operations on Sun Fire systems:

- *Sun Fire 15K/12K Dynamic Reconfiguration User Guide*, which describes the underlying Sun Fire 15K/12K operations for the DR module. For the latest general issues, known limitations, and known bugs about dynamic reconfiguration operations for the Sun Fire 15K/12K systems, refer to the *System Management Services (SMS) 1.3 Installation Guide and Release Notes*.
- *Sun Fire 6800/4810/4800/3800 Systems Dynamic Reconfiguration User's Guide*, which describes the underlying Sun Fire 6800/4810/4800/3800 operations for the DR module.
- `cfgadm(1M)` man page, which describes the underlying command for the DR module.


---

# Dynamic Reconfiguration Module

The Dynamic Reconfiguration module enables you to perform dynamic reconfiguration operations from the domain on the attachment points in the tables. You can perform the operations in the same manner that you would with the `cfgadm(1M)` command only using the Sun Management Center 3.0 GUI. This module works on Sun Fire 15K/12K or 6800/4810/4800/3800 systems.

During the software installation, this module is automatically installed. You need to load this module to use it the first time. You can unload the module, if desired. For specific information about loading and unloading Sun Management Center modules, refer to Chapter 11, “Managing Modules,” in the *Sun Management Center 3.0 Software User’s Guide*.

FIGURE 8-1 shows the icon for the module—Dynamic Reconfiguration Sun Fire (3800-15K)—as it is displayed in the host Details window on a domain under the Browser tab and Hardware icon.

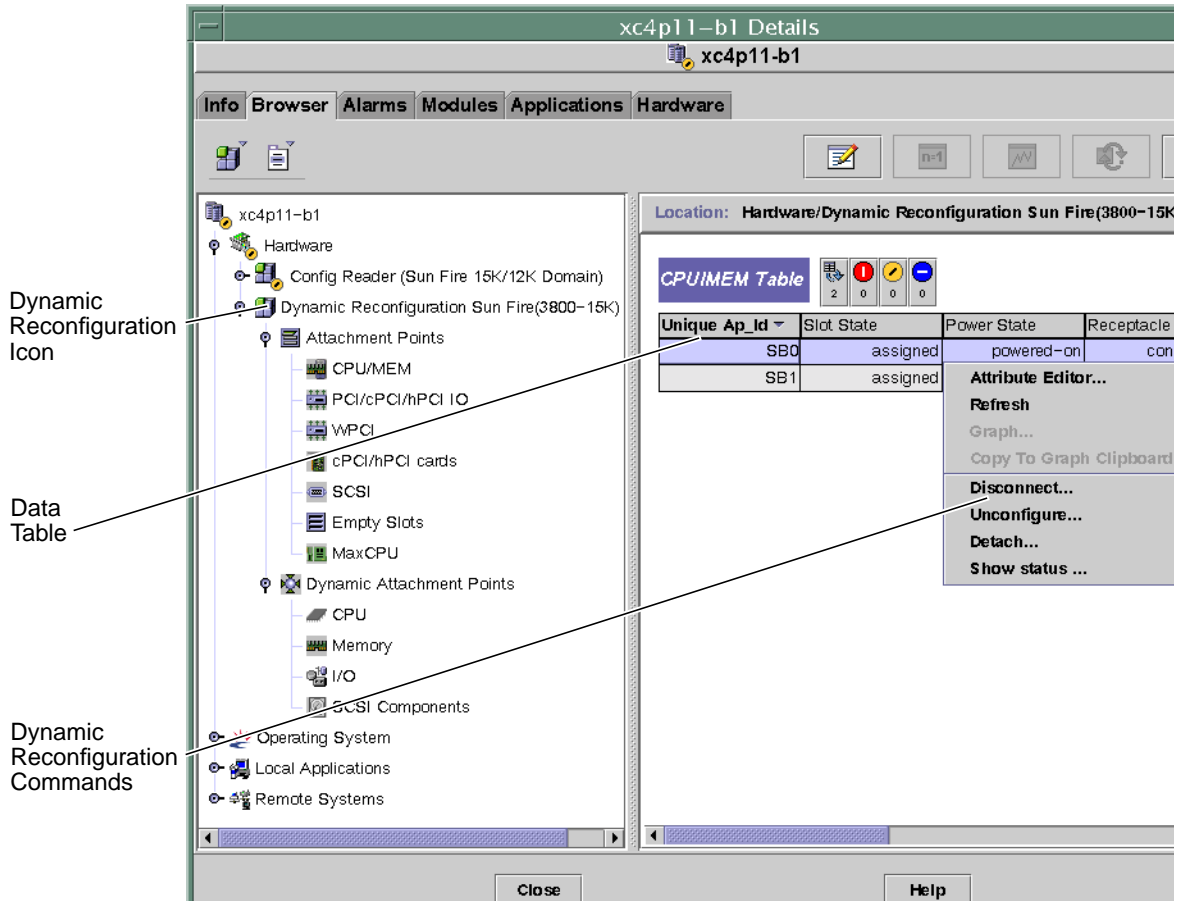

**FIGURE 8-1** Dynamic Reconfiguration Features

There are two sections of tables:

- Attachment Points—single attachment points for larger assemblies such as system boards and I/O boards
- Dynamic Attachment Points—dynamic attachment points for individual devices and components such as CPU modules, DIMMs, and SCSI drives

## Attachment Points

An attachment point is a collective term for a board and its slot. The Attachment Points tables show information about the following types of board slots:

- CPU/MEM
- PCI/CPCI/HPCI IO
- WPCI
- CPCI/HPCI cards
- SCSI
- Empty Slots
- MaxCPU

The Dynamic Reconfiguration module allows you to perform dynamic reconfiguration operations from the domain on the attachment points in the tables.

## Dynamic Attachment Points

Dynamic attachment points refer to components on the system boards, such as CPUs, memory, and I/O devices. The dynamic attachment points are created by the DR driver. Refer to the `dr(7D)` man page in the Sun Solaris 8 or 9 Reference Manual Collection for more details about the DR driver. The Dynamic Attachment Point tables show information about the following types of components:

- CPU
- Memory
- I/O
- SCSI Components

The Dynamic Reconfiguration module allows you to perform dynamic reconfiguration operations from the domain on the dynamic attachment points in the tables.

# Data Tables

Use the Dynamic Reconfiguration data tables in the right half of a Details window to find the last-known state of a dynamically-reconfigurable board or device.

All data tables for Dynamic Reconfiguration Sun Fire(3800-15K) use the format shown in TABLE 8-1.

**TABLE 8-1** Dynamic Reconfiguration Data Table Format

Property	Description
Unique Ap_Id	Logical name for the attachment point or dynamic attachment point
Slot State	State of the slot
Power State	Power state for the slot
Receptacle	Receptacle state
Occupant	Occupant state
Type	Type of attachment point or dynamic attachment point
Condition	Board or component condition
Information	General information for the type
When	Date and time when components were configured
Busy	Indicates whether or not the attachment point or dynamic attachment point is busy
Phys_Id	Physical name for the attachment point or dynamic attachment point

---

# Dynamic Reconfiguration Operations From the Domain

This section describes how to perform dynamic reconfiguration operations from the domain from a Sun Fire domain using the Sun Management Center 3.0 Dynamic Reconfiguration module. The dynamic reconfiguration operations from the domain are based on the `cfgadm(1M)` command. Refer to the `cfgadm(1M)` command in the Sun Solaris 8 or 9 Reference Manual Collection for more information about the various `cfgadm` options.

There are both logical and physical aspects of Sun Fire domains:

- The *logical* domain is the set of slots—either containing or not containing system boards—grouped as belonging to a specific domain.
- The *physical* domain is the set of boards in the logical domain that are physically interconnected.

A slot—whether occupied or empty—can be a member of a logical domain, while not being part of a physical domain. After boot, a board or empty slot can be assigned to or unassigned from a logical domain. A board becomes part of a physical domain when the Solaris operating environment requests it. An empty slot is never part of a physical domain.

The following dynamic reconfiguration and other management operations from the domain are described in this section of the supplement:

- Assigning a board
- Unassigning a board
- Attaching a board
- Detaching a board
- Connecting a board
- Disconnecting a board
- Configuring a board or components
- Unconfiguring a board, components, or memory
- Powering on a board
- Powering off a board
- Testing a board
- Showing status

# cfgadm Options Supported

TABLE 8-2 describes the `cfgadm(1M)` options that are supported by the Dynamic Reconfiguration module. Refer to the `cfgadm(1M)` command in the Sun Solaris 8 or 9 Reference Manual Collection for more information about the various `cfgadm` options.

**TABLE 8-2** `cfgadm` Options Supported by Dynamic Reconfiguration

<code>cfgadm</code> Option	Sun Management Center GUI Menu Item	Description
<code>-c configure</code>	Attach	Attach a board
<code>-c disconnect</code>	Detach	Detach a board
<code>-x assign</code>	Assign	Assign a board
<code>-c disconnect</code> <code>-x unassign</code>	Unassign	Unassign a board
<code>-c connect</code>	Connect	Connect a board
<code>-c disconnect</code>	Disconnect	Disconnect a board
<code>-c configure</code>	Configure	Configure a board or another component
<code>-c unconfigure</code>	Unconfigure	Unconfigure a board or another component
<code>-x poweron</code>	Power On	Power on a board
<code>-x poweroff</code>	Power Off	Power off a board
<code>-t</code>	Test	Test a board

## Showing Domain Information From the Domain

Before you perform any dynamic reconfiguration operations from a Sun Fire domain, look at the Attachment Points and Dynamic Attachment Points tables in the Dynamic Reconfiguration module under Hardware.

## Ensure Boards Are in a Domain's ACL

Before you can perform certain dynamic reconfiguration operations on a system board from a domain, the board must be in the domain's ACL.

# Assigning a Board

This operation adds a system board to the logical domain.

## ▼ To Assign a Board

1. **Log in as a member of the `esadm` group to the domain to which you want to assign a system board.**
2. **Right-click on the Unique Ap\_Id for the system board you want to assign in the appropriate board table.**

The system displays a menu of board operations.

3. **Left-click on the Assign menu selection.**

The system displays the Assign confirmation box with this message:

```
Assign a slot.  
Are you sure you want to assign?
```

4. **Left-click on the OK button to assign the selected board. Otherwise, left-click on the Cancel button to cancel the assign operation.**



# Unassigning a Board

This operation removes a system board from the logical domain.

## ▼ To Unassign a Board

1. **Log in as a member of the `esadm` group to the domain from which you want to unassign a system board.**
2. **Right-click on the Unique Ap\_Id for the system board you want to unassign in the appropriate board table.**

The system displays a menu of board operations.

3. **Left-click on the Unassign menu selection.**

The system displays the Unassign confirmation box with this message:

```
Unassign.  
Are you sure you want to unassign?
```

4. **Left-click on the OK button to unassign the selected board. Otherwise, left-click on the Cancel button to cancel the unassign operation.**

# Attaching a System Board

This operation attaches the specified system board to the Solaris operating environment running in the specified domain. The process of attaching a system board involves a series of automatic steps performed by the Dynamic Reconfiguration module:

- Assigns the system board to the logical domain.
- Powers on the system board.
- Tests the system board.
- Connects the system board to the domain physically through the system controller.
- Configures the components on the system board in the Solaris operating environment running on the domain, so that applications running on the domain can use the components.

Some of the automatic steps are not performed depending on the initial state of the system board and other components or whether hardware problems prohibit the successful completion of the attach operation.

## ▼ To Attach a System Board

1. **Log in as a member of the `esadm` group to the domain to which you want to attach a system board.**
2. **Right-click on the Unique Ap\_Id for the system board you want to attach in the appropriate board table.**

The system displays a menu of board operations.

3. **Left-click on the Attach menu selection.**

The system displays the Attach Confirmation box with this message:

```
Attach a board.  
Attach will connect and configure the selected board.  
Are you sure you want to attach?
```

4. **Left-click on the OK button to connect and configure the selected board. Otherwise, left-click on the Cancel button to cancel the attach operation.**

# Detaching a System Board

This operation detaches the specified system board from the Solaris operating environment running in the specified domain. The process of detaching a system board involves a series of automatic steps performed by the Dynamic Reconfiguration module:

- Unconfigures the components on the system board from the Solaris operating environment running on the domain, so that applications running on the domain can no longer use the components.
- Communicates with the system controller to physically disconnect the system board from the domain. After this step, the system board is no longer part of the physical domain, although it is still part of the logical domain.
- Powers off the system board.

Some of the automatic steps are not performed depending on the initial state of the system board and other components or whether hardware problems prohibit the successful completion of the detach operation.

## ▼ To Detach a System Board

1. **Log in as a member of the `esadm` group to the domain from which you want to detach a system board.**
2. **Right-click on the Unique `Ap_Id` for the system board you want to detach in the appropriate board table.**

The system displays a menu of board operations.

3. **Left-click on the Detach menu selection.**

The system displays the Detach confirmation box (FIGURE 8-2).

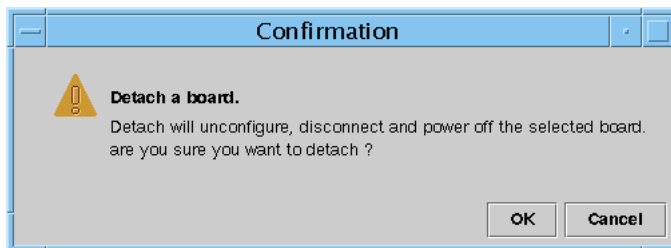


FIGURE 8-2 Detach Confirmation Box

4. **Left-click on the OK button to unconfigure, disconnect, and power off the selected board. Otherwise, left-click on the Cancel button to cancel the detach operation.**

# Connecting a Board

This operation performs the following steps:

- Assigns the system board to a logical domain if the board is available and is not part of the logical domain
- Powers on the system board
- Tests the system board
- Connects the system board to the physical domain

## ▼ To Connect a System Board

1. **Log in as a member of the `esadm` group to the domain in which you want to connect a system board.**
2. **Right-click on the Unique `Ap_Id` for the system board you want to connect in the appropriate board table.**

The system displays a menu of board operations.

3. **Left-click on the **Connect** menu selection.**

The system displays the Connect confirmation box with this message:

```
Connect
Are you sure you want to connect?
```

4. **Left-click on the **OK** button to connect the selected board. Otherwise, left-click on the **Cancel** button to cancel the connect operation.**

---

**Note** – The Sun Fire 15K/12K system allows you to click on an Abort button to stop the operation prematurely.

---

# Disconnecting a Board

This operation performs the following steps:

- Unconfigures the system board, if necessary
- Disconnects the system board from the physical domain

## ▼ To Disconnect a System Board Other Than a SCSI Board

1. Log in as a member of the `esadm` group to the domain in which you want to disconnect a system board.
2. Right-click on the Unique `Ap_Id` for the system board you want to disconnect in the appropriate board table.

The system displays a menu of board operations.

3. Left-click on the Disconnect menu selection.

The system displays the Disconnect dialog box (FIGURE 8-3).

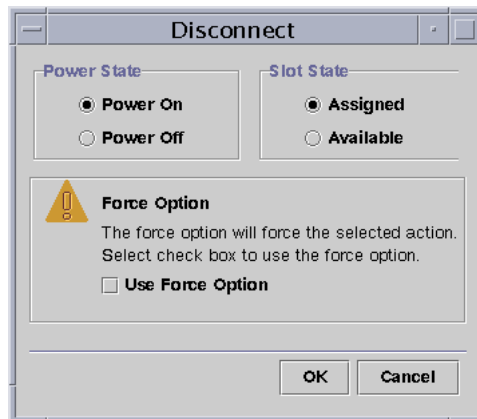


FIGURE 8-3 Disconnect Dialog Box

4. Left-click on the radio button beside the Power State option you want the board to be in *after* it is disconnected.
5. Left-click on the radio button beside the Slot State option you want the board to be in *after* it is disconnected.
6. Left-click on the Use Force Option box to force the disconnect operation. Otherwise, leave the Use Force Option box blank.

7. **Left-click on the OK button to disconnect the selected board. Otherwise, left-click on the Cancel button to cancel the disconnect operation.**

---

**Note** – The Sun Fire 15K/12K system allows you to click on an Abort button to stop the operation prematurely.

---

## ▼ To Disconnect a SCSI Board

Log in as a member of the `esadm` group to the domain in which you want to disconnect a SCSI board.

8. **Right-click on the Unique Ap\_Id for the SCSI board you want to disconnect in the appropriate board table.**

The system displays a menu of board operations.

9. **Left-click on the Disconnect menu selection.**

The system displays the Disconnect dialog box with this message:

```
Disconnect
Are you sure you want to continue?
```

10. **Left-click on the OK button to disconnect the SCSI board. Otherwise, left-click on the Cancel button to cancel the disconnect operation.**

# Configuring a Board, a Component, or Memory

This operation performs the following steps:

- Connects the system board, if necessary.
- Configures a system board or a component or memory on a board into the Solaris operating environment running in the domain, so that applications running on the domain can use the board or the component or memory on the board.

## ▼ To Configure a System Board, a Component, or Memory

1. **Log in as a member of the `esadm` group to the domain in which you want to configure a system board, a component, or memory.**
2. **Right-click on the Unique `Ap_Id` for the system board, component, or memory you want to configure in the appropriate board table.**

The system displays a menu of board, component, or memory operations.

3. **Left-click on the Configure menu selection.**

The system displays the Configure confirmation box with this message:

```
Configure
Are you sure you want to configure?
```

4. **Left-click on the OK button to configure the selected board, component, or memory. Otherwise, left-click on the Cancel button to cancel the configure operation.**

---

**Note** – The Sun Fire 15K/12K system allows you to click on an Abort button to stop the operation prematurely.

---

# Unconfiguring a Board, a Component, or Memory

This operation unconfigures a system board, a component on a board, or memory so that applications running on the domain can no longer use the board, component, or memory.

## ▼ To Unconfigure a System Board or a Component

1. **Log in as a member of the `esadm` group to the domain in which you want to unconfigure a system board or component.**
2. **Right-click on the Unique Ap\_Id for the system board or component you want to unconfigure in the appropriate board table.**

The system displays a menu of board or component operations.

3. **Left-click on the Unconfigure menu selection.**

The system displays the Unconfigure dialog box with this message:

```
Select Force Option
The force option will force the selected action.
Select check box to use the force option.
```

4. **Select the Use Force Option check box to force the unconfigure operation. Otherwise, leave the Use Force Option box blank.**
5. **Left-click on the OK button to unconfigure the selected board or component. Otherwise, left-click on the Cancel button to cancel the unconfigure operation.**

---

**Note** – The Sun Fire 15K/12K system allows you to click on an Abort button to stop the operation prematurely.

---



## ▼ To Unconfigure Memory

1. Log in as a member of the `esadm` group to the domain in which you want to unconfigure memory.
2. Right-click on the Unique Ap\_Id for the memory component you want to unconfigure in the Memory component table.

The system displays a menu of memory component operations.

3. Left-click on the Unconfigure menu selection.

The system displays the Unconfigure Memory dialog box (FIGURE 8-4).

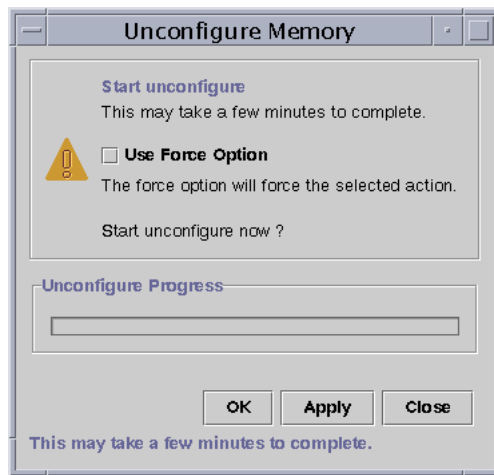


FIGURE 8-4 Unconfigure Memory Dialog Box

4. Select the Use Force Option box to force the unconfigure operation. Otherwise, leave the Use Force Option box blank.
5. Left-click on the OK button to start unconfiguring memory. Otherwise, left-click on the Close button to cancel the unconfigure operation.

# Powering on a Board

This operation powers on a system board. The board must be assigned to the logical domain, but *not* be in the physical domain.

## ▼ To Power on a Board

1. **Log in as a member of the `esadm` group to the domain in which you want to power on a system board.**
2. **Right-click on the Unique Ap\_Id for the system board you want to power on in the appropriate board table.**

The system displays a menu of board operations.

3. **Left-click on the Power On menu selection.**

The system displays the Power On confirmation box with this message:

```
Power On a board.  
Are you sure you want to power on?
```

4. **Left-click on the OK button to power on a system board. Otherwise, left-click on the Cancel button to cancel the power on operation.**

## Powering off a Board

This operation powers off a system board. The board must be assigned to the logical domain, but *not* be in the physical domain.

### ▼ To Power off a Board

1. **Log in as a member of the `esadm` group to the domain in which you want to power off a system board.**
2. **Right-click on the Unique `Ap_Id` for the system board you want to power off in the appropriate board table.**

The system displays a menu of board operations.

3. **Left-click on the Power Off menu selection.**

The system displays the Power Off confirmation box with this message:

```
Power Off a board.  
Are you sure you want to power off?
```

4. **Left-click on the OK button to power off a system board. Otherwise, left-click on the Cancel button to cancel the power off operation.**

## Testing a Board

This operation tests system boards. The board must be assigned to the logical domain, but *not* be in the physical domain.

### ▼ To Test a Board

1. **Log in as a member of the `esadm` group to the domain in which you want to test a system board.**
2. **Right-click on the Unique `Ap_Id` for the system board you want to test in the appropriate board table.**

The system displays a menu of board operations.

3. **Left-click on the Test menu selection.**

The system displays the Test Board dialog box (FIGURE 8-5).

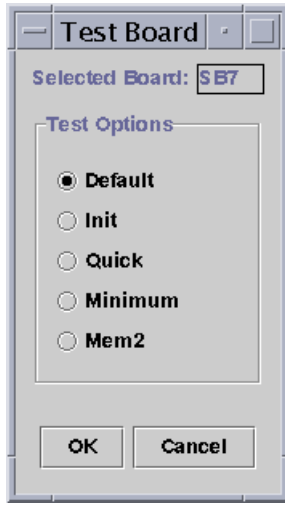


FIGURE 8-5 Test Board Dialog Box

4. Left-click on the radio button beside the Test Option you want.
5. After ensuring that you have selected the correct board to test and have the correct option checked, left-click on the OK button to start the test. Otherwise, left-click on the Cancel button to cancel the test.

---

**Note** – The Sun Fire 15K/12K system allows you to click on an Abort button to stop the operation prematurely.

---

## Showing Status

This operation shows the status of the last dynamic reconfiguration command executed for that board or slot. The status display is dynamically updated with the status of the command currently being executed. If the command being executed halts on an error, an error message from the `cfgadm(1M)` program is displayed. The message “No status from the agent” is displayed if no command has been executed, or if a command finishes execution without errors.

### ▼ To Show Status

1. Log in as a member of the `esadm` group to the domain in which you want to show status for a system board or slot.


2. **Right-click on the Unique Ap\_Id for the system board or slot for which you want to show status in the appropriate board table.**

The system displays a menu of board or slot operations.

3. **Left-click on the Show status menu selection.**


The system displays the Status box showing the execution status of the most current dynamic reconfiguration command, if any.

For example, if an operation fails, the status shows this type of message (FIGURE 8-6):

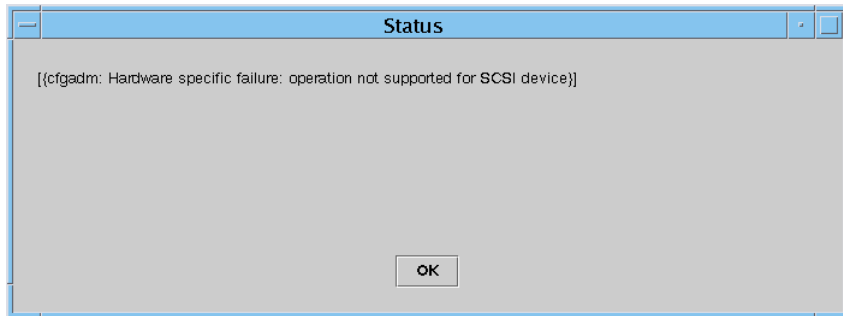

**FIGURE 8-6** Unsuccessful Operation in Show Status for Domain DR Operation

For another example, after the configure operation finishes successfully—or if no command has been executed—the status shows this message (FIGURE 8-7):

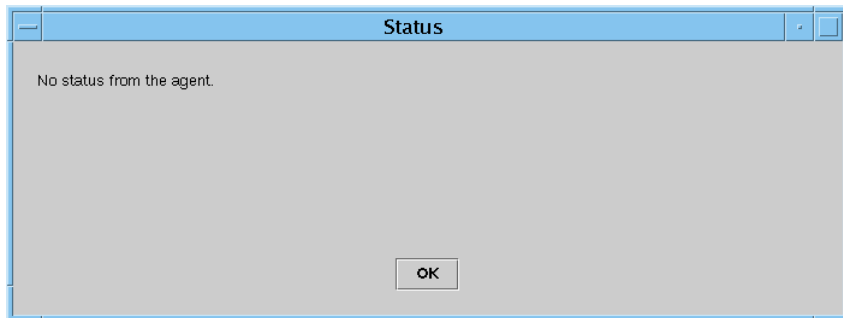

**FIGURE 8-7** Successful Operation in Show Status for Domain DR Operation

4. **Left-click on the OK button when you are finished looking at the status.**



# Glossary

---

This list defines abbreviations and acronyms in the *Sun Management Center 3.0 Supplement for Sun Fire 15K/12K Systems* and in the Sun Management Center graphical user interface (GUI) for Sun Fire 15K/12K system-specific modules.

---

## A

- ABUS** Address Bus
- AC** Alternating Current input from the power supply
- ACL** Access Control List *in the Sun Management Center GUI, is the same as Available Component List in Systems Management Services (SMS)*
- AMX** Address Multiplexer ASIC
- AR** Address Register ASIC
- ASIC** Application-Specific Integrated Circuit
- ASM** Advanced System Monitoring
- ASR** Automatic System Recovery
- AXQ** System Address Controller ASIC

---

## C

- C** Celsius

<b>CBH</b>	Console Bus Hub
<b>CLI</b>	command-line interface
<b>COD</b>	Capacity on Demand option
<b>CP</b>	Centerplane (Sun Fireplane interconnect)
<b>CPU</b>	Central Processing Unit
<b>CS or CSB</b>	Centerplane Support board

---

## D

<b>DARB</b>	Data Arbiter ASIC
<b>DAT</b>	Digital Audio Tape
<b>DBUS</b>	Data Bus
<b>DC</b>	Direct Current from the facility power source
<b>dca</b>	Domain Configuration Administration
<b>DCR</b>	Domain Config Reader
<b>Dcache</b>	Data Cache
<b>DDS</b>	Digital Data Storage
<b>DIMM</b>	Dual Inline Memory Module
<b>DMX</b>	Data Multiplexer ASIC
<b>DNS</b>	Domain Name Service
<b>DR</b>	Dynamic Reconfiguration
<b>dsm</b>	Domain Service Monitoring Daemon
<b>DX</b>	Data Extract ASIC
<b>x/dxs</b>	Domain X Server, where x is domain a-r

---

## E

<b>Ecache</b>	External Cache
---------------	----------------



<b>ECC</b>	Error-Correcting Code
<b>efe</b>	Event Front-end Daemon
<b>esmd</b>	Environmental Status Monitoring Daemon
<b>EX or EXB</b>	Expander board

---

## F

<b>fomd</b>	Failover Management Daemon
<b>frad</b>	FRU Access Daemon
<b>FRU</b>	Field-Replaceable Unit
<b>FT</b>	Fan Tray

---

## G

<b>GUI</b>	graphical user interface
------------	--------------------------

---

## H

<b>HK</b>	Housekeeping
<b>HPCI, hPCI, or hsPCI</b>	Hot-swap PCI assembly
<b>HUP</b>	Hang-up signal
<b>hwad</b>	Hardware Access Daemon

---

## I

<b>Icache</b>	Instruction Cache
<b>ICMP</b>	Internet Control Message Protocol

- ID** Identifier
  - IO** Input/Output board, such as MaxCPU board or hsPCI board
  - IOA** Input/Output Adapter
  - IP** Internet Protocol
- 

## K

- kmd** Key Management Daemon
- 

## M

- mand** Management Network Daemon
  - MB** Megabyte
  - MCPU** MaxCPU board
  - MHz** Megahertz
  - MIB** Management Information Base
  - mld** Message Logging Daemon
- 

## N

- NIC** Network Interface Card
  - NIS** Network Information Services
- 

## O

- OBP** OpenBoot PROM
- OID** Object Identifier

**osd** OpenBoot PROM Support Daemon

---

## P

**Paroli** Parallel Optical Link  
**pcd** Platform Configuration Daemon  
**PCI** Peripheral Component Interconnect  
**PCR** Platform Config Reader  
**PDSM** Platform/Domain State Management  
**PFA** Predictive Failure Analysis  
**POR** Power-on Reset  
**POST** Power-On Self-Test  
**PROC** Processor  
**PROM** programmable read-only memory  
**PS** Power Supply

---

## R

**RBUS** Response Bus  
**RIO** Read Input/Output ASIC  
**RMX** Response Multiplexer ASIC  
**RSM** Remote Shared Memory  
**RT** Real-time process

---

## S

**SAN** Storage Area Network

<b>SB</b>	System Board, such as CPU board
<b>SBBC</b>	Sun Fire Boot Bus Controller
<b>SC</b>	System Controller
<b>SCM</b>	System Controller Monitoring
<b>SCSI</b>	Small Computer System Interface
<b>SDC</b>	Sun Fire Data Controller ASIC
<b>SDI</b>	System Data Interface ASIC, which has six copies on the expander board
<b>SDI0</b>	System Data Interface Master ASIC; master of five copies of the System Data Interface ASIC
<b>SDI3</b>	Third of five copies of the System Data Interface ASIC
<b>SDI5</b>	Fifth of six copies of the System Data Interface ASIC
<b>SEEPROM</b>	serially electrically erasable PROM
<b>SIMM</b>	Single Inline Memory Module
<b>SMS</b>	System Management Services
<b>SNMP</b>	Simple Network Management Protocol
<b>SRS</b>	Sun Remote Services
<b>ssd</b>	SMS Startup Daemon
<b>SSM</b>	Scalable Shared Memory
<b>SYS</b>	System process

---

## T

<b>tmd</b>	Task Manager Daemon
<b>TNG</b>	The Next Generation
<b>TS</b>	Time-sharing process

---

## U

**UPA** UltraSPARC™ Port Architecture

---

## V

**V** Volts or Voltage

**VDC** Volts Direct Current

---

## W

**WCI** Sun Fire Link Interface ASIC

**WPCI** Sun Fire Link PCI

**wrsm** Sun Fire Link Remote Shared Memory driver

**wssm** Sun Fire Link Scalable Shared Memory driver



# Index

---

## A

- access control list (ACL)
  - ensuring boards are in domain's ACL, 225
  - set up or change, 215
- add
  - board
    - domain, 206
    - platform, 200
    - tag, domain, 212
- alarm rules
  - board
    - current (scBCurr), 125
    - power (scBPower), 125
    - temperature (scBTemp), 126
    - voltage
      - platform (scBVolt), 127
      - system controller (cpBrdVolt), 165
- CPU
  - status
    - domain (scCPUStatus), 154
    - system controller (cpCPUStatus), 166
    - temperature (cpCPUTemp), 166
  - domain and record stop (scStop), 127
- error count
  - DIMM (scDimmErrCnt), 154
- disk
  - domain (scDskErrCnt), 155
  - system controller (cpDskErrCnt), 167
- link
  - status (scLnkSt), 157
  - valid (scLnkVld), 157
- tape
  - domain (scTpeErrCnt), 156

- system controller (cpTpeErrCnt), 167
- failover state (scFoStat), 128
- hPCI card (scHPCId), 128
- OK/BAD/UNKNOWN (scOBURul), 129
- OK/FAIL (scOkFail), 130
- ON/OFF (scOnOff), 130
- POST status
  - domain (scPOSTStatus), 155
  - platform (scPOST), 131
- power supply breaker (scBreakr), 132
- process down (rDownProc), 193
- SC status (rscstatus), 196
- state check (scStateCheck), 156
- system board
  - DR state (scDrStat), 132
  - test status (scBTest), 133
- assign board, from domain, 226
- attach board, from domain, 228

## C

- centerplane support board, properties, 99
- centerplane, properties, 96
- change
  - ACL, 215
  - keyswitch position, 214
  - tag, domain, 212
- composite
  - creating, 60
  - discovering, 61
  - example, 61
  - icons, 58

- platform, 57
- troubleshooting, 64
- updating, 62
- configure, from domain
  - board, 233
  - component, 233
  - memory, 233
- connect board, from domain, 230
- console
  - exiting, 44
  - help documentation, 17
  - installing, 35
  - setting up, 37
  - starting, 42
- conventions, typographic, xxvii
- CP 1500
  - board, properties, 160
  - drivers, installing, 34
- CPU board, properties, 105
- CPU components, properties
  - dynamic attachment points, 186
- CPU/memory board, properties
  - attachment points, 179
  - domain, 141

## D

- delete
  - board
    - domain, 207
    - platform, 201
  - tag, domain, 213
- detach board, from domain, 229
- details windows
  - domain, 77
    - hardware summary, 78
    - logical view, 81
    - physical view, 79
  - hardware summary, general, 68
  - hardware tab, 68
  - logical view, general, 69
  - modules, Sun Fire 15K/12K agent, 67
  - physical view, general, 68
  - platform, 69
    - hardware summary, 70
    - logical view, 75

- physical view, 73
- system controller, 82
  - hardware summary, 83
  - logical view, 87
  - physical view, 84
- DIMM, properties
  - domain, 150
  - platform, 121
- directory name
  - installation CDs, 13
  - source
    - domain agent add-on package, 23
    - platform agent add-on packages, 29
    - server add-on packages, 15
  - Sun Management Center software, 15
  - target, 13
- disconnect, from domain
  - board, 231
  - SCSI, 232
- discovery object, properties, 124
- disk devices, properties
  - domain, 151
  - system controller, 163
- documentation
  - help, 17
  - related, xxvii
- Domain Config Reader
  - alarm rules, 154
    - CPU status (scCPUStatus), 154
    - DIMM error count (scDimmErrCnt), 154
    - disk error count (scDskErrCnt), 155
    - link status (scLnkSt), 157
    - link valid (scLnkVld), 157
    - POST status (scPOSTStatus), 155
    - state check (scStateCheck), 156
    - tape error count (scTpeErrCnt), 156
  - icon, 137
  - properties, 140
    - CPU/memory board, 141
    - DIMM, 150
    - disk devices, 151
    - hPCI board, 142
    - hPCI card, 144
    - MaxCPU board, 144
    - memory bank, 149
    - memory controller, 148
    - network interfaces, 152
    - Paroli card, 146



- processor, 147
- system, 141
- tape devices, 152
- WCI, 153
- WPCI board, 143
- refreshing, 140
- Domain Dynamic Reconfiguration
  - assign board, 226
  - attach board, 228
  - attachment points, 179, 221
  - cfgadm options supported, 225
  - configure board, component, or memory, 233
  - connect board, 230
  - detach board, 229
  - disconnect board, 231
  - disconnect SCSI, 232
  - dynamic attachment points, 179, 186, 221, 222
  - icon, 177, 220
  - logical, definition, 224
  - physical, definition, 224
  - power off board, 237
  - power on board, 236
  - properties
    - CPU components, 186
    - CPU/memory, 179
    - empty slots, 184
    - hPCI cards, 182
    - hPCI I/O, 180
    - I/O components, 188
    - MaxCPU, 185
    - memory components, 187
    - SCSI, 183
    - SCSI components, 189
    - WPCI, 181
  - show status, 238
  - test board, 237
  - unassign board, 227
  - unconfigure board or component, 234
  - unconfigure memory, 235
- domains
  - hardware summary, 78
  - info, properties, 174
  - installing, 20
  - logical view, 81
  - physical view, 79
  - port numbers, 25
  - properties, 122
  - reconfiguring, 39, 41
  - resetting, 216

- setting up, 23
- starting, 42
- stopping, 40, 43
- view access, 55

## E

- empty slots, properties
  - attachment points, 184
  - domain, 176
  - platform, 172
- exiting software, console, 44
- expander board, properties, 98

## F

- fan trays, properties, 103, 173

## G

- groups, administrative
  - limitation, 56
  - Sun Fire 15K/12K modules, 54
  - Sun Management Center, 50
  - superuser, 48
  - System Management Services
    - default, 52
    - PDSM operations, 54

## H

- hardware summary
  - domain
    - finding, 78
    - illustration, 78
  - general, 68
  - platform
    - finding, 70
    - hardware resources, 72
    - illustration, 71
    - information, 72
  - system controller
    - finding, 83
    - illustration, 84
- hardware tab, 68

## help documentation

- console, 17
- URL, 17

## hosts

- corresponding layers, 10
- monitored, 59
- names
  - server, 24, 31, 41
- unmonitored, 59

## hPCI, properties

- board
  - domain, 142
  - I/O, 180
  - platform, 107, 109
- card, 144
  - attachment points, 182
- cassette, 116

## I

### I/O components, properties

- dynamic attachment points, 188

## installation

- cautions, 3
- common location
  - network, 35
- core software
  - domains, 20
  - server, 13
  - system controllers, 27
  - workstations, 35
- CP 1500 drivers, 34
- hosts and corresponding layers, 10
- illustration, 7
- licensed add-on products, 15, 21, 28, 36
- localized versions, 37
- questions, 13
- script, 3
- summary, 7
- Sun Fire 15K/12K add-ons
  - domains, 22
  - server, 15
  - system controllers, 29

## K

- keyswitch, change position, 214

## L

### licensed add-on products

- general, 3
- installing, 15, 21, 28, 36
- Web interface, 44

### log files, 44, 196

### logical view

- domain
  - finding, 81
  - illustration, 82
- general, 69
- platform
  - finding, 75
  - illustration, 76
- system controller
  - finding, 87
  - illustration, 88

## M

### MaxCPU board, properties

- attachment points, 185
- domain, 144
- platform, 114

### memory bank, properties

- domain, 149
- platform, 120

### memory components, properties

- dynamic attachment points, 187

### memory controller, properties, 148

### modules

- Domain Config Reader, 137
- Domain Dynamic Reconfiguration, 177, 220
- platform
  - disabled, 90
  - required SMS daemons, 90
- Platform Config Reader, 92
- Platform/Domain State Management, 168
- SC Config Reader, 158
- SC Monitoring, 190
- SC Status, 194
- Sun Fire 15K/12K agent, 1, 67, 89

- alarm rules, 91
- loadable, 89
- properties, 91
- unloadable, 89

move board

- domain, 208
- platform, 202

## N

- name service switch, 49
- network interfaces, properties
  - domain, 152
  - system controller, 164
- NIS name server, 49

## O

object

- discovery, properties, 124
- platform
  - creating, 66
  - port number, 66

## P

packages

- minimum disk space, 4
- Sun Fire 15K/12K, 4

Paroli card, properties

- domain, 146
- platform, 118

PCI device, properties, 162

physical view

- domain
  - finding, 79
  - illustrations, 80, 81
- general, 68
- platform
  - finding, 73
  - illustrations, 74, 75
- system controller
  - finding, 84
  - illustrations, 85, 86

platform

- composite, 57
- hardware summary, 70
- info, properties, 170
- logical view, 75
- object
  - creating, 66
  - system controllers, 65
- physical view, 73
- reconfiguring, 39
- view access, 55

Platform Config Reader

- alarm rules, 125
- board
  - current (scBCurr), 125
  - power (scBPower), 125
  - temperature (scBTemp), 126
  - voltage (scBVolt), 127
- domain and record stop (scStop), 127
- failover state (scFoStat), 128
- hPCI card (scHPCIcd), 128
- OK/BAD/UNKNOWN (scOBURul), 129
- OK/FAIL (scOkFail), 130
- ON/OFF (scOnOff), 130
- POST status (scPOST), 131
- power supply breaker (scBreakr), 132
- system board
  - DR state (scDrStat), 132
  - test status (scBTest), 133

icon, 92

properties, 94

- centerplane, 96
- centerplane support board, 99
- CPU board, 105
- DIMM, 121
- discovery object, 124
- domain, 122
- expander board, 98
- fan trays, 103
- hPCI board, 107, 109
- hPCI cassette, 116
- MaxCPU board, 114
- memory bank, 120
- Paroli card, 118
- power supplies, 104
- processor, 119
- system, 94
- system controller, 100
- system controller peripheral, 102
- WPCI board, 112

- refreshing, 93
- Platform/Domain State Management
  - add board
    - domain, 206
    - platform, 200
  - add or change tag
    - domain, 212
  - change keyswitch position
    - domain, 214
  - delete board
    - domain, 207
    - platform, 201
  - delete tag
    - domain, 213
  - domain view, 174
    - access, 55
  - groups, required, 54
  - icon, 168
  - move board
    - domain, 208
    - platform, 202
  - platform view, 170
    - access, 55
  - power off board
    - domain, 210
  - power off board or peripheral
    - platform, 203
  - power on board
    - domain, 209
  - power on board or peripheral
    - platform, 203
  - properties
    - domain
      - empty slots, 176
      - info, 174
      - slot 0 boards, 175
      - slot 1 boards, 175
    - platform
      - empty slots, 172
      - fan trays, 173
      - info, 170
      - power supplies, 173
      - slot 0 boards, 171
      - slot 1 boards, 171
  - reset
    - domain, 216
  - set up or change ACL
    - domain, 215
  - show status

- domain, 216
  - platform, 204
- SMS commands supported, 198
- test board
  - domain, 211
- port numbers
  - agent, 18, 24, 31, 39, 66
  - cautions, 25, 34
  - defaults, 6
  - domains, 25
  - server host, 39
  - trap agent, 39
  - verify, 63
- power off
  - board
    - from domain, 237
    - from SC
      - domain, 210
      - platform, 203
  - peripheral
    - from SC
      - platform, 203
- power on
  - board
    - from domain, 236
    - from SC
      - domain, 209
      - platform, 203
  - peripheral
    - from SC
      - platform, 203
- power supplies, properties, 104, 173
- prerequisites, xxiii, 198, 219
- preserving data, 40
- processor, properties
  - domain, 147
  - platform, 119
  - system controller, 161

## R

- reconfiguring
  - domains, 41
  - platform, 39
  - preserving data, 40
  - server, 40
  - system controllers, 39

- reinstalling
  - Sun Fire 15K/12K add-on packages, 38
  - Sun Management Center software, 38
  - System Management Services software, 39
- requirements
  - minimum disk space for packages, 4
  - minimum memory for server, 5
  - network port configuration, 6
  - software versions, 5
- reset domain, 216

## S

- SC Config Reader
  - alarm rules, 165
    - board voltage (cpBrdVolt), 165
    - CPU
      - status (cpCPUStatus), 166
      - temperature (cpCPUTemp), 166
    - error count
      - disk (cpDskErrCnt), 167
      - tape (cpTpeErrCnt), 167
  - icon, 158
  - properties, 159
    - CP 1500 board, 160
    - disk device, 163
    - memory module, 162
    - network interface, 164
    - PCI device, 162
    - processor, 161
    - system, 160
    - tape device, 164
- SC daemon process, properties, 192
- SC Monitoring
  - alarm rule
    - process down (rDownProc), 193
  - icon, 190
  - properties
    - SC daemon process, 192
    - SMS daemons monitored, 191
- SC Status
  - alarm rule
    - SC status (rscstatus), 196
  - icon, 194
  - properties, 195
- script
  - cautions, 3
  - installation (es-inst), 3
  - questions, 13
  - setup (es-setup), 3, 39
- SCSI components, properties
  - dynamic attachment points, 189
- SCSI, properties
  - attachment points, 183
- server
  - choosing, 5
  - host name, 24, 31, 41
  - installing, 13
  - minimum memory, 5
  - reconfiguring, 40
  - setting up, 16
  - starting, 42
  - stopping, 40, 43
- setup
  - ACL, 215
  - cautions, 17, 30
  - common network location, 37
  - domains, 23
  - illustration, 7
  - other Sun Fire platforms, 19, 25, 32
  - questions, 13
  - script, 3, 39
  - server, 16
  - summary, 7
  - system controller server add-on module, 19
  - system controllers, 30
  - workstations, 37
- show status
  - domain DR, 238
  - PDSM
    - domain, 216
    - platform, 204
- slot 0 boards, properties
  - domain, 175
  - platform, 171
- slot 1 boards, properties
  - domain, 175
  - platform, 171
- slot, definition, 224
- software versions, required, 5
- starting software, 41
  - console, 42
  - domains, 42
  - server, 42

- system controllers, 42
- stopping software, 43
  - before installation, 12
  - console, 44
  - domains, 40, 43
  - server, 40, 43
  - system controllers, 40, 44
- stops
  - domain (dstop), 66
  - record (rstop), 66
- superuser access, 48
- system controllers
  - agents, 7
  - daemon processes, 192
  - hardware summary, 83
  - installing, 26
  - installing CP 1500 drivers, 34
  - logical view, 87
  - peripheral, properties, 102
  - physical view, 84
  - properties, 100
  - reconfiguring, 39
  - setting up, 30
  - setting up server add-on module, 19
  - spare, 33
  - status, 195
- system, properties
  - domain, 141
  - platform, 94
  - system controller, 160

## T

- tape devices, properties
  - domain, 152
  - system controller, 164
- temperatures
  - alarm rules
    - platform, 126
    - system controller, 166
  - Celsius, 94
  - threshold values, 166
- test board
  - from domain, 237
  - from SC, 211

## U

- unassign board, from domain, 227
- unconfigure, from domain
  - board, 234
  - component, 234
  - memory, 235
- uninstalling software, 38

## V

- view
  - domains, access, 55
  - logical, 69
  - physical, 68
  - platform, access, 55
- voltage
  - alarm rule
    - platform, 127
    - system controller, 165
  - caution, 165

## W

- WCI, properties, 153
- Web interface, 44
- WPCI board, properties
  - domain, 143
  - domain DR, 181
  - platform, 112